Master

GENERAL DYNAMICS/CONVAIR

Feb. 28/62

INSTRUCTION COVER SHEET

TO: All Holders of
ILLUSTRATED PARTS CATALOG
Model 22-2

DAL CS-59-060

SUBJECT: COMPLETE REPLACEMENT - CHAPTER 93
Dated Feb. 10/62

61

Remove and destroy all pages now in your manual for Chapter 93. Insert the attached pages to replace those pages just removed.

GENERAL DYNAMICS/CONVAIR June 10,1964

INSTRUCTION COVER SHEET

TO: All Holders of
ILLUSTRATED PARTS CATALOG
Model 22-2

DAL CS-59-060

SUBJECT: REVISED PAGES - CHAPTER 93
Revision 2 dated June 12/64

3/1

The attached pages provide replacement, revised or new pages to your present chapter.

The List of Effective Pages reflects current pages this chapter should contain.

GENERAL DYNAMICS/CONVAIR

October 23, 1964

INSTRUCTION COVER SHEET

TO: All Holders of
ILLUSTRATED PARTS CATALOG
Model 22-2

DAL CS-59-060

SUBJECT: REVISED PAGES - CHAPTER 93
Revision No. 3 Dated Oct. 23/64

3

The attached pages provide replacement, revised or new pages to your present chapter.

The List of Effective Pages reflects current pages this chapter should contain.

LIST OF EFFECTIVE PAGES

Chapter 93
ELECTRONIC HARNESSES

CHAPTER	PAGE	DATE	CODE
*V-93	i	Oct. 23/64	C-3
	BLANK		
93-0	1	Feb. 6/61	C
93-0	2	Feb. 10/62	A-1
*93-0	3	Oct. 23/64	C-3
*93-0	4	Oct. 23/64	C-3
93-0	5	Feb. 10/62	C-1
	BLANK		
93-1	1	Feb. 6/61	A
93-1	2	Feb. 10/62	C-1
93-1	3	Feb. 10/62	C-1
93-1	4	Feb. 10/62	A-1
93-1	5	Feb. 10/62	C-1
93-1	6		NA
	BLANK		
93-1	8	Feb. 6/61	C
93-1	9	Feb. 10/62	C-1
93-1	10		NA
93-1	11		NA
93-1	12	Feb. 6/61	A
93-1	13	Feb. 10/62	C-1
93-1	14	Feb. 6/61	C
93-1	15	Feb. 10/62	C-1
93-1	16		NA
	BLANK		
93-1	18	Feb. 6/61	A
93-1	19	June 12/64	C-2
93-1	20	Feb. 6/61	A
93-1	21	Feb. 10/62	C-1
93-1	22	Feb. 6/61	A
93-1	23	Feb. 10/62	C-1
	BLANK		
93-2	1	Feb. 6/61	A
93-2	2	Feb. 6/61	A
93-2	3	Feb. 10/62	C-1
93-2	4	Feb. 10/62	A-1
93-2	5	Feb. 10/62	C-1
93-2	6	Feb. 6/61	A
93-2	7	Feb. 10/62	C-1
	BLANK		
93-3	1	Feb. 10/62	A-1
93-3	2	Feb. 10/62	C-1
93-3	3	Feb. 10/62	C-1
93-3	4		NA
	BLANK		
93-3	6	Feb. 6/61	C
93-3	7	Feb. 10/62	C-1
93-3	8	Feb. 6/61	C
93-3	9	Feb. 10/62	C-1
	BLANK		
93-4	1	Feb. 6/61	A
93-4	2	Feb. 10/62	C-1
93-4	3	Feb. 10/62	C-1
93-4	4	Feb. 10/62	C-1
93-4	5	Feb. 10/62	C-1
93-4	6	Feb. 10/62	C-1
93-4	7	Feb. 10/62	C-1
93-4	8	Feb. 10/62	C-1
	BLANK		
93-4	10	Feb. 10/62	C-1
93-4	11	Feb. 10/62	C-1
	BLANK		
93-5	1	Feb. 6/61	A
93-5	2	Feb. 10/62	C-1
93-5	3	Feb. 10/62	A-1
93-5	4	Feb. 10/62	C-1
	BLANK		
93-5	6	Feb. 10/62	C-1
93-5	7	Feb. 10/62	C-1
	BLANK		
93-6	1	Feb. 6/61	A
93-6	2	Feb. 10/62	C-1
93-6	3	Feb. 10/62	C-1
93-6	4	Feb. 6/61	C
93-6	5	Feb. 10/62	C-1
	BLANK		
93-7	1	Feb. 10/62	A-1
93-7	2	Feb. 10/62	C-1
93-7	3	June 12/64	A-2
	BLANK		

NA = Not Applicable
*Pages revised, added or deleted by this revision.

CONVAIR 880
ILLUSTRATED PARTS CATALOG

SECTION V

Chapter 93
ELECTRONIC HARNESSES

TABLE OF CONTENTS

CHAPTER-SUBJECT		FIGURE
93-1	FLIGHT COMPARTMENT ELECTRONIC HARNESSES	
	Pilot and Copilot Console Electronic Harnesses	1
	Pilot and Copilot Forward Pedestal Electronic Harnesses	2
	Pilot and Copilot Pedestal Electronic Harnesses	3
	Flight Engineer Station Electronic Harnesses	4
	Circuit Breaker Panel Electronic Harnesses RH	5
	Forward Stewardess Station Electronic Harnesses RH ...	6
	Forward Stewardess Station and Coat Closet Electronic Harnesses	7
	Forward Stewardess Station Folding Seat Electronic Harnesses	8
93-2	CABIN ELECTRONIC HARNESSES	
	Hatrack Speaker Electronic Harnesses Station 432 to 697	1
	Hatrack Speaker Electronic Harnesses Station 659 to 888	2
	Hatrack Speaker Electronic Harnesses Station 926 to 1230	3
93-3	FUSELAGE NOSE ELECTRONIC HARNESSES	
	Fuselage Nose Electronic Harnesses Forward Flight Deck	1
	Nose Wheel Well Bay Electronic Harnesses LH	2
	Underfloor Electronic Harnesses Station 179 to 260 RH	3

TABLE OF CONTENTS (CONT)

CHAPTER-SUBJECT		FIGURE
93-4	ELECTRICAL AND ELECTRONIC COMPARTMENT ELECTRONIC HARNESSES	
	Electrical and Electronic Compartment Electronic Harnesses RH	1
	Electrical and Electronic Compartment Rack Electronic Harnesses LH	2
	Electrical and Electronic Compartment Electronic Harnesses LH	3
93-5	FUSELAGE FORWARD UNDERFLOOR ELECTRONIC HARNESSES	
	Fuselage Forward Underfloor Electronic Harnesses Forward Cargo Area Station 323 to 622.....	1
	Fuselage Forward Underfloor Electronic Harnesses Overwing Area and Above Wheel Well	2
93-6	FUSELAGE AFT UNDERFLOOR ELECTRONIC HARNESSES	
	Fuselage Aft Underfloor Electronic Harnesses Station 926 to 1590 LH	1
	Fuselage Aft Underfloor Electronic Harnesses Station 926 to 1590 RH	2
93-7	VERTICAL STABILIZER ELECTRONIC HARNESSES	
	Vertical Stabilizer Electronic Harnesses	1

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-31806	93-1	2-6	
	93-3	1-6	
	93-3	2-6	
	93-4	2-6	
22-31807	93-1	2-7	
	93-3	1-7	
	93-3	2-7	
	93-4	2-7	
22-31808	93-1	2-8	
	93-3	1-8	
	93-3	2-8	
	93-4	2-8	
22-31809	93-1	2-9	
	93-3	1-9	
	93-3	2-9	
	93-4	2-9	
22-31810	93-3	1-79.1	
22-31811	93-4	2-134.1	
22-31812	93-1	3-15	
22-31813	93-3	2-93	
	93-4	2-93	
22-31849	93-1	1-10	
	93-3	1-10	
	93-3	2-10	
	93-4	2-10	
	93-4	3-10	
22-31850	93-3	1-80	
	93-4	2-80	
22-31852-805	93-3	1-84	
22-31853	93-4	2-123	
22-31854	93-4	2-129	
	93-4	3-129	
22-31855	93-4	1-110	
	93-4	2-110	
22-31856	93-3	2-92	
	93-4	2-92	
22-31857	93-3	2-94	
	93-4	2-94	
22-31859	93-4	2-134	
22-31861-801	93-3	1-79.2	
22-31864	93-3	1-82	
22-31865	93-3	1-83	
22-31881-801	93-1	4-23	
	93-3	3-23	
	93-4	1-23	
22-31889	93-1	1-11	
	93-1	2-11	
	93-3	1-11	
	93-3	2-11	
	93-4	2-11	
22-31890	93-1	1-3	
22-31891	93-1	1-1.1	
22-31892	93-3	3-96.1	
22-31893	93-1	1-2	
22-31895-801	93-1	1-4	
22-31900-801	93-1	1-96	
	93-3	3-96	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-31922	93-1	2-12	
	93-3	1-12	
	93-4	1-12	
22-31923	93-1	2-13	
	93-3	1-13	
	93-4	1-13	
22-31965	93-3	1-81	
	93-4	1-81	
22-31968	93-4	1-109	
22-31969	93-4	1-108	
22-31970	93-1	2-14	
	93-3	1-14	
	93-4	1-14	
22-31971	93-4	1-107	
22-32722	93-4	2-132	
22-32723	93-4	2-130	
22-32724	93-4	2-131	
	93-4	3-131	
22-32742-801	93-1	4-24	
22-32743	93-1	4-26	
22-32745	93-4	1-120	
	93-4	3-120	
	93-5	1-120	
22-32745-801	93-4	1-120.1	
	93-4	3-120.1	
	93-5	1-120.1	
22-32752	93-1	5-28	
22-32812	93-1	5-29	
	93-4	2-29	
22-32815	93-4	2-133	
22-32829	93-4	2-124	
	93-4	3-124	
22-32830	93-1	5-41	
	93-1	6-41	
	93-4	1-41	
	93-4	2-41	
22-32861	93-4	2-135	
22-32865	93-1	5-30	
	93-4	2-30	
22-32879-801	93-4	2-136	
	93-4	3-136	
22-32880-801	93-4	1-111.1	
	93-4	3-111.1	
22-32881	93-4	3-155	
	93-5	1-155	
22-32899-801	93-4	2-125	
22-32900-801	93-4	1-105	
22-32901-803	93-4	2-129.1	
	93-4	3-129.1	
22-32905	93-1	5-31	
	93-4	1-31	
	93-4	2-31	
22-32906	93-4	2-137	
22-32912	93-1	4-25	
22-32913	93-4	2-127	
22-32914-801	93-1	1-97	
	93-3	3-97	
	93-4	1-97	
22-32916	93-1	4-27	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-32917	93-4	1-101	
22-32918	93-4	2-126.1	
	93-5	1-126.1	
22-32926	93-4	1-104	
22-32936	93-4	1-115	
22-32937	93-4	1-114	
	93-4	2-114	
22-32944	93-4	1-113	
	93-4	2-113	
22-32945	93-4	1-112	
	93-4	2-112	
	93-5	1-112	
22-32946	93-4	1-102	
	93-4	2-102	
	93-5	2-102	
22-32972	93-4	1-116	
	93-4	2-116	
	93-4	3-116	
	93-5	1-116	
22-32981	93-4	1-103	
22-32986	93-4	1-106	
22-33741	93-2	3-78	
22-33743	93-6	1-166	
22-33744	93-6	1-169	
22-33745	93-6	1-170	
22-33746	93-2	3-79	
22-33747	93-5	1-151	
	93-5	2-151	
22-33747-801	93-5	1-152	
	93-5	2-152	
22-33750	93-2	2-61	
	93-2	3-61	
	93-5	2-61	
	93-6	1-61	
22-33751	93-5	2-158	
	93-6	1-158	
22-33751-801	93-5	2-159	
	93-6	1-159	
22-33800-801	93-4	2-126.2	
	93-4	3-126.2	
22-33807	93-2	3-77	
22-33810	93-5	2-157.1	
22-33811	93-5	2-157	
22-33843-801	93-5	1-150	
	93-5	2-150	
	93-6	1-150	
22-33845-801	93-2	2-62	
	93-2	3-62	
	93-5	2-62	
	93-6	1-62	
22-33849-801	93-4	1-117	
	93-4	2-117	
	93-4	3-117	
22-33850-803	93-4	1-121	
	93-4	3-121	
22-33850-805	93-4	2-128	
	93-4	3-128	
22-33867	93-5	1-140	
22-33867-801	93-5	1-141	
	93-5	2-141	
	93-6	1-141	
22-33867-803	93-6	1-163.5	
22-33870-801	93-4	3-138	
22-33871-801	93-4	3-138.1	
22-33872	93-4	2-126	
	93-4	3-126	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-33873	93-4	3-138.2	
22-33880-801	93-1	7-44	
	93-1	8-44	
	93-4	1-44	
	93-4	3-44	
	93-4	2-44	
22-33883	93-1	7-45	
	93-1	8-45	
22-33884-801	93-1	8-46	
22-33887	93-5	1-163	
	93-5	2-163	
22-33890	93-5	2-160	
	93-6	1-160	
22-33894-801	93-2	2-60	
	93-5	2-60	
22-33895-801	93-2	1-57	
	93-2	2-57	
22-33896-801	93-2	1-55	
22-33897-801	93-2	1-53	
22-33899-801	93-2	2-63	
22-33900-801	93-2	2-65	
22-33901-801	93-2	2-68	
	93-2	3-68	
22-33903-801	93-2	3-71	
	93-6	1-71	
22-33904-801	93-2	3-73	
22-33905-801	93-2	3-75	
22-33906-801	93-2	1-59	
	93-5	2-59	
22-33907-801	93-2	1-56	
22-33908-801	93-2	1-54	
22-33909-801	93-2	1-52	
22-33910-801	93-2	1-58	
	93-2	2-58	
22-33911-801	93-2	2-64	
22-33912-801	93-2	2-66	
22-33913-801	93-2	2-69	
	93-2	3-69	
22-33914-801	93-2	3-70	
	93-6	2-70	
22-33915-801	93-2	3-72	
22-33916-801	93-2	3-74	
22-33917-801	93-2	3-76	
22-33926	93-5	1-148	
22-33926-801	93-5	1-149	
	93-5	2-149	
	93-6	1-149	
22-33926-803	93-6	1-163.4	
22-33928	93-6	1-167	
	93-6	2-167	
22-33928-801	93-6	1-167.1	
	93-6	2-167.1	
22-33930	93-5	1-142	
22-33930-801	93-5	1-143	
	93-5	2-143	
	93-6	1-143	
22-33930-803	93-6	1-163.2	
22-33931	93-6	1-168	
	93-6	2-168	
22-33935	93-6	1-179	
	93-6	2-179	


PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-33935-801	93-6	1-180	
	93-6	2-180	
22-33938	93-5	1-144	
22-33938-801	93-5	1-145	
	93-5	2-145	
	93-6	1-145	
22-33938-803	93-6	1-163.1	
22-33941	93-5	1-146	
22-33941-801	93-5	1-147	
	93-5	2-147	
	93-6	1-147	
22-33941-803	93-6	1-163.3	
22-33944	93-4	1-119	
	93-4	2-119	
	93-5	1-119	
22-33949	93-4	1-118	
	93-4	2-118	
	93-5	1-118	
22-33953	93-6	1-172	
	93-6	2-172	
22-33954	93-6	1-175	
	93-6	2-175	
22-33955	93-6	1-165	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-33957	93-5	1-161	
	93-5	2-161	
22-33963-801	93-4	1-111	
	93-4	2-111	
	93-4	3-111	
22-33965-801	93-1	5-42	
	93-1	6-42	
	93-4	1-42	
	93-4	3-42	
22-33967	93-2	2-67	
	93-5	2-67	
22-33968	93-5	1-162	
	93-5	2-162	
22-33969	93-5	1-153	
	93-5	2-153	
22-33971	93-6	1-164	
22-33977	93-6	2-176	
22-35860	93-7	1-183	
22-35923	93-7	1-181	
22-35923-801	93-7	1-182	
22-35924	93-6	2-177	
	93-7	1-177	
22-35924-801	93-6	2-178	
	93-7	1-178	
22-35928	93-6	2-174	
	93-7	1-174	
22-35932	93-6	2-173	
	93-7	1-173	
22-35934	93-6	1-171	
	93-6	2-171	
	93-7	1-171	


SECTION V

Chapter 93
ELECTRONIC HARNESSES


FLIGHT COMPARTMENT ELECTRONIC HARNESSES

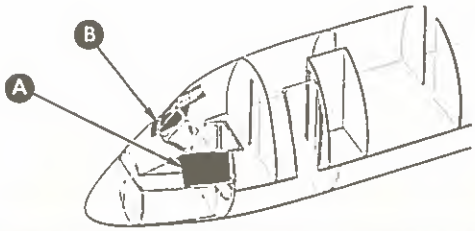

A

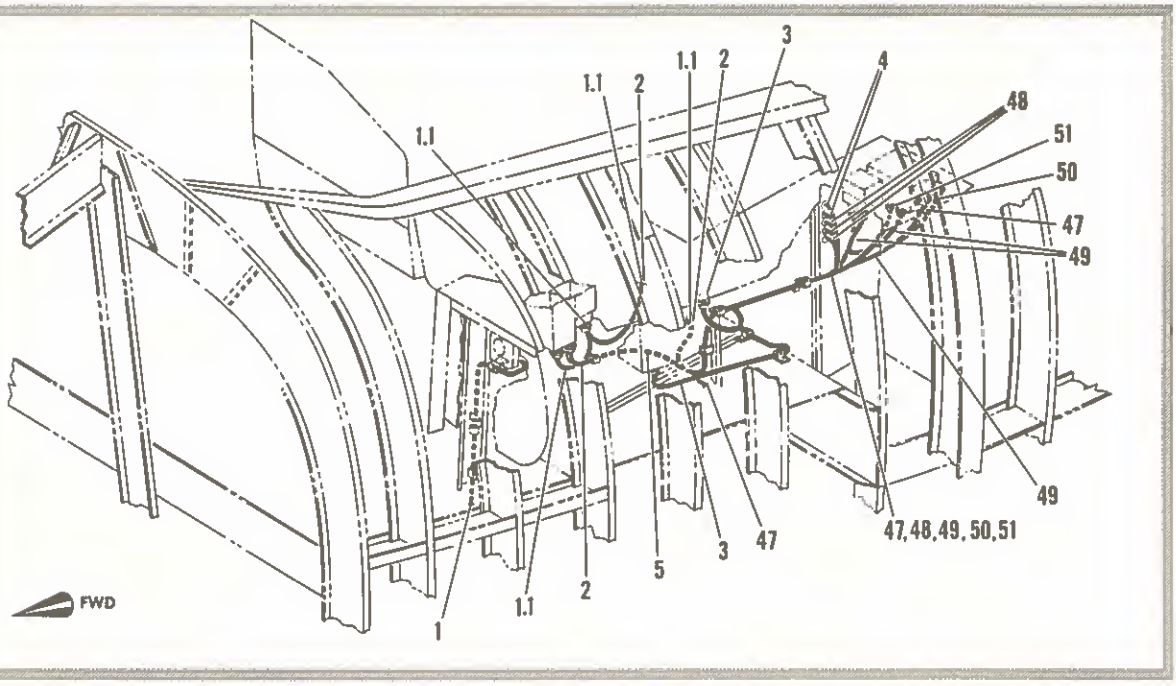



B

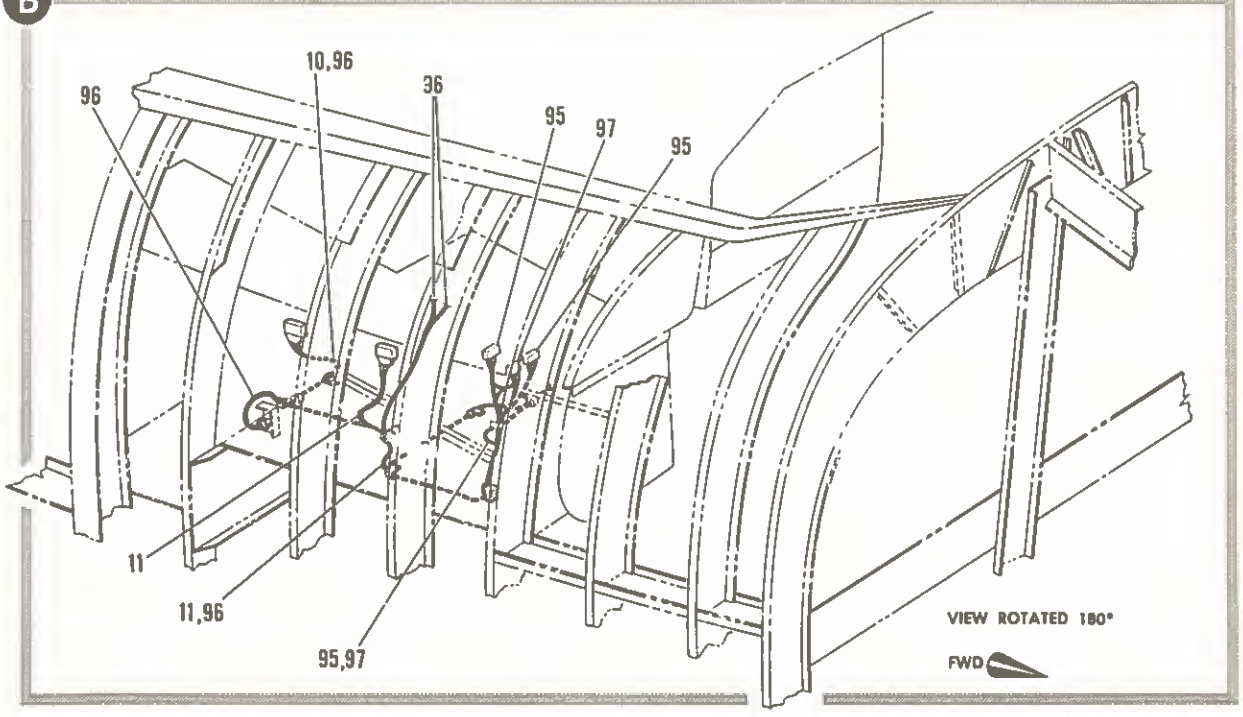

22.04.93.01.002

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		PILOT AND COPILOT CONSOLE ELECTRONIC HARNESSES SEE 22-31001			
- 1.1	22-31891	. HARNESS ASSEMBLY, AUDIO JACK BOX TO PILOT AUDIO SELECTOR PANEL	1		1
	D024052-0001	. . PLATE, CONVAIR 92-63502-003 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		3
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V89110-	1		1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V89110-	1		6
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V89110-	1		34
- 2	22-31893	. HARNESS ASSEMBLY, AUDIO SELECTOR PANEL TO PILOT MIKE SELECTOR PANEL	1		1
	XMRE34SC2A300	. . PLUG, CONVAIR 92-50145-008 -V81312-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V89110-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		5
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		10
- 3	22-31890	. HARNESS ASSEMBLY; PILOT CONSOLE AUDIO SPLICE TO PILOT MIKE JACK	1		1
	SCA2B	. . JACK, CONVAIR 95-18504-008 -V37942-	1		1
	XLR4-31	. . RECEPTACLE, CONVAIR 92-50287-001 -V71486-	1		1
- 4	22-31895-801	. HARNESS ASSEMBLY, PILOT CONSOLE AUDIO SPLICE TO PILOT MIKE AND HEADSET JACK	1		1
	SC1A	. . JACK, CONVAIR 95-18504-005 -V37942-	1		1
	SCA2B	. . JACK, CONVAIR 95-18504-008 -V37942-	1		1
	XLR4-31	. . RECEPTACLE, CONVAIR 92-50287-001 -V71468-	1		1

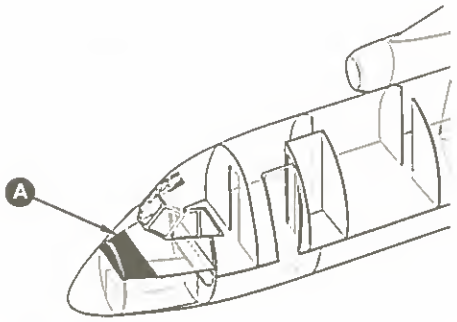


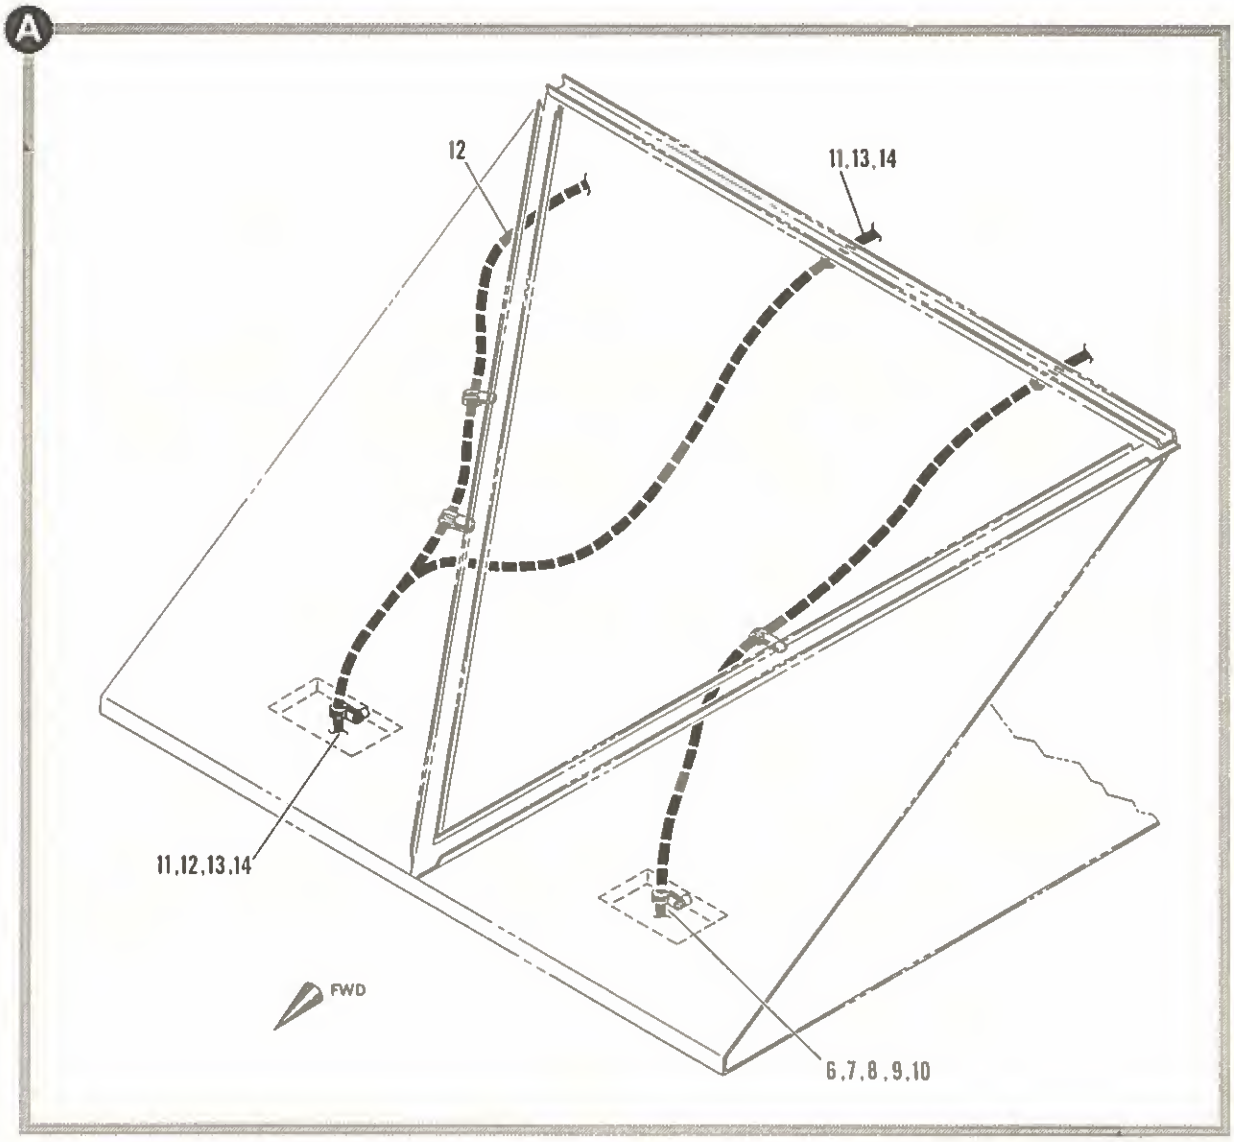


22 04 93 01.003A

PILOT AND COPILOT FWD PEDESTAL
ELECTRONIC HARNESSES
FIGURE 2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		PILOT AND COPILOT FWD PEDESTAL ELECTRONIC HARNESSES SEE 22-31001			
- 6	22-31806	. HARNESS ASSEMBLY, SHELF A TO RADAR INDICATOR	1		1
	029850-0015	. . INSERT, CONVAIR 95-02201-006 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	FK37-21C9-16	. . PLUG, CONVAIR 92-40319-001 -V71468-	1		1
	22-32537-11	. . DECAL	1		1
- 7	22-31807	. HARNESS ASSEMBLY, SHELF A TO RADAR INDICATOR VIDEO	1		1
	UG260B-U	. . PLUG, CONVAIR 92-47001-004	1		2
- 8	22-31808	. HARNESS ASSEMBLY, SHELF A TO RADAR INDICATOR RANGE MIKES	1		1
	UG260B-U	. . PLUG, CONVAIR 92-47001-004	1		2
- 9	22-31809	. HARNESS ASSEMBLY, SHELF A TO RADAR CONTROL PANEL	1		1
	029850-0015	. . INSERT, CONVAIR 95-02201-006 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	D024050-0022	. . PLATE, CONVAIR 92-50277-003 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	22-32537-11	. . DECAL	1		1
- 10	22-31849	. HARNESS ASSEMBLY, ADF CONTROL PANEL 1 TO SHELF B	1		1
	D024199-0002	. . PLATE, CONVAIR 92-50277-005 -V71468-	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
	22-32537-15	. . DECAL	1		1
- 11	22-31889	. HARNESS ASSEMBLY, SHELF C TO SELECTIVE CALL CONTROL PANEL	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	D024050-0001	. . PLATE, CONVAIR 92-50277-001 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		1
	22-32537-27	. . DECAL	1		1
- 12	22-31922	. HARNESS ASSEMBLY, SHELF D TO HF 1 COMMUNICATION CONTROL PANEL	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	D024051-0001	. . PLATE, CONVAIR 92-63502-002 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	22-32537-35	. . DECAL	1		1
- 13	22-31923	. HARNESS ASSEMBLY, SHELF D TO HF 2 COMMUNICATION CONTROL PANEL	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	22-32537-35	. . DECAL	1		1
- 14	22-31970	. HARNESS ASSEMBLY, SHELF E TO ADF CONTROL PANEL 2	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	D024199-0002	. . PLATE, CONVAIR 92-50277-005 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
	22-32537-43	. . DECAL	1		1

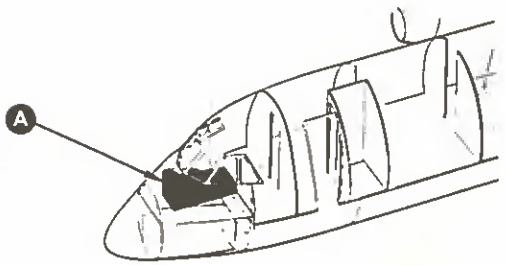


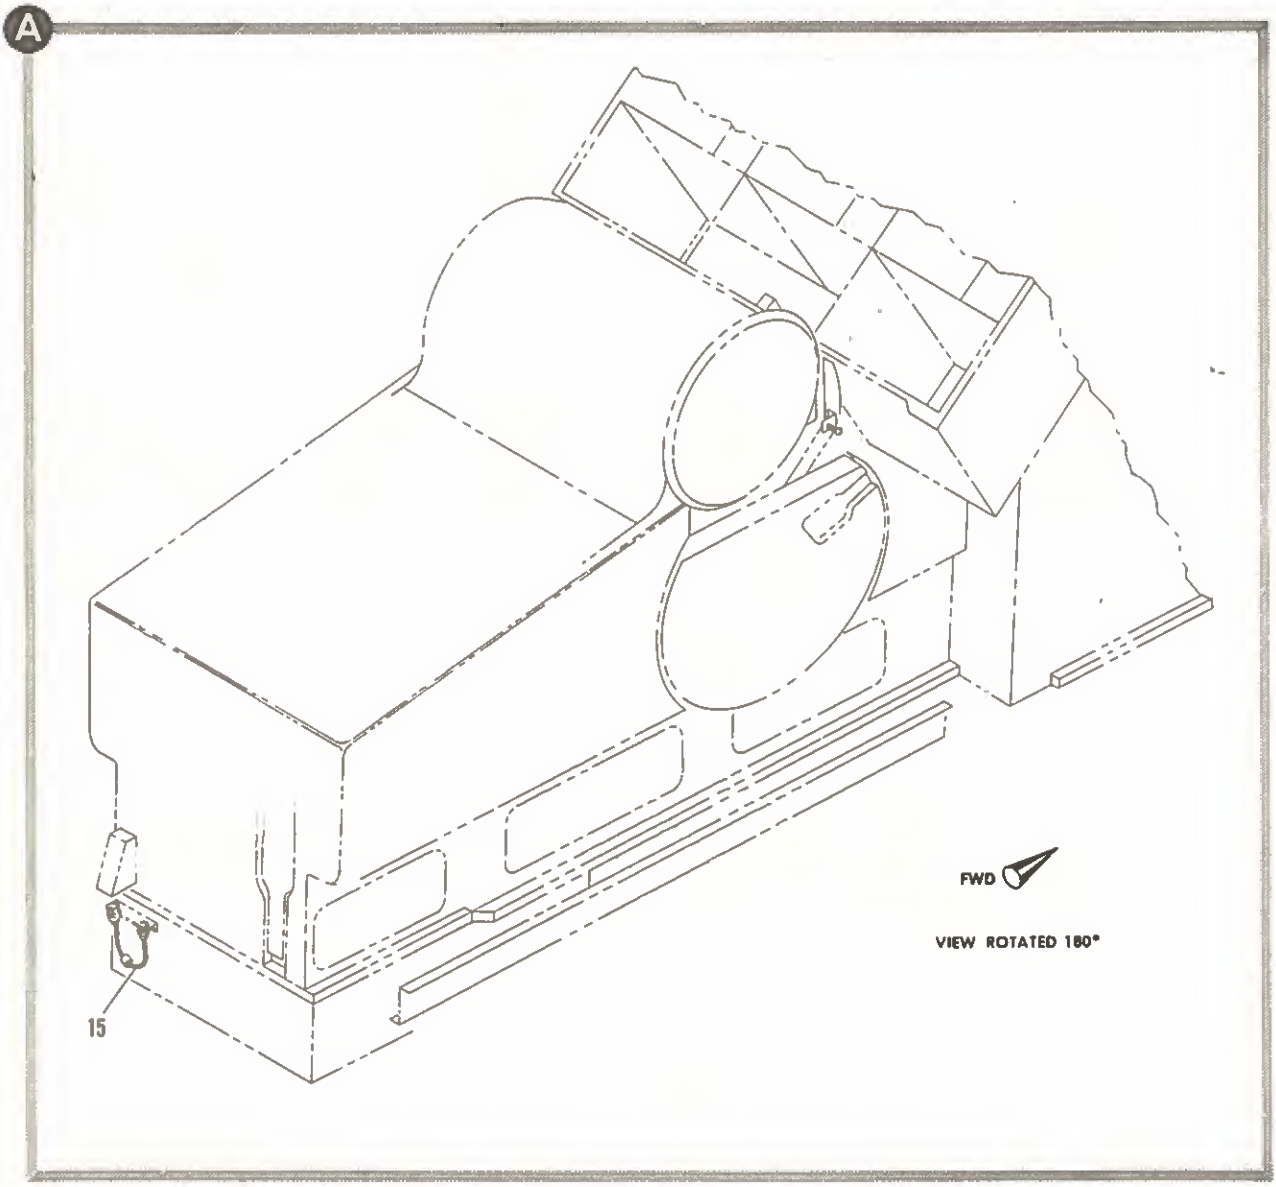



22 04 93 01.004A

PILOT AND COPILOT
PEDESTAL ELECTRONIC HARNESSES
FIGURE 3

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		PILOT AND COPILOT PEDESTAL ELECTRONIC HARNESSES SEE 22-31001			
- 15	22-31812	. HARNESS ASSEMBLY, PUBLIC ADDRESS SPLICE TO PILOT HANDSET HOLDER	1		1
	9607	. . HOLDER, HANDSET CONVAIR 94-69004-001 -V02872-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4

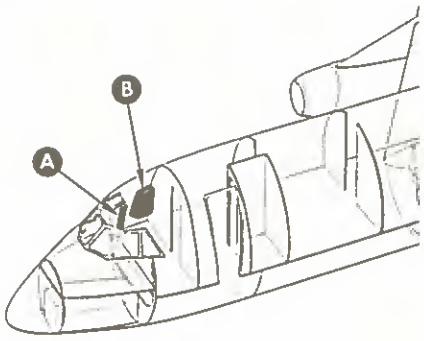


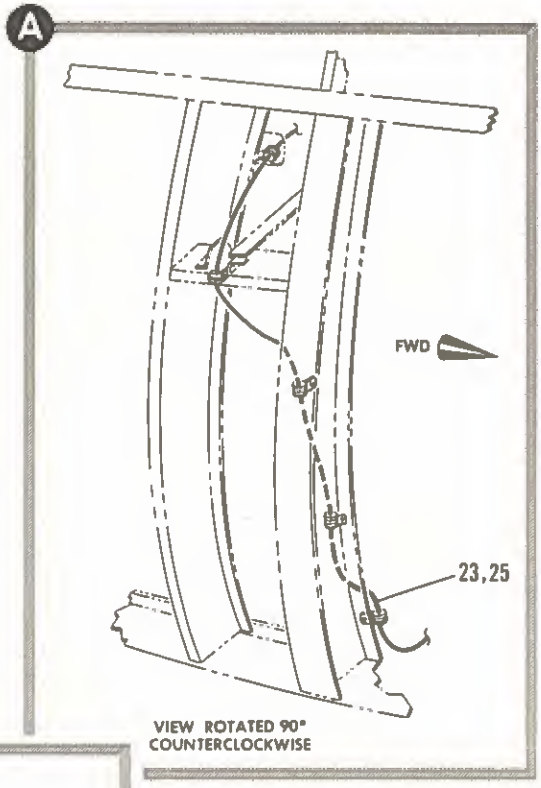

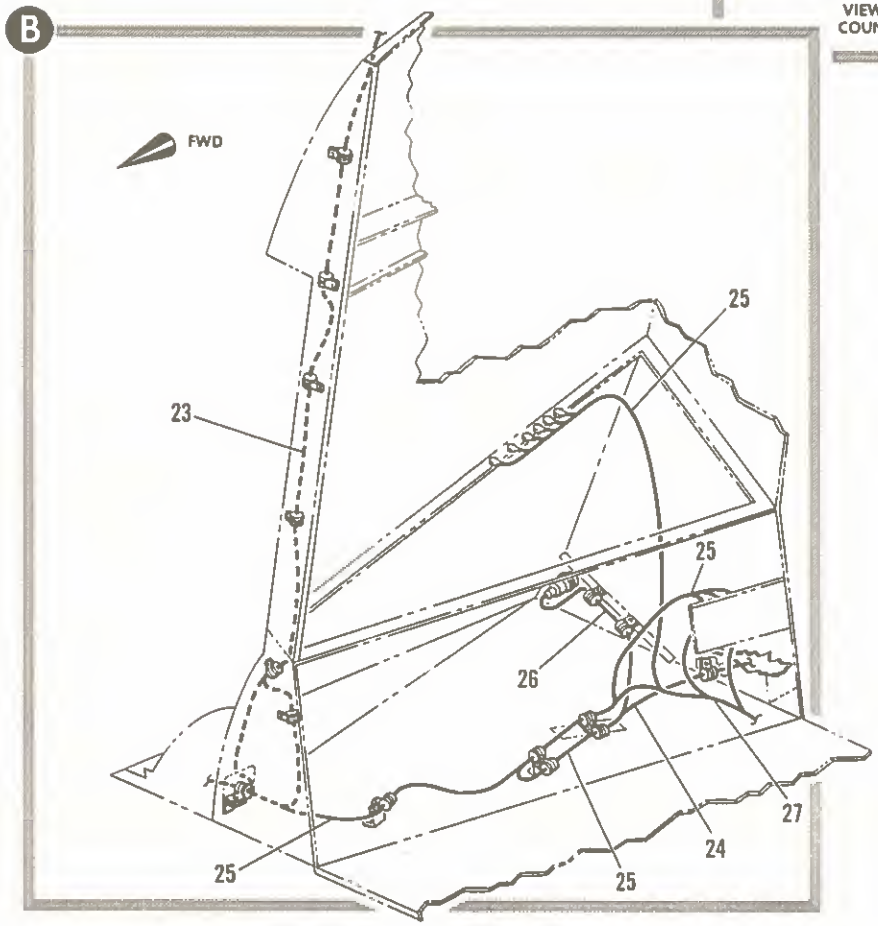

22.04.93.01.005

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4		FLIGHT ENGINEER STATION ELECTRONIC HARNESSES SEE 22-31001			
- 23	22-31881-801	. HARNESS ASSEMBLY, AUDIO JACK BOX TO PILOT AND COPILOT SPEAKERS	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V89110-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V89110-	1		4
- 24	22-32742-801	. HARNESS ASSEMBLY, FLIGHT ENGINEER AUDIO SPLICE TO MIKE AND HEADSET JACK	1		1
	SC1A	. . JACK, CONVAIR 95-18504-005 -V37942-	1		1
	SCA2B	. . JACK, CONVAIR 95-18504-008 -V37942-	1		1
	XLR4-31	. . RECEPTACLE, CONVAIR 92-50287-001 -V71468-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	320059	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3
	323975	. . SPLICE, CONVAIR 98-34009-003 -V00779-	1		4
- 25	22-32912	. HARNESS ASSEMBLY, AUDIO JACK BOX TO FLIGHT ENGINEER AUDIO SELECTOR PANEL	1		1
	D024052-0001	. . PLATE, CONVAIR 92-63502-003 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		2
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V89110-	1		6
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V89110-	1		30
- 26	22-32743	. HARNESS ASSEMBLY, FLIGHT ENGINEER AUDIO SPLICE TO MIKE JACK	1		1
	SCA2B	. . JACK, CONVAIR 95-18504-008 -V37942-	1		1
	XLR4-31	. . RECEPTACLE, CONVAIR 92-50287-001 -V71468-	1		1
- 27	22-32916	. HARNESS ASSEMBLY, FLIGHT ENGINEER AUDIO SELECTOR PANEL TO MIKE SELECTOR PANEL	1		1
	XMRE34SC2A300	. . PLUG, CONVAIR 92-50145-008 -V81312-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		4
	320559	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		9
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V89110-	1		1

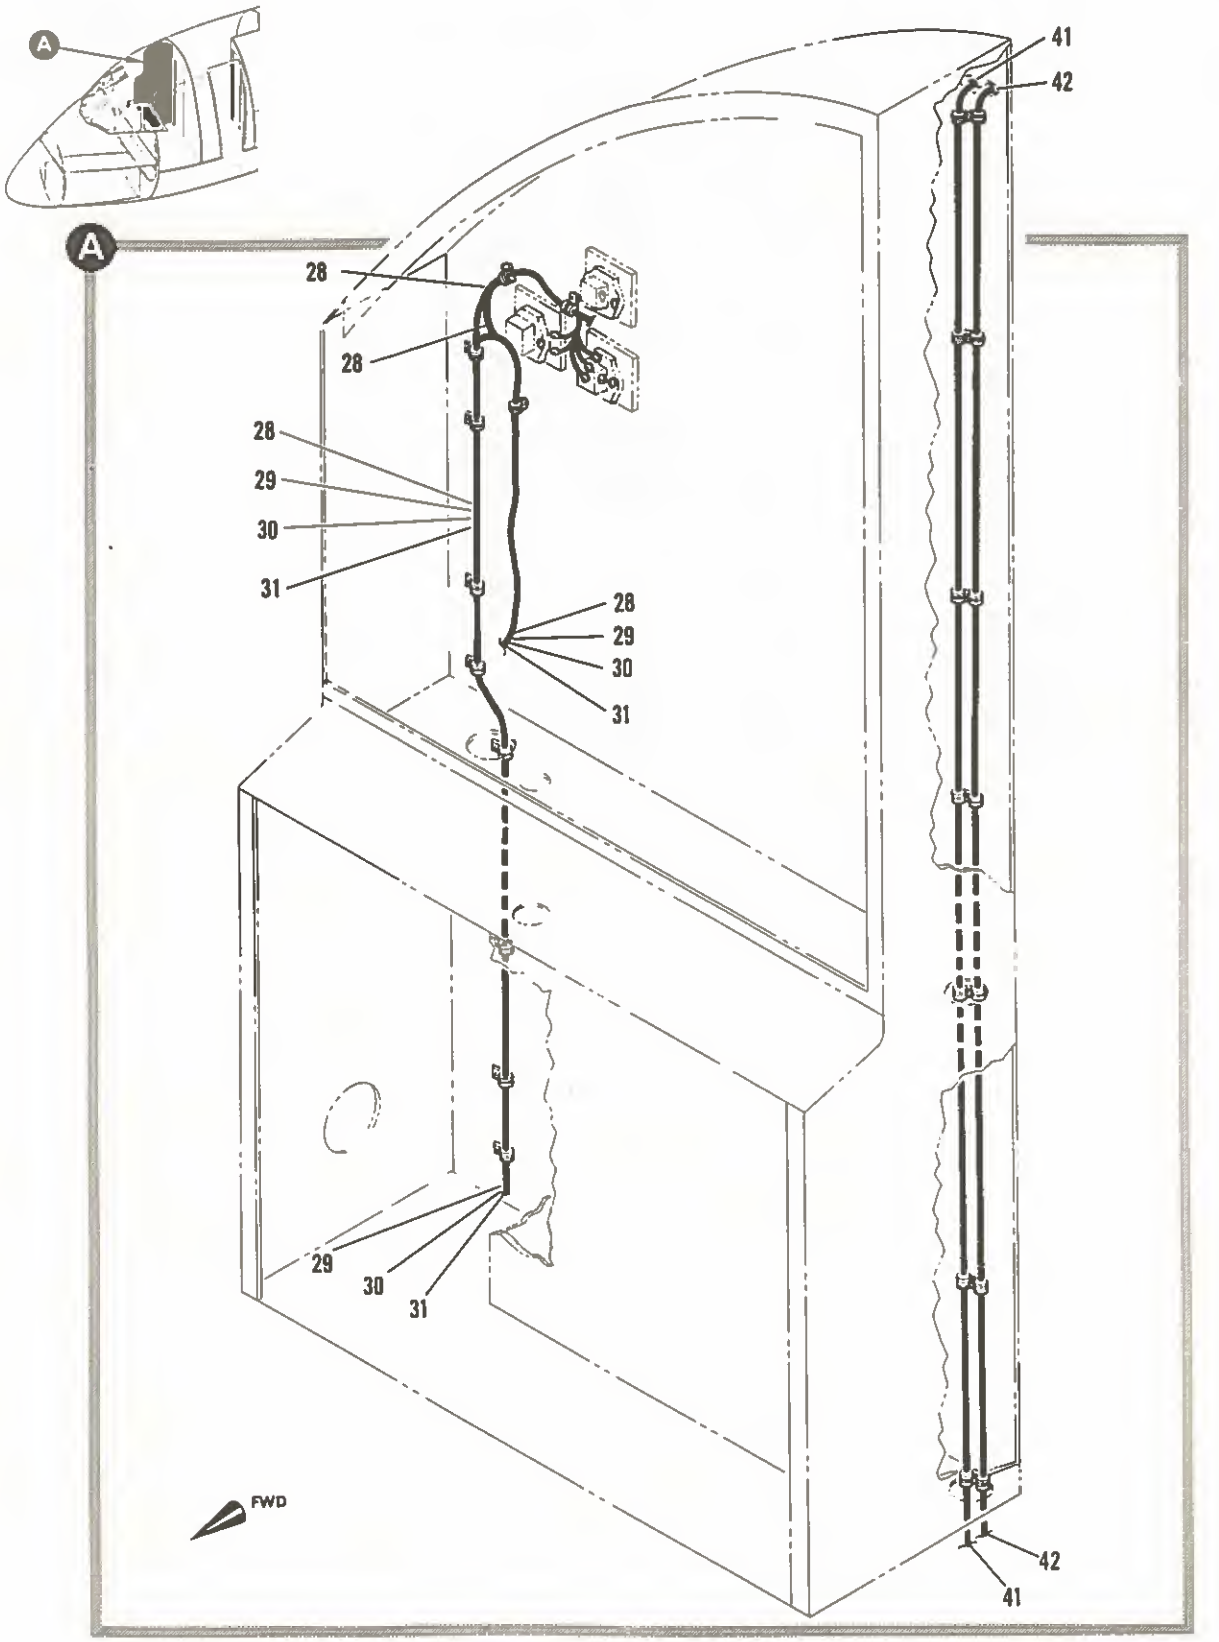



22 04 93.01 006 A

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5		CIRCUIT BREAKER PANEL RH ELECTRONIC HARNESSES SEE 22-31001			
- 28	22-32752	. HARNESS ASSEMBLY, RELAY PANEL TO CIRCUIT BREAKER PANEL	A		1
	22-32752-801	. HARNESS ASSEMBLY, RELAY PANEL TO CIRCUIT BREAKER PANEL	5	6	1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V89110-	1		15
	320571	. . TERMINAL, CONVAIR 98-90805-005 -V89110-	1		4
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V89110-	A		69
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V89110-	5	6	71
	320569	. . TERMINAL, CONVAIR 98-90805-017 -V89110-	1		7
	A36153	. . TERMINAL, CONVAIR 98-90805-033 -V89110-	1		9
- 29	22-32812	. HARNESS ASSEMBLY, SHELF A TO CIRCUIT BREAKER PANEL	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V89110-	1		6
	22-32537-9	. . DECAL	1		1
- 30	22-32865	. HARNESS ASSEMBLY, SHELF B TO CIRCUIT BREAKER PANEL	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	029849-0013	. . INSERT, CONVAIR 95-02202-004 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V89110-	1		14
	22-32537-23	. . DECAL	1		1
- 31	22-32905	. HARNESS ASSEMBLY, SHELF C TO CIRCUIT BREAKER PANEL	1		1
	029849-0013	. . INSERT, CONVAIR 95-02202-004 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V89110-	1		16
	22-32537-27	. . DECAL	1		1

A AIRPLANES 1 THRU 4, 7 AND ON


	FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
	6		FWD STEWARDESS STATION RH ELECTRONIC HARNESSES SEE 22-31001			
	- 41	22-32830	. HARNESS ASSEMBLY, VHF COMMUNICATION ANTENNA 3 TO VHF COMMUNICATION RECEIVER ANTENNA JACK 1	1		1
		RF0349	. . CAP, CONVAIR 92-74210-001 -V94375-	1		1
R		UG1185U	. . PLUG, CONVAIR 92-47003-005 -V81350-	1		1
		UG573A-U	. . PLUG, CONVAIR 92-47008-002 -V81350-	1		1
	- 42	22-33965-801	. HARNESS ASSEMBLY, DMET RECEIVER 2 TO DMET ANTENNA	1		1
		UG212C-U	. . ADAPTER, CONVAIR 92-04312-001 -V81350-	1		1
		RF0349	. . CAP, CONVAIR 92-74210-001 -V94375-	1		1
R		UG1213U	. . CONNECTOR, CONVAIR 92-47004-004 -V81350-	1		1
		UG710A-U	. . CONNECTOR, CONVAIR 92-47008-003 -V81350-	1		1

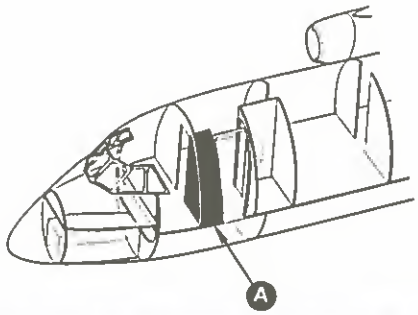


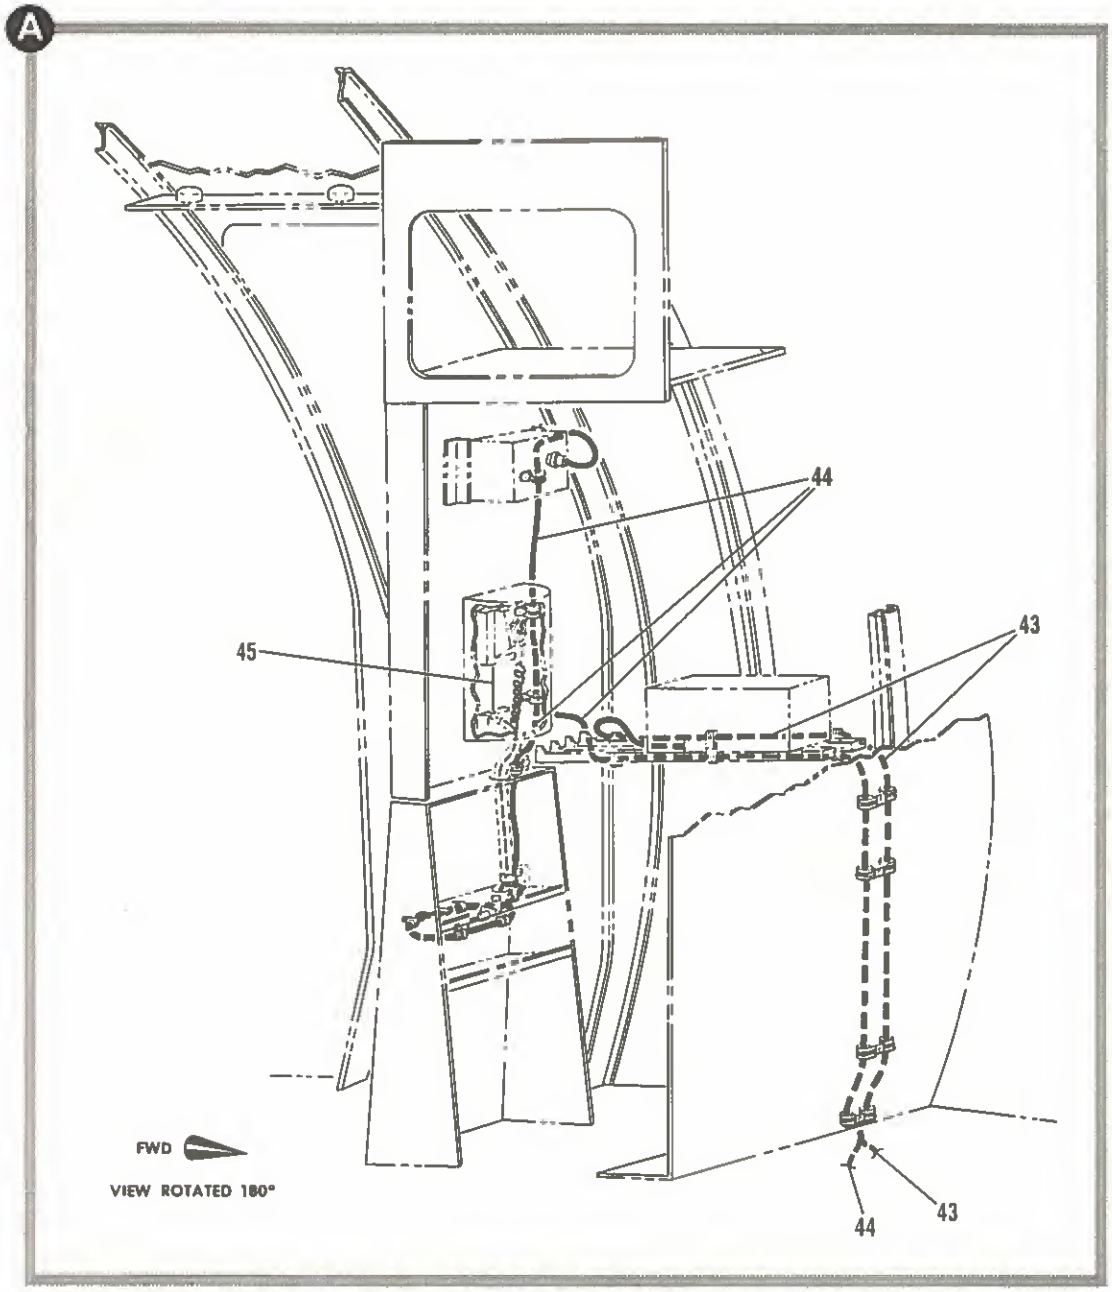

22.04.93.01.008


FWD STEWARDESS STATION AND
COAT CLOSET ELECTRONIC HARNESSES
FIGURE 7

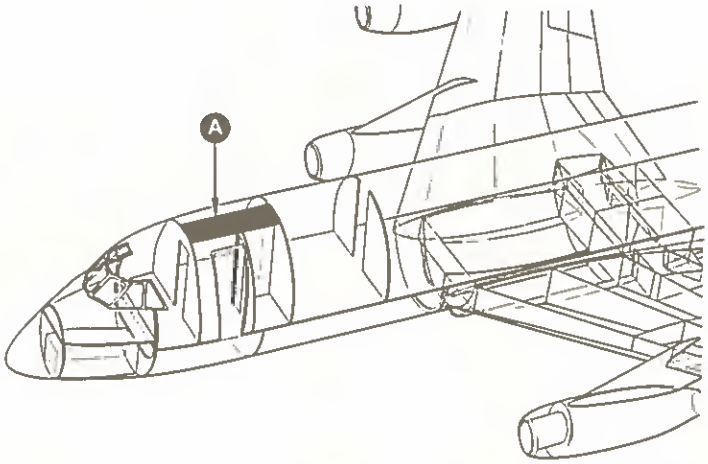

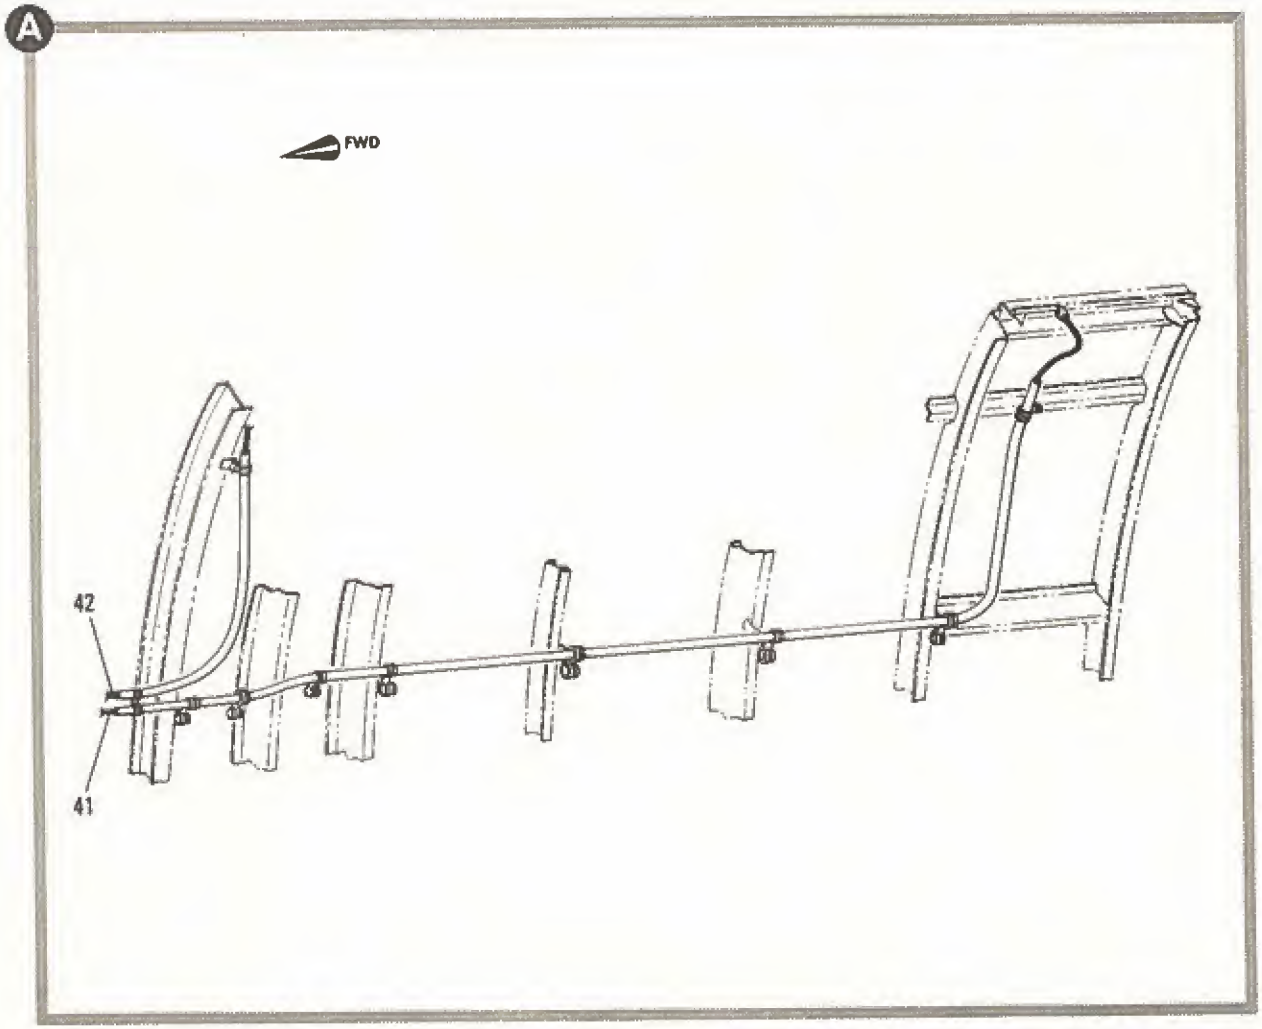

22.04.93.01.007

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
7		FWD STEWARDESS STATION AND COAT CLOSET ELECTRONIC HARNESSES SEE 22-31001			
- 44	22-33880-801	. HARNESS ASSEMBLY, AUDIO JACK BOX TO FWD STEWARDESS PUBLIC ADDRESS CONTROL PANEL	1		1
	PT06E18-32S	. . PLUG, CONVAIR 92-40325-001 -V06840-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		10
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		2
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V89110-	1		2
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V89110-	1		28
- 45	22-33883	. HARNESS ASSEMBLY, FWD STEWARDESS HANDSET SWITCH TO STEWARDESS SPLICE	1		1
	9607	. . HOLDER, CONVAIR 94-69004-001 -V82872-	1		1

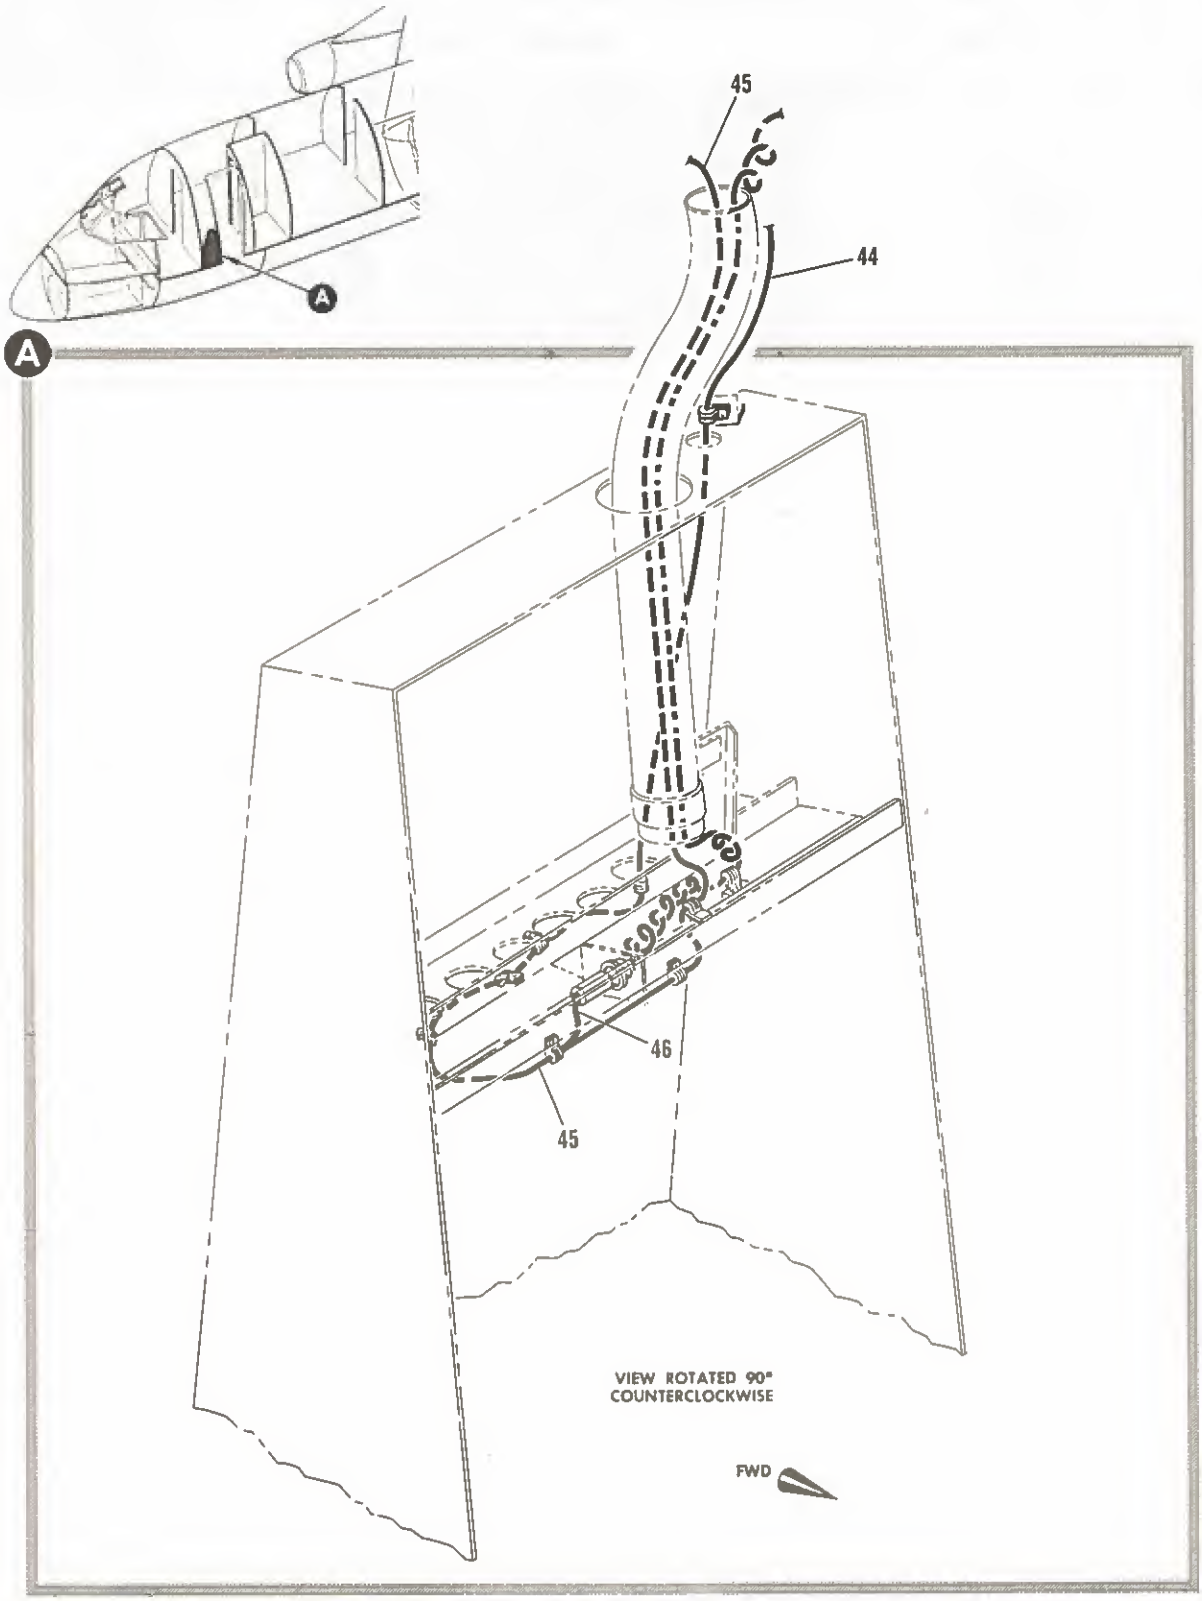

22 04 93 01 009


FWD STEWARDESS STATION
FOLDING SEAT ELECTRONIC HARNESSES
FIGURE 8


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
8		FWD STEWARDESS STATION FOLDING SEAT ELECTRONIC HARNESSES SEE 22-31001			
- 46	22-33884-801	. HARNESS ASSEMBLY, FWD STEWARDESS HANDSET JACK TO FWD STEWARDESS HANDSET SPLICE	1		1
	95-25	. . JACK, CONVAIR 95-18504-007 -V81812-	1		1

SECTION V

Chapter 93
ELECTRONIC HARNESSES


CABIN ELECTRONIC HARNESSES

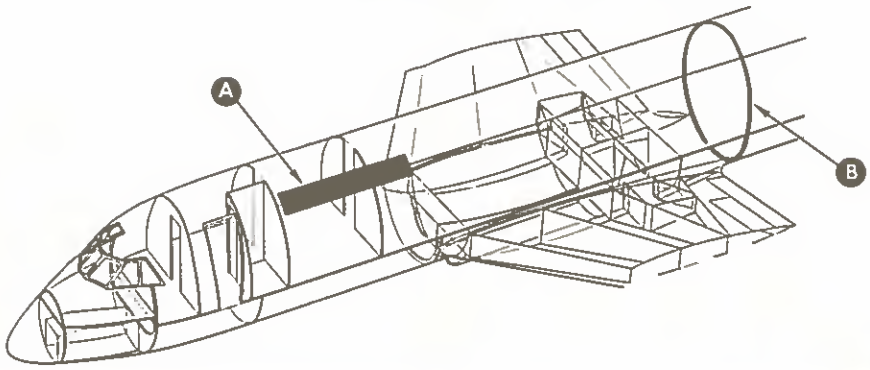


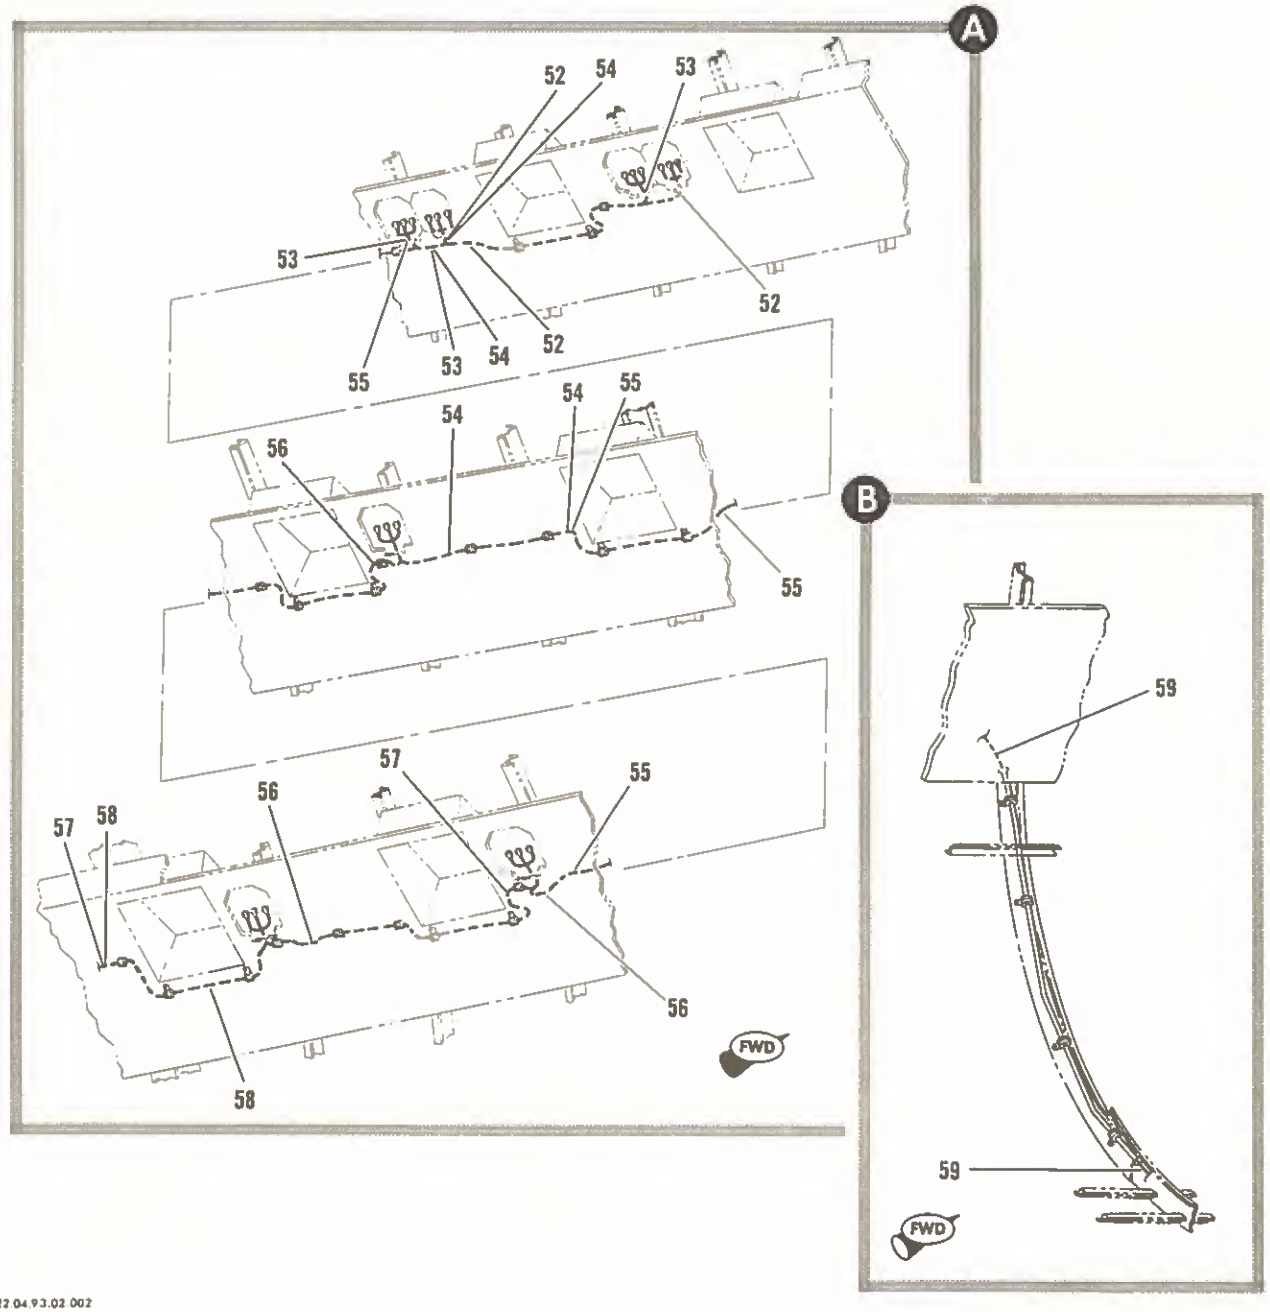



22.04.93.02 002

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		HATRACK SPEAKER ELECTRONIC HARNESSES STA 659 TO 888 SEE 22-33001			
- 60	22-33894-801	. HARNESS ASSEMBLY, AIR CONDITIONING COMPRESSOR LH TO HATRACK SPEAKER STA 659 LH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		2
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V89110-	1		1
- 61	22-33750	. HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT DISCONNECT TO ADF 1 SENSE ANTENNA DISCONNECT	1	2	1
	22-33750-803	. HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT DISCONNECT TO ADF 1 SENSE ANTENNA DISCONNECT	3		1
	22-33750-801	. HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT DISCONNECT TO ADF 2 SENSE ANTENNA DISCONNECT	1	2	1
	22-33750-805	. HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT DISCONNECT TO ADF 2 SENSE ANTENNA DISCONNECT	3		1
	UG88C-U	. . CONNECTOR, CONVAIR 92-47001-007	1		1
	UG909-U	. . CONNECTOR, CONVAIR 92-57001-008	1		1
- 62	22-33845-801	. HARNESS ASSEMBLY, HYDRAULIC COMPRESSOR SPLICE TO SENSE CONTROL DISCONNECT	1		1
	MS3100E18-8S	. . CONNECTOR	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		3
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
	AN3420-4A	. . ADAPTER, CONVAIR 90-04900-014	1		AR
	AN3420-6A	. . ADAPTER, CONVAIR 90-04900-015	1		AR
	AN3420-10A	. . ADAPTER, CONVAIR 90-04900-017	1		AR
- 63	22-33899-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 659 TO 725 LH	1		1
- 64	22-33911-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 697 TO 773 RH	1		1
- 65	22-33900-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 725 TO 811 LH	1		1
- 66	22-33912-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 773 TO 849 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		6
- 67	22-33967	. HARNESS ASSEMBLY, AIR CONDITIONING COMPARTMENT DISCONNECT TO VHF 1 ANTENNA FEED THRU	1		1
	UG21D-U	. . CONNECTOR, CONVAIR 92-47003-004	1		1
	82-835	. . CONNECTOR, CONVAIR 92-47005-001 -V02660-	1		1
- 68	22-33901-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 811 TO 887 LH	1		1
- 69	22-33913-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 849 TO 925 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		6

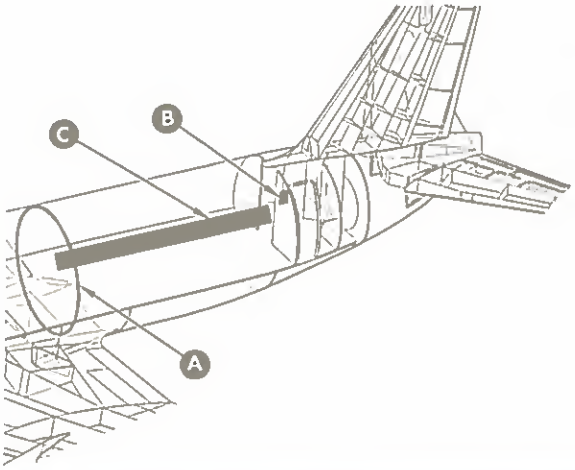

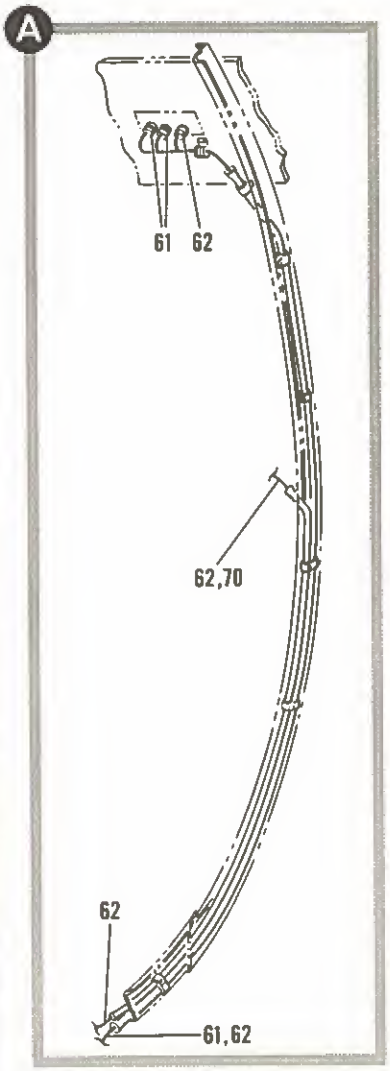

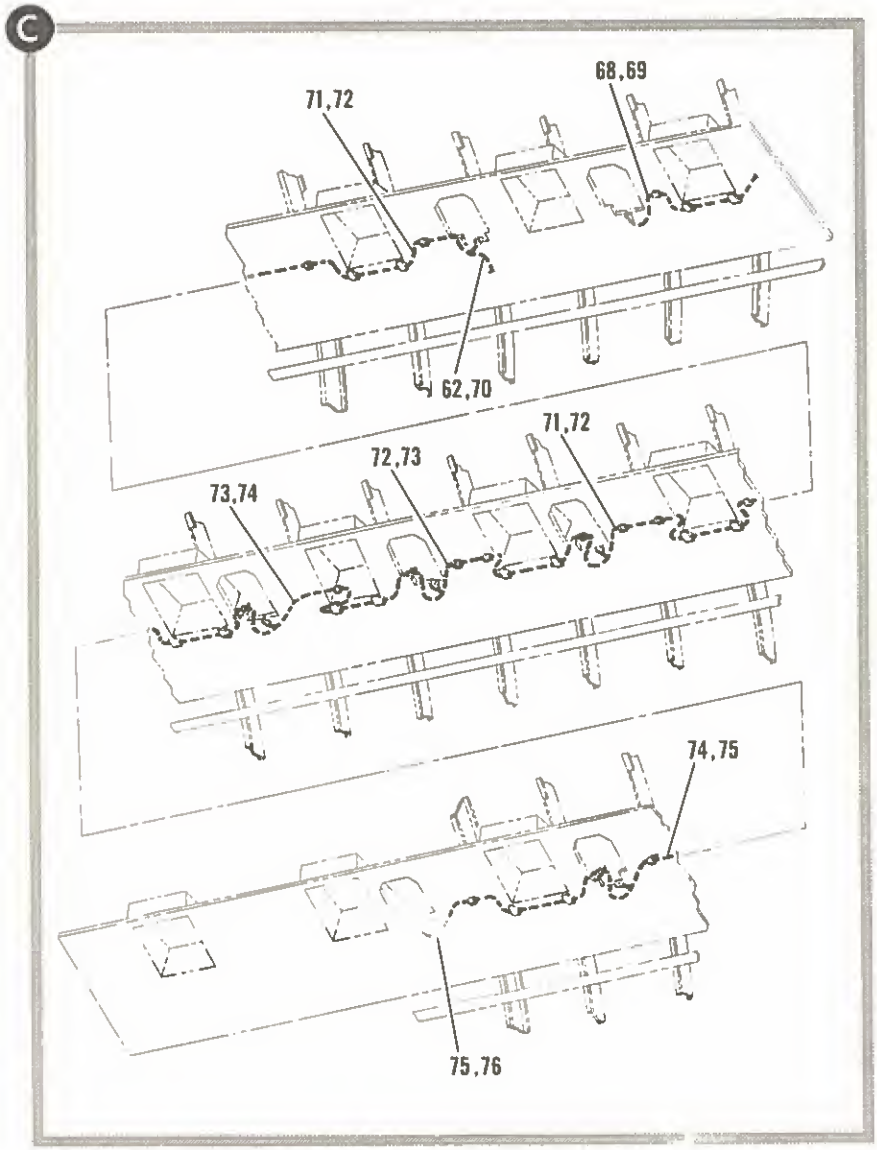

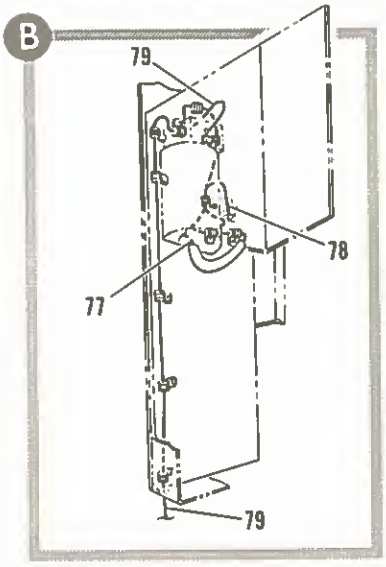

22.04 93.02 004


HATRACK SPEAKER
ELECTRONIC HARNESSES STA 926 TO 1230
FIGURE 3

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		HATRACK ELECTRONIC HARNESSES STA 926 TO 1230 SEE 22-33001			
- 70	22-33914-801	. HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT SPLICE LH TO HATRACK SPEAKER STA 1001 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		2
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V89110-	1		1
- 71	22-33903-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 953 TO 1039 LH	1		1
- 72	22-33915-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 1001 TO 1077 RH	1		1
- 73	22-33904-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 1039 TO 1115 LH	1		1
- 74	22-33916-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 1077 TO 1153 RH	1		1
- 75	22-33905-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 1115 TO 1181 LH	1		1
- 76	22-33917-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 1153 TO 1229 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		6
- 77	22-33807	. HARNESS ASSEMBLY, AFT STEWARDESS HANDSET SWITCH TO STEWARDESS SPLICE	1		1
	9607	. . HOLDER, CONVAIR 94-69004-001 -V82872-	1		1
- 78	22-33741	. HARNESS ASSEMBLY, AFT STEWARDESS HANDSET SPLICE TO HANDSET JACK	1		1
	95-25	. . JACK, CONVAIR 95-18504-007 -V81812	1		1
- 79	22-33746	. HARNESS ASSEMBLY, AFT FUSELAGE SPLICE TO AFT STEWARDESS PUBLIC ADDRESS CONTROL PANEL	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		9
	PT06E18-32S	. . PLUG, CONVAIR 92-40325-001 -V06840-	1		1

SECTION V


Chapter 93
ELECTRONIC HARNESSES


FUSELAGE NOSE UNDERFLOOR ELECTRONIC HARNESSES

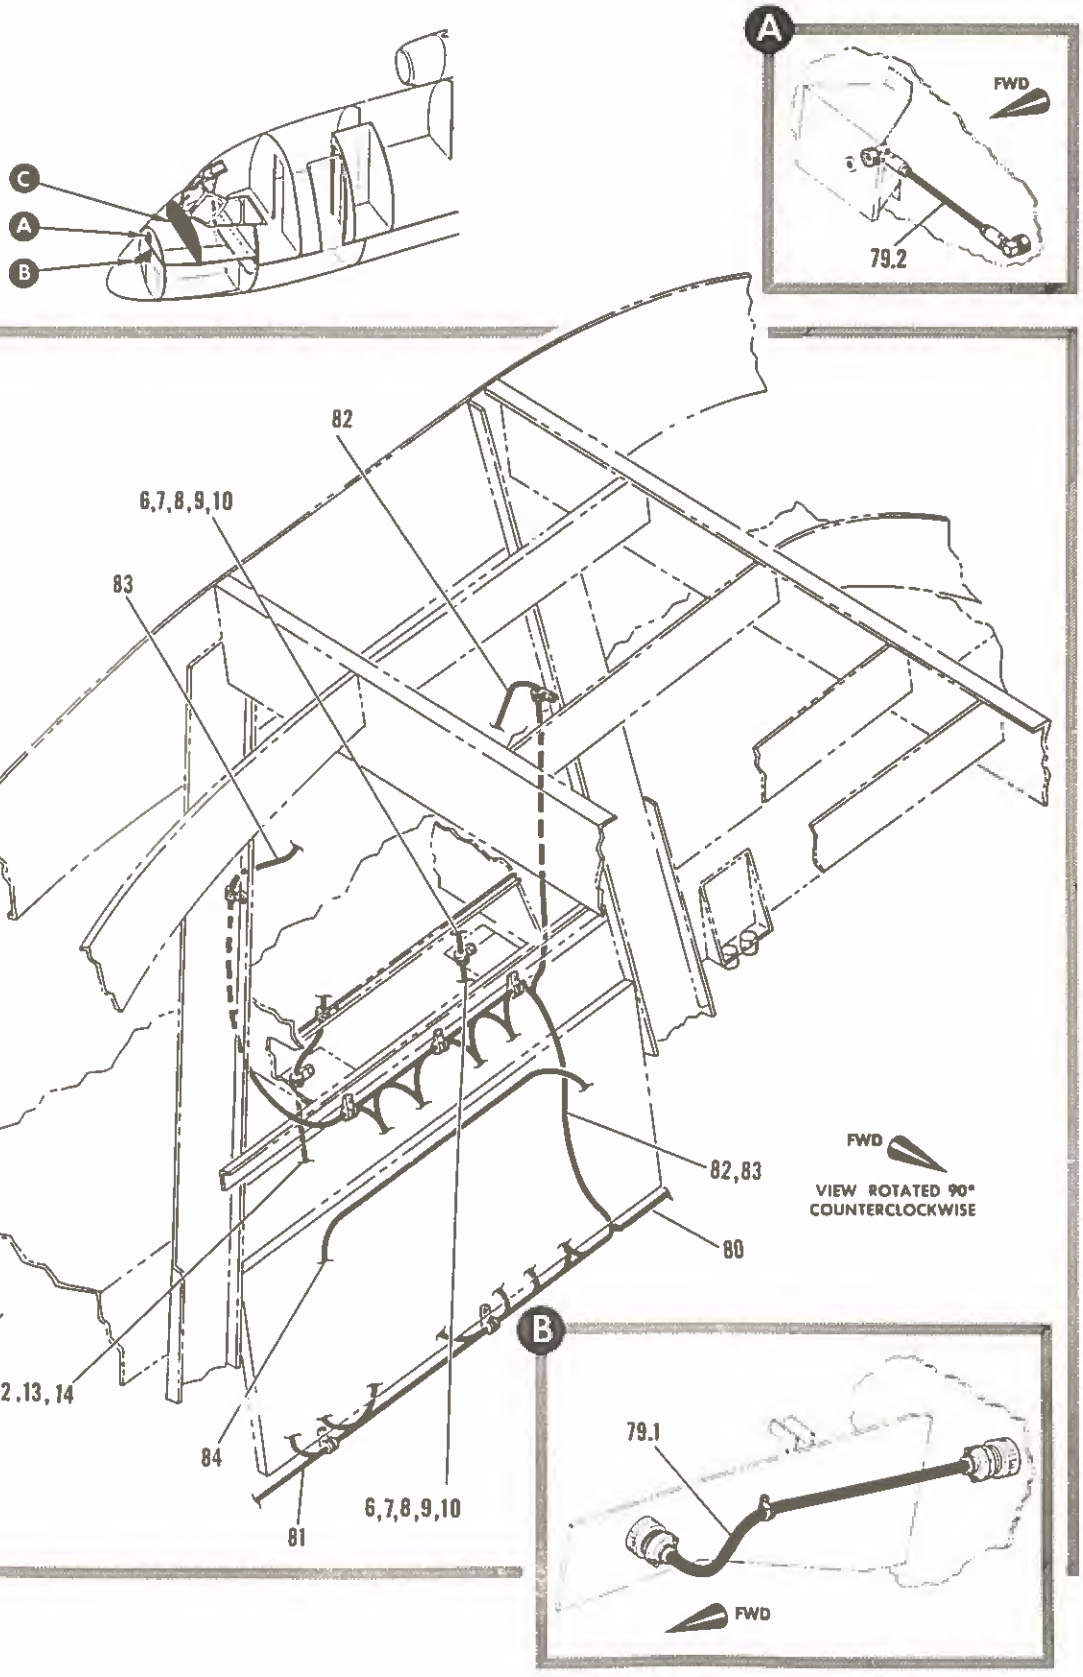

22.04.93.00.001A


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		FUSELAGE NOSE UNDER FLOOR ELECTRONIC HARNESSES FWD FLIGHT DECK SEE 22-31004 AND 22-32001			
- 79.1	22-31810	. HARNESS ASSEMBLY, FWD PRESSURE DISCONNECT TO RADAR ANTENNA	1		1
	MS3106E36-7S	. . CONNECTOR, CONVAIR 92-40313-003	1		1
	MS3106E36-7P	. . CONNECTOR, CONVAIR 92-40313-002	1		1
- 79.2	22-31861-801	. HARNESS ASSEMBLY, FWD PRESSURE FITTING TO GLIDE SLOPE ANTENNA	1		1
	82-835	. . CONNECTOR, CONVAIR 92-47005-001 -V02660-	1		2
- 80	22-31850	. HARNESS ASSEMBLY, SHELF B TO INSTRUMENT JUNCTION BOX	1		1
	029850-0015	. . INSERT, CONVAIR 95-02201-006 -V71468-	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		2
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		5
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		52
	22-32537-19	. . DECAL	1		2
- 81	22-31965	. HARNESS ASSEMBLY, SHELF E TO INSTRUMENT JUNCTION BOX	1		1
	029850-0015	. . INSERT, CONVAIR 95-02201-006 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		2
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		47
	320547	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		5
	22-32537-47	. . DECAL	1		2
- 82	22-31864	. HARNESS ASSEMBLY, INSTRUMENT JUNCTION BOX TO DMET INDICATOR 1	1		1
	K03-21-30PN	. . +LUG, CONVAIR 92-40058-005 -V71468-	1		1
	K06-21-5-8	. . CL-MP, CONVAIR 98-02500-003 -V71468-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		26
- 83	22-31865	. HARNESS ASSEMBLY, INSTRUMENT JUNCTION BOX TO DMET INDICATOR 2	1		1
	K03-21-30PN	. . PLUG, CONVAIR 92-40058-005 -V71468-	1		1
	K06-21-5-8	. . CLAMP, CONVAIR 98-02500-003 -V71468-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		26
- 84	22-31852-805	. HARNESS ASSEMBLY, INSTRUMENT JUNCTION BOX TO RESISTOR BOARD INTERNAL	A		1
	22-31852	. HARNESS ASSEMBLY, INSTRUMENT JUNCTION BOX TO RESISTOR BOARD INTERNAL	2	8	1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	2	8	4
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	2	8	28
	S17377	. . CAPACITOR, CONVAIR 91-57061-003 -V80183-	A		6
	S17377	. . CAPACITOR, CONVAIR 91-57061-003 -V80183-	2	8	4
	RC42GF101J	. . RESISTOR, CONVAIR 97-40002-013	1		2
	RC42GF271J	. . RESISTOR, CONVAIR 97-40002-018	A		1
	RC42GF271J	. . RESISTOR, CONVAIR 97-40002-018	2	8	2
	RC42GF102J	. . RESISTOR, CONVAIR 97-40002-025	A		5
	RC42GF102J	. . RESISTOR, CONVAIR 97-40002-025	2	8	6
	RC42GF391J	. . RESISTOR, CONVAIR 97-40002-020	A		1
	RC42GF561J	. . RESISTOR, CONVAIR 97-40002-022	A		1
	22-31520	. . BOARD ASSEMBLY, RESISTOR	1		2
	22-31520-9	. . . INSULATOR	1		1
	22-31520-7	. . . TERMINAL BOARD, MAKE FROM X1401NB1-8	1		1
	X1401NB1-8	. . . TERMINAL BOARD, CONVAIR 98-91711-005 -V71279-	1		REF
	22-31512-21	. . BRACKET, INSTRUMENT PANEL JUNCTION BOX	1		1
	AN515-4R7	. . SCREW	1		4
	NAS679A04	. . NUT	1		4
		A AIRPLANES 1, 9 AND ON			

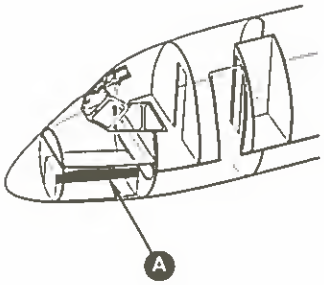


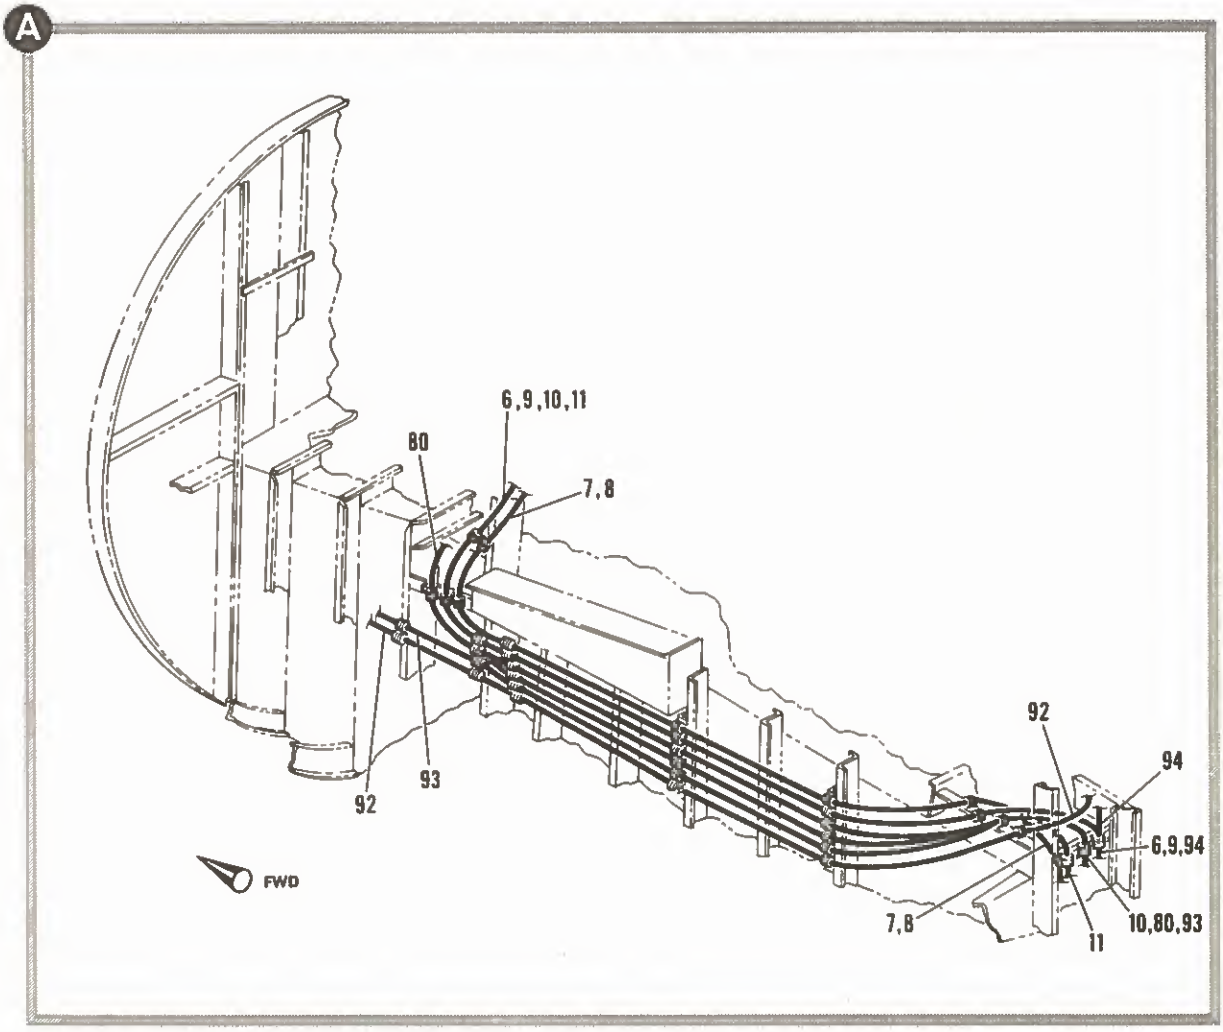

22 04 93 03 002 A

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		NOSE WHEEL WELL BAY ELECTRONIC HARNESSES LH SEE 22-31004			
- 92	22-31856	. HARNESS ASSEMBLY, GLIDE SLOPE TEE ADAPTER TO FORWARD PRESSURE FITTING	1		1
	UG566U	. . ADAPTER, TEE CONVAIR 90-04307-004	1		1
	UG572U	. . PLUG, CONVAIR 92-47008-004	1		1
	82-835	. . CONNECTOR, CONVAIR 92-47005-001 -V02660-	1		1
- 93	22-31813	. HARNESS ASSEMBLY, SHELF A TO FORWARD PRESSURE DISCONNECT RADAR	1		1
	029850-0015	. . INSERT, CONVAIR 95-02201-006 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	MS3100E36-7S	. . CONNECTOR, CONVAIR 92-50279-009	1		1
	22-32537-7	. . DECAL	1		1
- 94	22-31857	. HARNESS ASSEMBLY, SHELF A AND B TO ATC CONTROL PANEL	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	029850-0007	. . INSERT, CONVAIR 95-02201-002 -V71468-	1		1
	D024199-0001	. . PLATE, CONVAIR 92-50277-004 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		2
	22-32537-7	. . DECAL	1		1
	22-32537-23	. . DECAL	1		1

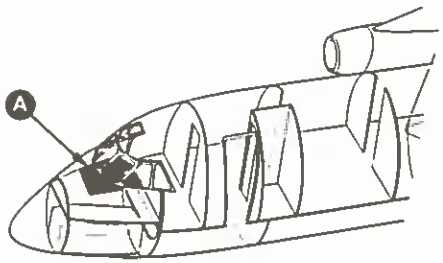

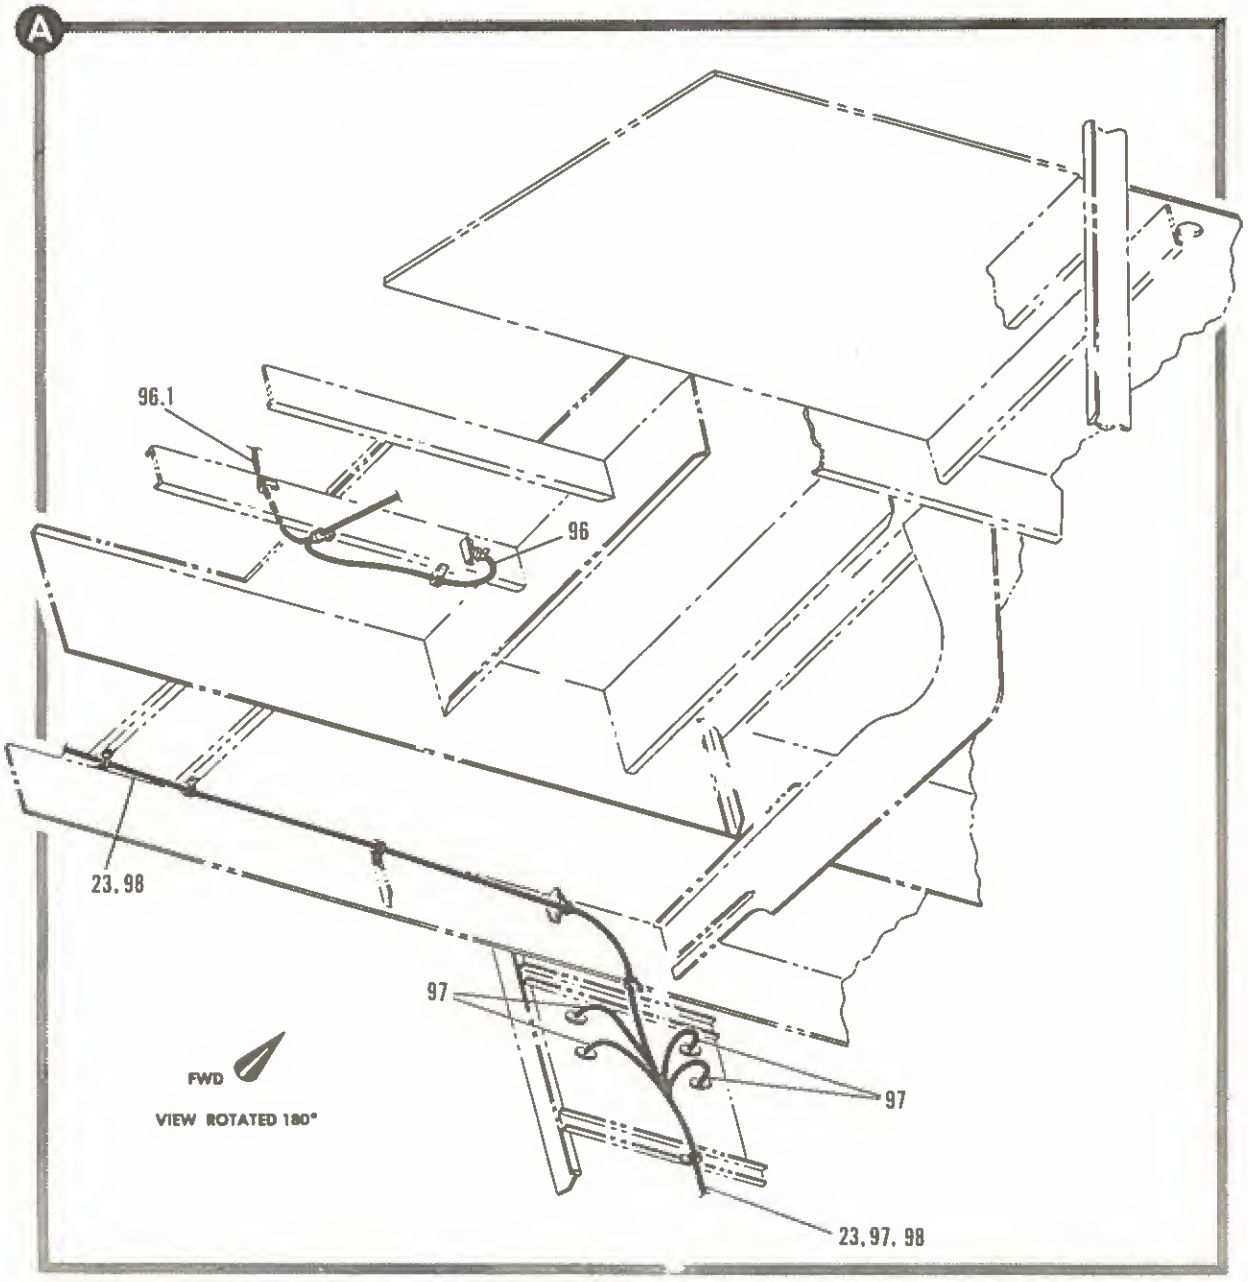


22 04 93 03 003 A


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		UNDER FLOOR ELECTRONIC HARNESSES STA 179 TO 260 RH SEE 22-31004			
- 96	22-31900-801	. HARNESS ASSEMBLY, COPILOT CONSOLE AUDIO SPLICE TO COPILOT MIKE AND HEADSET JACK	1		1
	SC1A	. . JACK, CONVAIR 95-18504-005 -V37942-	1		1
	SCA2B	. . JACK, CONVAIR 95-18504-008 -V37942-	1		1
	XLR4-31	. . RECEPTACLE, CONVAIR 92-50287-001 -V71468-	1		1
- 96.1	22-31892	. HARNESS ASSEMBLY, AUDIO JUNCTION BOX TO COPILOT AUDIO SELECTOR PANEL	1		1
	D024052-0001	. . PLATE, CONVAIR 92-63502-003 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		6
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		34
- 97	22-32914-801	. HARNESS ASSEMBLY, AUDIO JUNCTION BOX TERMINAL TO AUDIO ACCESSORY RELAYS	1	10	1
	22-32914-805	. HARNESS ASSEMBLY, AUDIO JUNCTION BOX TERMINAL TO AUDIO ACCESSORY RELAYS	11		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		30
	320547	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		3
	S0-1009-3951	. . SOCKET, CONVAIR 98-24506-002 -V00614-	1		4

SECTION V

Chapter 93
ELECTRONIC HARNESSES

ELECTRICAL AND ELECTRONIC COMPARTMENT ELECTRONIC HARNESSES

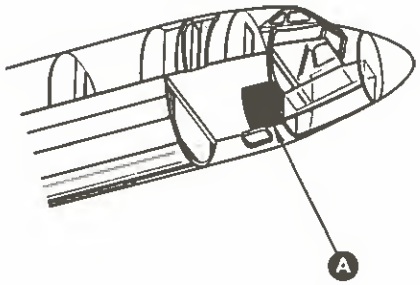

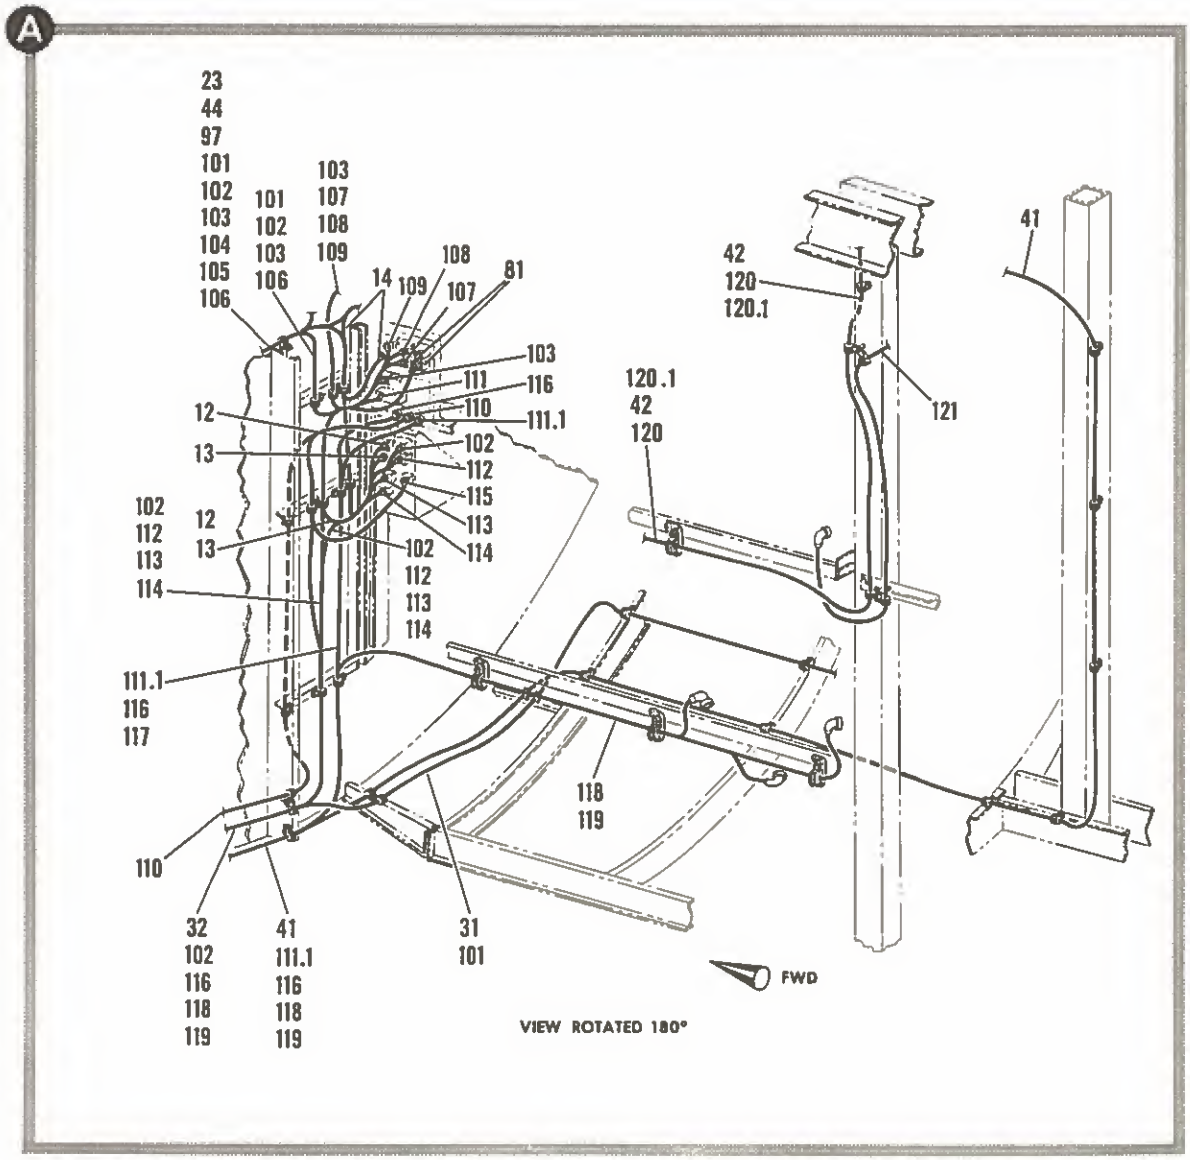


22.04.93.04.002A

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		ELECTRICAL AND ELECTRONIC COMPARTMENT			
		ELECTRONIC HARNESSES RH SEE 22-32000			
-101	22-32917	. HARNESS ASSEMBLY, AUDIO JUNCTION BOX TO GROUND POWER JACK	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		4
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1
	MS3108E14S6S	. . CONNECTOR, CONVAIR 92-40316-004	1		1
-102	22-32946	. HARNESS ASSEMBLY, SHELF D TO HF 1 RADIO COMPARTMENT SPLICE	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
-103	22-32981	. HARNESS ASSEMBLY, SHELF E TO AUDIO JUNCTION BOX	1		1
	029850-0011	. . INSERT, CONVAIR 95-02201-003 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		13
	22-32537-49	. . DECAL	1		1
-104	22-32926	. HARNESS ASSEMBLY, SOCKET C38 TO SHELF C HF COMMUNICATION POWER	1		1
	DPD34-12172	. . SHIELD, CONVAIR 98-03500-004 -V71468-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		4
	029850-0012	. . INSERT, CONVAIR 95-02202-004 -V71468-	1		1
	DPD23HV1-33S1B	. . RECEPTACLE, CONVAIR 92-50285-013 -V71468-	1		1
-105	22-32900-801	. HARNESS ASSEMBLY, AUDIO JUNCTION BOX TO AUDIO ACCESSORY PANEL	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		3
	CE31C751G	. . CAPACITOR, CONVAIR 91-57065-001	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		16
	RC42GF753J	. . RESISTOR, CONVAIR 97-40002-082	1		1
	RC42GF331J	. . RESISTOR, CONVAIR 97-40002-019	1		1
	L50	. . POTENTIOMETER, CONVAIR 90-25503-002 -V37942-	1		1
	22-31520-5	. . TERMINAL BOARD	1		1
	4040	. . SOCKET, CONVAIR 98-24506-011 -V99699-	1		1
-106	22-32986	. HARNESS ASSEMBLY, VHF COMMUNICATION RECEIVER POWER RELAY TO TERMINAL STRIP SHELF E	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		6
	SO-1009-3951	. . SOCKET, CONVAIR 98-24506-002 -V00614-	1		1
-107	22-31971	. HARNESS ASSEMBLY, SHELF E TO 2 VHF-VOR CONTROL PANEL DMET	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	22-32537-45	. . DECAL	1		1
-108	22-31969	. HARNESS ASSEMBLY, SHELF E TO 2 VHF-VOR CONTROL PANEL NAVIGATION	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	22-32537-45	. . DECAL	1		1
-109	22-31968	. HARNESS ASSEMBLY, SHELF E TO 2 VHF-VOR CONTROL PANEL VHF COMMUNICATION	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	D024198-0001	. . PLATE, CONVAIR 92-63502-001 -V71468-	1		1
	22-32537-45	. . DECAL	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -110	22-31855	. HARNESS ASSEMBLY, SHELF E TO GLIDE SLOPE TEE ADAPTER	1		1
	UG709A-U	. . PLUG, CONVAIR 92-47008-006	1		2
-111	22-33963-801	. HARNESS ASSEMBLY, SHELF E TO ADF 2 LOOP ANTENNA	A		1
	22-33963-805	. HARNESS ASSEMBLY, SHELF E TO ADF 2 LOOP ANTENNA	B		1
	029850-0007	. . INSERT, CONVAIR 95-02201-002 -V71468-	1		1
	GK-C8-21C1-2	. . PLUG, CONVAIR 90-40319-002 -V71648-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71648-	1		1
	22-32537-49	. . DECAL	1		1
-111.1	22-32880-801	. HARNESS ASSEMBLY, SHELF E TO NAVIGATION TEE ADAPTER	1		1
	UG536A-U	. . PLUG, CONVAIR 92-47009-002	1		1
	UG709A-U	. . PLUG, CONVAIR 92-47008-006	1		1
-112	22-32945	. HARNESS ASSEMBLY, SHELF D TO HF 2 RADIO COMPARTMENT SPLICE	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	22-32537-37	. . DECAL	1		1
-113	22-32944	. HARNESS ASSEMBLY, SHELF C TO 1 HF COMMUNICATION SHELF D	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		2
	029849-0013	. . INSERT, CONVAIR 95-02202-004 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		2
	22-32537-31	. . DECAL	1		1
	22-32537-39	. . DECAL	1		1
-114	22-32937	. HARNESS ASSEMBLY, SHELF C TO 2 HF COMMUNICATION SHELF D	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		2
	029849-0013	. . INSERT, CONVAIR 95-02202-004 -V71468-	1		1
	22-32537-31	. . DECAL	1		1
	22-32537-39	. . DECAL	1		1
-115	22-32936	. HARNESS ASSEMBLY, SHELF D TO AUDIO JUNCTION BOX	1		1
	029850-0007	. . INSERT, CONVAIR 95-02201-002 -V71468-	1		1
	029850-0015	. . INSERT, CONVAIR 95-02201-006 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		2
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		10
	22-32537-41	. . DECAL	1		1

A AIRPLANES 1, 4, 8 AND ON
B AIRPLANES 2, 3 AND 5 THRU 7

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -116	22-32972	. HARNESS ASSEMBLY, 2 VHF COMMUNICATION ANTENNA JACK TO RADIO COMPARTMENT DISCONNECT	1		1
	UG21D-U	. . PLUG, CONVAIR 92-47003-004	1		1
	UG573A-U	. . CONNECTOR, CONVAIR 92-47008-002	1		1
-117	22-33849-801	. HARNESS ASSEMBLY, SHELF B TO 1 ADF LOOP ANTENNA	1		1
	029850-0007	. . INSERT, CONVAIR 95-02201-002 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	GK-C8-21C1-2	. . PLUG, CONVAIR 92-40319-002 -V71468-	1		1
	22-32537-21	. . DECAL	1		1
-118	22-33949	. HARNESS ASSEMBLY, 1 HF COMMUNICATION XMTR TO 1 HF XMTR DISCONNECT RADIO COMPARTMENT	1		1
	22-33949-801	. HARNESS ASSEMBLY, 2 HF COMMUNICATION XMTR TO 2 HF XMTR DISCONNECT RADIO COMPARTMENT	1		1
	UG21D-U	. . CONNECTOR, CONVAIR 92-47003-004	1		1
	82-835	. . CONNECTOR, CONVAIR 92-47005-001 -V02660-	1		1
-119	22-33944	. HARNESS ASSEMBLY, 1 HF COMMUNICATION RCVR TO 1 HF RCVR DISCONNECT RADIO COMPARTMENT	1		1
	22-33944-801	. HARNESS ASSEMBLY, 2 HF COMMUNICATION RCVR TO 2 HF RCVR DISCONNECT RADIO COMPARTMENT	1		1
	UG536A-U	. . PLUG, CONVAIR 92-47009-002	1		2
	UG349A-U	. . ADAPTER, CONVAIR 90-04301-003	1		1
-120	22-32745	. HARNESS ASSEMBLY, COAX 1 ADF RCVR TO RADIO COMPARTMENT DISCONNECT	1	2	1
	22-32745-803	. HARNESS ASSEMBLY, COAX 1 ADF RCVR TO RADIO COMPARTMENT DISCONNECT	3		1
-120.1	22-32745-801	. HARNESS ASSEMBLY, COAX 2 ADF RCVR TO RADIO COMPARTMENT DISCONNECT	1	2	1
	22-32745-805	. HARNESS ASSEMBLY, COAX 2 ADF RCVR TO RADIO COMPARTMENT DISCONNECT	3		1
	UG88C-U	. . PLUG, CONVAIR 92-47001-007	1		2
	UG175U	. . ADAPTER, CONVAIR 90-04307-005	1		2
	83-1SP	. . PLUG, CONVAIR 92-47017-002 -V02660-	1		2
-121	22-33850-803	. HARNESS ASSEMBLY, ADF 1 LOOP CABLE	1		1
	7501-7	. . CABLE, ADF 1 LOOP MFR TO SPEC CONT 22-03468-801 -V02304-	1		1

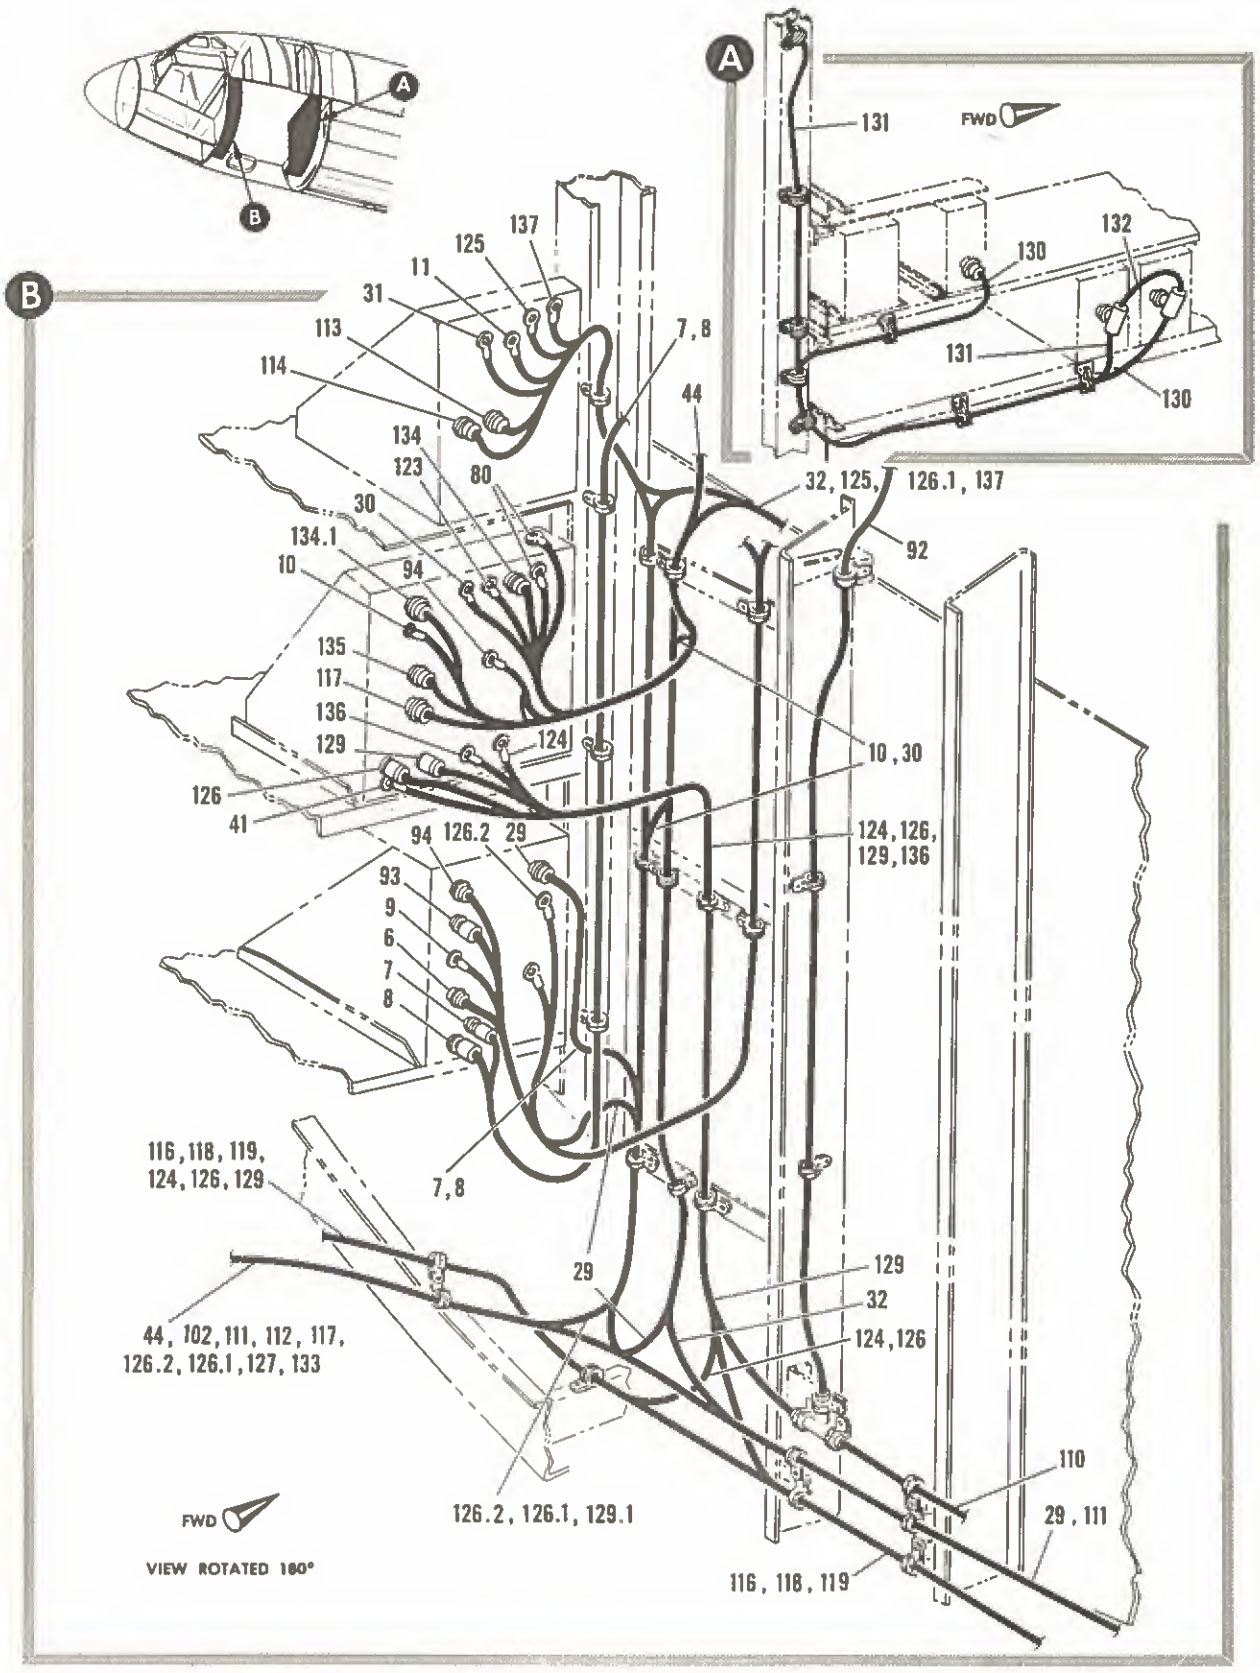

22 04 93 04 004 A

ELECTRICAL AND ELECTRONIC
COMPARTMENT RACK ELECTRONIC HARNESSES LH
FIGURE 2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		HATRACK SPEAKER ELECTRONIC HARNESSES STA 432 TO 697 SEE 22-33001			
- 52	22-33909-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 432 TO 490 RH	1		1
- 53	22-33897-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 432 TO 475 LH	1		1
- 54	22-33908-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 490 TO 545 RH	1		1
- 55	22-33896-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 475 TO 583 LH	1		1
- 56	22-33907-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 545 TO 621 RH	1		1
- 57	22-33895-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 583 TO 659 LH	1		1
- 58	22-33910-801	. HARNESS ASSEMBLY, HATRACK SPEAKER STA 621 TO 697 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V89110-	1		6
- 59	22-33906-801	. HARNESS ASSEMBLY, SPLICE AIR CONDITIONING COMPARTMENT LH TO SPEAKER HATRACK STA 621 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1


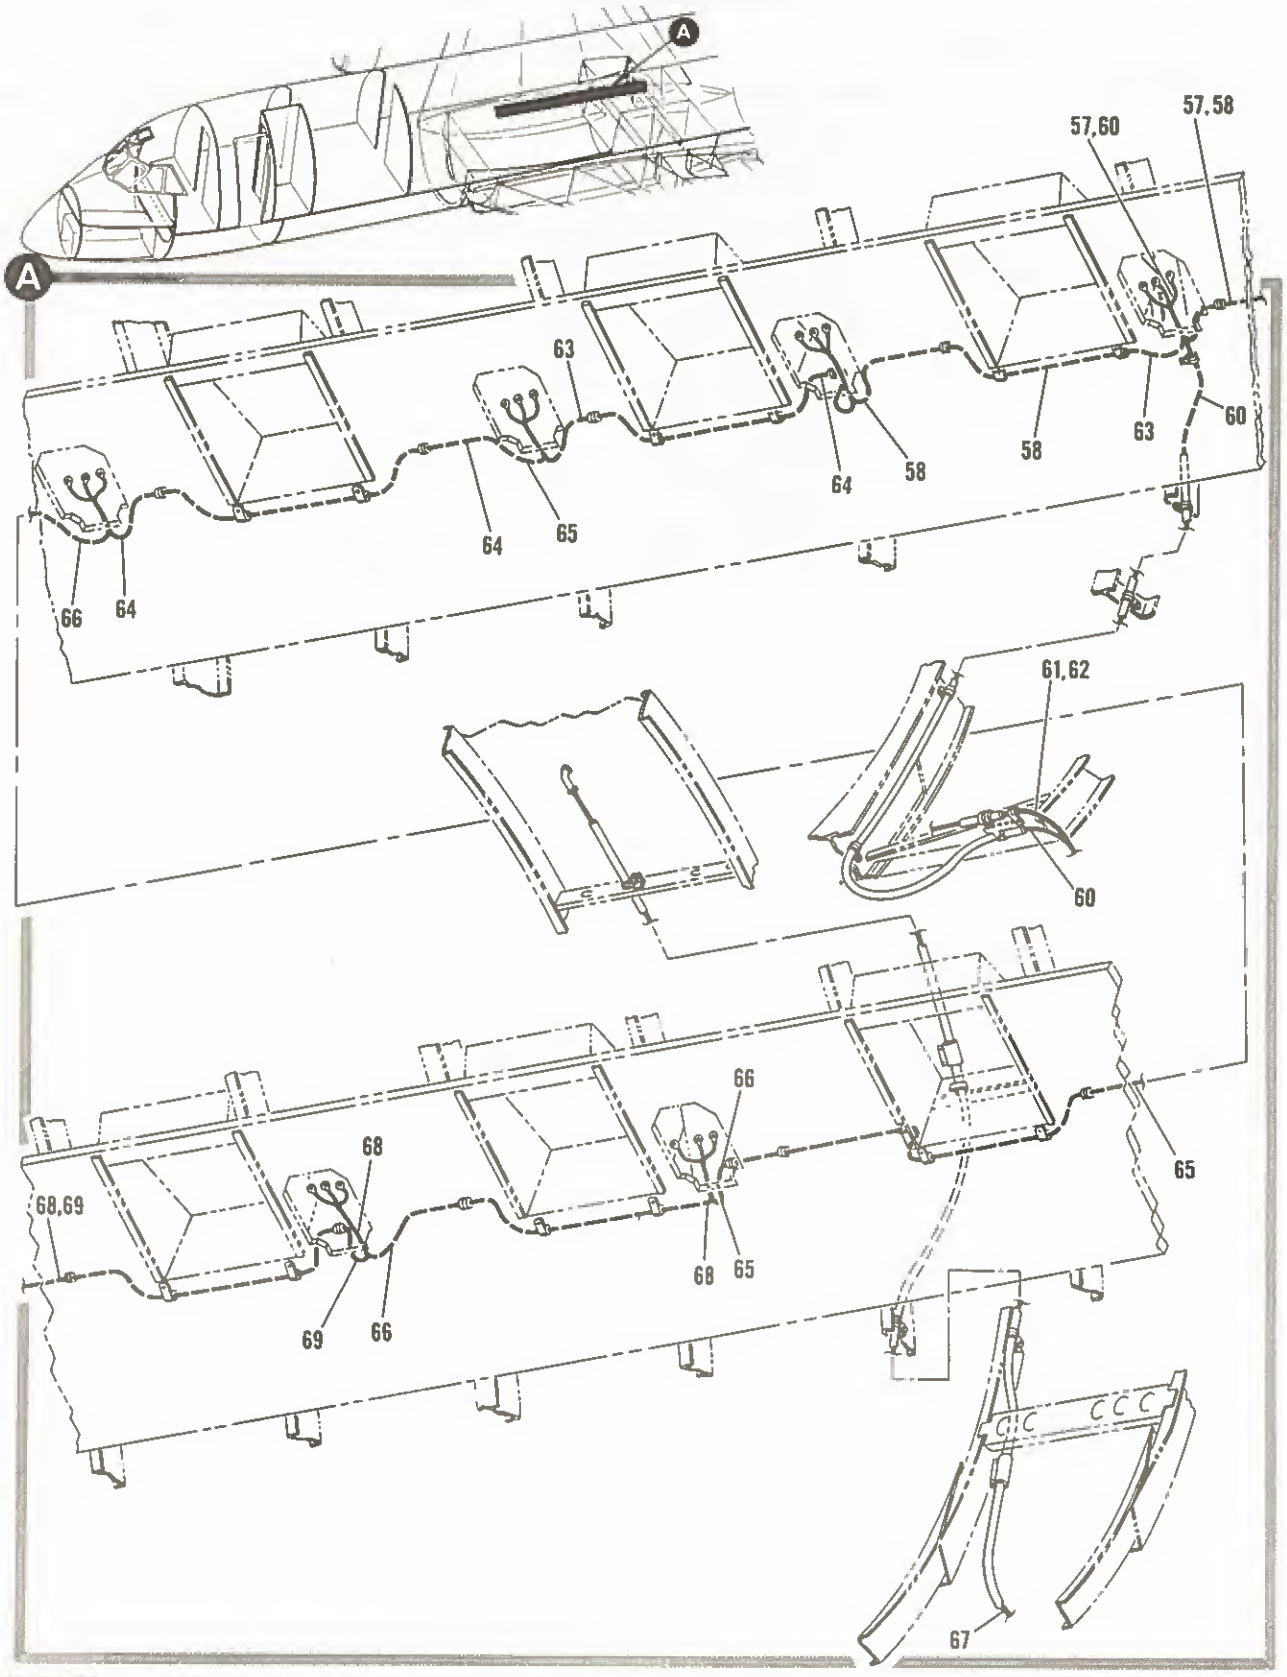

A
A
57,60
57,58
63
64
58
58
63
60
64
65
66
64
61,62
60
66
68
68,69
65
68
65
69
66
65
67

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		ELECTRICAL AND ELECTRONIC COMPARTMENT RACK ELECTRONIC HARNESSES LH SEE 22-32000			
-123	22-31853	. HARNESS ASSEMBLY, SHELF B TO NAVIGATOR 1 CONTROL PANEL INSERT C	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	22-32537-17	. . DECAL	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
-124	22-32829	. HARNESS ASSEMBLY, SHELF B TO VHF 1 COMMUNICATION TRANSMITTER ANTENNA	1		1
	UG573A-U	. . PLUG, CONVAIR 92-47008-002	1		1
	UG1185U	. . PLUG, CONVAIR 92-47003-005	1		1
-125	22-32899-801	. HARNESS ASSEMBLY, SHELF C PUBLIC ADDRESS AUDIO TO AUDIO JUNCTION BOX	1		1
	22-32537-29	. . DECAL	1		1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		3
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		17
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
-126	22-33872	. HARNESS ASSEMBLY, SHELF B TO MARKER BEACON ANTENNA	1		1
	UG573A-U	. . CONNECTOR, CONVAIR 92-47008-002	1		2
-126.1	22-32918	. HARNESS ASSEMBLY, AUDIO JUNCTION BOX TO RADIO COMPARTMENT SPLICE	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		3
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		21
-126.2	22-33800-801	. HARNESS ASSEMBLY, SHELF A TO VERTICAL GYRO SPLICE	1		1
	029850-0007	. . INSERT, CONVAIR 95-02201-002 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	22-32537-9	. . DECAL	1		1
-127	22-32913	. HARNESS ASSEMBLY, AUDIO JUNCTION BOX TO RADIO RACK AUDIO SELECTOR PANEL	1		1
	D024052-0001	. . PLATE, CONVAIR 92-63502-003 -V71468-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		30
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		6
-128	22-33850-805	. HARNESS ASSEMBLY, ADF 2 LOOP CABLE	1		1
	7501-9	. . CABLE, LOOP ADF MFR TO SPEC CONT 22-03468-803 -V02304-	1		1
-129	22-31854	. HARNESS ASSEMBLY, SHELF B TO GLIDE SLOPE TEE ADAPTER	1		1
	UG709A-U	. . CONNECTOR, CONVAIR 92-47008-006	1		2
-129.1	22-32901-803	. HARNESS ASSEMBLY, AUDIO JUNCTION BOX TO RADIO COMPARTMENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001	1		1
	330580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		8
-130	22-32723	. HARNESS ASSEMBLY, ATC TRANSPONDER 2 TO DMET 1	1		1
	31-301	. . CONNECTOR, CONVAIR 92-47010-008 -V02660-	1		2
	UG274A-U	. . ADAPTER, CONVAIR 90-04302-004	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -131	22-32724	. HARNESS ASSEMBLY, ATC 1 TO DMET 2	1		1
	31-301	. . CONNECTOR, CONVAIR 92-47010-008 -V02660-	1		2
-132	22-32722	. HARNESS ASSEMBLY, ATC TRANSPONDER 1 TO TRANSPONDER 2	1		1
	UG274A-U	. . ADAPTER, CONVAIR 90-04302-004	1		1
	31-301	. . CONNECTOR, CONVAIR 92-47010-008 -V02660-	1		2
-133	22-32815	. HARNESS ASSEMBLY, SOCKET A3A TO TERM STRIPS SHELF A	1		1
	034994-0001	. . SHELL, CONVAIR 98-02505-016 -V71468-	1		1
	029849-0014	. . INSERT, CONVAIR 95-02202-005 -V71468-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		29
-134	22-31859	. HARNESS ASSEMBLY, SHELF B TO NAVIGATOR 1 CONTROL PANEL INSERT B	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	22-32537-17	. . DECAL	1		1
-134.1	22-31811	. HARNESS ASSEMBLY, SHELF E TO 1 VHF CONTROL PANEL	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	D024198-0001	. . PLATE, CONVAIR 92-63502-001 -V71468-	1		1
	029850-0002	. . INSERT, CONVAIR 95-02201-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	22-32537-15	. . DECAL	1		1
-135	22-32861	. HARNESS ASSEMBLY, SHELF B TO AUDIO JUNCTION BOX	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	034993-0001	. . SHELL, CONVAIR 98-02505-001 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		14
	22-32537-21	. . DECAL	1		1
-136	22-32879-801	. HARNESS ASSEMBLY, SHELF B TO NAVIGATION ANTENNA TEE ADAPTER	1		1
	UG536A-U	. . CONNECTOR, CONVAIR 92-47009-002	1		1
	UG709A-U	. . CONNECTOR, CONVAIR 92-47008-006	1		1
-137	22-32906	. HARNESS ASSEMBLY, SHELF C TO AUDIO JUNCTION BOX	1		1
	034993-0001	. . PLATE, CONVAIR 98-02505-001 -V71468-	1		1
	029850-0014	. . INSERT, CONVAIR 95-02201-005 -V71468-	1		1
	020745-0008	. . SHIELD, CONVAIR 98-03501-008 -V71468-	1		1
	22-32537-29	. . DECAL	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		20
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		1

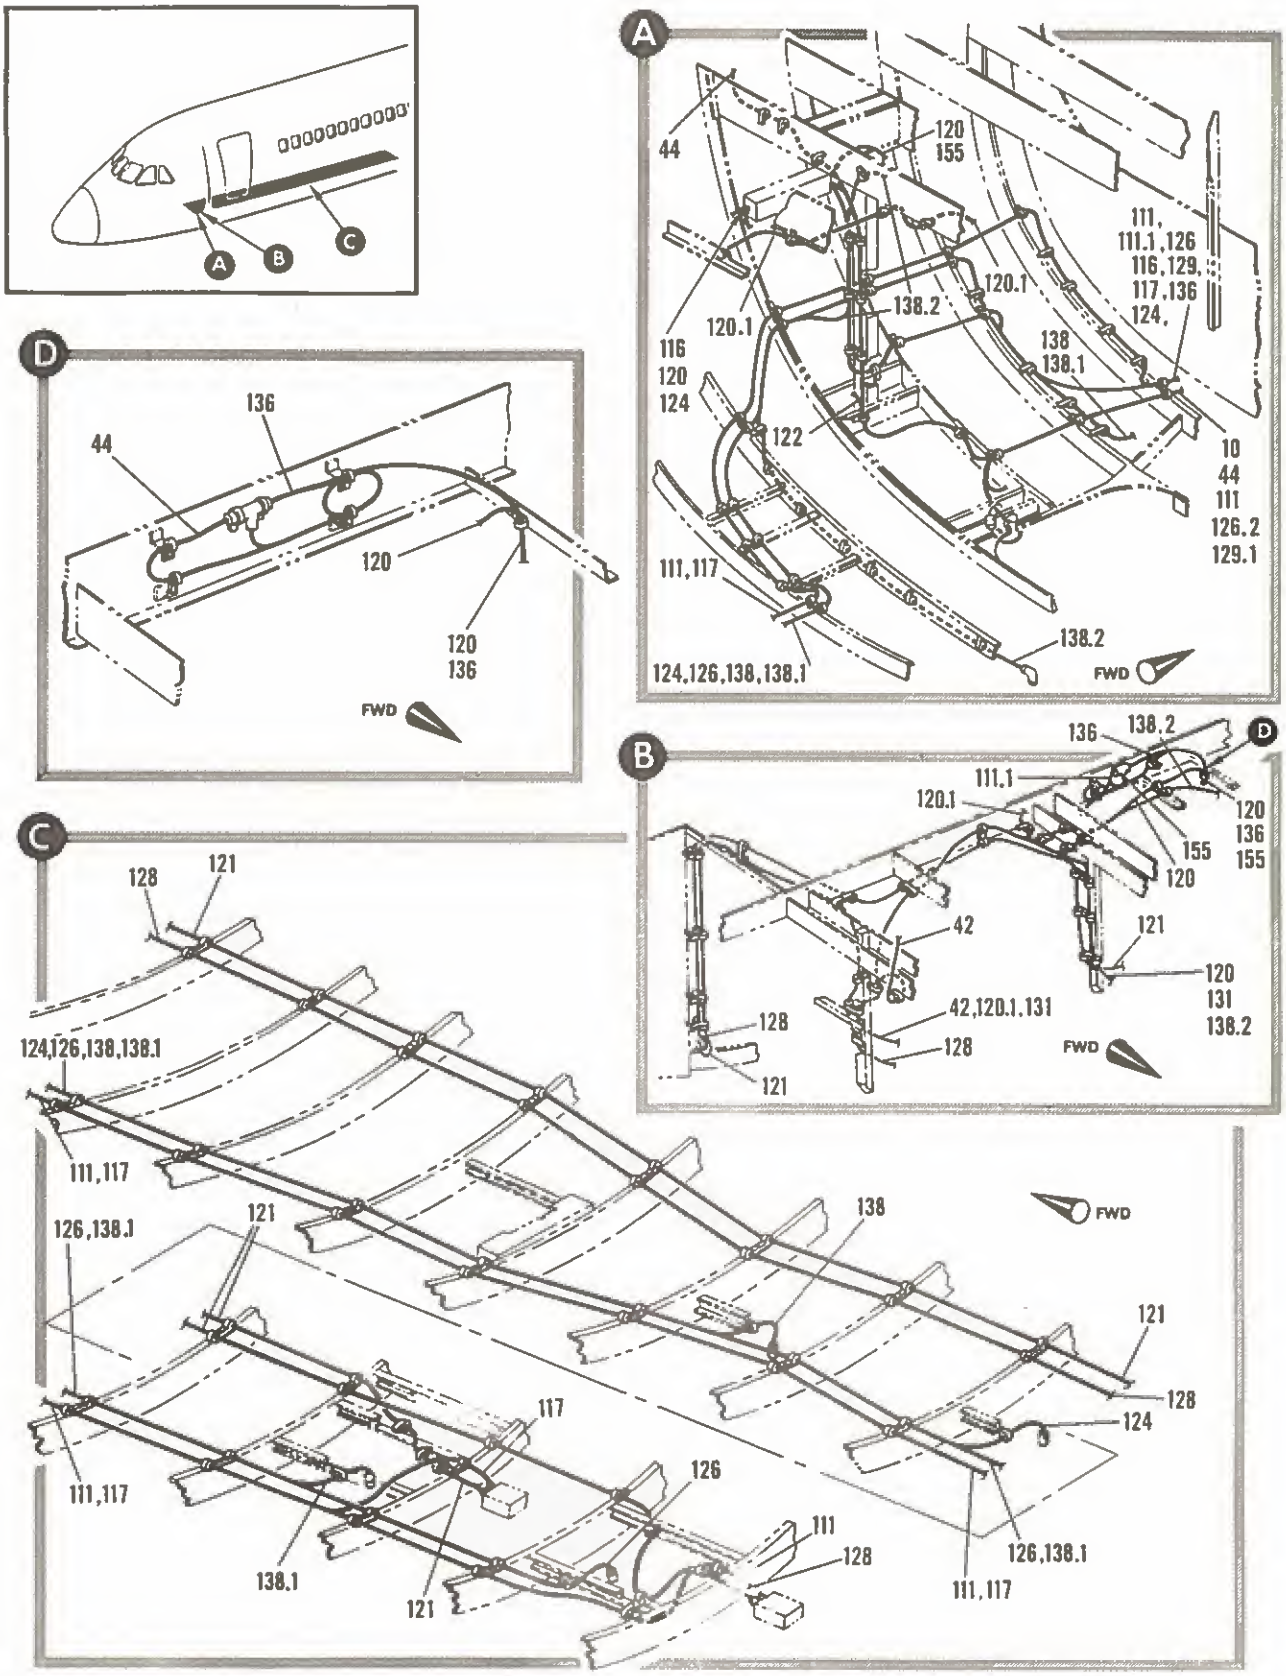


22.04.93.04.006C


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		ELECTRICAL AND ELECTRONIC COMPARTMENT ELECTRONIC HARNESSES LH SEE 22-32001			
-138	22-33870-801	. HARNESS ASSEMBLY, TRANSPONDER 1 TO ANTENNA	1		1
-138.1	22-33871-801	. HARNESS ASSEMBLY, TRANSPONDER 2 TO ANTENNA	1		1
	83700	. . COVER, CONVAIR 92-74210-001 -V71468-	1		1
	MS90237-710A	. . CONNECTOR, CONVAIR 92-47008-003	1		1
	UG1213U	. . CONNECTOR, CONVAIR 92-47004-004	1		1
-138.2	22-33873	. HARNESS ASSEMBLY, DMET RCVR 1 TO DMET ANTENNA	1		1
	83700	. . COVER, CONVAIR 92-74210-001 -V71468-	1		1
	82-833	. . CONNECTOR, CONVAIR 92-47006-002 -71468-	1		1
	MS90237-710A	. . CONNECTOR, CONVAIR 92-47008-003	1		1

SECTION V


Chapter 93
ELECTRONIC HARNESSES

FUSELAGE FWD UNDERFLOOR ELECTRONIC HARNESSES

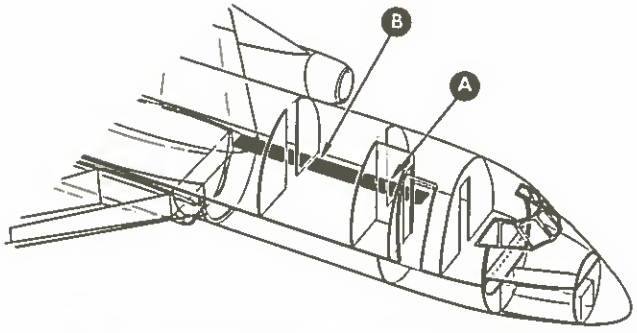

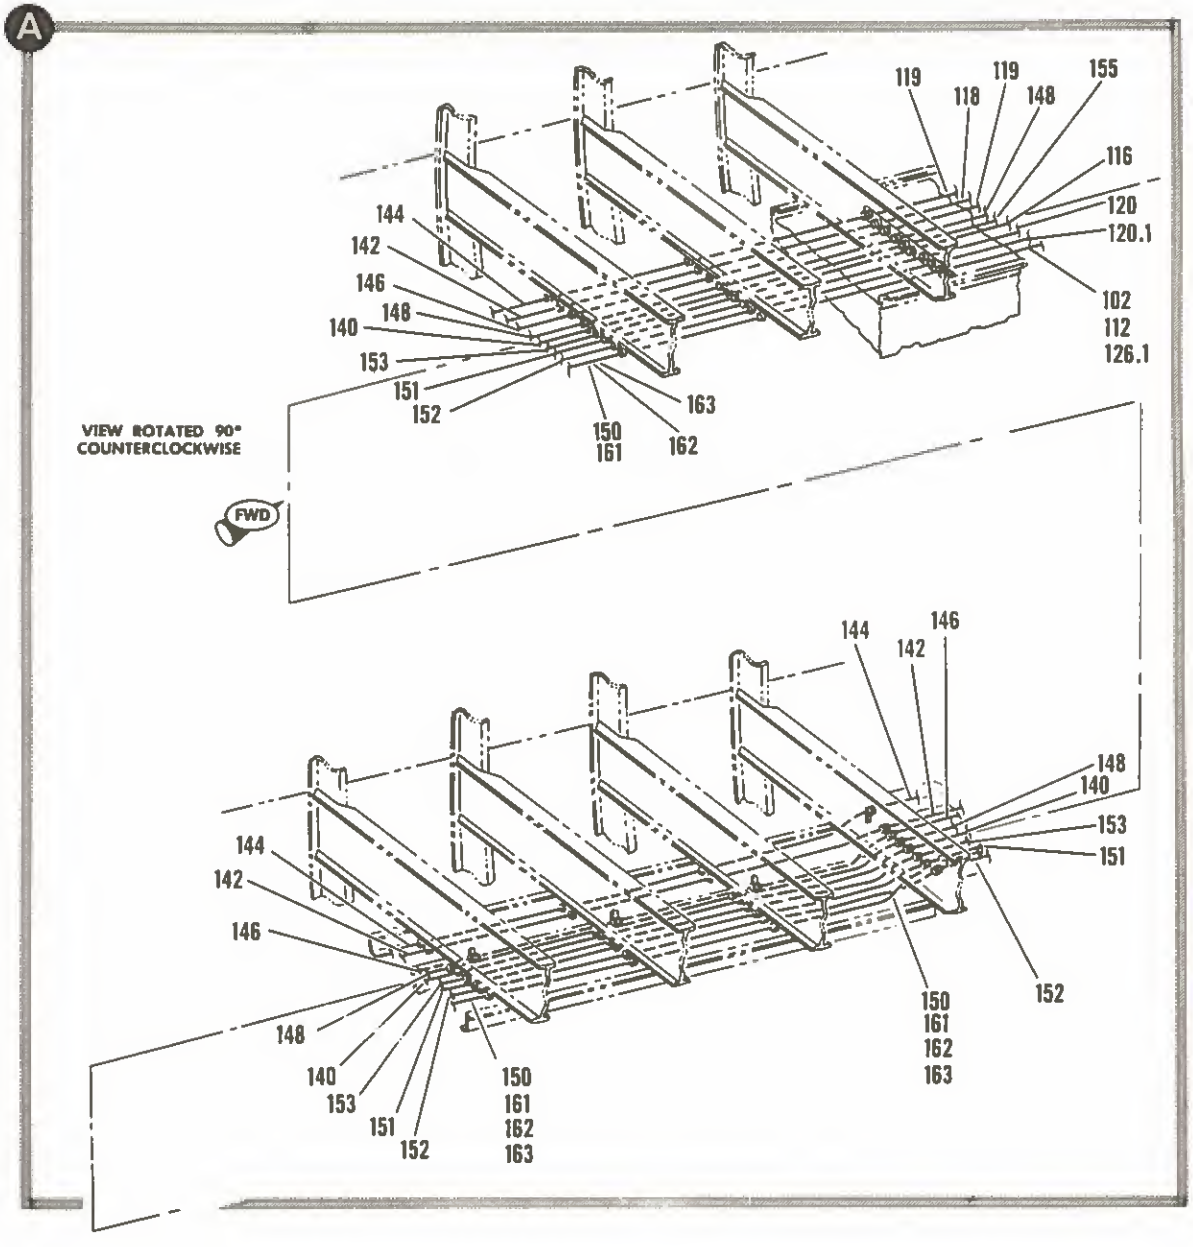


22.04.93.05.001-18

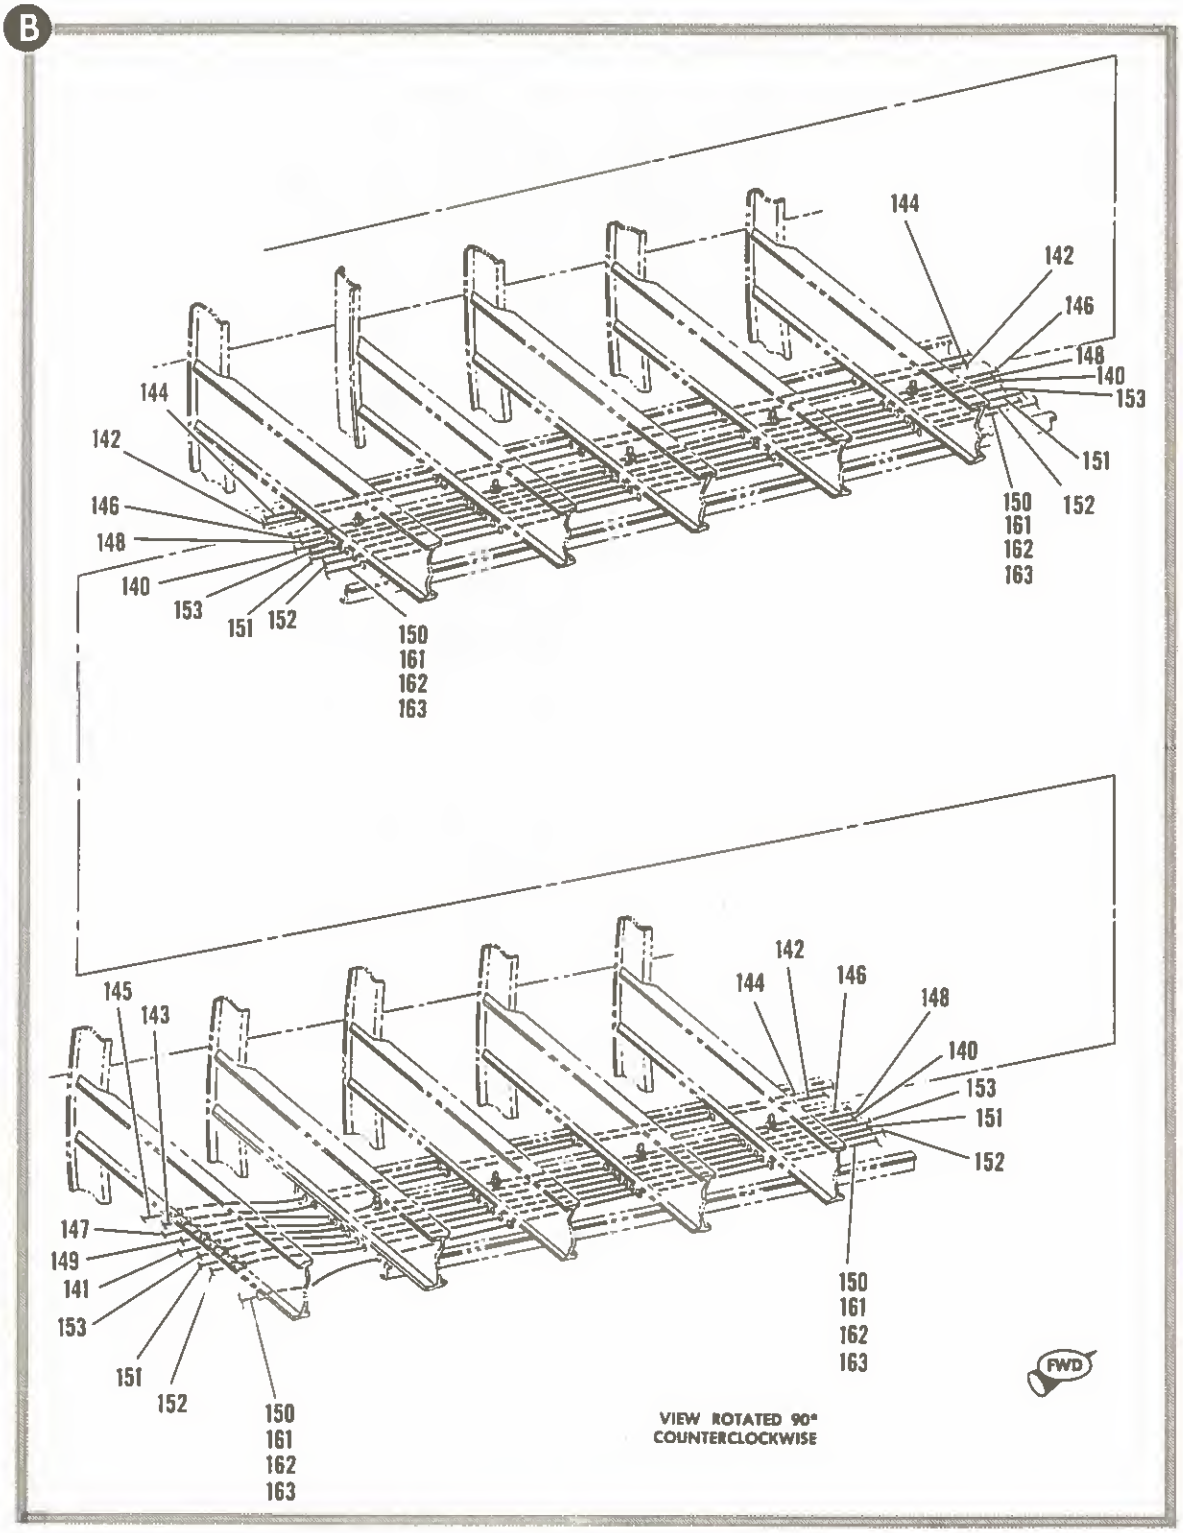

22.04.93.03.001 2B

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		FUSELAGE FWD UNDER FLOOR ELECTRONIC HARNESSES FWD CARGO AREA STA 323 TO 622 SEE 22-33003			
-140	22-33867	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT STA 323 TO 603	1		1
-141	22-33867-801	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT STA 608 TO 926	1		1
-142	22-33930	. HARNESS ASSEMBLY, COAX RADIO COMPARTMENT DISCONNECT HF RECEIVER STA 323 TO 603	1		1
-143	22-33930-801	. HARNESS ASSEMBLY, COAX RADIO COMPARTMENT DISCONNECT HF RECEIVER STA 603 TO 926	1		1
-144	22-33938	. HARNESS ASSEMBLY, COAX RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING COMPARTMENT HF1 RECEIVER STA 323 TO 603	1		1
-145	22-33938-801	. HARNESS ASSEMBLY, COAX RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING COMPARTMENT HF1 RECEIVER STA 603 TO 926	1		1
-146	22-33941	. HARNESS ASSEMBLY, COAX RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING COMPARTMENT HF1 TRANSMITTER STA 323 TO 603	1		1
-147	22-33941-801	. HARNESS ASSEMBLY, COAX RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING COMPARTMENT HF1 TRANSMITTER STA 603 TO 926	1		1
-148	22-33926	. HARNESS ASSEMBLY, COAX RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING SPLICE HF2 TRANSMITTER STA 323 TO 603	1		1
-149	22-33926-801	. HARNESS ASSEMBLY, COAX RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING SPLICE HF2 TRANSMITTER STA 603 TO 926	1		1
	82-888	. . ADAPTER, CONVAIR 90-04800-003 -V02660-	1		2
	UG160C-U	. . CONNECTOR, STA 323 TO 603 CONVAIR 92-57003-008	1		2
	UG21D-U	. . CONNECTOR, STA 603 TO 926 CONVAIR 92-47003-004	1		2
-150	22-33843-801	. HARNESS ASSEMBLY, RADIO COMPARTMENT SPLICE TO AIR CONDITIONING COMPARTMENT SPLICE PUBLIC ADDRESS STA 323	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
-151	22-33747	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING COMPARTMENT DISCONNECT ADF 1 STA 323 TO 622	1	2	1
	22-33747-803	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING COMPARTMENT DISCONNECT ADF 1 STA 323 TO 622	3		1
-152	22-33747-801	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING COMPARTMENT DISCONNECT ADF 2 STA 323 TO 622	1	2	1
	22-33747-805	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO AIR CONDITIONING COMPARTMENT DISCONNECT ADF 2 STA 323 TO 622	3		1
	UG909U	. CONNECTOR, CONVAIR 92-57001-008	1		2
-153	22-33969	. HARNESS ASSEMBLY, COAX AIR CONDITIONING COMPARTMENT DISCONNECT TO RADIO COMPARTMENT DISCONNECT VHF 1 COMMUNICATION STA 323	1		1
	UG160C-U	. . CONNECTOR, CONVAIR 92-57003-008	1		2
	82-888	. . ADAPTER, CONVAIR 90-04800-003 -V02660-	1		2
-155	22-32881	. HARNESS ASSEMBLY, NAVIGATION TEE ADAPTER TO RADIO COMPARTMENT DISCONNECT	1		1
	UG536A-U	. . CONNECTOR, CONVAIR 92-47009-002	1		2
	UG28A-U	. . ADAPTER, CONVAIR 90-04304-004	1		1

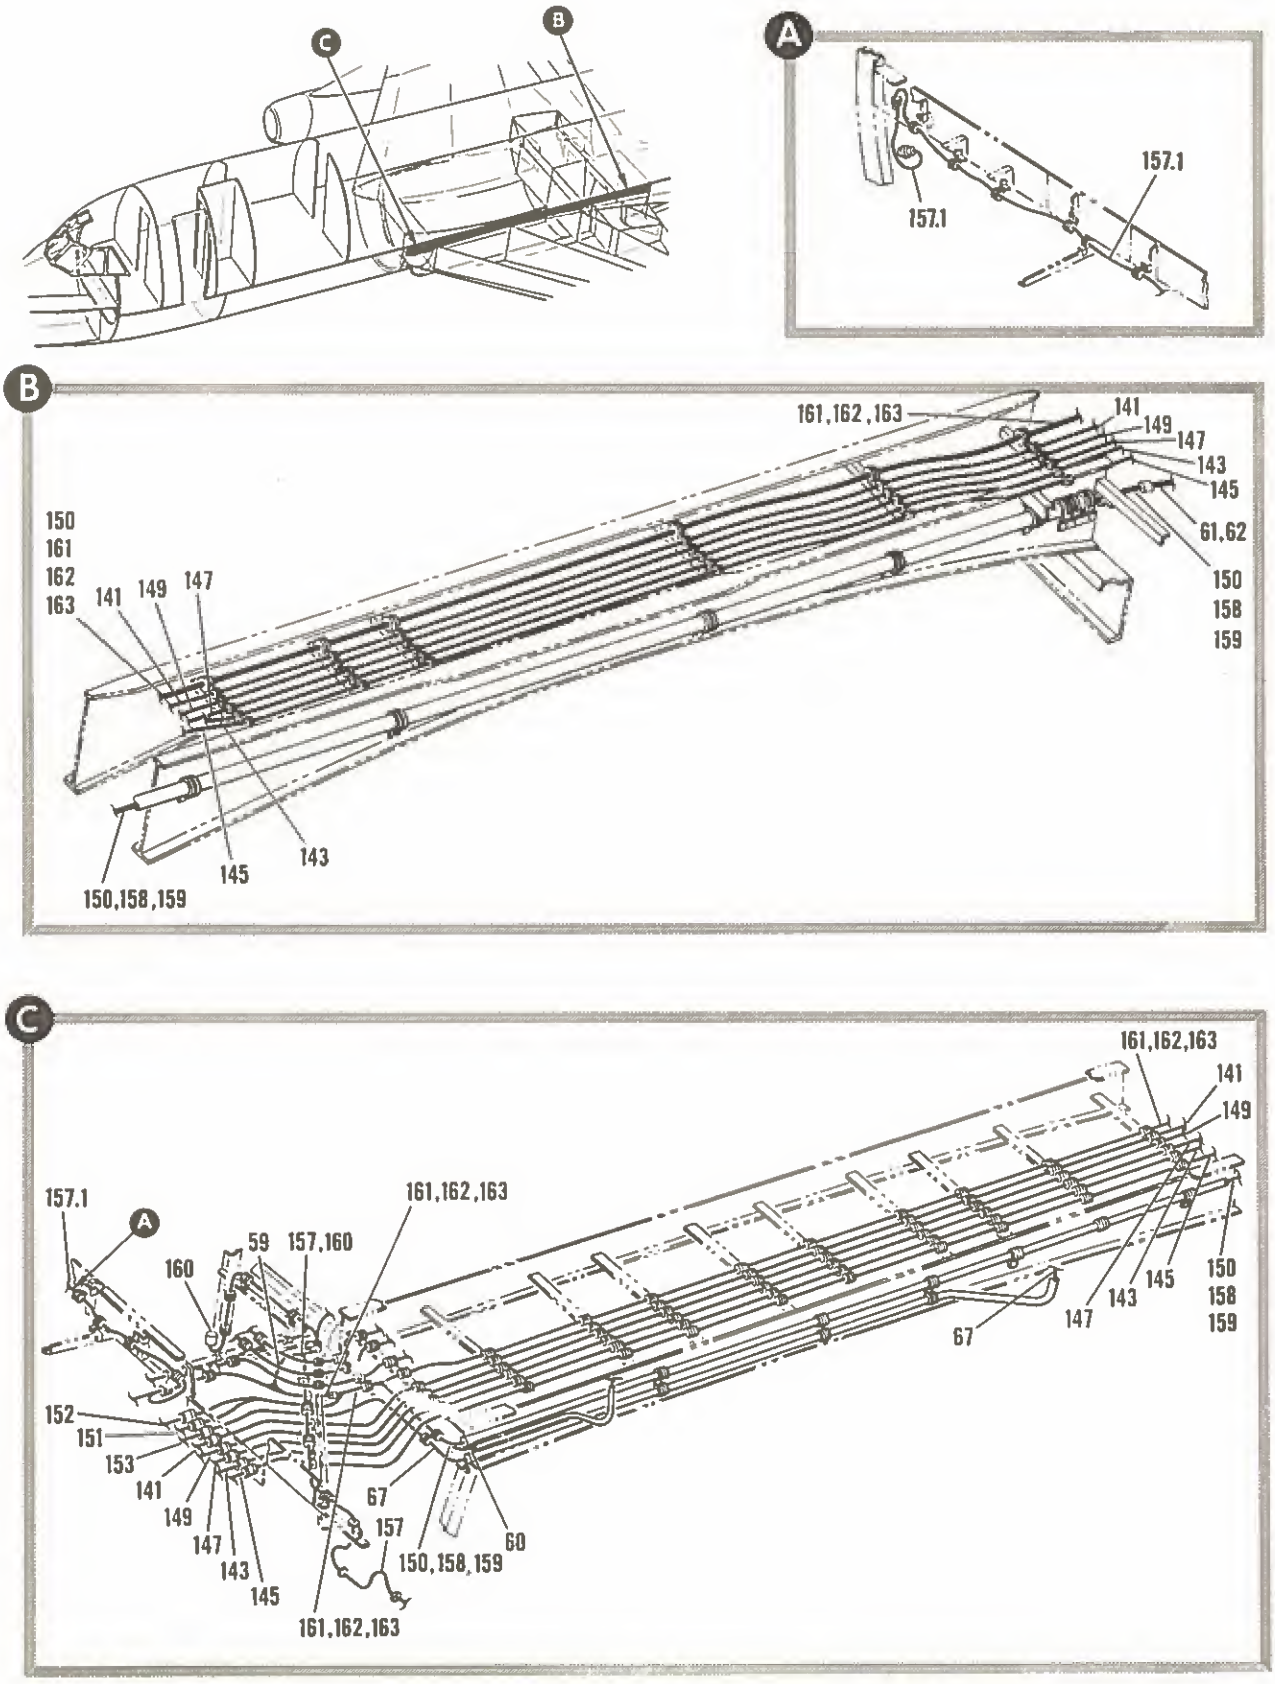


22.04.93.05.003C

SECTION V

Chapter 93
ELECTRONIC HARNESSES


FUSELAGE AFT UNDERFLOOR ELECTRONIC HARNESSES

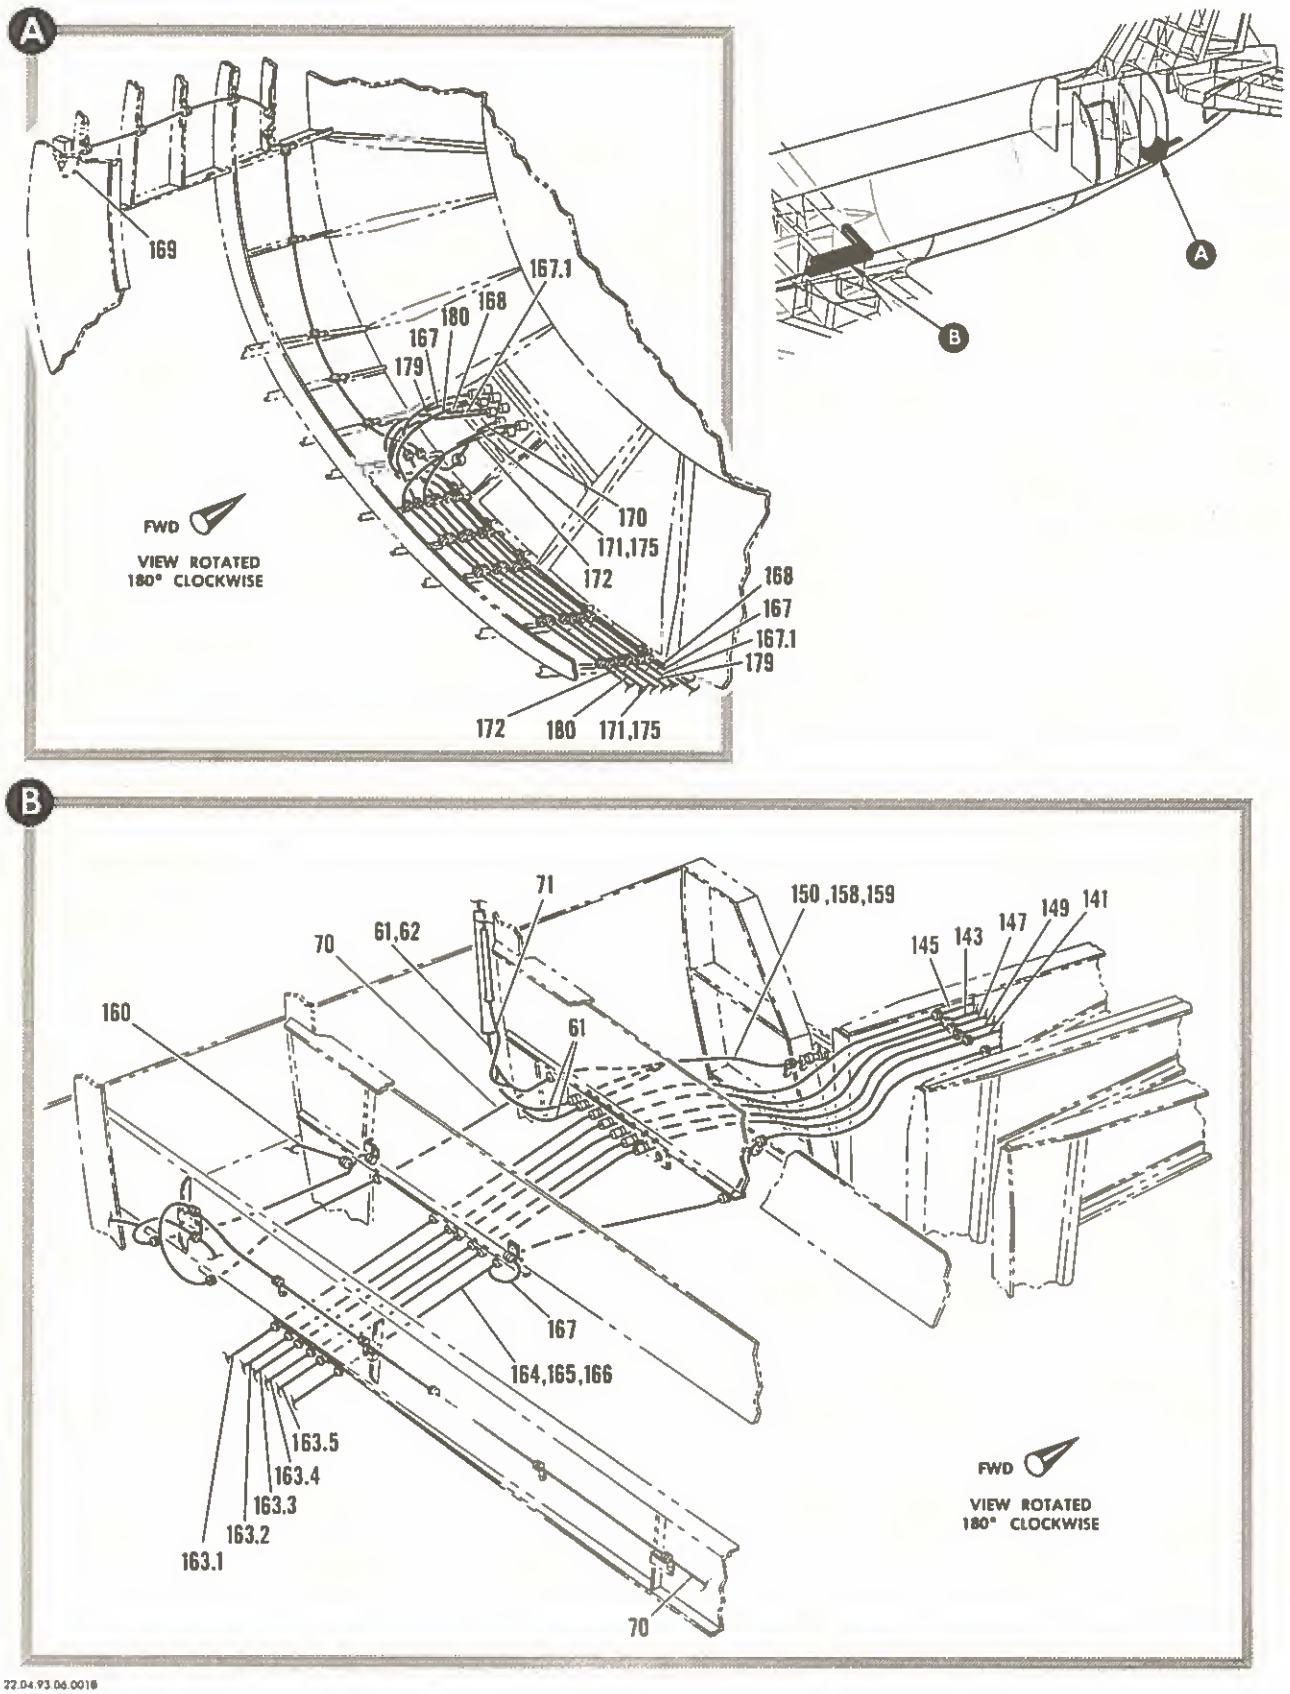

22.04.93.06.0018

FUSELAGE AFT UNDERFLOOR ELECTRONIC HARNESSES
STA 926 TO 1590 LH
FIGURE 1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		FUSELAGE AFT UNDER FLOOR ELECTRONIC HARNESSES STA 926 TO 1590 LH SEE 22-33004			
-163.1	22-33938-803	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO TAILCONE DISCONNECT HF1 RECEIVER STA 926 TO STA 1373	1		1
-163.2	22-33930-803	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO TAILCONE DISCONNECT HF2 RECEIVER STA 926 TO STA 1373	1		1
-163.3	22-33941-803	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO TAILCONE DISCONNECT HF1 TRANSMITTER STA 926 TO STA 1373	1		1
-163.4	22-33926-803	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO TAILCONE DISCONNECT HF1 TRANSMITTER STA 926 TO STA 1373	1		1
-163.5	22-33867-803	. HARNESS ASSEMBLY, RADIO COMPARTMENT DISCONNECT TO AFT PRESSURE DISCONNECT STA 926 TO STA 1373	1		1
	UG21D-U	. . CONNECTOR, CONVAIR 92-47003-004	1		1
	82-888	. . ADAPTER, CONVAIR 90-04800-003 -V71468-	1		2
	UG160C-U	. . JACK, CONVAIR 92-57003-008	1		1
-164	22-33971	. HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT SPLICE TO AFT PRESSURE DISCONNECT HF2	1		1
	MS3100E20-29SW	. . CONNECTOR, CONVAIR 92-50279-005	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		13
-165	22-33955	. HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT SPLICE TO AFT PRESSURE DISCONNECT HF1	1		1
	MS3100E20-29S	. . CONNECTOR, CONVAIR 92-50279-003	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
	323975	. . SPLICE, CONVAIR 98-34009-003 -V00779-	1		11
-166	22-33743	. HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT SPLICE TO TAILCONE PRESSURE DISCONNECT PA	1		1
	MS3100E14S6S	. . CONNECTOR, CONVAIR 92-50278-001	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		7
	323975	. . SPLICE, CONVAIR 98-34009-003 -V00779-	1		18
-167	22-33928	. HARNESS ASSEMBLY, AFT PRESSURE DISCONNECT TO VERTICAL FIN DISCONNECT HF COMMUNICATION TRANSMITTER NO 1	1		1
-167.1	22-33928-801	. HARNESS ASSEMBLY, AFT PRESSURE DISCONNECT TO VERTICAL FIN DISCONNECT HF COMMUNICATION TRANSMITTER NO 2	1		1
	UG1185U	. . CONNECTOR, CONVAIR 92-47003-005	1		2
	82-888	. . ADAPTER, CONVAIR 90-04800-003 -V02660-	1		2
-168	22-33931	. HARNESS ASSEMBLY, AFT PRESSURE DISCONNECT TO VERTICAL FIN DISCONNECT VHF NAVIGATION	1		1
	UG1185U	. . CONNECTOR, CONVAIR 92-47003-005	1		2
	82-888	. . ADAPTER, CONVAIR 90-04800-003 -V02660-	1		2
-169	22-33744	. HARNESS ASSEMBLY, TAILCONE SPLICE TO TAILCONE JACKBOX	1		1
	WK6-21C1-2	. . CONNECTOR, CONVAIR 92-40117-001 -V71468-	1		1
-170	22-33745	. HARNESS ASSEMBLY, TAILCONE PRESSURE DISCONNECT TO TAILCONE SPLICE	1		1
	MS3106E14S6P	. . CONNECTOR, CONVAIR 92-40307-003	1		1
-171	22-35934	. HARNESS ASSEMBLY, TAILCONE SPLICE TO JACKBOX HF COUPLER ACCESS	1		1
	WK6-21C1-2	. . CONNECTOR, CONVAIR 92-40117-001 -V71468-	1		1

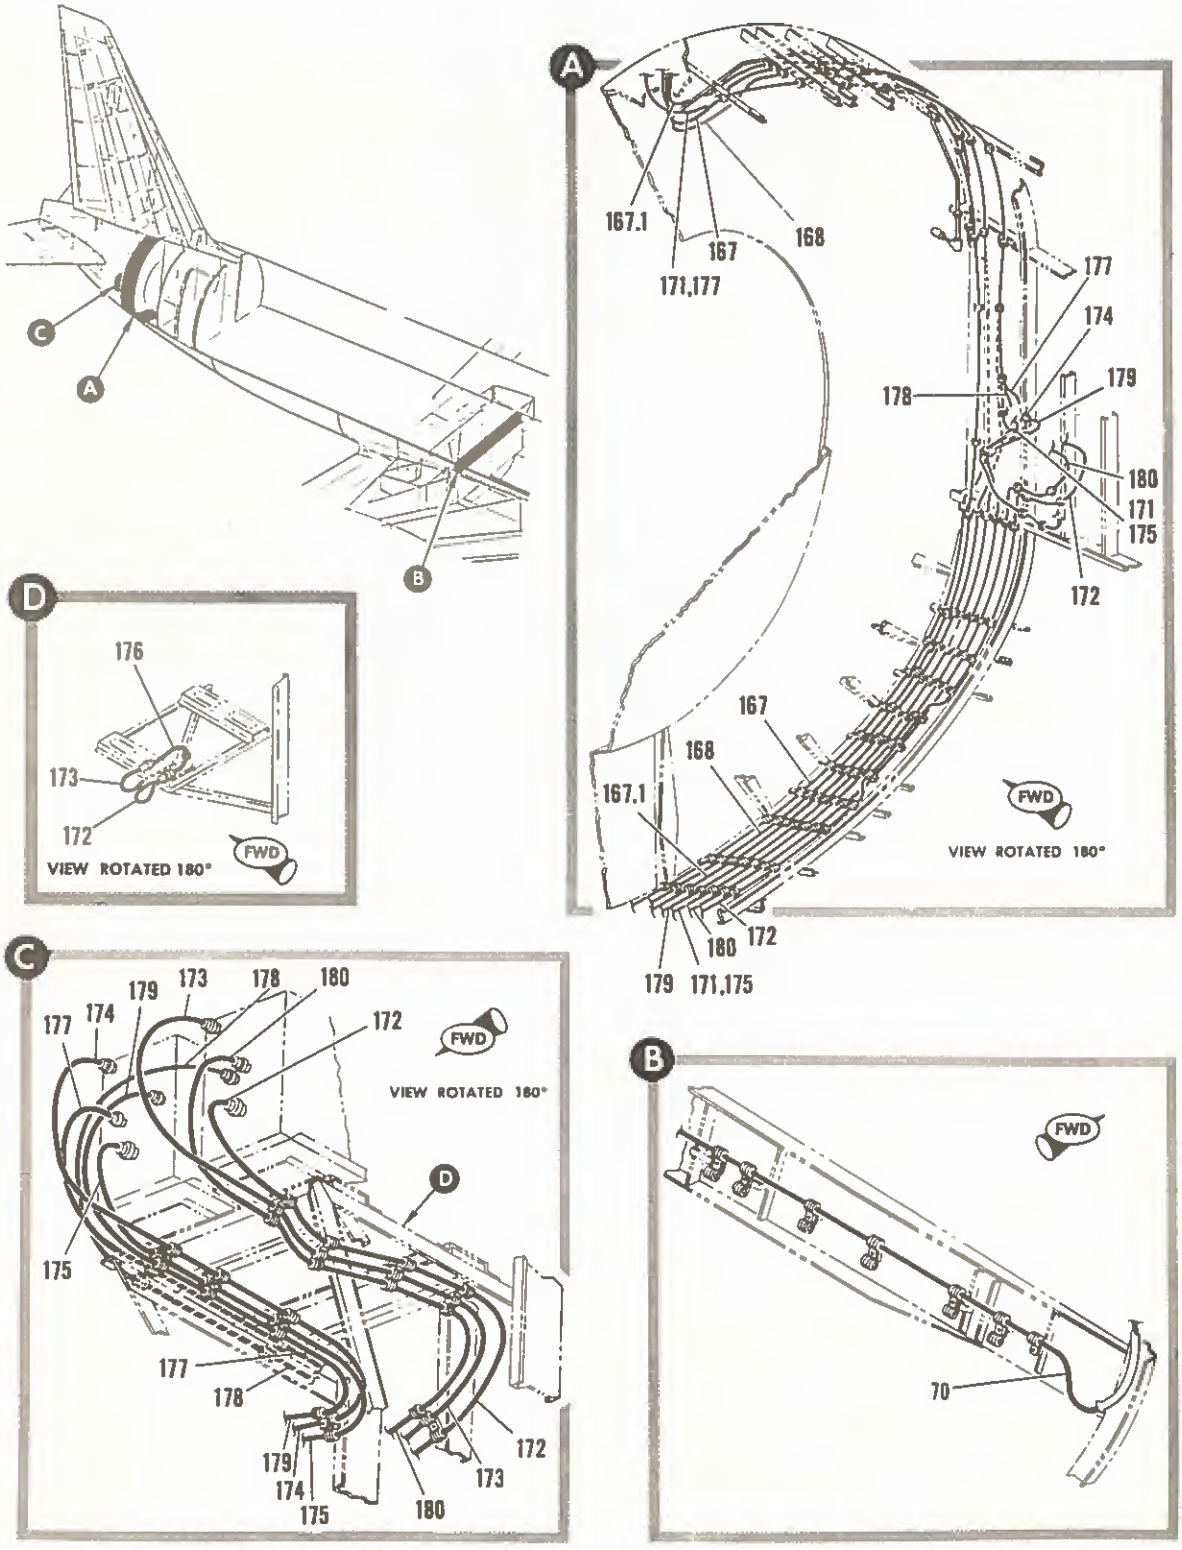


72 04 93 04 002A

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		FUSELAGE AFT UNDER FLOOR ELECTRONIC HARNESS STA 926 TO 1590 RH SEE 22-33004			
		. . CONNECTOR, CONVAIR 92-40058-018			
-172	22-33953	. HARNESS ASSEMBLY, AFT PRESSURE DISCONNECT TO HF2 COUPLER CONTROL	1		1
	MS3106E20-29PW	. . CONNECTOR, CONVAIR 92-40296-006	1		1
	DM9700-37SW	. . CONNECTOR, CONVAIR 92-40317-004 -V17419-	1		1
	323287	. . PLUG, CONVAIR 96-89500-001 -V00779-	1		7
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		9
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		5
-173	22-35932	. HARNESS ASSEMBLY, HF2 COUPLER CONTROL TO HF2 COUPLER	1		1
	DM9700-37S	. . CONNECTOR, CONVAIR 92-40317-003 -V17419-	1		2
	DM9700-7S	. . CONNECTOR, CONVAIR 92-40317-001 -V17419-	1		1
-174	22-35928	. HARNESS ASSEMBLY, HF1 COUPLER CONTROL TO HF1 COUPLER	1		1
	DM9700-37S	. . CONNECTOR, CONVAIR 92-40317-003 -V17419-	1		2
	DM9700-7SW	. . CONNECTOR, CONVAIR 92-40317-002 -V17419-	1		1
-175	22-33954	. HARNESS ASSEMBLY, DISCONNECT STA 1373 TO HF1 COUPLER CONTROL	1		1
	MS3106E20-29P	. . CONNECTOR, CONVAIR 92-40296-004	1		1
	DM9700-37SW	. . CONNECTOR, CONVAIR 92-40317-004 -V17419-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		5
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		9
	323287	. . PLUG, CONVAIR 96-89500-001 -V00779-	1		6
-176	22-33977	. HARNESS ASSEMBLY, JUMPER REPLACE NO 2 HF COUPLER CONNECTION	1		1
	DM9609-37P	. . CONNECTOR, CONVAIR 92-40058-017 -V17419-	1		1
	DM9609-37PW	. . CONNECTOR, CONVAIR 92-40058-018 -V17419-	1		1
-177	22-35924	. HARNESS ASSEMBLY, HF COUPLER CONTROL TO HF COUPLER ASSEMBLY COMMUNICATION 2	1		1
-178	22-35924-801	. HARNESS ASSEMBLY, HF COUPLER CONTROL TO HF COUPLER ASSEMBLY COMMUNICATION 1	1		1
	UG627A-U	. . CONNECTOR, CONVAIR 92-47008-005	1		2
-179	22-33935	. HARNESS ASSEMBLY, TAILCONE DISCONNECT HF COUPLER 1 CONTROL	1	10	1
	22-33935-803	. HARNESS ASSEMBLY, TAILCONE DISCONNECT HF COUPLER 1 CONTROL	11		1
-180	22-33935-801	. HARNESS ASSEMBLY, TAILCONE DISCONNECT HF COUPLER 2 CONTROL	1	10	1
	22-33935-805	. HARNESS ASSEMBLY, TAILCONE DISCONNECT HF COUPLER 1 CONTROL	11		1
	UG536A-U	. . CONNECTOR, CONVAIR 92-47009-002	1		1
	UG88C-U	. . CONNECTOR, CONVAIR 92-47001-007	1		1

SECTION V

Chapter 93
ELECTRONIC HARNESSES

VERTICAL STABILIZER ELECTRONIC HARNESSES

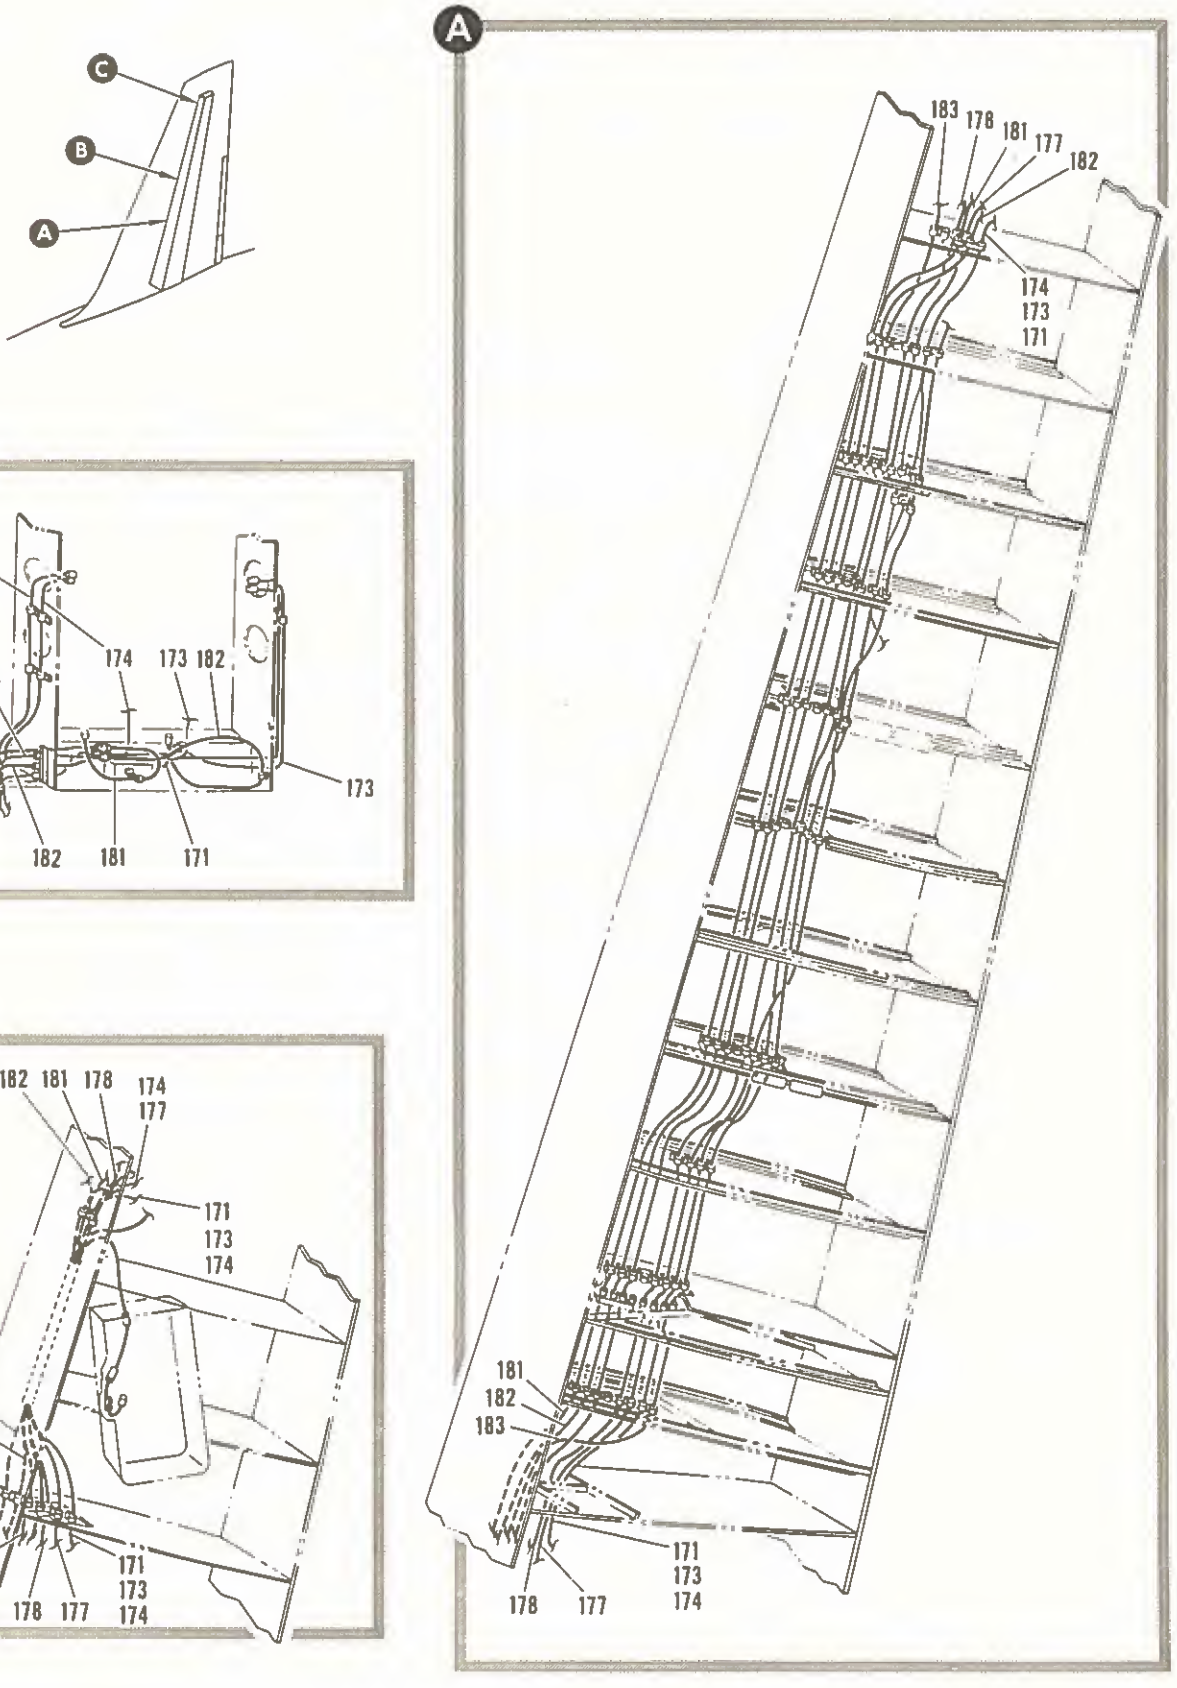

22 04 93 07.002

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		VERTICAL STABILIZER ELECTRONIC HARNESSES SEE 22-34111			
-181	22-35923	. HARNESS ASSEMBLY, VERTICAL FIN DISCONNECT TO HF COMMUNICATION TRANSMITTER 1 COUPLER	1		1
-182	22-35923-801	. HARNESS ASSEMBLY, VERTICAL FIN DISCONNECT TO HF COMMUNICATION TRANSMITTER 2 COUPLER	1		1
	82-888	. . ADAPTER, CONVAIR 90-04800-003 -V02660-	1		2
	UG23D-U	. . CONNECTOR, CONVAIR 92-47003-008 -V81350-	1		1
	UG160D-U	. . CONNECTOR, CONVAIR 92-57003-008 -V81350-	1		1
-183	22-35860	. HARNESS ASSEMBLY, VERTICAL FIN DISCONNECT TO VHF NAVIGATION ANTENNA	1		1
	82-888	. . ADAPTER, CONVAIR 90-04800-003 -V02660-	1		2
R	UG1158U	. . CONNECTOR, CONVAIR 92-47003-005 -V81350-	1		1
	UG160C-U	. . CONNECTOR, CONVAIR 92-57003-008 -V81350-	1		1

Master

GENERAL DYNAMICS/CONVAIR

March 5/62

INSTRUCTION COVER SHEET

TO: All Holders of
ILLUSTRATED PARTS CATALOG DAL CS-59-060
Model 22-2

SUBJECT: COMPLETE REPLACEMENT - CHAPTER 94
Dated Feb. 10/62

243

Remove and destroy all pages now in your manual for Chapter 94. Insert the attached pages to replace those pages just removed.

LIST OF EFFECTIVE PAGES

Section V - Chapter 94
ELECTRICAL HARNESSES

CHAPTER	PAGE	DATE	CODE
V-94	i	Feb. 10/62	C-2
V-94	ii	Feb. 10/62	C-2
V-94	iii	Feb. 10/62	C-2
	BLANK		
94-0	1	Feb. 10/62	C-2
94-0	2	Feb. 10/62	C-2
	BLANK		
	BLANK		
94-0	5	Feb. 10/62	C-2
94-0	6	Feb. 10/62	C-2
94-0	7	Feb. 10/62	C-2
94-0	8	Feb. 10/62	C-2
94-0	9	Feb. 10/62	C-2
94-0	10	Feb. 10/62	C-2
94-0	11	Feb. 10/62	C-2
94-0	12	Feb. 10/62	C-2
94-0	13	Feb. 10/62	C-2
94-0	14	Feb. 10/62	C-2
94-0	15	Feb. 10/62	C-2
94-0	16	Feb. 10/62	C-2
94-0	17	Feb. 10/62	C-2
94-0	18	Feb. 10/62	C-2
94-0	19	Feb. 10/62	C-2
94-0	20	Feb. 10/62	C-2
94-0	21	Feb. 10/62	C-2
94-0	22	Feb. 10/62	C-2
94-0	23	Feb. 10/62	C-2
94-0	24	Feb. 10/62	C-2
94-0	25	Feb. 10/62	C-2
	BLANK		
94-1	1	Apr. 28/61	A
94-1	2	Apr. 28/61	A
94-1	3	Apr. 28/61	A
94-1	4	Feb. 10/62	C-2
94-1	5	Feb. 10/62	A-2
94-1	6	Apr. 28/61	A
94-1	7	Feb. 10/62	C-2
94-1	8	Apr. 28/61	A
94-1	9	Feb. 10/62	C-2
94-1	10	Feb. 10/62	C-2
94-1	11	Feb. 10/62	C-2
94-1	12	Apr. 28/61	A
94-1	13	Apr. 28/61	A
94-1	14	Feb. 10/62	C-2
94-1	15	Feb. 10/62	C-2
94-1	16	Feb. 10/62	C-2
94-1	17	Feb. 10/62	C-2
94-1	18	Feb. 10/62	C-2
	BLANK		
94-1	20	Feb. 10/62	A-2
94-1	21	Apr. 28/61	A
94-1	22	Feb. 10/62	C-2
94-1	23	Feb. 10/62	C-2
94-1	24	Feb. 10/62	C-2
94-1	25	Feb. 10/62	C-2
94-1	26	Feb. 10/62	C-2
94-1	27	Feb. 10/62	C-2
94-1	28	Feb. 10/62	C-2
	BLANK		
94-1	30	Feb. 10/62	A-2
94-1	31	Feb. 10/62	C-2
94-1	32	Feb. 10/62	C-2
94-1	33	Feb. 10/62	C-2
94-1	34	Feb. 10/62	C-2
94-1	35	Feb. 10/62	C-2
94-1	36	Feb. 10/62	C-2
94-2	1	Apr. 28/61	A
94-2	2	Feb. 10/62	A-2
94-2	3	Feb. 10/62	A-2
94-2	4	Feb. 10/62	C-2
94-2	5	Feb. 10/62	C-2
94-2	6	Feb. 10/62	C-2
94-3	1	Apr. 28/61	A
94-3	2	Feb. 10/62	A-2
94-3	3	Feb. 10/62	C-2
94-3	4	Feb. 10/62	A-2
94-3	5	Feb. 10/62	A-2
94-3	6	Feb. 10/62	A-2
94-3	7	Feb. 10/62	A-2
94-3	8	Feb. 10/62	A-2
	BLANK		
94-3	10	Feb. 10/62	A-2
94-3	11	Feb. 10/62	A-2
94-3	12	Feb. 10/62	A-2
94-3	13	Feb. 10/62	A-2
94-3	14	Apr. 28/61	A

LIST OF EFFECTIVE PAGES (CONT)

CHAPTER	PAGE	DATE	CODE
94-3	15	Feb. 10/62	C-2
94-3	16	Feb. 10/62	A-2
94-3	17	Feb. 10/62	C-2
94-3	18	Feb. 10/62	C-2
94-4	1	Apr. 28/61	A
94-4	2	Feb. 10/62	A-2
94-4	3	Feb. 10/62	C-2
94-4	4	Apr. 28/61	A
94-4	5	Feb. 10/62	C-2
94-4	6	Feb. 10/62	C-2
94-4	7	Feb. 10/62	C-2
94-4	8	Feb. 10/62	C-2
94-4	9	Feb. 10/62	C-2
94-4	10	Feb. 10/62	C-2
	BLANK		
94-4	12	Apr. 28/61	A
94-4	13	Apr. 28/61	A
94-4	14	Apr. 28/61	A
94-4	15	Feb. 10/62	C-2
94-4	16	Apr. 28/61	C
94-4	17	Apr. 28/61	C
94-4	18	Feb. 10/62	C-2
94-4	19	Feb. 10/62	C-2
94-4	20	Feb. 10/62	C-2
94-4	21	Feb. 10/62	C-2
94-4	22	Feb. 10/62	A-2
94-4	23	Feb. 10/62	C-2
94-4	24	Feb. 10/62	A-2
94-4	25	Feb. 10/62	A-2
	BLANK		
94-5	1	Apr. 28/61	A
94-5	2	Apr. 28/61	A
94-5	3	Apr. 28/61	A
94-5	4	Apr. 28/61	A
94-5	5	Apr. 28/61	A
94-5	6	Feb. 10/62	C-2
94-5	7	Feb. 10/62	C-2
94-5	8	Feb. 10/62	C-2
94-5	9	Feb. 10/62	C-2
94-5	10	Feb. 10/62	C-2
94-5	11	Feb. 10/62	C-2
94-5	12	Feb. 10/62	C-2
94-5	13	Feb. 10/62	C-2
94-5	14	Apr. 28/61	A
94-5	15	Apr. 28/61	A
94-5	16	Feb. 10/62	C-2
94-5	17	Feb. 10/62	C-2
94-5	18	Apr. 28/61	A
94-5	19	Apr. 28/61	A
94-5	20	Apr. 28/61	A
94-5	21	Feb. 10/62	C-2
94-5	22	Apr. 28/61	A
94-5	23	Feb. 10/62	C-2
94-5	24	Apr. 28/61	C
94-5	25	Apr. 28/61	C
94-5	26	Feb. 10/62	C-2
	BLANK		
94-5	28	Apr. 28/61	A
94-5	29	Feb. 10/62	C-2
94-5	30	Feb. 10/62	C-2
	BLANK		
94-5	32	Apr. 28/61	A
94-5	33	Feb. 10/62	A-2
	BLANK		
94-6	1	Feb. 10/62	A-2
94-6	2	Feb. 10/62	A-2
94-6	3	Feb. 10/62	A-2
94-6	4	Feb. 10/62	A-2
94-6	5	Feb. 10/62	A-2
94-6	6	Feb. 10/62	A-2
94-6	7	Feb. 10/62	A-2
94-6	8	Feb. 10/62	C-2
94-6	9	Feb. 10/62	A-2
94-6	10	Feb. 10/62	C-2
94-6	11	Feb. 10/62	C-2
	BLANK		
94-7	1	Apr. 28/61	A
94-7	2	Apr. 28/61	A
94-7	3	Apr. 28/61	A
94-7	4	Feb. 10/62	C-2
	BLANK		
94-7	6	Apr. 28/61	A
94-7	7	Apr. 28/61	A
94-7	8	Feb. 10/62	A-2
	BLANK		
94-7	10	Apr. 28/61	C
94-7	11	Apr. 28/61	C
94-7	12	Apr. 28/61	C
94-7	13	Feb. 10/62	C-2
94-7	14	Feb. 10/62	C-2
94-7	15	Feb. 10/62	C-2
94-7	16	Feb. 10/62	C-2

LIST OF EFFECTIVE PAGES (CONT)

CHAPTER	PAGE	DATE	CODE
94-7	17	Feb. 10/62	C-2
94-7	18	Apr. 28/61	C
94-7	19	Apr. 28/61	C
94-7	20	Apr. 28/61	C
94-7	21	Feb. 10/62	C-2
94-7	22		NA
94-7	23		NA
94-7	24	Apr. 28/61	A
94-7	25	Feb. 10/62	A-2
	BLANK		
94-8	1	Feb. 10/62	A-2
94-8	2	Feb. 10/62	A-2
94-8	3	Feb. 10/62	A-2
94-8	4	Feb. 10/62	C-2
94-9	1	Apr. 28/61	A
94-9	2	Apr. 28/61	A
94-9	3	Apr. 28/61	A
94-9	4	Apr. 28/61	A
94-9	5	Feb. 10/62	C-2
94-9	6	Apr. 28/61	A
94-9	7	Feb. 10/62	A-2
94-9	8	Apr. 28/61	A
94-9	9	Feb. 10/62	A-2
	BLANK		
94-10	1	Apr. 28/61	A
94-10	2	Apr. 28/61	A
94-10	3	Apr. 28/61	A
94-10	4	Feb. 10/62	A-2
94-10	5	Feb. 10/62	C-2
94-10	6	Feb. 10/62	C-2
	BLANK		
94-10	8	Apr. 28/61	A
94-10	9	Apr. 28/61	A
94-10	10	Feb. 10/62	C-2
94-10	11	Feb. 10/62	C-2
94-10	12	Feb. 10/62	C-2
94-10	13	Feb. 10/62	C-2
94-10	14	Apr. 28/61	A
94-10	15	Feb. 10/62	A-2
94-10	16	Apr. 28/61	A
94-10	17	Feb. 10/62	A-2
94-10	18	Apr. 28/61	A
94-10	19	Feb. 10/62	C-2
	BLANK		
94-11	1	Apr. 28/61	A
94-11	2	Apr. 28/61	A
94-11	3	Feb. 10/62	A-2
94-11	4	Feb. 10/62	C-2
	BLANK		
94-11	6	Apr. 28/61	A
94-11	7	Apr. 28/61	A
94-11	8	Feb. 10/62	C-2
	BLANK		
94-11	10	Apr. 28/61	A
94-11	11	Apr. 28/61	A
94-11	12	Feb. 10/62	C-2
	BLANK		
94-11	14	Apr. 28/61	A
94-11	15	Feb. 10/62	C-2
94-11	16	Feb. 10/62	A-2
	BLANK		
94-11	18	Apr. 28/61	A
94-11	19	Apr. 28/61	A
94-11	20	Apr. 28/61	A
94-11	21	Feb. 10/62	A-2
94-11	22	Apr. 28/61	A
94-11	23	Feb. 10/62	A-2
94-11	24	Apr. 28/61	A
94-11	25	Feb. 10/62	C-2
	BLANK		
94-12	1	Feb. 10/62	A-2
94-12	2	Feb. 10/62	A-2
94-12	3	Feb. 10/62	A-2
94-12	4	Feb. 10/62	C-2
94-12	5	Feb. 10/62	C-2
94-12	6	Feb. 10/62	C-2
	BLANK		
94-12	8	Feb. 10/62	A-2
94-12	9	Feb. 10/62	A-2
94-12	10	Feb. 10/62	C-2
94-12	11	Feb. 10/62	C-2
94-12	12	Feb. 10/62	C-2
	BLANK		
94-12	14	Feb. 10/62	A-2
94-12	15	Feb. 10/62	A-2
94-12	16	Feb. 10/62	C-2
94-12	17	Feb. 10/62	C-2
94-12	18	Feb. 10/62	C-2
	BLANK		
94-12	20	Feb. 10/62	A-2
94-12	21	Feb. 10/62	A-2
94-12	22	Feb. 10/62	C-2
94-12	23	Feb. 10/62	C-2
94-12	24	Feb. 10/62	C-2

NA = Not Applicable

SECTION V

Chapter 94
ELECTRICAL HARNESSES

TABLE OF CONTENTS

CHAPTER-SUBJECT		FIGURE
94-1	FLIGHT COMPARTMENT ELECTRICAL HARNESSES	
	Pilot and Copilot Console Electrical Harnesses.....	1
	Pilot and Copilot Pedestal Electrical Harnesses.....	2
	Pilot Overhead Electrical Harnesses.....	3
	AC Distribution and DC Emergency Box Electronic Harnesses.....	4
	Circuit Breaker Panel Electrical Harnesses.....	5
	Flight Engineer Electrical Harnesses.....	6
94-2	FORWARD ENTRANCE ELECTRICAL HARNESSES	
	Forward Entrance Station 301 to 413 Electrical Harnesses.....	1
94-3	CABIN ELECTRICAL HARNESSES	
	Passenger Compartment Station 390 to 640 Electrical Harnesses.....	1
	Passenger Compartment Station 604 to 888 Electrical Harnesses.....	2
	Passenger Compartment Station 888 to 1249 Electrical Harnesses.....	3
	Aft Lavatory Above Floor Electrical Harnesses.....	4
	Aft Lavatory Area Electrical Harnesses.....	5
94-4	FUSELAGE NOSE UNDERFLOOR ELECTRICAL HARNESSES	
	Nose Landing Gear Electrical Harnesses.....	1
	Forward Flight Deck Electrical Harnesses.....	2
	Nose Wheel Well RH Electrical Harnesses.....	3
	Nose Wheel Well LH Electrical Harnesses.....	4
	Underfloor Station 187 to 250 LH Electrical Harnesses.	5
	Underfloor Station 187 to 250 RH Electrical Harnesses.	6
94-5	ELECTRONIC AND ELECTRICAL COMPARTMENT ELECTRICAL HARNESSES	
	Underfloor Station 250 to 375 RH Electrical Harnesses.....	1
	Relay Panel Forward Electrical Harnesses.....	2
	Relay Panel Aft Electrical Harnesses.....	3
	Electronic and Electrical Compartment Switch and Light Electrical Harnesses.....	4
	Autopilot Rack Electrical Harnesses.....	5
	AC External Power Junction Box Electrical Harnesses...	6
	AC Internal Power Junction Box Electrical Harnesses...	7

TABLE OF CONTENTS (CONT)

CHAPTER-SUBJECT		FIGURE
94-6	FUSELAGE FORWARD COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES	
	Forward Cargo Compartment Underfloor Electrical Harnesses	1
94-7	FUSELAGE WING SECTION UNDERFLOOR ELECTRICAL HARNESSES	
	Underfloor Front Spar Overwing Electrical Harnesses	1
	Overwing Electrical Harnesses	2
	Plenum Area Underfloor Station 640 to 926 RH Electrical Harnesses	3
	Plenum Area Underfloor Station 640 to 926 LH Electrical Harnesses	4
	Underfloor Over Nose Wheel Well Electrical Harnesses	6
94-8	FUSELAGE AFT COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES	
	Underfloor Hydraulic Compartment RH Electrical Harnesses	1
94-9	TAIL CONE AND STABILIZER ELECTRICAL HARNESSES	
	Tail Cone Electrical Harnesses	1
	Vertical Stabilizer Electrical Harnesses	2
	Horizontal Stabilizer Electrical Harnesses	3
94-10	MAIN WHEEL WELL ELECTRICAL HARNESSES	
	Main Wheel Well Forward LH Electrical Harnesses	1
	Main Wheel Well Forward RH Electrical Harnesses	2
	Main Wheel Well Aft LH Electrical Harnesses	3
	Main Wheel Well Aft RH Electrical Harnesses	4
	Main Landing Gear Electrical Harnesses	5
94-11	WING ELECTRICAL HARNESSES	
	Main Fuel Tank 2 and 3 Wing Electrical Harnesses	1
	Wing Leading Edge Electrical Harnesses	2
	Wing Trailing Edge Electrical Harnesses	3
	Main Fuel Tank 1 and 4 Wing Electrical Harnesses	4
	Wing Rear Spar Electrical Harnesses	5
	Replenishing Fuel Tank 1 and 4 Wing Electrical Harnesses	6
	Wing Trailing Edge Outboard Electrical Harnesses	7
94-12	POD AND PYLON ELECTRICAL HARNESSES	
	Pod and Pylon 1 Electrical Harnesses	1
	Pod and Pylon 2 Electrical Harnesses	2
	Pod and Pylon 3 Electrical Harnesses	3
	Pod and Pylon 4 Electrical Harnesses	4

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61501-1	94-1	6-176	
	94-5	1-176	
	94-5	3-176	
	94-5	6-176	
22-61502-1	94-1	6-177	
	94-5	1-177	
	94-5	3-177	
22-61503	94-4	3-398	
	94-4	4-398	
	94-5	1-398	
	94-5	3-398	
22-61504	94-4	4-440	
	94-4	5-440	
	94-4	6-440	
	94-5	3-440	
22-61505-1	94-1	3-27	
	94-1	5-27	
	94-5	1-27	
	95-5	3-27	
22-61505-801	94-1	3-27	
	94-1	5-27	
	94-5	1-27	
	94-5	3-27	
22-61506	94-1	3-37	
	94-1	5-37	
	94-2	1-37	
	94-5	1-37	
	94-5	2-37	
22-61507	94-1	3-51	
	94-1	5-51	
	94-5	1-51	
	94-5	3-51	
22-61508-1	94-1	3-45	
	94-1	5-45	
	94-5	1-45	
	94-5	2-45	
	94-5	3-45	
	94-6	1-45	
22-61508-801	94-1	3-45	
	94-1	5-45	
	94-5	1-45	
	94-5	2-45	
	94-5	3-45	
	94-6	1-45	
22-61509	94-1	3-38	
	94-1	5-38	
	94-4	3-38	
	94-5	1-38	
	94-5	3-38	
22-61510-1	94-1	3-54	
	94-1	5-54	
	94-5	1-54	
	94-5	3-54	
	94-6	1-54	
22-61510-805	94-1	3-54	
	94-1	5-54	
	94-5	1-54	
	94-5	3-54	
	94-6	1-54	
22-61511	94-1	3-46	
	94-1	5-46	
	94-5	1-46	
	94-5	3-46	
22-61511-1	94-1	3-46	
	94-1	5-46	
	94-5	1-46	
	94-5	3-46	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61512-1	94-1	3-39	
	94-1	5-39	
	94-5	1-39	
	94-5	3-39	
	94-6	1-39	
22-61513	94-1	3-53	
	94-5	1-53	
	94-5	3-53	
	94-5	6-53	
22-61514	94-1	3-55	
	94-1	5-55	
	94-4	2-55	
	94-4	3-55	
	94-5	1-55	
	94-5	3-55	
22-61515	94-1	3-28	
	94-1	5-28	
	94-4	3-28	
	94-5	1-28	
	94-5	3-28	
	94-6	1-28	
22-61516	94-4	4-441	
	94-4	6-441	
	94-5	1-441	
	94-5	2-441	
	94-5	3-441	
	94-6	1-441	
22-61518	94-1	3-47	
	94-1	5-47	
	94-5	1-47	
	94-5	3-47	
	94-6	1-47	
22-61519	94-1	3-52	
	94-1	5-52	
	94-4	3-52	
22-61520	94-1	3-43	
	94-1	5-43	
22-61521	94-1	3-56	
	94-1	5-56	
	94-4	1-56	
	94-5	3-56	
22-61522	94-4	1-340	
22-61523-1	94-4	1-338	
	94-4	3-338	
	94-4	4-338	
	94-5	1-338	
	94-5	2-338	
	94-5	3-338	
22-61524-801	94-4	1-339	
22-61525	94-1	6-196	
	94-4	3-196	
	94-4	4-196	
	94-5	1-196	
	94-5	2-196	
	94-5	3-196	
	94-6	1-196	
22-61525-1	94-1	6-196	
	94-4	3-196	
	94-4	4-196	
	94-5	1-196	
	94-5	2-196	
	94-5	3-196	
	94-6	1-196	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61526	94-1	6-197	
	94-4	3-197	
	94-5	1-197	
	94-5	3-197	
	94-6	1-197	
22-61526-1	94-1	6-197	
	94-4	3-197	
	94-5	1-197	
	94-5	3-197	
	94-6	1-197	
22-61529-1	94-4	1-341	
	94-5	3-341	
22-61531-1	94-4	3-394	
	94-4	4-394	
	94-5	1-394	
	94-5	3-394	
22-61532	94-1	1-8	
22-61533	94-1	1-6	
	94-4	3-6	
	94-4	4-6	
	94-4	5-6	
	94-4	6-6	
	94-5	1-6	
	94-5	2-6	
	94-5	3-6	
22-61534-1	94-1	3-40	
	94-1	5-40	
	94-2	1-40	
	94-5	1-40	
	94-5	3-40	
22-61535	94-1	3-29	
	94-1	5-29	
	94-5	1-29	
	94-5	3-29	
22-61536	94-1	1-9	
	94-1	5-9	
	94-1	6-9	
	94-5	1-9	
	94-5	2-9	
	94-5	3-9	
	94-6	1-9	
22-61537	94-1	1-10	
	94-1	5-10	
	94-1	6-10	
	94-5	1-10	
	94-5	2-10	
	94-5	3-10	
	94-6	1-10	
22-61538	94-1	1-11	
	94-1	5-11	
	94-1	6-11	
	94-5	1-11	
	94-5	2-11	
	94-5	3-11	
	94-6	1-11	
22-61539	94-1	5-162	
	94-1	6-162	
	94-5	1-162	
	94-5	3-162	
22-61540	94-1	5-163	
	94-1	6-163	
	94-5	1-163	
	94-5	3-163	
	94-6	1-163	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61541	94-1	6-164	
	94-5	1-164	
	94-5	3-164	
	94-6	1-164	
22-61542-1	94-1	5-165	
	94-1	6-165	
	94-5	1-165	
	94-5	3-165	
	94-6	1-165	
22-61543	94-1	6-198	
	94-5	3-198	
22-61544	94-1	6-178	
	94-5	3-178	
22-61545	94-1	6-179	
	94-5	3-179	
22-61546-1	94-1	6-180	
	94-5	1-180	
	94-5	3-180	
	94-5	6-180	
22-61547	94-1	6-181	
	94-5	1-181	
	94-5	3-181	
22-61548	94-1	6-182	
	94-5	1-182	
	94-5	3-182	
22-61549	94-1	6-183	
	94-5	1-183	
	94-5	3-183	
22-61550	94-1	6-184	
	94-5	1-184	
	94-5	3-184	
22-61551	94-1	6-185	
	94-5	1-185	
	94-5	3-185	
	94-6	1-185	
	94-7	7-186	
22-61552	94-1	6-186	
	94-4	5-186	
	94-5	1-186	
	94-6	1-186	
	94-7	1-186	
22-61553-1	94-1	6-187	
	94-4	3-187	
	94-5	1-187	
	94-5	3-187	
22-61554-1	94-1	3-48	
	94-1	5-48	
	94-4	3-48	
	94-5	1-48	
	94-5	3-48	
	94-6	1-48	
22-61555	94-1	1-12	
	94-1	5-12	
	94-1	6-12	
	94-5	1-12	
	94-5	2-12	
	94-5	3-12	
	94-6	1-12	
22-61556	94-1	5-166	
	94-1	6-166	
	94-4	4-166	
	94-5	3-166	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61557-1	94-4	2-364	
	94-4	3-364	
	94-5	1-364	
	94-5	2-364	
	94-5	3-364	
22-61558-1	94-4	2-385	
	94-4	4-385	
	94-4	5-385	
22-61560-1	94-5	2-539	
22-61562-1	94-4	2-375	
22-61562-1	94-4	3-375	
22-61562-807	94-4	2-375	
	94-4	3-375	
22-61563-1	94-4	2-378	
	94-4	3-378	
	94-5	1-378	
	94-5	3-378	
	94-6	1-378	
22-61565-1	94-5	6-576	
	94-5	7-576	
22-61566-1	94-5	3-581	
	94-5	6-581	
	94-5	7-581	
22-61567-1	94-5	6-578	
	94-5	7-578	
22-61568-1	94-2	1-232	
	94-5	4-232	
	94-5	6-232	
	94-5	7-232	
22-61569	94-5	6-584	
22-61570	94-5	6-579	
22-61571	94-1	2-25	
	94-4	4-25	
	94-4	6-25	
	94-5	5-25	
22-61572-1	94-4	2-376	
22-61572-1	94-5	1-376	
	94-5	2-376	
	94-5	3-376	
	94-6	1-376	
22-61573-1	94-5	1-486	
	94-5	2-486	
	94-5	3-486	
	94-6	1-486	
22-61574-1	94-5	1-481	
	94-5	2-481	
	94-5	3-481	
	94-6	1-481	
22-61575-1	94-5	1-482	
	94-5	2-482	
	94-5	3-482	
	94-6	1-482	
22-61576-1	94-5	1-508	
	94-5	2-508	
	94-5	3-508	
	94-5	6-508	
	94-6	1-508	
22-61577-1	94-5	1-479	
	94-5	2-479	
	94-5	3-479	
	94-6	1-479	
22-61578	94-5	1-487	
	94-5	2-487	
	94-5	3-487	
	94-5	6-487	
	94-6	1-487	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61579	94-4	6-444	
	94-5	1-444	
	94-5	2-444	
	94-5	3-444	
	94-6	1-444	
22-61580	94-5	1-450	
	94-5	2-450	
	94-5	3-450	
	94-6	1-450	
22-61581	94-5	1-470	
	94-5	2-470	
	94-5	3-470	
	94-5	6-470	
	94-6	1-470	
22-61581-1	94-5	1-470	
	94-5	2-470	
	94-5	3-470	
	94-5	6-470	
	94-6	1-470	
22-61582	94-1	6-211	
	94-5	1-211	
	94-5	3-211	
	94-6	1-211	
22-61583	94-5	3-589.1	
	94-5	6-589.1	
	94-5	7-589.1	
22-61584	94-5	6-580	
	94-5	7-580	
22-61585	94-5	6-577	
	94-5	7-577	
22-61586	94-5	1-480	
	94-5	7-480	
22-61586-1	94-5	1-480	
	94-5	7-480	
22-61587	94-4	2-381	
	94-4	3-381	
	94-4	4-381	
	94-5	1-381	
	94-5	3-381	
	94-6	1-381	
22-61587-1	94-4	2-381	
	94-4	3-381	
	94-4	4-381	
	94-5	1-381	
	94-5	3-381	
	94-6	1-381	
22-61588	94-4	3-403	
	94-5	1-403	
	94-5	3-403	
22-61589	94-4	2-391	
	94-4	3-391	
	94-4	4-391	
	94-5	1-391	
	94-5	3-391	
	94-6	1-391	
22-61589-1	94-4	2-391	
	94-4	3-391	
	94-4	4-391	
	94-5	1-391	
	94-5	3-391	
	94-6	1-391	
22-61591-1	94-4	2-383	
	94-4	3-383	
	94-5	1-383	
	94-5	3-383	
	94-6	1-383	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61592-1	94-4	2-382.1	
22-61593-1	94-4	2-383.1	
22-61594-1	94-4	2-384	
	94-4	3-384	
	94-5	1-384	
	94-5	3-384	
	94-6	1-384	
22-61595	94-1	6-188	
	94-5	1-188	
	94-5	3-188	
	94-5	1-188	
22-61595-803	94-5	1-472	
	94-5	2-472	
	94-5	3-472	
	94-6	1-472	
	94-7	1-472	
22-61596-1	94-1	6-206	
	94-5	1-206	
	94-5	3-206	
	94-6	1-206	
22-61596-5	94-1	6-206	
	94-5	1-206	
	94-5	3-206	
	94-6	1-206	
22-61596-803	94-1	6-206	
	94-5	1-206	
	94-5	3-206	
	94-6	1-206	
22-61597	94-1	4-64	
	94-1	5-64	
	94-1	6-64	
	94-5	1-64	
	94-5	3-64	
22-61598	94-1	5-167	
	94-1	6-167	
	94-5	1-167	
	94-5	3-167	
	94-6	1-167	
22-61599-1	94-4	2-387	
	94-4	3-387	
	94-5	1-387	
	94-5	3-387	
22-61600-1	94-1	5-101	
	94-5	1-101	
	94-6	1-101	
22-61601	94-1	5-149	
	94-4	3-149	
22-61601-5	94-1	5-149	
	94-4	3-149	
22-61602	94-1	5-146	
	94-5	1-146	
	94-6	1-146	
22-61603-1	94-1	5-116	
	94-5	1-116	
	94-5	3-116	
22-61604	94-1	6-175	
	94-4	3-175	
	94-5	1-175	
	94-5	3-175	
	94-6	1-175	
22-61605	94-5	1-524	
	94-5	3-524	
	94-6	1-524	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61606	94-1	5-118	
	94-4	3-118	
	94-5	1-118	
	94-5	3-118	
22-61607-1	94-1	5-113	
	94-5	1-113	
	94-5	3-113	
	94-6	1-113	
	94-7	1-113	
	94-7	6-113	
22-61607-807	94-1	5-113	
	94-5	1-113	
	94-5	3-113	
	94-6	1-113	
	94-7	1-113	
	94-7	6-113	
22-61608-1	94-1	5-109	
	94-5	1-109	
	94-5	2-109	
	94-5	3-109	
	94-6	1-109	
22-61609-1	94-1	5-106	
22-61610	94-1	5-125	
	94-5	3-125	
22-61611	94-1	4-85	
	94-5	2-85	
	94-5	3-85	
22-61612	94-1	4-86	
	94-5	1-86	
	94-5	2-86	
	94-5	3-86	
	94-6	1-86	
22-61613-1	94-1	4-67	
	94-1	5-67	
	94-4	3-67	
	94-5	1-67	
	94-5	2-67	
	94-5	3-67	
	94-6	1-67	
22-61614	94-1	4-80	
	94-4	4-80	
	94-4	6-80	
	94-5	1-80	
22-61615-1	94-1	2-20	
	94-4	3-20	
	94-4	4-20	
	94-4	5-20	
	94-4	6-20	
	94-5	1-20	
	94-5	3-20	
22-61619-1	94-1	4-79	
	94-1	5-79	
	94-5	1-79	
	94-5	2-79	
	94-5	3-79	
	94-6	1-79	
22-61616	94-5	1-525	
	94-5	3-525	
22-61618	94-5	3-553	
22-61619-805	94-1	4-79	
	94-1	5-79	
	94-5	1-79	
	94-5	2-79	
	94-5	3-79	
	94-6	1-79	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61619-807	94-1	4-79	
	94-1	5-79	
	94-5	1-79	
	94-5	2-79	
	94-5	3-79	
	94-6	1-79	
22-61619-801	94-1	4-79	
	94-1	5-79	
	94-5	1-79	
	94-5	2-79	
	94-5	3-79	
	94-6	1-79	
22-61623-3	94-1	6-200	
	94-5	3-200	
22-61624-1	94-1	6-201	
	94-5	1-201	
	94-5	3-201	
	94-6	1-201	
22-61624-5	94-1	6-201	
	94-5	1-201	
	94-5	3-201	
	94-6	1-201	
22-61620-1	94-5	6-574.1	
22-61221-1	94-4	2-358	
	94-5	2-358	
	94-5	6-358	
	94-5	7-358	
22-61622	94-1	6-199	
	94-4	3-199	
	94-5	1-199	
	94-5	3-199	
	94-6	1-199	
22-61623-1	94-1	6-200	
	94-5	3-200	
22-61625-803	94-1	6-202	
	94-5	1-202	
	94-5	3-202	
	94-6	1-202	
22-61624-803	94-1	6-201	
	94-5	1-201	
	94-5	3-201	
	94-6	1-201	
22-61625-1	94-1	6-202	
	94-5	1-202	
	94-5	3-202	
	94-6	1-202	
22-61615-803	94-1	2-20	
	94-4	3-20	
	94-4	4-20	
	94-4	5-20	
	94-4	6-20	
	94-5	1-20	
	94-5	3-20	
22-61626	94-1	6-189	
	94-5	1-189	
	94-5	2-189	
	94-5	3-189	
	94-6	1-189	
22-61627	94-1	6-190	
	94-5	1-190	
	94-5	3-190	
	94-6	1-190	
	94-7	1-190	
	94-7	2-190	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61630-1	94-4	2-388	
	94-4	3-388	
	94-4	4-388	
	94-4	5-388	
22-61631-1	94-4	2-365	
	94-4	3-365	
	94-4	4-365	
	94-4	5-365	
22-61633-1	94-5	1-456	
	94-5	2-456	
	94-5	3-456	
22-61635-1	94-4	4-435	
	94-5	1-435	
	94-5	3-435	
	94-5	4-435	
	94-5	5-435	
	94-6	1-435	
22-61637-1	94-4	4-431	
	94-4	5-431	
	94-5	1-431	
	94-5	4-431	
	94-5	5-431	
	94-6	1-431	
22-61638	94-4	2-354	
	94-4	4-354	
22-61639-1	94-5	2-546.5	
22-61640-1	94-4	4-412	
	94-4	5-412	
	94-5	4-412	
	94-5	5-412	
22-61641-1	94-4	4-432	
	94-4	5-432	
	94-5	4-432	
	94-5	5-432	
22-61643-1	94-4	4-436	
	94-5	4-436	
	94-5	5-436	
22-61644-1	94-4	4-419	
	94-5	4-419	
	94-5	5-419	
22-61645-1	94-4	4-413	
	94-5	4-413	
	94-5	5-413	
22-61646-1	94-4	4-411	
	94-5	2-411	
	94-5	4-411	
	94-5	5-411	
22-61647-1	94-4	2-355	
	94-4	4-355	
22-61650-1	94-4	2-343	
	94-4	4-343	
22-61651-1	94-4	2-357	
	94-4	4-357	
	94-4	5-357	
	94-5	2-357	
22-61652-1	94-4	2-344	
	94-4	4-344	
	94-4	5-344	
22-61653	94-5	5-572	
22-61656-1	94-4	4-427	
	94-5	4-427	
	94-5	5-427	
22-61659	94-4	3-399	
	94-4	4-399	
	94-5	1-399	
	94-5	3-399	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61659-1	94-4	3-399	
	94-4	4-399	
	94-5	1-399	
	94-5	3-399	
22-61660	94-4	3-404	
	94-5	1-404	
	94-5	3-404	
22-61660-1	94-4	3-404	
	94-5	1-404	
	94-5	3-404	
22-61661	94-1	5-115	
	94-4	3-115	
	94-5	3-115	
22-61661-1	94-1	5-115	
	94-4	3-115	
	94-5	3-115	
22-61663	94-1	2-21	
	94-4	4-21	
	94-4	6-21	
	94-5	1-21	
22-61664	94-1	2-24	
	94-1	6-24	
	94-4	4-24	
	94-4	6-24	
22-61665	94-1	2-22	
	94-4	4-22	
	94-4	6-22	
22-61666	94-1	2-23	
	94-4	4-23	
	94-4	6-23	
22-61667-1	94-1	5-111	
	94-4	4-111	
	94-5	3-111	
22-61668-1	94-4	5-443	
22-61668-3	94-4	5-443	
22-61668-5	94-4	5-443	
22-61669-1	94-1	4-60	
	94-5	1-60	
	94-5	2-60	
	94-5	3-60	
	94-6	1-60	
22-61669-807	94-1	4-60	
	94-5	1-60	
	94-5	2-60	
	94-5	3-60	
	94-6	1-60	
22-61670-801	94-1	6-173	
	94-5	2-173	
	94-5	3-173	
22-61671-1	94-4	2-377	
	94-4	3-377	
	94-4	4-377	
	94-4	5-377	
22-61672	94-1	6-191	
	94-5	1-191	
	94-5	3-191	
	94-6	1-191	
22-61673	94-1	5-168	
	94-1	6-168	
	94-5	1-168	
	94-5	3-168	
	94-6	1-168	
22-61674	94-1	5-169	
	94-1	6-169	
	94-5	3-169	
22-61675	94-1	5-170	
	94-1	6-170	
	94-5	3-170	
22-61676	94-5	2-537	
	94-5	3-537	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61677	94-4	3-402	
	94-4	4-402	
	94-5	3-402	
22-61678	94-1	2-13	
	94-4	2-13	
	94-4	4-13	
	94-4	5-13	
	94-4	6-13	
22-61679	94-1	3-30	
	94-1	5-30	
	94-4	3-30	
	94-5	1-30	
	94-5	3-30	
	94-6	1-30	
22-61680	94-1	3-31	
	94-1	5-31	
	94-4	3-31	
	94-5	1-31	
	94-5	3-31	
	94-6	1-31	
22-61681	94-1	3-32	
	94-1	5-32	
	94-4	3-32	
	94-5	1-32	
	94-5	3-32	
	94-6	1-32	
22-61682	94-1	3-33	
	94-1	5-33	
	94-4	3-33	
	94-5	1-33	
	94-5	3-33	
	94-6	1-33	
22-61683	94-1	6-203	
	94-4	3-203	
	94-5	1-203	
	94-5	3-203	
	94-6	1-203	
22-61683-1	94-1	6-203	
	94-4	3-203	
	94-5	1-203	
	94-5	3-203	
	94-6	1-203	
22-61684	94-1	6-204	
	94-4	3-204	
	94-5	1-204	
	94-5	3-204	
	94-6	1-204	
22-61684-1	94-1	6-204	
	94-4	3-204	
	94-5	1-204	
	94-5	3-204	
	94-6	1-204	
22-61685	94-1	6-205	
	94-4	3-205	
	94-5	1-205	
	94-5	3-205	
	94-6	1-205	
22-61685-1	94-1	6-205	
	94-4	3-205	
	94-5	1-205	
	94-5	3-205	
	94-6	1-205	
22-61686	94-1	3-34	
	94-1	5-34	
	94-5	3-34	
22-61687	94-1	3-35	
	94-1	5-35	
	94-5	3-35	
22-61688	94-1	3-36	
	94-1	5-36	
	94-5	3-36	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61689-1	94-1	4-98	
	94-1	5-98	
	94-4	4-98	
	94-5	3-98	
22-61690-1	94-1	4-68	
	94-1	5-68	
	94-5	3-68	
22-61691-1	94-1	4-70	
	94-1	5-70	
	94-5	3-70	
22-61692	94-1	5-120	
	94-5	3-120	
22-61693	94-5	1-500	
	94-5	2-500	
	94-6	1-500	
	94-7	1-500	
	94-7	2-500	
	94-7	6-500	
22-61694-1	94-5	1-496	
	94-5	2-496	
	94-5	3-496	
	94-5	4-496	
	94-6	1-496	
22-61695	94-3	1-270	
22-61695	94-5	1-270	
	94-5	2-270	
	94-5	3-270	
	94-6	1-270	
22-61696	94-5	2-544	
	94-5	3-544	
	94-6	1-544	
22-61697	94-1	5-114	
	94-4	3-114	
	94-5	1-114	
	94-5	3-114	
22-61698	94-5	3-549	
	94-6	1-549	
22-61699	94-5	3-595	
	94-6	1-595	
22-61700-1	94-4	2-369.1	
22-61701-1	94-1	5-110	
	94-5	2-110	
	94-5	3-110	
22-61701-3	94-1	5-110	
	94-5	2-110	
	94-5	3-110	
22-61702-1	94-4	2-392	
	94-4	3-392	
	94-4	5-392	
	94-5	3-392	
22-61702-5	94-4	2-392	
	94-4	3-392	
	94-4	5-392	
	94-5	3-392	
22-61704-1	94-5	1-473	
	94-5	2-473	
	94-5	3-473	
	94-6	1-473	
	94-7	1-473	
22-61705	94-1	5-136	
22-61706	94-1	5-137	
22-61707	94-1	5-138	
	94-2	1-138	
22-61708	94-1	5-139	
	94-5	1-139	
	94-6	1-139	
22-61709	94-1	5-140	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61709-1	94-1	5-140	
22-61710-1	94-1	5-156	
22-61711-1	94-1	5-154	
22-61711-805	94-1	5-154	
22-61712	94-1	5-155	
22-61713-1	94-1	5-147	
	94-5	1-147	
22-61714	94-1	5-157	
	94-5	1-157	
	94-6	1-157	
22-61715-1	94-1	5-148	
22-61716-1	94-1	5-158	
22-61717-1	94-1	5-107	
22-61717-5	94-1	5-107	
22-61718-1	94-1	5-108	
	94-5	1-108	
	94-6	1-108	
22-61719-1	94-1	5-100	
	94-4	3-100	
22-61720-1	94-1	5-99	
	94-4	3-99	
	94-4	4-99	
22-61721-1	94-4	4-572.1	
	94-5	4-572.1	
	94-5	5-572.1	
22-61721-5	94-4	4-572.1	
	94-5	4-572.1	
	94-5	5-572.1	
22-61722-1	94-4	2-370	
	94-4	3-370	
	94-5	1-370	
	94-5	3-370	
22-61722-807	94-4	2-370.1	
	94-4	3-370.1	
	94-5	1-370.1	
	94-5	3-370.1	
22-61724-1	94-4	4-414	
	94-5	4-414	
	94-5	5-414	
22-61725-1	94-4	4-421	
	94-4	5-421	
	94-5	2-421	
	94-5	4-421	
	94-5	5-421	
22-61725-3	94-4	4-421	
	94-4	5-421	
	94-5	2-421	
	94-5	4-421	
	94-5	5-421	
22-61725-807	94-4	4-421	
	94-4	5-421	
	94-5	2-421	
	94-5	4-421	
	94-5	5-421	
22-61726-1	94-4	2-374	
22-61726-1	94-4	4-374	
	94-4	5-374	
	94-5	1-374	
	94-5	4-374	
	94-5	5-374	
22-61726-809	94-4	2-374	
	94-4	4-374	
	94-4	5-374	
	94-5	1-374	
	94-5	4-374	
22-61727-1	94-4	4-422	
	94-5	4-422	
	94-5	5-422	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61727-5	94-4	4-422	
	94-5	4-422	
	94-5	5-422	
22-61728-1	94-1	6-209.1	
22-61730-1	94-4	2-345	
	94-4	4-345	
22-61731-1	94-1	2-15	
	94-4	4-15	
	94-4	5-15	
22-61732-1	94-1	2-16	
	94-4	5-16	
22-61735-1	94-4	4-415	
	94-4	5-415	
	94-5	4-415	
	94-5	5-415	
22-61736-1	94-4	4-433	
	94-4	5-433	
	94-5	2-433	
	94-5	3-433	
	94-5	4-433	
	94-5	5-433	
22-61737-1	94-4	4-416	
	94-5	2-416	
	94-5	3-416	
	94-5	4-416	
	94-5	5-416	
22-61737-809	94-4	4-416	
	94-5	2-416	
	94-5	3-416	
	94-5	4-416	
	94-5	5-416	
22-61738	94-1	6-174	
22-61738	94-5	4-174	
22-61739	94-1	3-50	
	94-1	5-50	
	94-5	3-50	
22-61740	94-1	5-117	
	94-5	3-117	
22-61743	94-4	4-423	
22-61743	94-5	1-423	
	94-5	4-423	
	94-5	5-423	
	94-6	1-423	
22-61744	94-5	2-546	
	94-5	3-546	
	94-5	4-546	
22-61746	94-5	1-497	
	94-5	2-497	
	94-6	1-497	
22-61750	94-1	5-160	
	94-4	3-160	
	94-5	1-160	
	94-5	3-160	
	94-6	1-160	
22-61752	94-1	5-112	
	94-5	1-112	
	94-5	3-112	
22-61753	94-1	6-171	
	94-5	1-171	
	94-5	3-171	
	94-6	1-171	
22-61754	94-1	6-210	
	94-5	1-210	
	94-5	3-210	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61755	94-1	5-119	
	94-5	1-119	
	94-5	4-119	
	94-6	1-119	
22-61756	94-4	4-428	
	94-5	1-428	
	94-5	2-428	
	94-5	3-428	
	94-6	1-428	
22-61758	94-4	4-424	
	94-5	4-424	
22-61759	94-4	4-442	
	94-4	5-442	
	94-4	6-442	
	94-5	1-442	
	94-5	3-442	
22-61760-1	94-1	4-61	
	94-5	3-61	
22-61761-1	94-1	3-42	
	94-1	4-42	
	94-1	5-42	
	94-5	3-42	
22-61762-1	94-1	4-62	
	94-5	3-62	
22-61763-1	94-1	4-69	
	94-5	3-69	
22-61764-1	94-1	4-66	
	94-5	3-66	
22-61765-1	94-1	4-71	
	94-5	3-71	
	94-5	6-71	
22-61766-1	94-1	4-65	
	94-5	3-65	
22-61767-1	94-1	4-72	
	94-5	3-72	
22-61768-1	94-5	1-448	
	94-5	2-448	
	94-5	3-448	
	94-5	6-448	
	94-6	1-448	
22-61769-1	94-5	1-447	
	94-5	2-447	
	94-5	3-447	
	94-5	6-447	
	94-6	1-447	
22-61701-1	94-1	5-110	
	94-5	2-110	
	94-5	3-110	
22-61770-1	94-4	2-361	
22-61771	94-4	2-386	
	94-5	3-386	
22-61772-1	94-4	2-371	
22-61773	94-4	2-345	
22-61774	94-4	3-395	
	94-4	4-395	
22-61775-1	94-4	2-373	
	94-4	4-373	
	94-5	3-373	
22-61776-1	94-4	2-350	
	94-4	4-350	
22-61777-1	94-5	6-575.1	
22-61778-1	94-5	6-573.1	
22-61779	94-1	6-172	
	94-4	3-172	
	94-5	1-172	
	94-5	3-172	
	94-6	1-172	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61780	94-1	5-110.1	
	94-5	1-110.1	
	94-5	3-110.1	
22-61781-1	94-4	2-362	
	94-4	4-362	
22-61783	94-4	2-363	
	94-4	4-363	
22-61784	94-4	2-351	
	94-4	4-351	
22-61785	94-4	4-425	
	94-4	5-425	
	94-5	3-425	
	94-5	4-425	
	94-5	5-425	
22-61786	94-4	4-426	
	94-5	4-426	
	94-5	5-426	
22-61787	94-4	4-429	
	94-4	5-429	
	94-5	1-429	
	94-5	4-429	
	94-5	5-429	
22-61788	94-4	4-434	
	94-4	5-434	
22-61789	94-4	4-430	
	94-5	4-430	
	94-5	5-430	
22-61790	94-1	6-195	
	94-5	1-195	
	94-5	3-195	
22-61791	94-1	1-3	
	94-4	2-3	
	94-4	3-3	
	94-4	3-3	
22-61792-1	94-1	4-77	
	94-1	5-77	
	94-2	1-77	
	94-5	1-77	
	94-5	2-77	
	94-5	3-77	
22-61792-5	94-1	4-78	
22-61792-5	94-1	5-78	
	94-5	2-78	
22-61793	94-1	6-207	
	94-5	1-207	
	94-5	3-207	
	94-6	1-207	
22-61794	94-5	1-510	
	94-6	1-510	
22-61795-1	94-5	1-449	
	94-5	2-449	
	94-5	3-449	
	94-5	6-449	
22-61796	94-4	2-389	
	94-4	3-389	
	94-5	1-389	
	94-6	1-389	
22-61797-1	94-4	2-366	
	94-4	3-366	
	94-5	1-366	
	94-5	3-366	
22-61798-1	94-5	1-446	
	94-5	2-446	
	94-5	3-446	
	94-5	6-446	
	94-6	1-446	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61799-1	94-5	1-454	
	94-5	2-454	
	94-5	3-454	
	94-5	6-454	
	94-6	1-454	
22-61800	94-5	1-516	
	94-5	6-516	
	94-6	1-516	
22-61801	94-5	1-522	
	94-5	6-522	
	94-6	1-522	
22-61802	94-5	1-515	
	94-5	6-515	
	94-6	1-515	
22-61803	94-5	1-523	
	94-5	6-523	
	94-6	1-523	
22-61804-3	94-1	4-93	
	94-5	1-93	
	94-5	6-93	
	94-5	7-93	
22-61804-5	94-1	4-97	
	94-5	6-97	
22-61805-3	94-1	4-90	
	94-5	1-90	
	94-5	6-90	
	94-5	7-90	
22-61805-5	94-1	4-94	
22-61806-3	94-1	4-92	
	94-5	1-92	
	94-5	6-92	
	94-5	7-92	
22-61806-5	94-1	4-96	
	94-5	1-96	
	94-5	2-96	
	94-5	6-96	
22-61807-3	94-1	4-91	
	94-5	1-91	
	94-5	6-91	
	94-5	7-91	
22-61807-5	94-1	4-95	
22-61808	94-6	1-609	
	94-7	1-609	
22-61809	94-6	1-609.1	
22-61810	94-1	4-89	
	94-1	5-89	
22-61811	94-1	4-87	
	94-1	5-87	
	94-5	1-87	
	94-5	2-87	
	94-5	3-87	
22-61812	94-1	5-141	
22-61812-1	94-1	5-141	
22-61813-1	94-1	5-150	
22-61814	94-1	4-88	
	94-1	5-88	
22-61815	94-1	5-142	
22-61816-1	94-1	5-159	
22-61817	94-1	5-104	
22-61817-807	94-1	5-104	
22-61818	94-5	3-552	
22-61818-1	94-5	3-552	
22-61819-1	94-1	5-116.1	
22-61819-5	94-1	5-116.1	
22-61820	94-1	5-116.2	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61821	94-5	1-459	
	94-5	3-459	
	94-6	1-459	
22-61822-1	94-1	4-59	
	94-1	5-59	
	94-5	1-59	
	94-5	3-59	
22-61823-1	94-1	4-58	
	94-1	5-58	
	94-5	1-58	
22-61824-1	94-1	5-143	
22-61825-1	94-1	5-151	
22-61826-1	94-1	5-103	
22-61827-1	94-1	5-144	
	94-5	1-144	
22-61828-1	94-1	5-152	
22-61829	94-1	5-105	
22-61830-1	94-1	4-84	
	94-1	5-84	
	94-5	3-84	
22-61830-5	94-1	4-84	
	94-1	5-84	
	94-5	3-84	
22-61831-1	94-1	5-145	
22-61831-3	94-1	5-145	
22-61832-1	94-1	5-153	
22-61833-1	94-1	5-102	
22-61833-5	94-1	5-102	
22-61834-1	94-1	4-82	
	94-5	1-82	
	94-5	2-82	
	94-5	3-82	
	94-5	6-82	
	94-5	7-82	
	94-6	1-82	
22-61835	94-6	1-606	
	94-7	1-606	
22-61836	94-5	1-471	
	94-5	3-471	
	94-6	1-471	
22-61837	94-5	1-509	
	94-5	2-509	
	94-6	1-509	
22-61838	94-5	7-586	
22-61839	94-5	7-587	
22-61840	94-5	3-588	
	94-5	7-588	
22-61841	94-5	7-589	
22-61842	94-5	6-585	
22-61843-1	94-1	4-73	
	94-5	1-73	
	94-5	2-73	
	94-5	3-73	
	94-5	6-73	
22-61844-1	94-1	4-63	
	94-5	1-63	
	94-5	2-63	
	94-5	3-63	
	94-5	6-63	
22-61845-1	94-1	4-445	
	94-5	1-445	
	94-5	2-445	
	94-5	3-445	
	94-5	6-445	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61846	94-1	4-83	
	94-1	5-83	
	94-5	1-83	
	94-5	2-83	
	94-5	3-83	
	94-5	6-83	
22-61847	94-1	3-44	
	94-1	5-44	
	94-4	3-44	
	94-5	3-44	
22-61848	94-5	3-548	
22-61849-1	94-1	4-74	
	94-5	3-74	
22-61850	94-5	1-455	
	94-5	2-455	
	94-5	3-455	
22-61851-1	94-5	1-501	
	94-5	2-501	
	94-5	3-501	
22-61852-1	94-1	4-57	
	94-5	3-57	
22-61854-1	94-4	2-352	
	94-4	4-352	
22-61856	94-5	2-538	
	94-5	3-538	
22-61857	94-5	1-453	
	94-5	3-453	
22-61858	94-5	1-452	
	94-5	3-452	
22-61859	94-1	2-14	
22-61860-1	94-1	6-192	
	94-5	1-192	
	94-5	3-192	
22-61861-1	94-1	6-193	
	94-4	3-193	
	94-5	1-193	
	94-5	3-193	
22-61862-1	94-1	6-194	
	94-5	1-194	
	94-5	3-194	
22-61863	94-1	1-1	
22-61863	94-4	1-1	
	94-4	2-1	
	94-4	3-1	
	94-4	4-1	
22-61864	94-1	1-2	
	94-4	2-2	
	94-4	3-2	
	94-4	4-2	
22-61865-1	94-1	1-4	
	94-4	3-4	
	94-4	4-4	
22-61865-3	94-1	1-4	
	94-4	3-4	
	94-4	4-4	
22-61866	94-4	3-408	
	94-4	4-408	
	94-5	3-408	
22-61867-1	94-4	3-407	
	94-4	4-407	
	94-5	1-407	
	94-5	2-407	
	94-5	3-407	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61867-5	94-4	3-407	
	94-4	4-407	
	94-5	1-407	
	94-5	2-407	
	94-5	3-407	
22-61868	94-1	1-7	
	94-4	3-7	
	94-4	4-7	
22-61869-1	94-4	4-428.1	
	94-5	4-428.1	
	94-5	5-428.1	
22-61870	94-5	2-540	
	94-5	3-540	
22-61871	94-4	2-360	
	94-4	3-360	
	94-4	4-360	
	94-5	1-360	
	94-5	2-360	
	94-6	1-360	
22-61872	94-4	3-397	
	94-4	4-397	
	94-5	1-397	
	94-6	1-397	
22-61873	94-4	3-393	
	94-4	4-393	
	94-5	1-393	
	94-6	1-393	
22-61874	94-4	3-396	
	94-4	4-396	
	94-5	1-396	
	94-6	1-396	
22-61876	94-4	2-390	
22-61876	94-4	4-390	
	94-4	5-390	
22-61877	94-4	2-349	
22-61877	94-4	4-349	
	94-4	5-349	
	94-5	1-349	
	94-5	2-349	
	94-5	3-349	
22-61878	94-1	5-132	
	94-4	5-132	
22-61879	94-1	5-133	
22-61880	94-1	3-134	
	94-1	4-134	
	94-1	5-134	
22-61881	94-1	5-135	
22-61882	94-1	5-121	
	94-5	1-121	
	94-5	3-121	
	94-6	1-121	
22-61883	94-1	5-122	
	94-5	1-122	
	94-5	3-122	
	94-6	1-122	
22-61884	94-1	5-123	
	94-5	1-123	
	94-5	3-123	
	94-6	1-123	
22-61885	94-1	5-124	
	94-5	1-124	
	94-5	3-124	
	94-6	1-124	
22-61887	94-4	4-409	
	94-5	1-409	
	94-5	3-409	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61887-1	94-4	4-410	
	94-4	6-410	
	94-5	3-410	
22-61889	94-1	4-81	
	94-1	5-81	
	94-5	1-81	
	94-5	4-81	
22-61892	94-1	5-126	
	94-2	1-126	
	94-5	1-126	
22-61893-1	94-5	1-571	
	94-5	5-571	
22-61894	94-4	3-400	
	94-4	4-400	
	94-4	6-400	
	94-5	1-400	
	94-5	3-400	
22-61895-1	94-5	1-502	
	94-5	5-502	
	94-6	1-502	
22-61896	94-5	1-546.6	
	94-5	2-546.6	
	94-5	3-546.6	
	94-6	1-546.6	
22-61897	94-4	2-382	
22-61896-3	94-5	1-546.6	
	94-5	2-546.6	
	94-5	3-546.6	
	94-6	1-546.6	
22-61898	94-5	4-565	
	94-6	1-565	
22-61899-1	94-2	1-231	
	94-3	5-231	
	94-5	1-231	
	94-5	2-231	
	94-5	3-231	
	94-5	4-231	
	94-6	1-231	
22-61900	94-1	6-214	
	94-5	3-214	
22-61901	94-1	6-215	
	94-5	1-215	
	94-5	2-215	
	94-5	3-215	
22-61902	94-5	1-527	
	94-5	5-527	
	94-6	1-527	
22-61904-1	94-4	2-379	
	94-4	3-379	
	94-5	1-379	
22-61904-5	94-4	2-379	
	94-4	3-379	
	94-5	1-379	
22-61906	94-4	2-380	
	94-4	3-380	
	94-5	1-380	
22-61906-1	94-4	2-380	
	94-4	3-380	
	94-5	1-380	
22-61907	94-1	2-26	
22-61908-1	94-4	2-392.1	
22-61909-1	94-4	2-383.1	
	94-4	3-383.1	
22-61910	94-5	1-528	
22-61910-1	94-5	1-528	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-61911	94-5	2-546.2	
	94-5	3-546.2	
22-61928	94-1	6-208	
22-61929	94-1	6-209	
22-61929-1	94-1	6-209	
22-61932-801	94-5	2-546.1	
	94-5	3-546.1	
22-61934	94-4	2-392.2	
	94-4	3-392.2	
22-61940	94-1	6-213	
22-61941	94-1	6-212	
22-61982	94-4	3-442.1	
	94-4	4-442.1	
	94-5	1-442.1	
	94-5	3-442.1	
22-61983	94-4	3-408.1	
	94-5	1-408.1	
	94-5	3-408.1	
22-62500	94-5	1-532	
	94-6	1-532	
	94-7	1-532	
	94-7	2-532	
	94-7	6-532	
22-62501	94-6	1-591	
	94-7	1-591	
	94-7	2-591	
	94-7	6-591	
22-62502	94-6	1-604	
	94-8	1-604	
22-62503	94-5	1-504	
	94-6	1-504	
	94-7	1-504	
	94-7	2-504	
	94-7	6-504	
22-62504	94-6	1-611.1	
	94-7	1-611.1	
	94-7	2-611.1	
	94-7	6-611.1	
22-62504-1	94-6	1-611.1	
	94-7	1-611.1	
	94-7	2-611.1	
	94-7	6-611.1	
22-62505	94-5	1-474	
	94-5	3-474	
	94-6	1-474	
	94-7	1-474	
	94-7	2-474	
	94-7	2-474	
22-62506	94-5	1-458	
	94-5	2-458	
	94-6	1-458	
	94-7	1-458	
	94-7	2-458	
	94-7	6-458	
22-62507-3	94-5	1-505	
	94-5	3-505	
	94-6	1-505	
	94-7	1-505	
	94-7	2-505	
	94-7	6-505	
22-62507-5	94-5	1-506	
22-62507-5	94-5	3-506	
	94-6	1-506	
	94-7	1-506	
	94-7	2-506	
	94-7	6-506	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-62508-3	94-5	1-460	
	94-5	2-460	
	94-5	3-460	
	94-6	1-460	
	94-7	1-460	
	94-7	2-460	
	94-7	6-460	
22-62508-5	94-5	1-461	
22-62508-5	94-6	1-461	
	94-7	1-461	
	94-7	2-461	
	94-7	6-461	
22-62509	94-8	1-649	
22-62510	94-5	3-556	
	94-6	1-556	
	94-7	1-556	
	94-7	2-556	
	94-7	6-556	
22-62511	94-5	3-557	
	94-6	1-557	
	94-7	1-557	
	94-7	2-557	
	94-7	6-557	
22-62512-1	94-7	3-621	
	94-7	4-621	
22-62513	94-5	1-603	
	94-6	1-603	
	94-7	1-603	
	94-7	2-603	
	94-7	6-603	
22-62513-803	94-5	1-603	
	94-6	1-603	
	94-7	1-603	
	94-7	2-603	
	94-7	6-603	
22-62515	94-4	3-405	
22-62515	94-5	1-405	
	94-5	2-405	
	94-5	3-405	
	94-6	1-405	
	94-7	1-405	
	94-7	2-405	
	94-7	6-405	
22-62516-1	94-5	1-468	
	94-5	2-468	
	94-5	3-468	
	94-6	1-468	
	94-7	1-468	
	94-7	2-468	
	94-7	6-468	
22-62517-1	94-5	1-457	
	94-5	3-457	
	94-6	1-457	
	94-7	1-457	
	94-7	2-457	
	94-7	6-457	
22-62517-3	94-5	1-457	
	94-5	3-457	
	94-6	1-457	
	94-7	1-457	
	94-7	2-457	
	94-7	6-457	
22-62518-1	94-5	1-465	
	94-5	3-465	
	94-6	1-465	
	94-7	1-465	
	94-7	2-465	
	94-7	6-465	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-62519-1	94-4	3-406	
22-62519-1	94-5	1-406	
	94-5	2-406	
	94-5	3-406	
	94-5	6-406	
	94-6	1-406	
	94-7	1-406	
	94-7	2-406	
	94-7	6-406	
22-62520-1	94-5	1-489	
22-62520-1	94-5	5-489	
	94-5	2-489	
	94-5	3-489	
	94-6	1-489	
	94-7	1-489	
22-62520-5	94-5	1-489	
	94-5	5-489	
	94-5	2-489	
	94-5	3-489	
	94-6	1-489	
	94-7	1-489	
22-62521-1	94-5	1-498	
	94-5	2-498	
	94-5	3-498	
	94-6	1-498	
	94-7	1-498	
22-62522	94-5	1-451	
	94-5	3-451	
	94-6	1-451	
	94-7	1-451	
22-62523	94-5	1-513	
	94-5	3-513	
	94-6	1-513	
	94-7	1-513	
22-62524	94-5	1-495	
	94-5	2-495	
	94-5	3-495	
	94-5	6-495	
	94-6	1-495	
	94-7	1-495	
	94-7	2-495	
	94-7	6-495	
22-62525	94-4	3-401	
	94-5	1-401	
	94-5	3-401	
	94-6	1-401	
	94-7	1-401	
	94-7	2-401	
	94-7	4-401	
	94-7	6-401	
22-62526	94-5	1-466	
	94-5	2-466	
	94-5	3-466	
	94-6	1-466	
	94-7	1-466	
	94-7	2-466	
	94-7	6-466	
22-62527-1	94-5	1-546.3	
	94-5	2-546.3	
	94-5	3-546.3	
	94-6	1-546.3	
	94-7	1-546.3	
	94-7	2-546.3	
	94-7	6-546.3	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-62527-3	94-5	2-546.3	
	94-5	3-546.3	
	94-6	1-546.3	
	94-7	1-546.3	
	94-7	2-546.3	
	94-7	6-546.3	
22-62528-1	94-5	1-467	
	94-5	2-467	
	94-5	3-467	
	94-6	1-467	
	94-7	1-467	
	94-7	2-467	
	94-7	6-467	
22-62528-3	94-5	1-467	
	94-5	2-467	
	94-5	3-467	
	94-6	1-467	
	94-7	1-467	
	94-7	2-467	
	94-7	6-467	
22-62529	94-5	1-507	
	94-5	2-507	
	94-5	3-507	
	94-5	6-507	
	94-6	1-507	
	94-7	1-507	
	94-7	2-507	
	94-7	6-507	
22-62530	94-5	1-469	
	94-5	2-469	
	94-5	3-469	
	94-5	6-469	
	94-6	1-469	
	94-7	1-469	
	94-7	2-469	
	94-7	6-469	
22-62530-1	94-5	1-469	
	94-5	2-469	
	94-5	3-469	
	94-5	6-469	
	94-6	1-469	
	94-7	1-469	
	94-7	2-469	
	94-7	6-469	
22-62531	94-8	1-657	
22-62532	94-5	1-582	
	94-5	6-582	
	94-5	7-582	
	94-6	1-582	
	94-7	1-582	
	94-7	2-582	
	94-7	6-582	
22-62533-1	94-5	1-462	
	94-5	2-462	
	94-5	3-462	
	94-6	1-462	
	94-7	1-462	
	94-7	2-462	
	94-7	6-462	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-62534	94-5	1-518	
	94-5	6-518	
	94-5	7-518	
	94-6	1-518	
	94-7	1-518	
	94-7	2-518	
	94-7	4-518	
	94-7	6-518	
22-62535-1	94-7	3-615	
	94-7	4-615	
22-62535-5	94-7	3-615	
	94-7	4-615	
22-62535-803	94-7	3-615	
	94-7	4-615	
22-62536-1	94-5	3-621.1	
	94-7	3-621.1	
22-62537-1	94-5	3-596	
	94-6	1-596	
	94-7	1-596	
22-62537-5	94-5	3-596	
	94-6	1-596	
	94-7	1-596	
22-62537-805	94-5	3-596	
	94-6	1-596	
	94-7	1-596	
22-62538-1	94-5	1-514	
	94-5	2-514	
	94-5	3-514	
	94-6	1-514	
22-62538-5	94-5	1-513	
	94-5	3-513	
	94-6	1-513	
	94-7	1-513	
22-62538-803	94-5	1-514	
	94-5	2-514	
	94-5	3-514	
	94-6	1-514	
22-62539	94-5	1-583	
	94-5	6-583	
	94-5	7-583	
	94-6	1-583	
	94-7	1-583	
	94-7	2-583	
	94-7	6-583	
22-62541	94-6	1-592	
	94-7	1-592	
	94-7	2-592	
	94-7	6-592	
22-62542	94-6	1-648	
	94-7	1-648	
	94-7	2-648	
	94-7	6-648	
22-62543	94-5	1-519	
	94-5	6-519	
	94-5	7-519	
	94-6	1-519	
	94-7	1-519	
	94-7	2-519	
	94-7	6-519	
22-62544	94-7	2-614	
	94-7	6-614	
22-62545	94-7	3-622	
22-62545-3	94-7	3-622	
22-62547	94-8	1-652	
22-62547-803	94-8	1-652	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-62548-1	94-5	1-464	
	94-5	2-464	
	94-5	3-464	
	94-6	1-464	
	94-7	1-464	
	94-7	2-464	
	94-7	6-464	
22-62550	94-6	1-598	
	94-7	1-598	
	94-7	2-598	
	94-7	6-598	
22-62551	94-6	1-597	
	94-7	1-597	
	94-7	2-597	
	94-7	6-597	
22-62552	94-8	1-653	
22-62552-1	94-8	1-653	
22-62553-1	94-2	1-235	
	94-6	1-235	
22-62553-805	94-2	1-235	
	94-6	1-235	
22-62554-1	94-2	1-230	
	94-5	3-230	
22-62556-1	94-7	3-630	
	94-7	4-630	
22-62557-1	94-6	1-632	
	94-7	3-632	
22-62558	94-5	1-490	
	94-5	2-490	
	94-5	3-490	
	94-6	1-490	
	94-7	1-490	
	94-7	2-490	
	94-7	6-490	
22-62559	94-5	1-511	
	94-6	1-511	
	94-7	1-511	
	94-7	2-511	
	94-8	1-511	
22-62560	94-5	2-542	
	94-5	3-542	
22-62561	94-8	1-650	
22-62562	94-5	1-512	
	94-5	2-512	
	94-6	1-512	
	94-7	1-512	
	94-7	2-512	
22-62563-1	94-7	1-610	
	94-7	2-610	
	94-7	6-610	
	94-8	1-610	
22-62564-1	94-6	1-611	
	94-7	1-611	
	94-7	2-611	
	94-8	1-611	
22-62567-1	94-8	1-654	
22-62567-5	94-8	1-654	
22-62569-1	94-5	6-605	
	94-6	1-605	
	94-7	1-605	
	94-7	2-605	
	94-7	6-605	
22-62570-1	94-3	1-251	
	94-6	1-251	
	94-7	3-251	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-62571	94-5	1-503	
22-62572-1	94-5	3-615.2	
	94-7	3-615.2	
	94-7	4-615.2	
22-62573-1	94-7	3-625	
22-62573-5	94-7	3-625	
22-62576	94-5	3-616.1	
	94-7	3-616.1	
	94-7	4-616.1	
22-62577	94-5	1-533	
22-62577	94-5	3-533	
	94-6	1-533	
22-62579	94-5	3-561	
	94-6	1-561	
22-62580	94-5	1-517	
	94-5	2-517	
	94-5	3-517	
	94-6	1-517	
	94-7	1-517	
	94-7	2-517	
	94-7	6-517	
22-62581	94-5	1-499	
	94-5	2-499	
	94-5	3-499	
	94-6	1-499	
	94-7	1-499	
	94-7	6-499	
22-62582-1	94-7	3-616	
	94-7	4-616	
22-62583-1	94-7	3-617	
	94-7	4-617	
22-62583-3	94-7	3-617	
	94-7	4-617	
22-62584-1	94-7	3-623	
	94-7	4-623	
22-62587-1	94-7	3-618	
	94-7	4-618	
22-62588-1	94-5	1-626	
	94-7	3-626	
22-62589-1	94-7	3-633	
22-62591	94-5	1-655	
	94-8	1-655	
22-62592-1	94-7	3-627	
22-62592-5	94-7	3-627	
22-62593	94-7	3-637	
22-62594	94-7	3-627.1	
	94-7	4-627.1	
22-62595-1	94-5	1-472	
	94-5	2-472	
22-62595-5	94-5	1-472	
	94-5	2-472	
22-62595-803	94-5	1-472	
	94-5	2-472	
22-62596-1	94-5	3-551	
	94-6	1-551	
	94-7	1-551	
22-62596-3	94-5	3-551	
	94-6	1-551	
	94-7	1-551	
22-62596-5	94-5	3-551	
	94-6	1-551	
	94-7	1-551	
22-62596-803	94-5	3-551	
	94-6	1-551	
	94-7	1-551	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-62597-1	94-5	1-478	
	94-5	3-478	
	94-6	1-478	
	94-7	1-478	
22-62600	94-5	1-491	
	94-5	2-491	
	94-5	3-491	
	94-6	1-491	
	94-7	1-491	
	94-7	2-491	
	94-7	6-491	
22-62601	94-5	1-484	
	94-5	2-484	
	94-5	3-484	
	94-6	1-484	
	94-7	1-484	
	94-7	2-484	
	94-7	6-484	
22-62602	94-5	1-492	
	94-5	2-492	
	94-5	3-492	
	94-6	1-492	
	94-7	1-492	
	94-7	2-492	
	94-7	6-492	
22-62603	94-5	1-488	
	94-5	2-488	
	94-5	3-488	
	94-6	1-488	
	94-7	1-488	
	94-7	2-488	
	94-7	6-488	
22-62604	94-5	1-493	
	94-5	2-493	
	94-5	3-493	
	94-6	1-493	
	94-7	1-493	
	94-7	2-493	
	94-7	6-493	
22-62605	94-5	1-485	
	94-5	2-485	
	94-5	3-485	
	94-6	1-485	
	94-7	1-485	
	94-7	2-485	
	94-7	6-485	
22-62606	94-5	1-494	
	94-5	2-494	
	94-5	3-494	
	94-6	1-494	
	94-7	2-494	
	94-7	6-494	
22-62607	94-5	1-483	
	94-5	2-483	
	94-5	3-483	
	94-6	1-483	
	94-7	1-483	
	94-7	2-483	
	94-7	6-483	
22-62608	94-5	3-615.1	
	94-6	1-615.1	
	94-7	1-615.1	
	94-7	2-615.1	
	94-7	3-615.1	
	94-7	4-615.1	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-62609	94-5	3-637.1	
	94-7	3-637.1	
22-62610	94-5	3-640.1	
	94-7	1-640.1	
	94-7	2-640.1	
	94-7	4-640.1	
22-62611	94-8	1-656	
22-62612	94-6	1-590	
	94-7	1-590	
	94-7	2-590	
	94-8	1-590	
22-62613	94-5	2-543	
22-62614-1	94-3	5-329	
	94-5	3-329	
	94-8	1-329	
22-62616	94-5	1-475	
	94-6	1-475	
	94-7	1-475	
	94-7	2-475	
	94-7	6-475	
22-62617	94-5	1-476	
	94-5	2-476	
	94-5	3-476	
	94-6	1-476	
	94-7	1-476	
	94-7	2-476	
	94-7	6-476	
22-62617-5	94-5	1-476	
	94-5	2-476	
	94-5	3-476	
	94-6	1-476	
	94-7	1-476	
	94-7	2-476	
	94-7	6-476	
22-62618-1	94-5	1-477	
	94-5	2-477	
	94-5	3-477	
	94-6	1-477	
	94-7	1-477	
	94-7	2-477	
22-62618-5	94-5	1-477	
	94-5	2-477	
	94-5	3-477	
	94-6	1-477	
	94-7	1-477	
	94-7	2-477	
22-62619	94-5	2-541	
	94-6	1-541	
	94-7	1-541	
	94-7	2-541	
	94-8	1-541	
22-62620-803	94-1	5-127	
	94-2	1-127	
22-62621	94-2	1-217	
	94-6	1-217	
	94-7	1-217	
	94-7	2-217	
	94-7	6-217	
22-62622-1	94-3	4-318	
	94-3	5-318	
	94-8	1-318	
22-62623	94-2	1-247.1	
	94-5	3-247.1	
	94-6	1-247.1	
	94-7	1-247.1	
	94-7	2-247.1	
	94-7	6-247.1	
22-62624	94-6	1-594	
	94-7	1-594	
	94-7	6-594	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-62625	94-5	2-545	
	94-5	3-545	
	94-6	1-545	
	94-7	1-545	
	94-7	2-545	
	94-7	6-545	
22-62626	94-6	1-593	
	94-7	1-593	
	94-7	2-593	
	94-7	6-593	
22-62627-1	94-5	3-608	
	94-6	1-608	
	94-7	1-608	
	94-7	2-608	
	94-7	6-608	
22-62627-805	94-5	3-608	
	94-6	1-608	
	94-7	1-608	
	94-7	2-608	
	94-7	6-608	
22-62628-1	94-7	3-628	
22-62629-1	94-7	3-619	
	94-7	4-619	
22-62630	94-8	1-658	
22-62632	94-7	3-636	
22-62633	94-7	3-634	
	94-7	4-634	
22-62634-5	94-7	3-620	
	94-7	4-620	
22-62634-801	94-7	3-620	
	94-7	4-620	
22-62635	94-6	1-599	
	94-7	2-599	
22-62635-1	94-6	1-600	
22-62635-1	94-7	2-600	
22-62635-3	94-6	1-601	
22-62635-3	94-7	2-601	
	94-7	4-601	
22-62635-5	94-6	1-602	
22-62635-5	94-7	1-602	
	94-7	2-602	
	94-7	6-602	
22-63500	94-2	1-223	
	94-3	1-223	
22-63503-1	94-3	5-324	
	94-8	1-324	
22-63503-807	94-3	1-324	
	94-3	5-324	
22-63504-801	94-1	5-128	
	94-2	1-128	
	94-6	1-128	
22-63505-801	94-1	5-129	
	94-2	1-129	
	94-3	1-129	
22-63508-801	94-1	5-130	
	94-2	1-130	
	94-6	1-130	
	94-7	1-130	
22-63509	94-3	5-326	
22-63510	94-3	4-319	
	94-3	5-319	
22-63511	94-3	4-320	
	94-3	5-320	
22-63512	94-2	1-229	
22-63513	94-3	5-327	
22-63514-801	94-1	5-131	
	94-2	1-131	
	94-3	1-131	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-63516	94-3	5-321	
	94-6	1-321	
22-63518	94-2	1-236	
22-63519	94-3	1-252	
22-63520	94-3	2-282	
22-63521	94-3	1-249	
22-63522	94-3	1-250	
	94-6	1-250	
22-63523	94-2	1-248	
	94-6	1-248	
22-63524	94-3	1-273	
	94-3	2-273	
22-63525	94-3	1-273	
	94-3	2-273	
22-63526	94-3	2-285	
	94-3	3-285	
22-63527	94-3	2-285	
	94-3	3-285	
22-63528	94-3	3-317	
22-63530	94-3	2-282	
22-63529	94-3	3-317	
22-63531	94-2	1-221	
22-63532	94-2	1-240	
	94-3	1-240	
22-63534	94-3	1-267	
22-63535	94-3	1-269	
22-63536	94-3	1-268	
22-63537	94-3	1-269	
22-63538	94-3	1-271	
	94-3	2-271	
22-63539	94-3	1-271	
	94-3	2-271	
22-63540	94-3	2-283	
	94-3	3-283	
22-63541	94-3	2-283	
22-63542	94-3	3-301.1	
22-63543	94-3	3-301.1	
22-63544	94-2	1-241	
22-63545	94-3	5-331	
22-63549	94-3	3-300	
22-63551	94-3	4-326.1	
	94-3	5-326.1	
22-63553	94-2	1-216	
	94-3	1-216	
	94-3	2-216	
22-63554	94-2	1-224	
	94-3	1-224	
	94-3	2-224	
	94-3	3-224	
22-63555	94-3	3-300.1	
22-63556	94-2	1-234	
	94-3	1-234	
	94-6	1-234	
22-63557	94-2	1-245	
22-63558	94-3	1-253	
	94-3	2-253	
22-63559	94-3	1-256	
22-63560.1	94-2	1-219	
22-63561-1	94-3	5-328	
22-63562-1	94-1	5-218	
	94-2	1-218	
22-63563-1	94-3	5-322	
22-63564	94-2	1-220	
	94-5	4-220	
22-63565	94-3	5-323	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-63566	94-2	1-244	
	94-3	1-244	
22-63569	94-1	5-222	
	94-2	1-222	
	94-5	1-222	
	94-5	2-222	
	94-5	3-222	
	94-6	1-222	
22-63571	94-3	5-334	
22-63572	94-3	1-257	
22-63573	94-3	1-253	
22-63574	94-3	1-256	
22-63575	94-3	1-257	
22-63576	94-3	1-258	
22-63577	94-3	1-253.1	
22-63578	94-3	1-253.1	
22-63579	94-3	1-258	
	94-3	2-258	
22-63580	94-3	2-284	
22-63581	94-1	5-237	
	94-2	1-237	
	94-6	1-237	
	94-7	2-237	
22-63582	94-3	5-332	
22-63583	94-3	3-300.2	
22-63584	94-3	3-300	
22-63585	94-3	5-333	
22-63586	94-2	1-242	
	94-6	1-242	
22-63587	94-3	1-261	
	94-3	2-261	
	94-3	3-261	
22-63588	94-3	1-261	
	94-3	2-261	
	94-3	3-261	
22-63589	94-3	2-284	
	94-3	3-284	
22-63590	94-3	1-254	
22-63590-1	94-3	1-255	
22-63590-3	94-3	1-259	
22-63591	94-3	1-254	
22-63591-1	94-3	1-255	
22-63591-3	94-3	1-259	
22-63592	94-3	1-262	
22-63592-1	94-3	1-263	
22-63592-3	94-3	1-266	
22-63592-5	94-3	2-275	
22-63592-801	94-3	2-277	
22-63592-803	94-3	1-278	
22-63592-803	94-3	2-278	
22-63593	94-3	1-262	
22-63593-1	94-3	1-263	
22-63593-3	94-3	1-266	
	94-3	2-266	
22-63593-5	94-3	1-275	
	94-3	2-275	
22-63593-801	94-3	2-277	
22-63594	94-3	2-288	
	94-3	3-288	
22-63594-1	94-3	2-290	
22-63594-3	94-3	2-292	
22-63594-5	94-3	3-294	
22-63594-801	94-3	3-296	
22-63594-803	94-3	3-298	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-63595	94-3	2-286	
	94-3	3-286	
22-63595-1	94-3	2-288	
22-63595-3	94-3	2-290	
22-63595-5	94-3	2-292	
22-63595-801	94-3	3-294	
22-63595-803	94-3	3-298	
22-63596	94-3	3-309	
22-63596-1	94-3	3-310	
22-63596-3	94-3	3-311	
22-63596-5	94-3	3-312	
22-63596-801	94-3	3-313	
22-63596-803	94-3	3-313.1	
22-63597	94-3	3-308	
22-63597-1	94-3	3-309	
22-63597-3	94-3	3-310	
22-63597-5	94-3	3-311	
22-63597-801	94-3	3-312	
22-63597-803	94-3	3-313	
22-63598	94-3	3-316	
	94-3	5-316	
22-63599	94-3	3-314	
	94-3	5-314	
22-63599-1	94-3	3-315	
22-63600	94-3	1-260	
22-63600-1	94-3	1-264	
22-63600-3	94-3	1-265	
22-63600-5	94-3	2-274	
22-63600-801	94-3	2-276	
22-63601	94-3	1-260	
22-63601-1	94-3	1-264	
22-63601-3	94-3	1-265	
	94-3	2-265	
22-63601-5	94-3	2-274	
22-63601-801	94-3	2-276	
22-63602	94-3	2-287	
	94-3	3-287	
22-63602-1	94-3	2-289	
22-63602-3	94-3	2-291	
22-63602-5	94-3	2-293	
22-63602-801	94-3	3-295	
22-63602-803	94-3	3-297	
22-63603	94-3	2-287	
	94-3	3-287	
22-63603-1	94-3	2-289	
22-63603-3	94-3	2-291	
22-63603-5	94-3	2-293	
22-63603-801	94-3	3-295	
22-63603-803	94-3	3-297	
22-63604	94-3	3-301	
22-63604-1	94-3	3-302.1	
22-63604-3	94-3	3-303	
22-63604-5	94-3	3-304	
22-63604-801	94-3	3-305	
22-63604-803	94-3	3-306	
22-63604-805	94-3	3-307	
22-63605	94-3	3-301	
22-63605-1	94-3	3-302	
22-63605-3	94-3	3-303	
22-63605-5	94-3	3-304	
22-63605-801	94-3	3-305	
22-63605-803	94-3	3-306	
22-63605-805	94-3	3-307	
22-63607	94-2	1-255	
	94-3	1-225	
	94-3	3-225	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-63607-1	94-2	1-226	
	94-3	1-226	
22-63607-3	94-2	1-227	
	94-3	1-227	
	94-3	2-227	
22-63607-5	94-2	1-228	
	94-3	2-228	
	94-3	3-228	
22-63609	94-2	1-238	
22-63611	94-3	5-329.1	
22-63612	94-7	2-612	
22-63613	94-7	2-612.1	
22-63614	94-7	2-613	
22-63615	94-7	6-646	
22-63616	94-7	6-647	
	94-8	1-647	
22-63617	94-3	2-281	
	94-7	2-281	
22-63621	94-2	1-246	
22-63622	94-3	3-300.3	
	94-3	5-300.3	
22-64302-1	94-11	1-781	
	94-11	3-781	
22-64302-15	94-11	1-781	
22-64302-17	94-11	1-782	
22-64302-19	94-11	4-807	
22-64302-23	94-11	1-780	
22-64302-25	94-11	1-780	
22-64302-27	94-11	1-781	
22-64302-29	94-11	4-805	
22-64302-3	94-11	4-805	
	94-11	5-805	
22-64302-31	94-11	1-782	
22-64302-33	94-11	4-806	
22-64302-35	94-11	4-807	
22-64302-37	94-11	1-781	
22-64302-39	94-11	1-782	
22-64302-41	94-11	4-807	
22-64302-43	94-11	1-780	
22-64302-45	94-11	1-780	
22-64302-5	94-11	1-782	
	94-11	3-782	
22-64302-7	94-11	4-806	
	94-11	5-806	
22-64302-9	94-11	4-807	
	94-11	5-807	
22-64502	94-10	2-746	
	94-11	5-746	
22-64503	94-10	2-724	
	94-11	5-724	
22-64504	94-10	5-766	
22-64506	94-10	5-768	
	94-11	3-768	
22-64507	94-10	5-769	
22-64507-811	94-10	5-769	
22-64508	94-10	4-765.1	
22-64509	94-11	2-783	
22-64511	94-10	1-718	
	94-11	3-718	
22-64512	94-10	2-748	
22-64513	94-10	1-719	
	94-11	3-719	
22-64514	94-10	2-749	
22-64515	94-10	2-795	
	94-11	3-795	
	94-11	5-795	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-64516	94-11	3-795	
22-64516	94-11	5-795.1	
22-64517	94-11	3-796	
	94-11	5-796	
22-64518	94-11	3-796	
22-64518	94-11	5-796.1	
22-64519	94-11	2-789	
22-64520-1	94-10	2-730	
22-64521-1	94-10	2-722	
22-64522-1	94-10	2-731	
22-64523-1	94-10	2-732	
22-64524-1	94-10	2-733	
22-64525-1	94-10	2-734	
22-64526-1	94-10	1-699	
	94-11	3-699	
	94-11	5-699	
22-64527-1	94-10	1-697	
	94-11	3-697	
	94-11	5-697	
22-64528-1	94-10	1-698	
	94-11	3-698	
22-64529-1	94-10	1-700	
	94-11	3-700	
22-64530-1	94-10	1-701	
	94-11	3-701	
	94-11	5-701	
	94-11	7-701	
22-64531-1	94-10	1-681	
	94-11	3-681	
22-64532	94-10	1-682	
	94-11	3-682	
	94-11	5-682	
22-64533	94-10	1-702	
	94-11	3-702	
	94-11	5-702	
22-64534-1	94-10	1-706	
	94-11	3-706	
	94-11	5-706	
22-64535	94-10	1-720	
	94-10	2-720	
	94-11	5-720	
22-64536	94-7	3-623.1	
	94-10	2-623.1	
	94-11	5-623.1	
22-64357-1	94-10	2-735	
	94-11	5-735	
22-64538-1	94-10	2-758	
	94-11	5-758	
22-64539	94-10	2-736	
	94-11	5-736	
22-64540-1	94-10	2-737	
	94-11	5-737	
22-64541	94-10	1-686	
	94-11	3-686	
	94-11	5-686	
	94-11	7-686	
22-64542	94-10	2-728	
22-64543	94-10	2-750	
22-64544	94-10	1-713	
	94-10	2-713	
	94-11	3-713	
	94-11	5-713	
22-64545	94-7	3-790	
	94-11	2-790	
22-64546	94-11	2-790.1	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-64547	94-10	1-715	
	94-11	3-715	
	94-11	5-715	
22-64548	94-10	2-738	
22-64549	94-10	1-687	
	94-11	3-687	
	94-11	5-687	
22-64550	94-10	1-703	
	94-11	3-703	
	94-11	5-703	
22-64551-1	94-10	1-705	
	94-11	3-705	
22-64552	94-10	2-751	
22-64553	94-10	1-799	
	94-11	3-799	
	94-11	5-799	
22-64554	94-10	2-752	
	94-11	5-752	
22-64555	94-10	2-740	
	94-10	4-740	
22-64564	94-10	2-741	
22-64569	94-10	1-714	
	94-11	3-714	
	94-11	5-714	
22-64570	94-10	2-753	
22-64571	94-10	1-717	
	94-11	3-717	
22-64573-1	94-10	1-707	
	94-11	3-707	
	94-11	5-707	
	94-11	7-707	
22-64574	94-10	2-725	
	94-11	5-725	
22-64575	94-10	1-688	
	94-11	3-688	
	94-11	5-688	
22-64576	94-10	2-726	
	94-11	5-726	
22-64577	94-10	1-689	
	94-11	3-689	
	94-11	5-689	
22-64578	94-10	1-685	
	94-10	2-685	
	94-11	5-685	
22-64579	94-10	1-690	
	94-11	3-690	
	94-11	5-690	
22-64580	94-10	2-729	
	94-11	5-729	
22-64581	94-10	1-683	
	94-11	3-683	
	94-11	5-683	
22-64582-1	94-10	2-721	
22-64583-1	94-10	1-703.1	
22-64585-1	94-11	2-792	
22-64589	94-11	2-794	
22-64592	94-10	2-742	
22-64593	94-10	2-743	
22-64594	94-10	4-764	
22-64595	94-10	3-759	
	94-10	4-759	
22-64596-1	94-10	2-739	
22-64597-1	94-10	1-708	
	94-10	2-708	
22-64598	94-10	2-744	
22-64599	94-10	1-709	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-64599-1	94-10	1-709	
22-64600	94-10	2-723	
22-64601	94-10	1-691	
	94-10	2-691	
	94-10	5-691	
	94-11	3-691	
22-64602	94-10	2-757	
22-64603	94-10	1-710	
	94-10	2-710	
22-64606	94-10	2-756	
22-64606-1	94-10	2-756	
	94-10	4-756	
22-64608	94-11	2-783.1	
22-64611	94-10	3-761	
	94-10	4-761	
22-64612	94-10	2-745	
22-64613	94-10	3-762	
	94-10	4-762	
22-64614	94-10	4-763	
22-64615	94-10	1-696	
22-64615	94-10	2-721.1	
22-64616	94-10	3-760	
22-64616	94-10	4-765	
22-64617	94-11	6-819	
22-64617-1	94-11	6-820	
22-64617-3	94-11	6-823	
22-64617-5	94-11	6-818	
22-64617-801	94-11	6-821	
22-64617-803	94-11	6-822	
22-64618	94-11	6-818	
22-64618-1	94-11	6-821	
22-64618-3	94-11	6-822	
22-64618-5	94-11	6-820	
22-64618-801	94-11	6-823	
22-64618-803	94-11	6-819	
22-64619	94-11	2-784	
22-64620	94-11	2-785	
22-64621	94-10	1-694	
	94-10	2-694	
	94-11	5-694	
22-64621-3	94-10	1-695	
22-64621-3	94-11	3-695	
22-64622-1	94-10	1-711	
	94-10	2-711	
22-64622-3	94-10	1-712	
22-64623-1	94-11	4-800	
22-64623-3	94-11	4-809	
22-64623-5	94-11	4-811	
22-64623-801	94-11	4-803	
22-64623-803	94-11	4-810	
22-64623-805	94-11	4-812	
22-64624-1	94-11	4-800	
22-64624-3	94-11	4-809	
22-64624-5	94-11	4-811	
22-64624-801	94-11	4-803	
22-64624-803	94-11	4-810	
22-64624-805	94-11	4-812	
22-64625	94-11	1-777	
22-64625-1	94-11	1-775	
22-64625-3	94-11	1-774	
22-64625-5	94-11	1-772	
22-64625-801	94-11	1-776	
22-64625-803	94-11	1-773	
22-64625-805	94-11	1-771	

PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-64626	94-11	1-777	
22-64626-1	94-11	1-775	
22-64626-3	94-11	1-774	
22-64626-5	94-11	1-772	
22-64626-801	94-11	1-776	
22-64626-803	94-11	1-773	
22-64626-805	94-11	1-771	
22-64627	94-11	1-779	
22-64627-1	94-11	1-778	
22-64628	94-11	1-779	
22-64628-1	94-11	1-778	
22-64629	94-7	3-692	
	94-10	1-692	
	94-11	3-692	
	94-11	5-692	
22-64630	94-10	2-754	
22-64631	94-10	1-716	
	94-11	3-716	
22-64633-1	94-7	3-624	
	94-7	4-624	
22-64634-1	94-7	3-629	
22-64634-5	94-7	3-629	
22-64634-801	94-7	3-629	
22-64635	94-10	1-684	
	94-11	3-684	
22-64636	94-10	2-755	
22-64637-1	94-11	3-798	
	94-11	5-798	
22-64638-1	94-11	3-797	
	94-11	5-797	
22-64639-1	94-11	3-797	
22-64639-1	94-11	5-797.1	
22-64640-1	94-11	3-798	
22-64640-1	94-11	5-798.1	
22-64641	94-10	5-770	
22-64641-1	94-10	5-770	
22-64642	94-11	5-816	
22-64643	94-11	5-816	
22-64644	94-11	5-815	
22-64644-801	94-11	5-815	
22-64645	94-11	5-815	
22-64646	94-11	5-817	
22-64646-801	94-11	5-817	
22-64647	94-11	5-817	
22-64647-801	94-11	5-817	
22-64648	94-11	4-804	
22-64648-1	94-11	4-808	
22-64649	94-11	4-801	
22-64649-1	94-11	4-802	
22-64650	94-11	4-801	
22-64650-1	94-11	4-802	
22-64651	94-11	4-804	
22-64651-1	94-11	4-808	
22-64900	94-12	1-829	
22-64901	94-12	2-844	
22-64902	94-12	3-861	
22-64903	94-12	4-879	
22-64904	94-12	1-836	
22-64904-1	94-12	1-836	
22-64904-803	94-12	1-836	
22-64905	94-12	2-852	
22-64905-1	94-12	2-852	
22-64905-803	94-12	2-852	
22-64906	94-12	3-869	


PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-64906-1	94-12	3-869	
22-64906-3	94-12	3-869	
22-64907	94-12	4-886	
22-64907-1	94-12	4-886	
22-64907-3	94-12	4-886	
22-64912	94-12	1-838	
22-64913	94-12	2-854	
22-64914	94-12	3-871	
22-64915	94-12	4-888	
22-64916	94-12	1-830	
22-64917	94-12	2-845	
22-64918	94-12	3-862	
22-64919	94-12	4-880	
22-64920	94-12	1-839	
22-64921	94-12	2-855	
22-64922	94-12	3-872	
22-64923	94-12	4-889	
22-64925	94-12	2-847	
22-64928	94-12	3-864	
22-64929	94-12	1-842	
22-64929-1	94-12	2-859	
22-64929-809	94-12	4-892	
22-64929-811	94-12	3-876	
22-64930	94-12	1-831	
22-64931	94-12	2-846	
22-64932	94-12	3-863	
22-64933	94-12	4-881	
22-64934	94-12	1-832	
22-64934-1	94-12	1-832	
22-64935	94-12	2-848	
22-64935-1	94-12	2-848	
22-64936	94-12	3-865	
22-64936-1	94-12	3-865	
22-64937	94-12	4-882	
22-64937-1	94-12	4-882	
22-64938-1	94-12	1-834	
	94-12	2-834	
	94-12	3-834	
	94-12	4-834	
22-64939	94-12	1-833	
22-64940	94-12	2-849	
22-64941	94-12	3-866	
22-64942	94-12	4-883	
22-64943	94-12	1-840	
22-64944	94-12	2-856	
22-64945	94-12	3-873	
22-64946	94-12	4-890	
22-64947	94-12	1-835	
22-64948	94-12	2-851	
22-64949	94-12	3-868	
22-64950	94-12	4-885	
22-64951	94-12	2-858	
	94-12	3-858	
22-64951-1	94-12	2-858	
	94-12	3-858	
22-64952	94-12	1-837	
22-64953	94-12	2-853	
22-64954	94-12	3-870	
22-64955	94-12	4-887	
22-64961-1	94-12	1-841	
22-64962-1	94-12	2-857	
22-64963-1	94-12	3-874	
22-64964-1	94-12	4-891	
22-64966	94-12	3-877	
	94-12	4-877	


PART NUMBER	CHAPTER AND SUBJECT	FIGURE AND INDEX NUMBER	QTY. PER ACFT.
22-64975	94-11	7-824	
22-64977-1	94-11	7-827	
22-64978-1	94-11	7-828	
22-64979	94-11	7-825	
22-74982	94-11	5-813	
	94-11	7-813	
22-64982-801	94-11	5-813	
	94-11	7-813	
22-64984	94-11	5-814	
	94-11	7-814	
22-64984-801	94-11	5-814	
	94-11	7-814	
22-64985	94-11	7-826	
22-64985-1	94-11	7-826	
22-64988	94-11	2-786	
22-64989	94-11	2-787	
22-64990	94-11	2-793	
22-64991	94-11	2-786.1	
22-64992	94-11	2-787	
22-64993	94-11	2-793	
22-65507	94-12	1-843	
	94-12	2-843	
	94-12	3-843	
	94-12	4-843	
22-65507-3	94-12	1-843	
	94-12	2-843	
	94-12	3-843	
	94-12	4-843	
22-65507-801	94-12	1-843	
	94-12	2-843	
	94-12	3-843	
	94-12	4-843	
22-66501	94-9	1-660	
	94-9	2-660	
22-66502	94-9	1-666	
22-66503	94-9	1-667	
22-66506	94-9	1-662	
22-66506	94-9	1-662.1	
22-66507	94-9	1-663	
22-66508	94-9	1-668	
22-66509	94-9	1-669	
22-66510	94-9	1-670	
22-66510	94-9	1-670.1	
22-66511	94-9	1-664	
22-66512	94-9	1-665	
22-66514	94-9	1-661.1	
22-66514-805	94-9	1-661.1	
22-66515	94-9	1-659.1	
22-66515-1	94-9	1-659.1	
22-66516	94-9	1-671	
22-66518-801	94-9	1-672	
22-66600	94-9	2-674	
22-66601	94-9	2-675	
22-66602	94-9	2-676	
22-66603	94-9	3-679.1	
22-66604	94-9	3-679	
22-66605	94-9	3-678	
22-66606	94-9	3-679.1	
22-66607	94-9	3-679	
22-66608	94-9	3-678	
22-66609	94-9	1-677	
	94-9	2-677	
22-66610	94-9	3-680	
22-66611	94-9	3-680	


SECTION V

Chapter 94
ELECTRICAL HARNESSES


FLIGHT COMPARTMENT ELECTRICAL HARNESSES

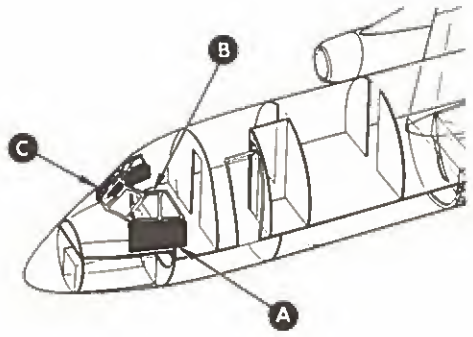

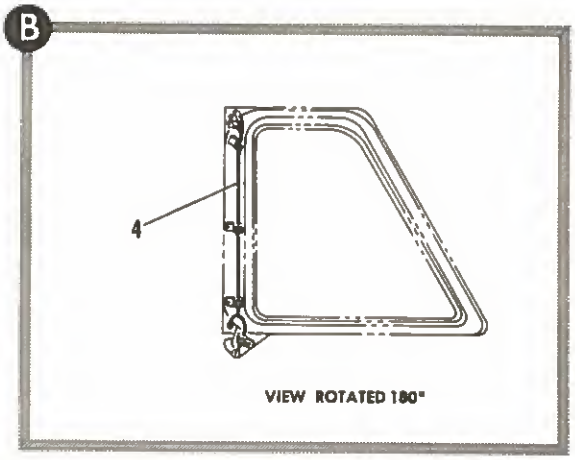

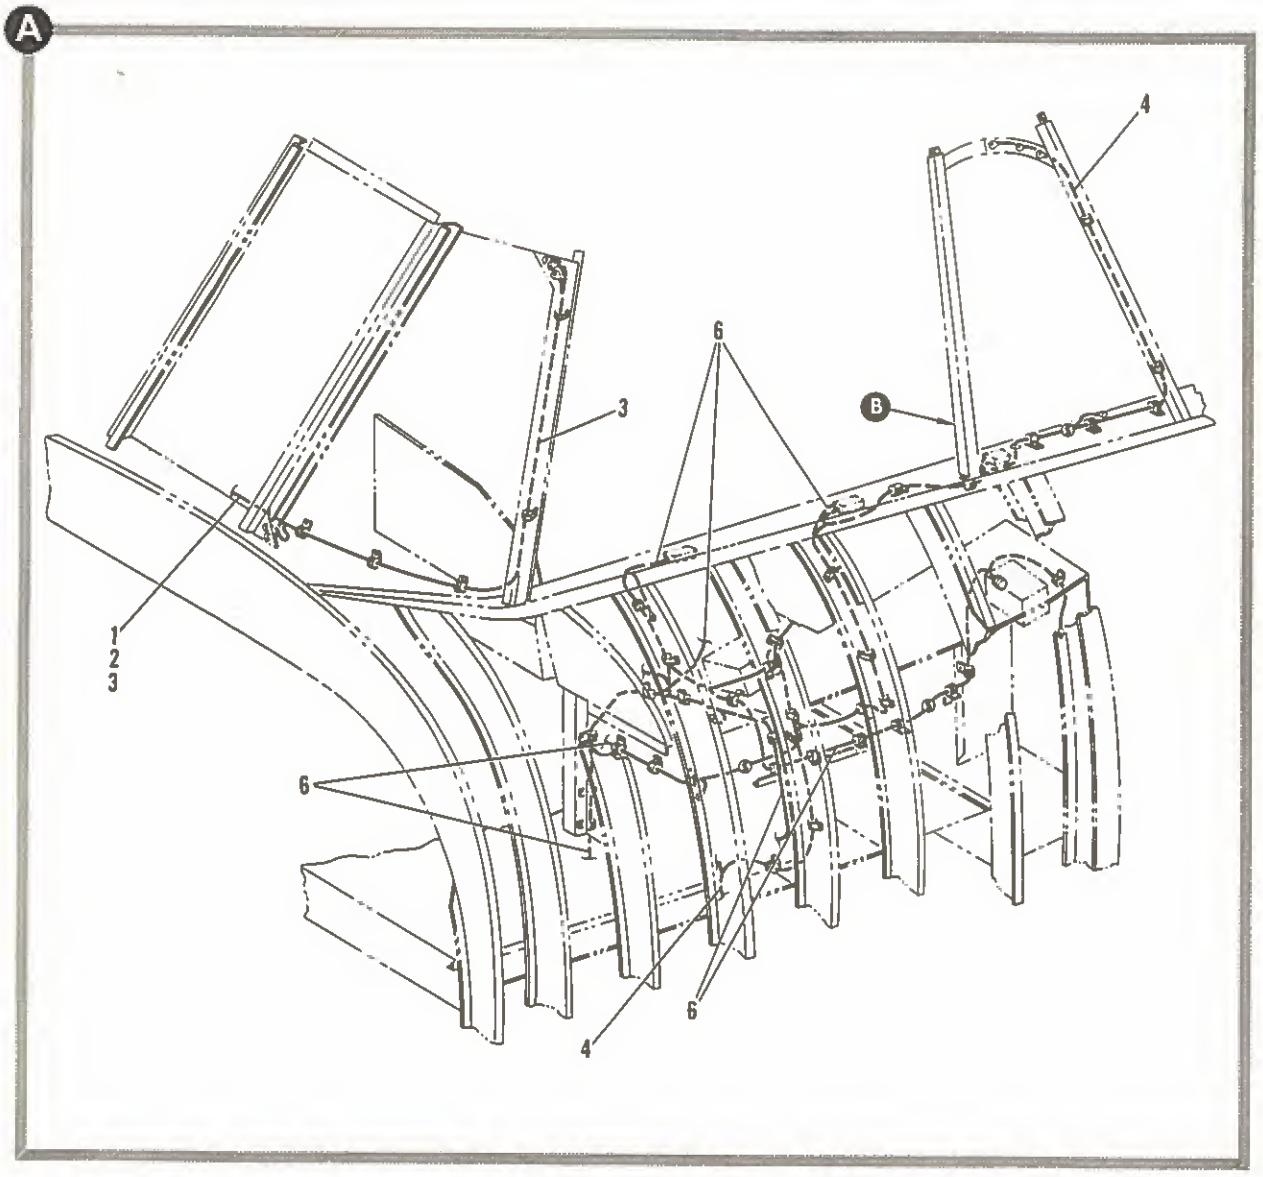

22.04.94.01 002 1

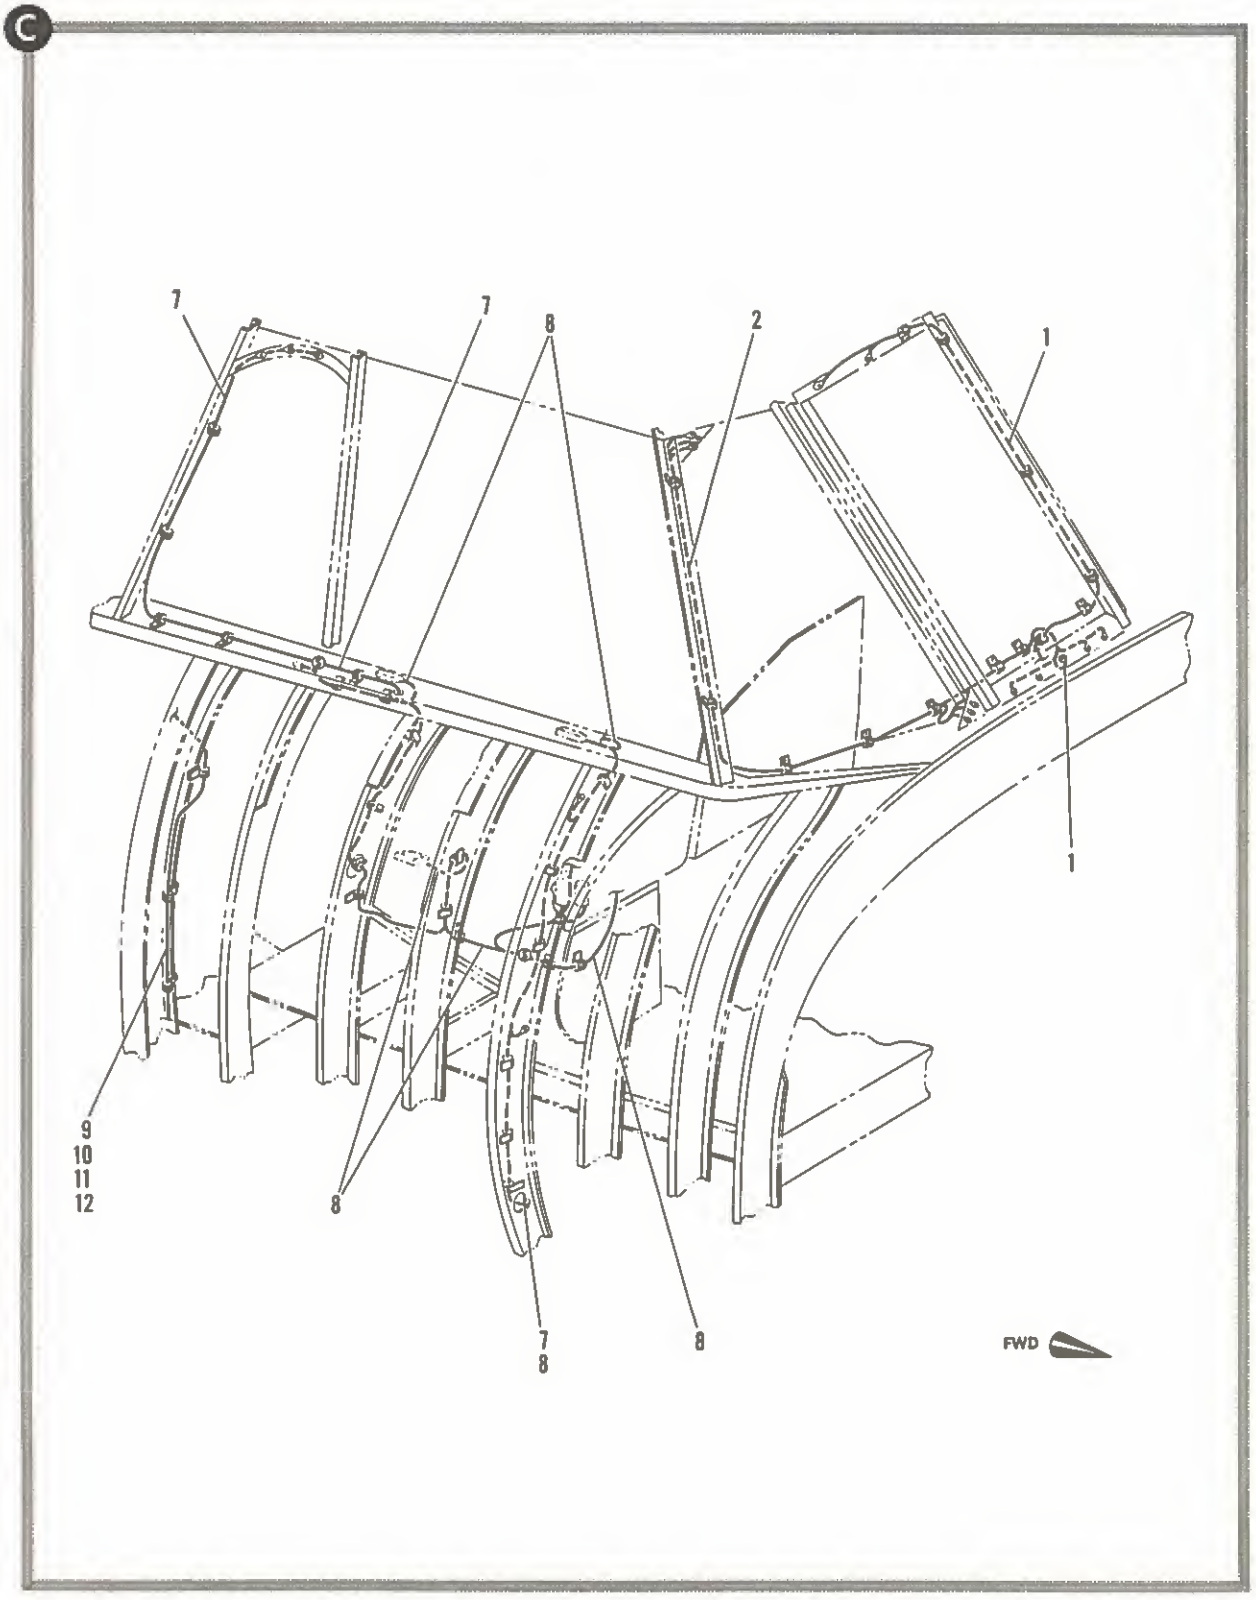

22.04.94.01.002-2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		PILOT AND COPILOT CONSOLE ELECTRICAL HARNESSES SEE 22-61001			
- 1	22-61863	. HARNESS ASSEMBLY, CENTER WINDSHIELD TO CONTROL BOX	1		1
- 2	22-61864	. HARNESS ASSEMBLY, COPILOT WINDSHIELD TO CONTROL BOX	1		1
- 3	22-61791	. HARNESS ASSEMBLY, PILOT WINDSHIELD TO CONTROL BOX	1		1
	PT06E18-11S	. . CONNECTOR, CONVAIR 92-40325-044 -V77820-	1		1
	MS3100R10SL4P	. . RECEPTACLE, PILOT WINDSHIELD	1		1
- 4	22-61865-1	. HARNESS ASSEMBLY, WINDSHIELD CONTROL RELAYS TO PERMANENT SPLICE	1	7	1
	22-61865-3	. HARNESS ASSEMBLY, WINDSHIELD CONTROL RELAYS TO PERMANENT SPLICE	8		1
	PT06E18-11S	. . CONNECTOR, CONVAIR 92-40325-044 -V77820-	1		2
- 6	22-61533	. HARNESS ASSEMBLY, CONSOLE LIGHT CONTROL TO FLOOD LIGHTS LH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		13
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		6

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 - 7	22-61868	. HARNESS ASSEMBLY, COPILOT SLIDING WINDOW TO PERMANENT SPLICE	1		1
- 8	22-61532	. HARNESS ASSEMBLY, CONSOLE LIGHT CONTROL TO FLOOD LIGHTS RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		21
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
- 9	22-61536	. HARNESS ASSEMBLY, FUEL TANK CONTROL PANEL 1 TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		17
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		7
	1-821-1	. . CONNECTOR, CONVAIR 92-47000-026 -V95712-	1		1
	165-61	. . CONNECTOR, CONVAIR 92-40058-009 -V02660-	1		1
- 10	22-61537	. HARNESS ASSEMBLY, FUEL CONTROL PANEL 3 TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		9
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		11
	165-61	. . CONNECTOR, CONVAIR 92-40058-009 -V02660-	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		1
- 11	22-61538	. HARNESS ASSEMBLY, FUEL CONTROL PANEL TANK 2 TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		7
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		15
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	165-61	. . CONNECTOR, CONVAIR 92-40058-009 -V02660-	1		1
	1-820-1	. . CONNECTOR, CONVAIR 92-47000-025 -V95712-	1		1
- 12	22-61555	. HARNESS ASSEMBLY, FUEL CONTROL PANEL TANK 4 TO PERMANENT SPLICES	1		1
	1-822-1	. . CONNECTOR, CONVAIR 92-47000-027 -V95712-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		18
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		8
	165-61	. . CONNECTOR, CONVAIR 92-40058-009 -V02660-	1		1



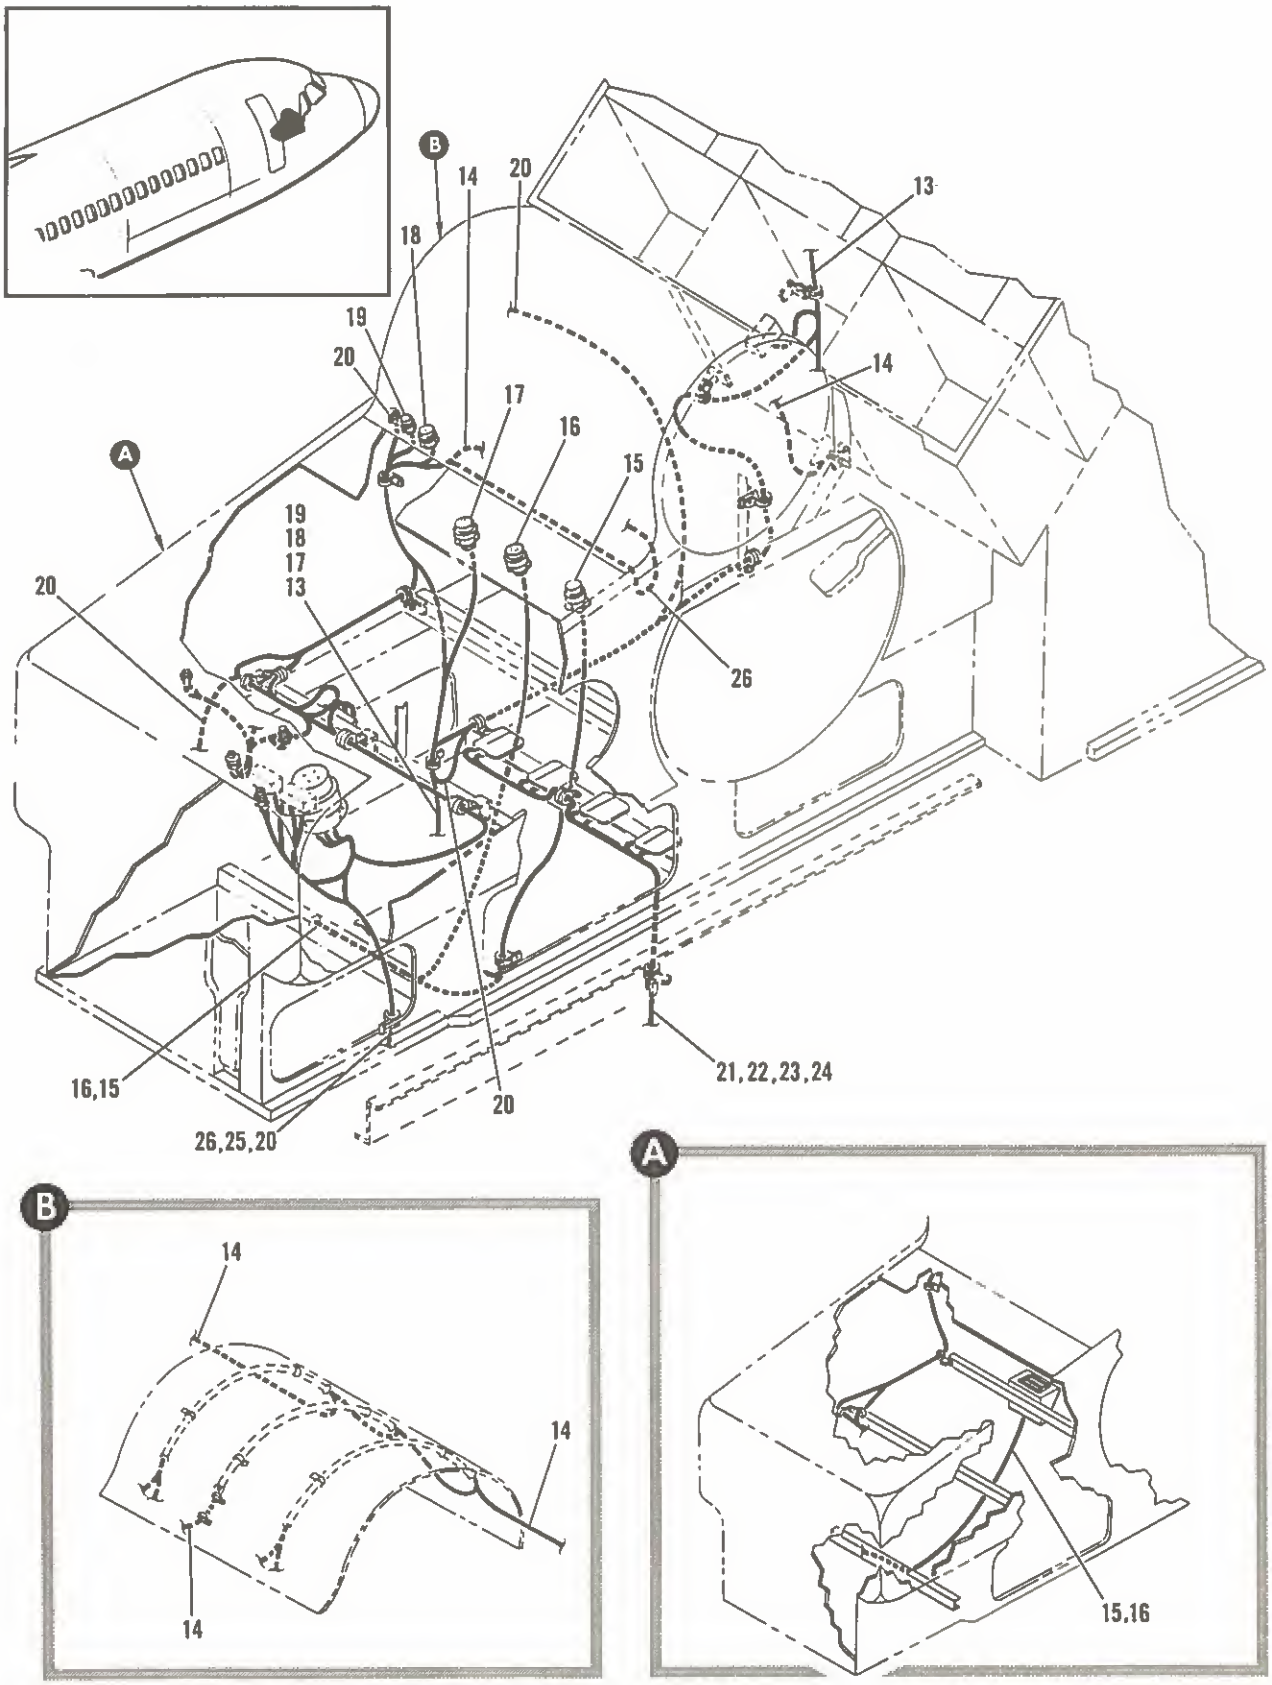

B
14
20
18
13
19
20
14
17
16
15
A
19
18
17
13
20
26
16,15
20
21,22,23,24
26,25,20
B
14
14
14
A
15,16
22.04.94 01.003

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		PILOT AND COPILOT PEDESTAL ELECTRICAL HARNESSES SEE 22-61001			
- 13	22-61678	. HARNESS ASSEMBLY, FWD PEDESTAL PANEL TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		8
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
- 14	22-61859	. HARNESS ASSEMBLY, PEDESTAL PANEL LIGHTS TO AFT PEDESTAL RADIO TERMINAL STRIP	1		1
- 15	22-61731-1	. HARNESS ASSEMBLY, AUTOPILOT CONTROLLER TO PERMANENT SPLICE	1		1
	DD50S	. . CONNECTOR, CONVAIR 92-50222-001 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
- 16	22-61732-1	. HARNESS ASSEMBLY, AUTOPILOT CONTROLLER TO AUTOPILOT RACK PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
- 20	22-61615-803	. HARNESS ASSEMBLY, AFT PEDESTAL CONTROL PANEL TO PERMANENT SPLICE	A		1
	22-61615-1	. HARNESS ASSEMBLY, AFT PEDESTAL CONTROL PANEL TO PERMANENT SPLICE	2	B	1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		15
- 21	22-61663	. HARNESS ASSEMBLY, POWER LEVER SWITCH ENGINE 1 TO PERMANENT SPLICE	1		1
- 22	22-61665	. HARNESS ASSEMBLY, POWER LEVER SWITCH ENGINE 2 TO PERMANENT SPLICE	1		1
- 23	22-61666	. HARNESS ASSEMBLY, POWER LEVER SWITCH ENGINE 3 TO PERMANENT SPLICE	1		1
- 24	22-61664	. HARNESS ASSEMBLY, POWER LEVER SWITCH ENGINE 4 TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		2
- 25	22-61571	. HARNESS ASSEMBLY, POWER LEVEL SWITCHES 3 AND 4 TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		8
- 26	22-61907	. HARNESS ASSEMBLY, PERMANENT SPLICE TO FLAP SELECTOR HANDLE LIMIT SWITCH STA 250	1		1
		A AIRPLANES 1, 9 AND ON			

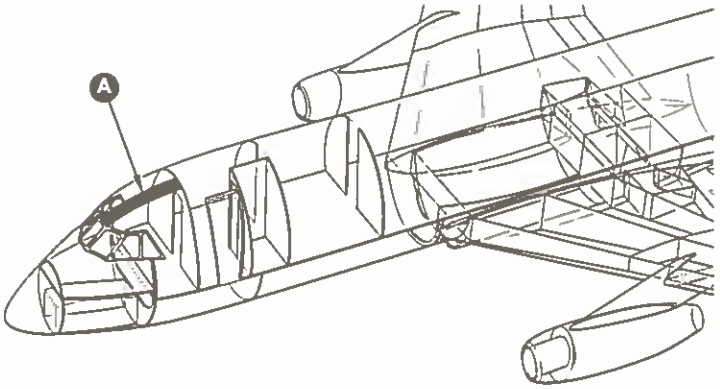

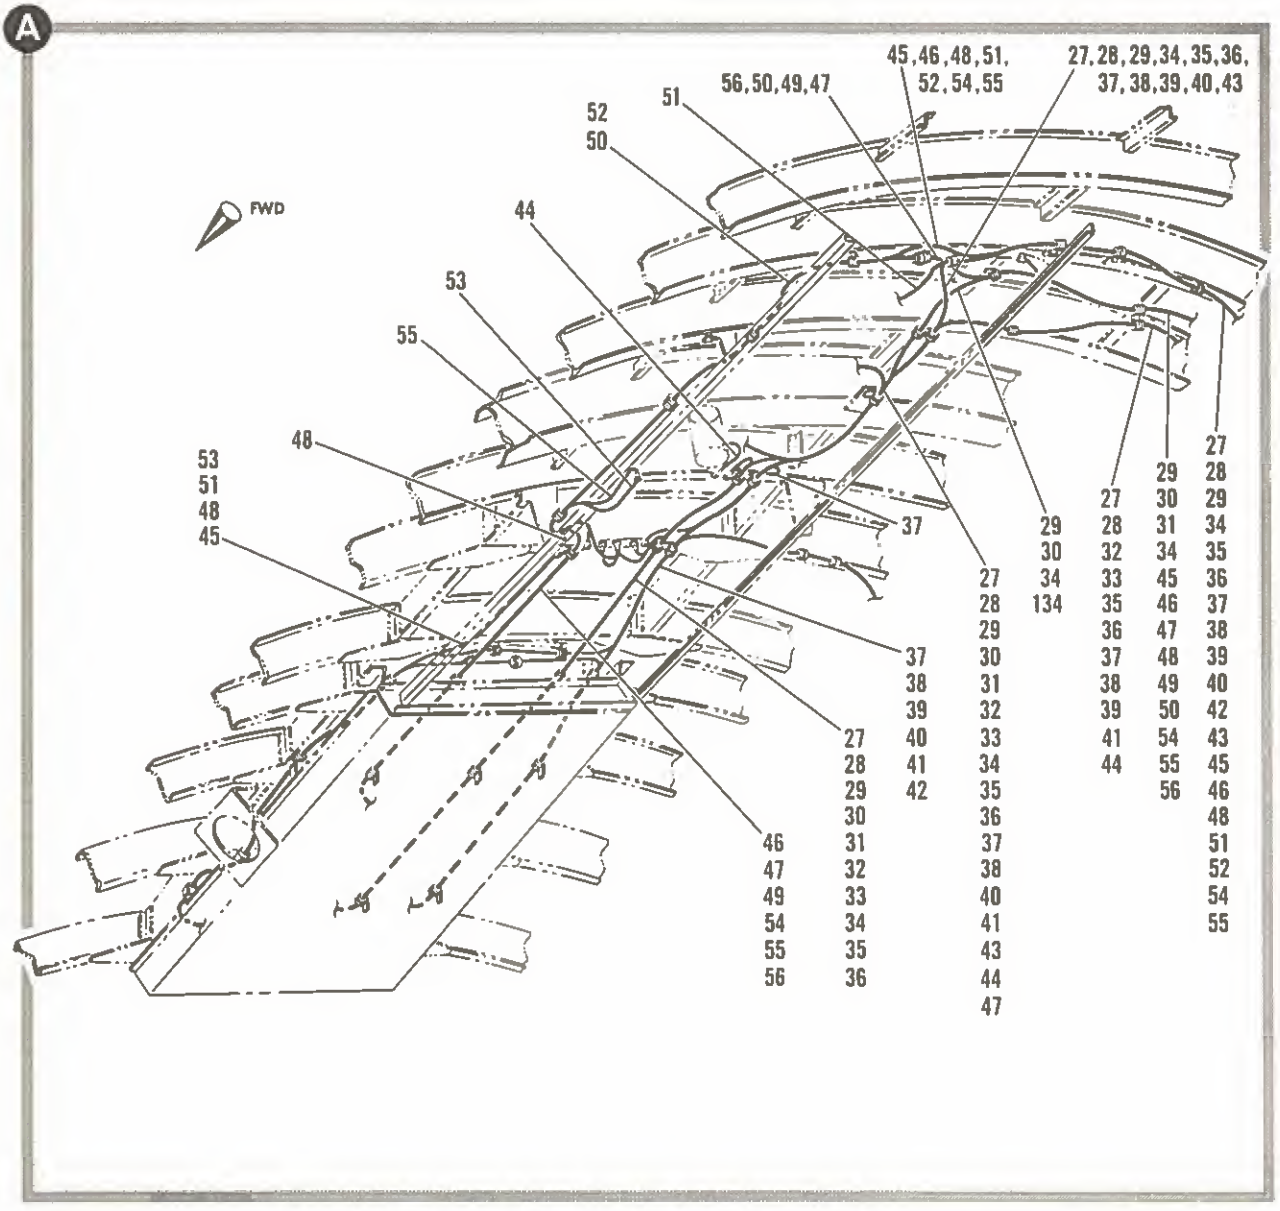


22.04.94.01.004

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		PILOT OVERHEAD ELECTRICAL HARNESSES SEE 22-61001			
- 27	22-61505-1	. HARNESS ASSEMBLY, STARTER AND EXTERIOR LIGHT PANEL TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		15
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		10
- 28	22-61515	. HARNESS ASSEMBLY, OVERHEAD ENGINE BLEED CONTROL PANEL TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		24
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
- 29	22-61535	. HARNESS ASSEMBLY, ENGINE 1 STARTER SWITCH TO STARTER RELAY	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		3
- 30	22-61679	. HARNESS ASSEMBLY, ENGINE 1 BLEED AIR VALVE SWITCH TO PERMANENT SPLICE	1		1
- 31	22-61680	. HARNESS ASSEMBLY, ENGINE 3 BLEED AIR VALVE SWITCH TO PERMANENT SPLICE	1		1
- 32	22-61681	. HARNESS ASSEMBLY, ENGINE 2 BLEED AIR VALVE SWITCH TO PERMANENT SPLICE	1		1
- 33	22-61682	. HARNESS ASSEMBLY, ENGINE 4 BLEED AIR VALVE SWITCH TO PERMANENT SPLICE	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
- 34	22-61686	. HARNESS ASSEMBLY, ENGINE 3 STARTER SWITCH TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		8
- 35	22-61687	. HARNESS ASSEMBLY, ENGINE 2 STARTER SWITCH TO STARTER RELAY	1		1
- 36	22-61688	. HARNESS ASSEMBLY, ENGINE 4 STARTER SWITCH TO STARTER RELAY	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		3
- 37	22-61506	. HARNESS ASSEMBLY, OVERHEAD INTERIOR LIGHT PANEL TO PERMANENT SPLICE	1		1
	22-61379	. . TERMINAL, GROUND	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		17
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		5
	36149	. . TERMINAL, CONVAIR 98-90805-027 -V00779-	1		6


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3 - 38	22-61509	. HARNESS ASSEMBLY, ANTI-ICE AND DEFOG SWITCH TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		5
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		10
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		1
- 39	22-61512-1	. HARNESS ASSEMBLY, OVERHEAD EXCESS HEAT AND ISOLATION PANEL TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		34
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
- 40	22-61534-1	. HARNESS ASSEMBLY, OVERHEAD EXTERIOR LIGHT PANEL TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		2
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		6
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		13
- 42	22-61761-1	. HARNESS ASSEMBLY, TANK 1 FUEL PUMP NON-ESSENTIAL POWER TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
- 43	22-61520	. HARNESS ASSEMBLY, COPILOT MAP LIGHT CONTROL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
- 44	22-61847	. HARNESS ASSEMBLY, WARNING HORN AND BELL TO PERMANENT SPLICE LH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00797-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
- 45	22-61508-1	. HARNESS ASSEMBLY, OVERHEAD ENGINE ANTI-ICE LIGHT PANEL TO PERMANENT SPLICE	A		1
	22-61508	. HARNESS ASSEMBLY, OVERHEAD ENGINE ANTI-ICE LIGHT PANEL TO PERMANENT SPLICE	2	7	1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		17
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		10
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		17

A AIRPLANES 1, 8 AND ON

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
			A		1
3 - 46	22-61511-1	. HARNESS ASSEMBLY, WING ANTI-ICE MALFUNCTION LIGHTS TO PERMANENT SPLICE			
	22-61511	. HARNESS ASSEMBLY, WING ANTI-ICE MALFUNCTION LIGHTS TO PERMANENT SPLICE	2	7	1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		29
- 47	22-61518	. HARNESS ASSEMBLY, LEADING EDGE STRUCTURE TEMPERATURE CONTROLLER TO PERMANENT SPLICE	1		1
	PT06E16-8S	. . CONNECTOR, CONVAIR 92-40325-043 -V06840-	1		1
	PT06E16-23S	. . CONNECTOR, CONVAIR 92-40325-055 -V06840-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
- 48	22-61554-1	. HARNESS ASSEMBLY, PITOT HEATER SWITCHES TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		12
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		11
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3
- 50	22-61739	. HARNESS ASSEMBLY, ENGINEER FLOOD LIGHT TO FLOOD LIGHT CONTROL	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
- 51	22-61507	. HARNESS ASSEMBLY, OVERHEAD INTERIOR CONTROL LIGHT PANEL TO PERMANENT SPLICE	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		9
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		11
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		3
- 52	22-61519	. HARNESS ASSEMBLY, PILOT MAP LIGHT CONTROL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
- 53	22-61513	. HARNESS ASSEMBLY, OVERHEAD ESSENTIAL BUS SELECTOR PANEL TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		6
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
- 54	22-61510-1	. HARNESS ASSEMBLY, OVERHEAD ANTI-ICE CONTROL PANEL TO PERMANENT SPLICE	1	9	1
	22-61510-805	. HARNESS ASSEMBLY, OVERHEAD ANTI-ICE CONTROL PANEL TO PERMANENT SPLICE	10		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		4
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779	1		2
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		13
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		10
- 55	22-61514	. HARNESS ASSEMBLY, VNE MNE WARNING SWITCH TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		3
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		5
	EX06-14S5S	. . CONNECTOR, CONVAIR 92-40332-005 -V71468-	1		1
- 56	22-61521	. HARNESS ASSEMBLY, PERMANENT SPLICE BOX TO NLG	1		1
	21EN65-6	. . SWITCH, MFR TO SPEC CONT 22-06480-3 -V74059-	1		1
	590001-117-0450	. . CONDUIT, CONVAIR 92-30000-036 -V00624-	1		1
		A AIRPLANES 1, 8 AND ON			

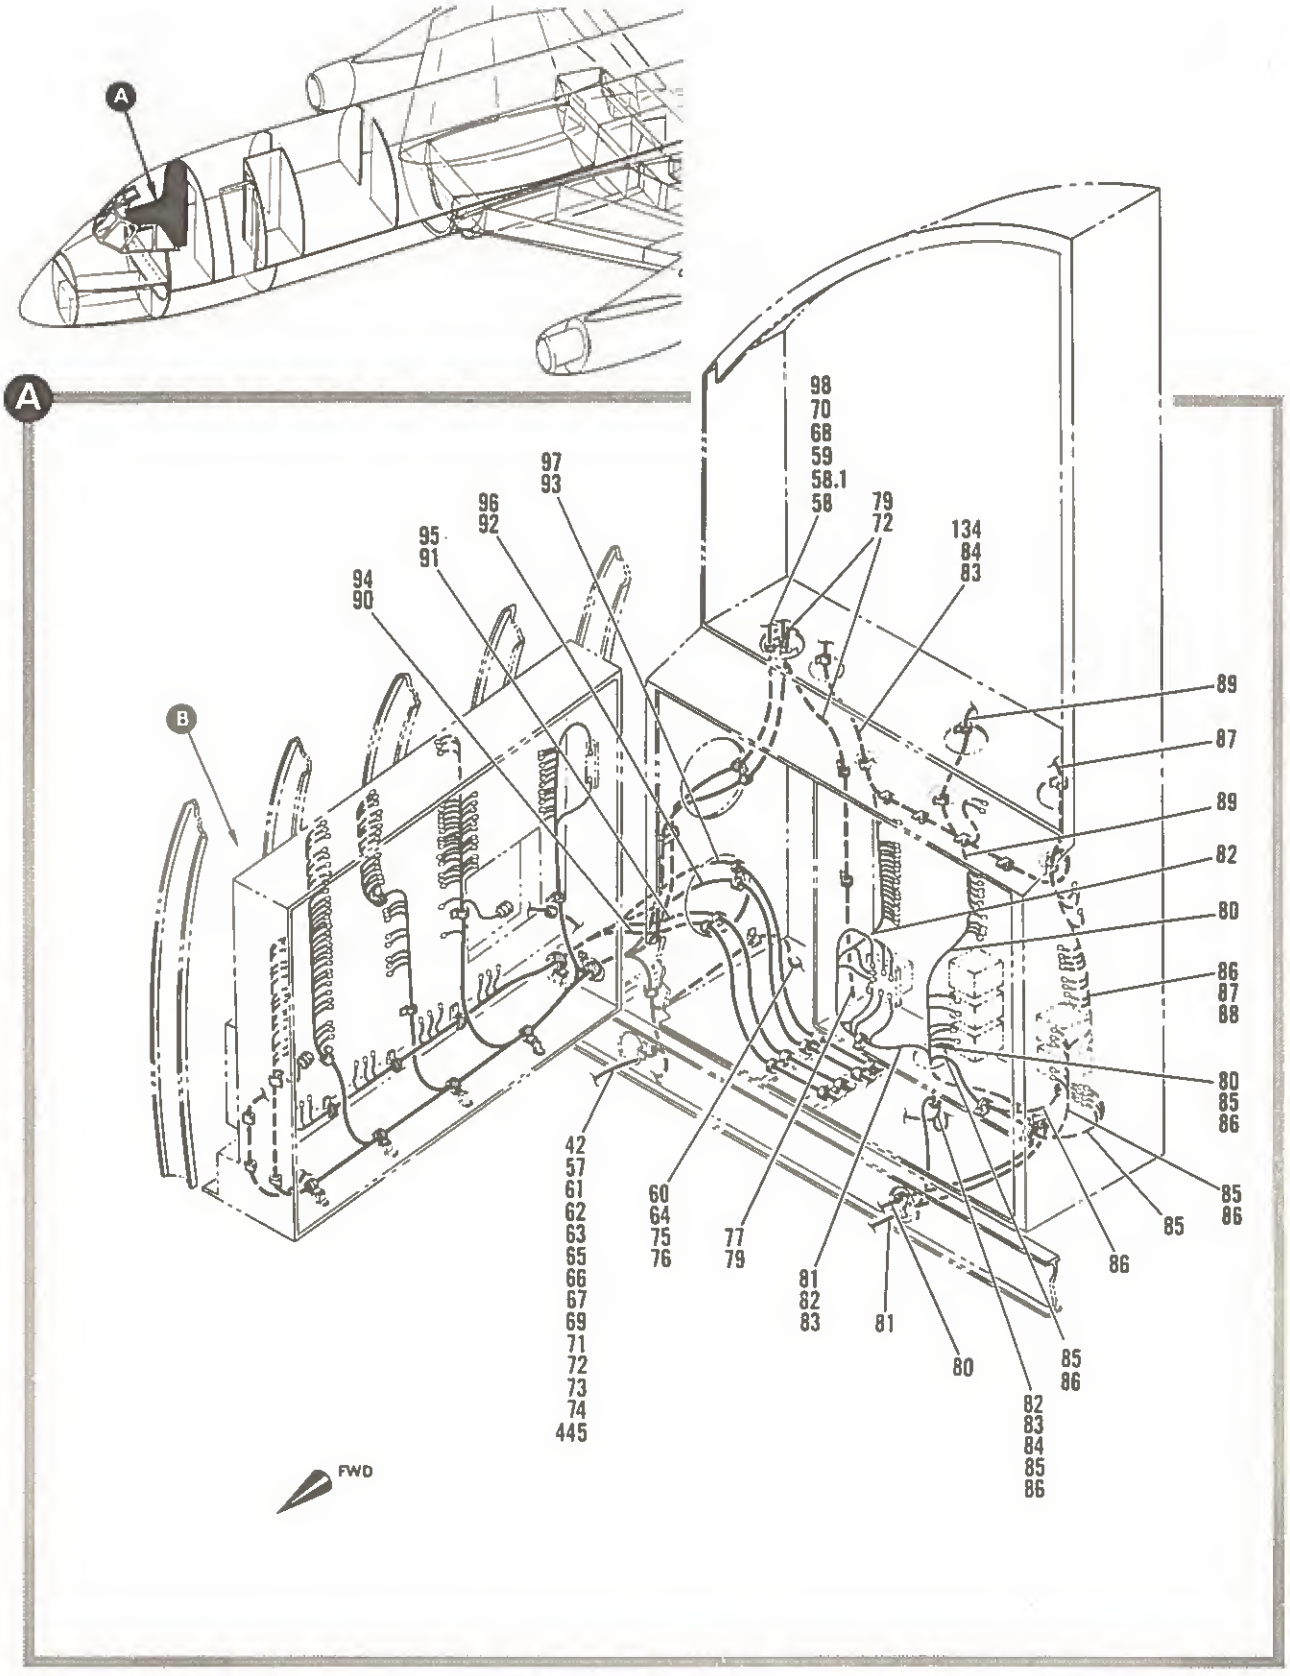

22.04.94.01.005-1

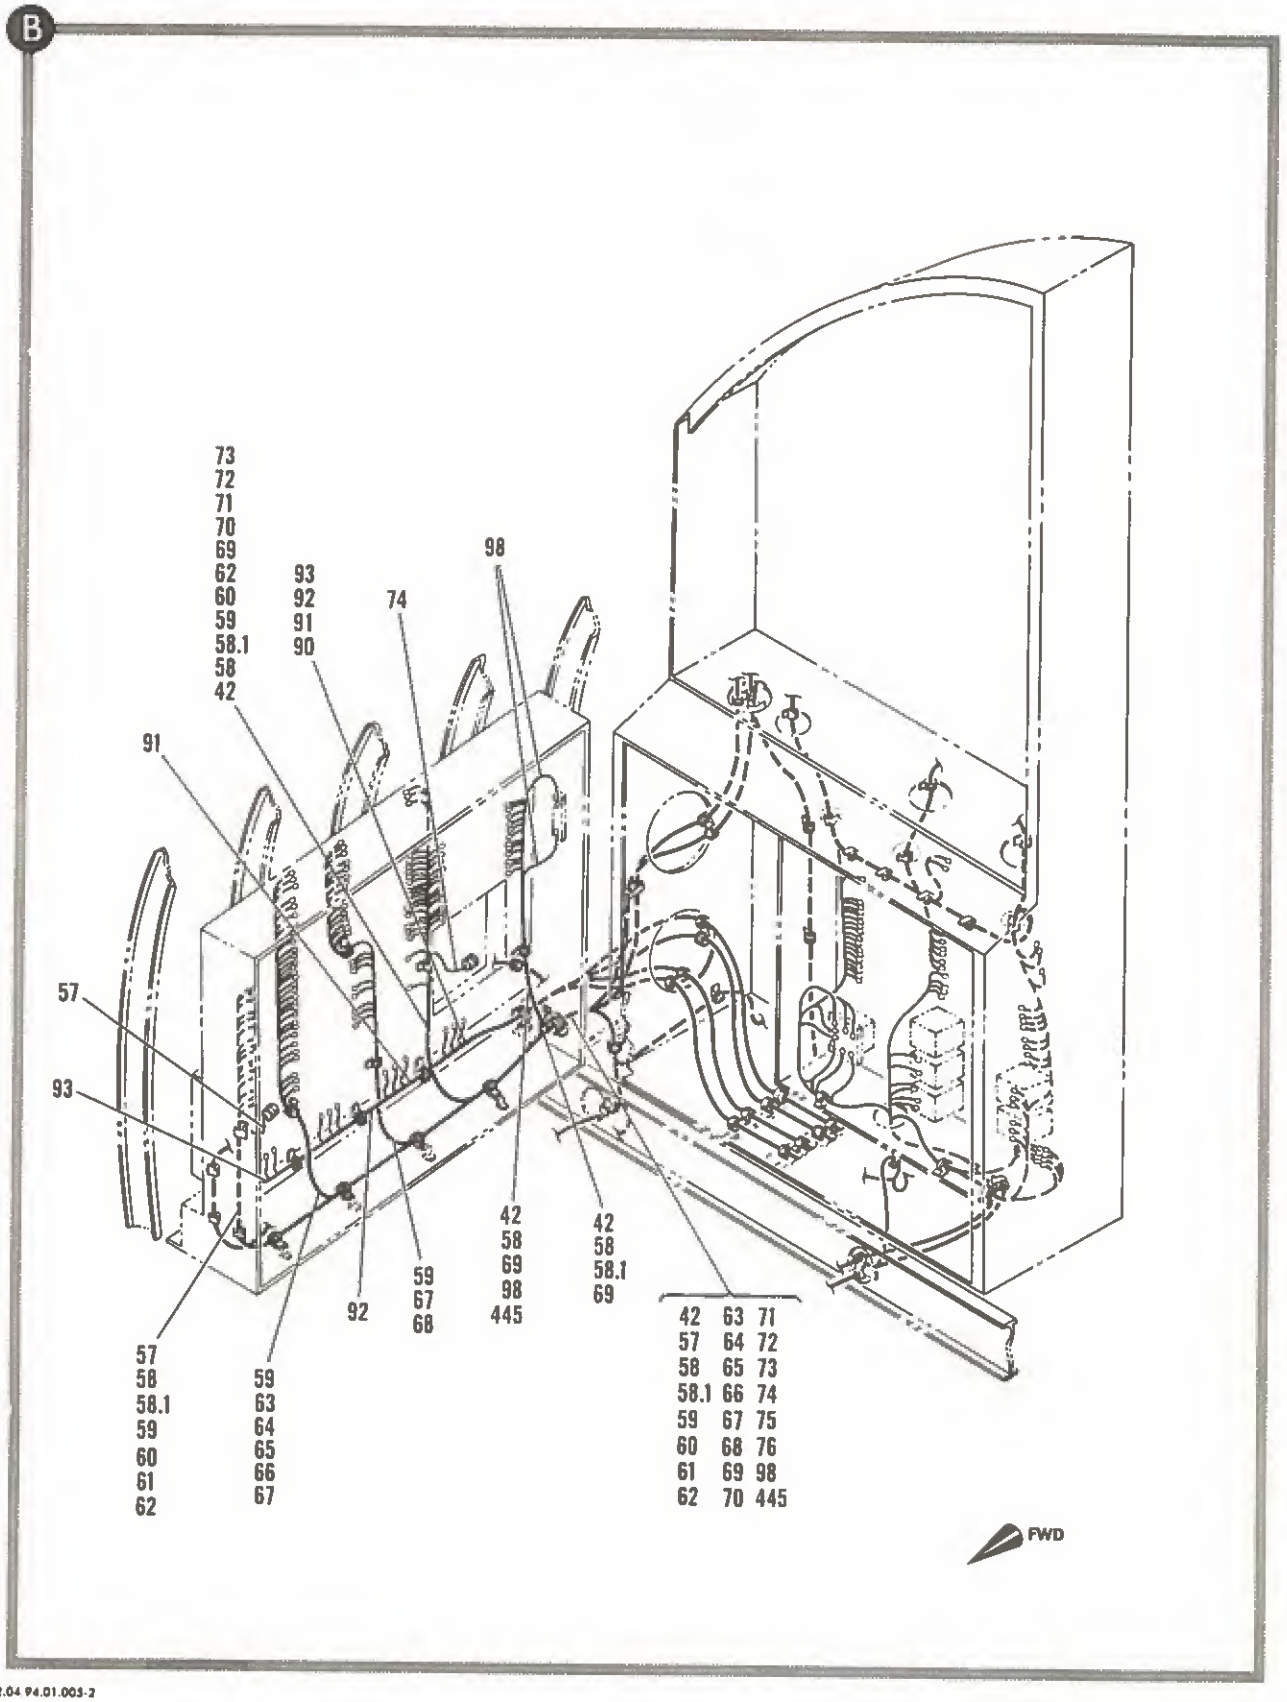

22.04 94.01.003-2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4		AC DISTRIBUTION AND DC EMERGENCY BOX ELECTRICAL HARNESSES SEE 22-61001			
- 57	22-61852-1	. HARNESS ASSEMBLY, AC POWER CONTROL RELAY 4 TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3
	PT06E14-19S	. . CONNECTOR CONVAIR 92-40325-011 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
- 58	22-61823-1	. HARNESS ASSEMBLY, AC NON-ESSENTIAL POWER DISTRIBUTION BOX TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		9
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		4
- 59	22-61822-1	. HARNESS ASSEMBLY, AC ESSENTIAL POWER DISTRIBUTION BOX TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		13
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		6
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
- 60	22-61669-1	. HARNESS ASSEMBLY, AC POWER DISTRIBUTION BOX TO PERMANENT SPLICE	1	10	1
	22-61669-807	. HARNESS ASSEMBLY, AC POWER DISTRIBUTION BOX TO PERMANENT SPLICE	11		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		9
- 61	22-61760-1	. HARNESS ASSEMBLY, TANK 4 FUEL PUMP NON-ESSENTIAL POWER TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
- 62	22-61762-1	. HARNESS ASSEMBLY, TANK 3 FUEL PUMP NON-ESSENTIAL POWER TO FUEL RELAYS	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		12
- 63	22-61844-1	. HARNESS ASSEMBLY, FLIGHT ENGINEER STATION TO TRANSFORMER RECTIFIER UNIT 3	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	YAEV6C-L	. . TERMINAL, CONVAIR 98-90806-006 -V09922-	1		3
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	EX06-16S1S	. . CONNECTOR, CONVAIR 92-40332-007 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468	1		3
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		4
	YAEV6C-L1	. . TERMINAL, CONVAIR 98-90806-005 -V09922-	1		1

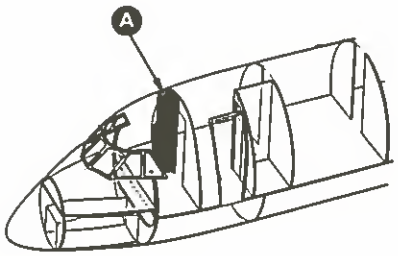
FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 - 64	22-61597	. HARNESS ASSEMBLY, EMERGENCY FUEL PUMP LIGHTS ENGINE 2 TO MASTER WARNING RELAY	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		9
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
- 65	22-61766-1	. HARNESS ASSEMBLY, TANK 3 FUEL PUMPS ESSENTIAL POWER TO PERMANENT SPLICE	1		1
- 66	22-61764-1	. HARNESS ASSEMBLY, TANK 4 FUEL PUMPS ESSENTIAL POWER TO FUEL RELAYS STA 306	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
- 67	22-61613-1	. HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO RELAY INSTALLATION	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		6
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		14
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		6
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		6
- 68	22-61690-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO ENGINE 3 RELAYS	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR
- 69	22-61763-1	. HARNESS ASSEMBLY, TANK 2 FUEL PUMP NON-ESSENTIAL POWER TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
- 70	22-61691-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO ENGINE 2 RELAYS	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 - 71	22-61765-1	. HARNESS ASSEMBLY, TANK 1 FUEL PUMPS ESSENTIAL POWER TO FUEL RELAYS STA 306	1		1
- 72	22-61767-1	. HARNESS ASSEMBLY, TANK 2 FUEL PUMP ESSENTIAL POWER TO FUEL RELAYS STA 306	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
- 73	22-61843-1	. HARNESS ASSEMBLY, FLIGHT ENGINEER STATION TO TRANSFORMER RECTIFIER UNIT 1	1		1
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
	EX06-16SLS	. . CONNECTOR, CONVAIR 92-40332-007 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	YAEV6C-L	. . TERMINAL, CONVAIR 98-90806-006 -V09922-	1		3
	YAE6C-L1	. . TERMINAL, CONVAIR 98-90806-005 -V09922-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		3
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		4
- 74	22-61849-1	. HARNESS ASSEMBLY, AC POWER CONTROL RELAY 1 TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	PT06E14-19S	. . CONNECTOR, CONVAIR 92-40325-011 -V77820-	1	5	1
- 77	22-61792-1	. HARNESS ASSEMBLY, RADIO JUNCTION BOX SPLICE TO STA 323	1		1
- 78	22-61792-5	. HARNESS ASSEMBLY, RADIO JUNCTION BOX SPLICE TO STA 323	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		10
- 79	22-61619-807	. HARNESS ASSEMBLY, RELAY INSTALLATION TO STA 323	A		1
	22-61619-1	. HARNESS ASSEMBLY, RELAY INSTALLATION TO STA 323	2	6	1
	22-61619-805	. HARNESS ASSEMBLY, RELAY INSTALLATION TO STA 323	7	7	1
	22-61619-801	. HARNESS ASSEMBLY, RELAY INSTALLATION TO STA 323	8	8	1
	36152	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		16
	320572	. . TERMINAL, CONVAIR 98-90805-006 -V00779-	1		2
	PT06E10-6S	. . CONNECTOR, CONVAIR 92-40325-008 -V06840-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		10
- 80	22-61614	. HARNESS ASSEMBLY, EMERGENCY DC BUS TO BATTERY BUS	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		6
- 81	22-61889	. HARNESS ASSEMBLY, DC POWER DISTRIBUTION BOX TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3

A AIRPLANES 1, 9 AND ON


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 - 82	22-61834-1	. HARNESS ASSEMBLY, PILOT ESSENTIAL DC POWER DISTRIBUTION BOX TO STA 375 PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		9
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		6
- 83	22-61846	. HARNESS ASSEMBLY, FLIGHT ENGINEER STATION TO TRANSFORMER RECTIFIER UNIT 4	1		1
	EX06-16S1S	. . CONNECTOR, CONVAIR 92-40332-007 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		3
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		4
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
- 84	22-61830-1	. HARNESS ASSEMBLY, PILOT ESSENTIAL BUS TO PERMANENT SPLICE	1	7	1
	22-61830-5	. HARNESS ASSEMBLY, PILOT ESSENTIAL BUS TO PERMANENT SPLICE	8		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2
- 85	22-61611	. HARNESS ASSEMBLY, FLIGHT ENGINEER STATION SPLICE TO DC DISTRIBUTION BOX	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
- 86	22-61612	. HARNESS ASSEMBLY, DC DISTRIBUTION BOX TO ESSENTIAL BUS RELAY	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7
	320573	. . TERMINAL, CONVAIR 98-90805-007 -V00779-	1		3
- 87	22-61811	. HARNESS ASSEMBLY, ESSENTIAL DC DISTRIBUTION BOX TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		4
- 88	22-61814	. HARNESS ASSEMBLY, PERMANENT SPLICE TO OUTBD DC EMERGENCY CIRCUIT BREAKER PANEL	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		7
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
- 89	22-61810	. HARNESS ASSEMBLY, EMERGENCY DC DISTRIBUTION BOX TO PERMANENT SPLICE	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		5
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		3

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 - 90	22-61805-3	. HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO GENERATOR 1 BUS TIE	1		1
- 91	22-61807-3	. HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO GENERATOR 2 BUS TIE	1		1
- 92	22-61806-3	. HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO GENERATOR 3 BUS TIE	1		1
- 93	22-61804-3	. HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO GENERATOR 4 BUS TIE	1		1
	36161	. . TERMINAL, GENERATOR CONVAIR 98-90805-016 -V00779-	1		18
- 94	22-61805-5	. HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO EXTERNAL AC POWER	1		1
- 95	22-61807-5	. HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO EXTERNAL AC POWER	1		1
- 96	22-61806-5	. HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO EXTERNAL AC POWER	1		1
- 97	22-61804-5	. HARNESS ASSEMBLY, AC DISTRIBUTION BOX TO EXTERNAL AC POWER	1		1
	320574	. . TERMINAL, EXTERNAL AC POWER CONVAIR 98-90805-010 -V00779-	1		6
	YEAV6C-L4	. . TERMINAL, EXTERNAL AC POWER CONVAIR 98-90806-007 -V02198-	1		3
	YEAV6C-L2	. . TERMINAL, EXTERNAL AC POWER CONVAIR 98-90806-008 -V02198-	1		3


A

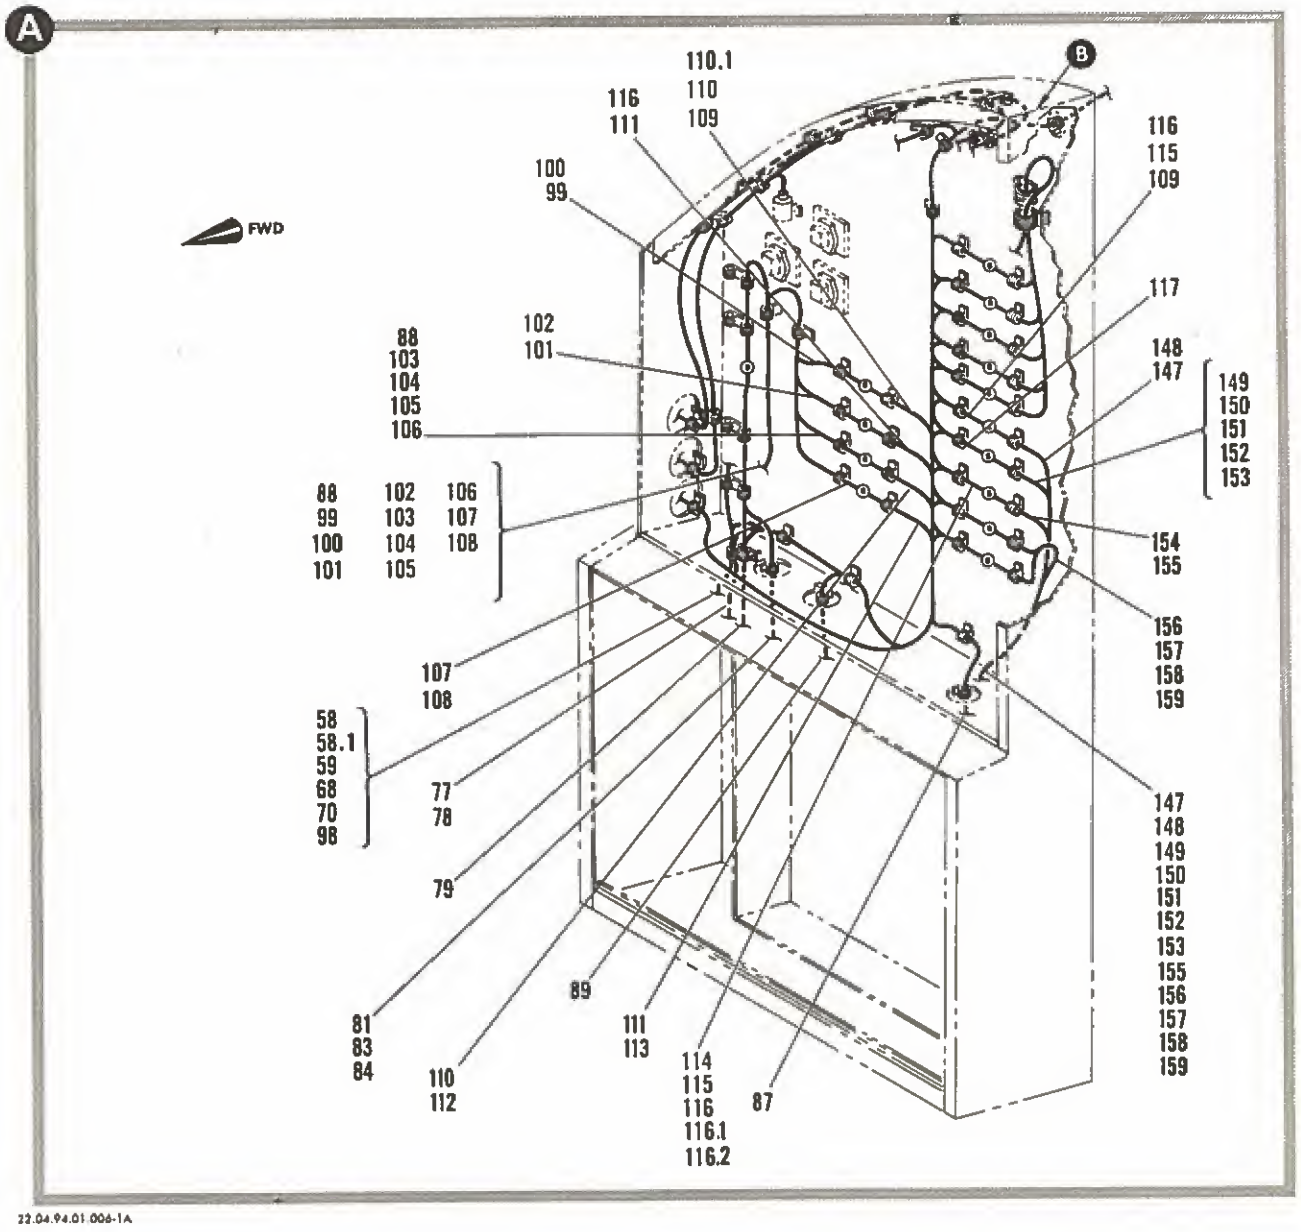
A
B
FWD
110.1
110
109
116
111
116
115
109
100
99
117
102
101
88
103
104
105
106
148
147
149
150
151
152
153
88 102 106
99 103 107
100 104 108
101 105
154
155
156
157
158
159
107
108
58
58.1
59
68
70
98
77
78
79
147
148
149
150
151
152
153
155
156
157
158
159
89
81
83
84
111
113
110
112
114
115
116
116.1
116.2
87
22.04.94.01.006-1A

B

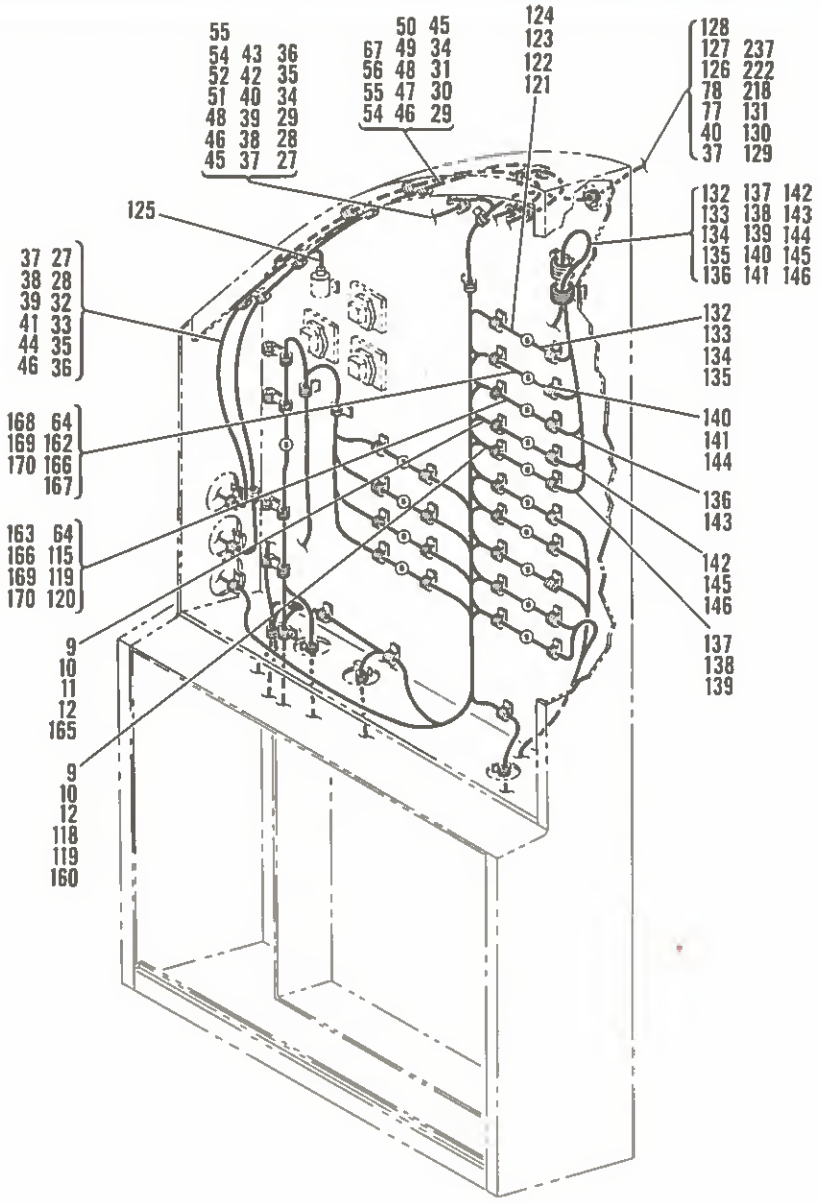

22 04 94 01 006-2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5		CIRCUIT BREAKER PANEL ELECTRICAL HARNESSES SEE 22-61001			
- 98	22-61689-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO ENGINE 1 RELAYS	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		AR
- 99	22-61720-1	. HARNESS ASSEMBLY, OUTBD AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		15
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		15
-100	22-61719-1	. HARNESS ASSEMBLY, OUTBD AC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		16
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		16
-101	22-61600-1	. HARNESS ASSEMBLY, OUTBD DC EMERGENCY CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		16
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		2
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		4
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		16
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		4
-102	22-61833-1	. HARNESS ASSEMBLY, PILOT ESSENTIAL PERMANENT SPLICE TO OUTBD CIRCUIT BREAKER PANEL	1	7	1
	22-61833-5	. HARNESS ASSEMBLY, PILOT ESSENTIAL PERMANENT SPLICE TO OUTBD CIRCUIT BREAKER PANEL	8		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		3
-103	22-61826-1	. HARNESS ASSEMBLY, AC ESSENTIAL PERMANENT SPLICE TO OUTBD CIRCUIT BREAKER PANEL	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
	YSEV6C-L	. . SPLICE, CONVAIR 98-34001-007 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		12
-104	22-61817	. HARNESS ASSEMBLY, PERMANENT SPLICE TO OUTBD CIRCUIT BREAKER PANEL	1	7	1
	22-61817-807	. HARNESS ASSEMBLY, PERMANENT SPLICE TO OUTBD CIRCUIT BREAKER PANEL	8		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		8
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
-105	22-61829	. HARNESS ASSEMBLY, AC NON-ESSENTIAL PERMANENT SPLICE TO OUTBD CIRCUIT BREAKER PANEL	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
-106	22-61609-1	. HARNESS ASSEMBLY, REMOTE COMPASS CIRCUIT BREAKERS TO PERMANENT SPLICE	1		1
	AN75381	. . SPLICE, CONVAIR 98-34000-001	1		2
	AN75382	. . CONDUCTOR, CONVAIR 98-34000-003	1		4
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5 -107	22-61717-1	. HARNESS ASSEMBLY, OUTBD DC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1	7	1
	22-61717-5	. HARNESS ASSEMBLY, OUTBD DC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	8		1
-108	22-61718-1	. HARNESS ASSEMBLY, OUTBD DC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		6
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		2
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
-109	22-61608-1	. HARNESS ASSEMBLY, INBD AC ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-110	22-61701-3	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO AUTOPILOT RACK PERMANENT SPLICE LH	A		1
	22-61701-1	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO AUTOPILOT RACK PERMANENT SPLICE LH	2	8	1
-110.1	22-61780	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE AC ESSENTIAL OUTBD TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-111	22-61667-1	. HARNESS ASSEMBLY, LANDING GEAR GROUND SAFETY RELAYS TO CIRCUIT BREAKER PANEL PERMANENT SPLICE	1		1
-112	22-61752	. HARNESS ASSEMBLY, PERMANENT SPLICE TO PERMANENT SPLICE STA 375	5	6	1
-113	22-61607-807	. HARNESS ASSEMBLY, OUTBD DC ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE	A		1
	22-61607-1	. HARNESS ASSEMBLY OUTBD DC ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE	2	8	1
-114	22-61697	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO PERMANENT SPLICE	1		1
-115	22-61661	. HARNESS ASSEMBLY, FIRE CONTROL PANEL PERMANENT SPLICE TO DIMMING RELAY BOX 2	1	10	1
	22-61661-1	. HARNESS ASSEMBLY, FIRE CONTROL PANEL PERMANENT SPLICE TO DIMMING RELAY BOX 2	11		1

A AIRPLANES 1, 9 AND ON

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5 -116	22-61603-1	. HARNESS ASSEMBLY, DC EMERGENCY CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE OUTBD	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320563	. . TERMINAL, CONVAIR 98-90805-012 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
-116.1	22-61819-5	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO PERMANENT SPLICE	A		1
	22-61819-1	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO PERMANENT SPLICE	2	7	1
-116.2	22-61820	. HARNESS ASSEMBLY, ANTI-ICE RELAY NUMBER 4 TO PERMANENT SPLICE	1		1
-117	22-61740	. HARNESS ASSEMBLY, AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE INBD	1		1
-118	22-61606	. HARNESS ASSEMBLY, AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE UPPER	1		1
-119	22-61755	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO PERMANENT SPLICE	1		1
-120	22-61692	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO ENGINE 4 RELAYS	1		1
-121	22-61882	. HARNESS ASSEMBLY, ENGINE 3 CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE STA 375	1		1
-122	22-61883	. HARNESS ASSEMBLY, ENGINE 1 CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE STA 375	1		1
-123	22-61884	. HARNESS ASSEMBLY, ENGINE 4 CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE STA 375	1		1
-124	22-61885	. HARNESS ASSEMBLY, ENGINE 2 CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE STA 375	1		1
-125	22-61610	. HARNESS ASSEMBLY, CABIN ALTITUDE PRESSURE SENSOR TO RELAY INSTALLATION PERMANENT SPLICE	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		3
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
-126	22-61892	. HARNESS ASSEMBLY, OVERHEAD PANEL FLOOD LIGHT TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-127	22-62620-803	. HARNESS ASSEMBLY, CIRCUIT BREAKER PANEL PERMANENT SPLICE TO FWD LAVATORY HEATER	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-128	22-63504-801	. HARNESS ASSEMBLY, STEWARDESS FWD SWITCH PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		15
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		14
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		12
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7

A AIRPLANES 1, 8 AND ON


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5 -130	22-63508-801	. HARNESS ASSEMBLY, STEWARDESS FWD SWITCH PANEL PERMANENT SPLICE TO REAR SPAR PERMANENT SPLICE	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		AR
-131	22-63514-801	. HARNESS ASSEMBLY, FWD COAT COLSET SWITCH TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
-132	22-61878	. HARNESS ASSEMBLY, ENGINE 3 CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
-133	22-61879	. HARNESS ASSEMBLY, ENGINE 2 CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
-134	22-61880	. HARNESS ASSEMBLY, ENGINE 4 CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
-135	22-61881	. HARNESS ASSEMBLY, ENGINE 1 CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
-136	22-61705	. HARNESS ASSEMBLY, UPPER DC EMERGENCY CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		25
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		25
-137	22-61706	. HARNESS ASSEMBLY, UPPER AC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		21
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		20
-138	22-61707	. HARNESS ASSEMBLY, UPPER AC NON-ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		11
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		11
-139	22-61708	. HARNESS ASSEMBLY, UPPER AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		AR
-140	22-61709	. HARNESS ASSEMBLY, UPPER DC EMERGENCY CIRCUIT BREAKER TO FLIGHT ENGINEER PERMANENT SPLICE	1	10	1
	22-61709-1	. HARNESS ASSEMBLY, UPPER DC EMERGENCY CIRCUIT BREAKER TO FLIGHT ENGINEER PERMANENT SPLICE	11		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		20
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		20
-141	22-61812	. HARNESS ASSEMBLY, PERMANENT SPLICE TO UPPER DC EMERGENCY CIRCUIT BREAKER PANEL	1	10	1
	22-61812-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO UPPER DC EMERGENCY CIRCUIT BREAKER PANEL	11		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		11
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		6
-142	22-61815	. HARNESS ASSEMBLY, PERMANENT SPLICE TO UPPER DC ESSENTIAL CIRCUIT BREAKER PANEL	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		AR
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		AR
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		AR


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5 -143	22-61824-1	. HARNESS ASSEMBLY, AC ESSENTIAL PERMANENT SPLICE TO UPPER CIRCUIT BREAKER PANEL	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	36151	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		2
-144	22-61827-1	. HARNESS ASSEMBLY, AC ESSENTIAL PERMANENT SPLICE TO UPPER CIRCUIT BREAKER PANEL	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
-145	22-61831-1	. HARNESS ASSEMBLY, PILOT ESSENTIAL PERMANENT SPLICE TO UPPER CIRCUIT BREAKER PANEL	1	7	1
	22-61831-3	. HARNESS ASSEMBLY, PILOT ESSENTIAL PERMANENT SPLICE TO UPPER CIRCUIT BREAKER PANEL	8		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		AR
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		AR
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		AR
-146	22-61602	. HARNESS ASSEMBLY, UPPER DC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		AR
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		AR
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR
-147	22-61713-1	. HARNESS ASSEMBLY, INBD DC EMERGENCY CIRCUIT BREAKER PANEL TO FLIGHT ENGINEER PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		15
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		15

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5 -148	22-61715-1	. HARNESS ASSEMBLY, INBD AC ESSENTIAL CIRCUIT BREAKER PANEL TO FLIGHT ENGINEER PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		11
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		4
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		12
-149	22-61601-5	. HARNESS ASSEMBLY, INBD AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	A		1
	22-61601	. HARNESS ASSEMBLY, INBD AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	2	8	1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		14
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		14
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
-150	22-61813-1	. HARNESS ASSEMBLY, PERMANENT TO INBD DC EMERGENCY CIRCUIT BREAKER PANEL	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		14
-151	22-61825-1	. HARNESS ASSEMBLY, AC ESSENTIAL PERMANENT SPLICE TO INBD CIRCUIT BREAKER PANEL	1		1
-152	22-61828-1	. HARNESS ASSEMBLY, AC NON-ESSENTIAL PERMANENT SPLICE TO INBD CIRCUIT BREAKER PANEL	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		6
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
-153	22-61832-1	. HARNESS ASSEMBLY, PILOT ESSENTIAL PERMANENT SPLICE TO INBD CIRCUIT BREAKER PANEL	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		11
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		7
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3

A AIRPLANES 1, 9 AND ON

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5 -154	22-61711-1	. HARNESS ASSEMBLY, INBD DC ESSENTIAL CIRCUIT BREAKER PANEL TO FLIGHT ENGINEER PERMANENT SPLICE	1	10	1
	22-61711-805	. HARNESS ASSEMBLY, INBD DC ESSENTIAL CIRCUIT BREAKER PANEL TO FLIGHT ENGINEER PERMANENT SPLICE	11		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		12
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		12
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
-155	22-61712	. HARNESS ASSEMBLY, INBD DC EMERGENCY CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		28
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		4
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		4
-156	22-61710-1	. HARNESS ASSEMBLY, INBD DC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		19
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		2
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		19
-157	22-61714	. HARNESS ASSEMBLY, INBD AC ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		21
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		21
-158	22-61716-1	. HARNESS ASSEMBLY, INBD AC NON-ESSENTIAL CIRCUIT BREAKER PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
-159	22-61816-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO INBD DC ESSENTIAL CIRCUIT BREAKER PANEL	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		5
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
-160	22-61750	. HARNESS ASSEMBLY, PERMANENT SPLICE TO CIRCUIT BREAKER PERMANENT SPLICE	1		1

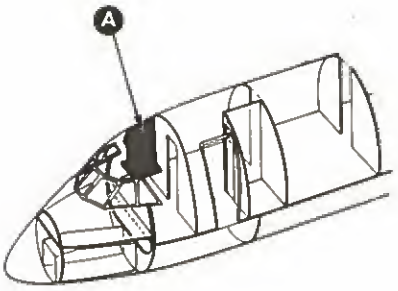

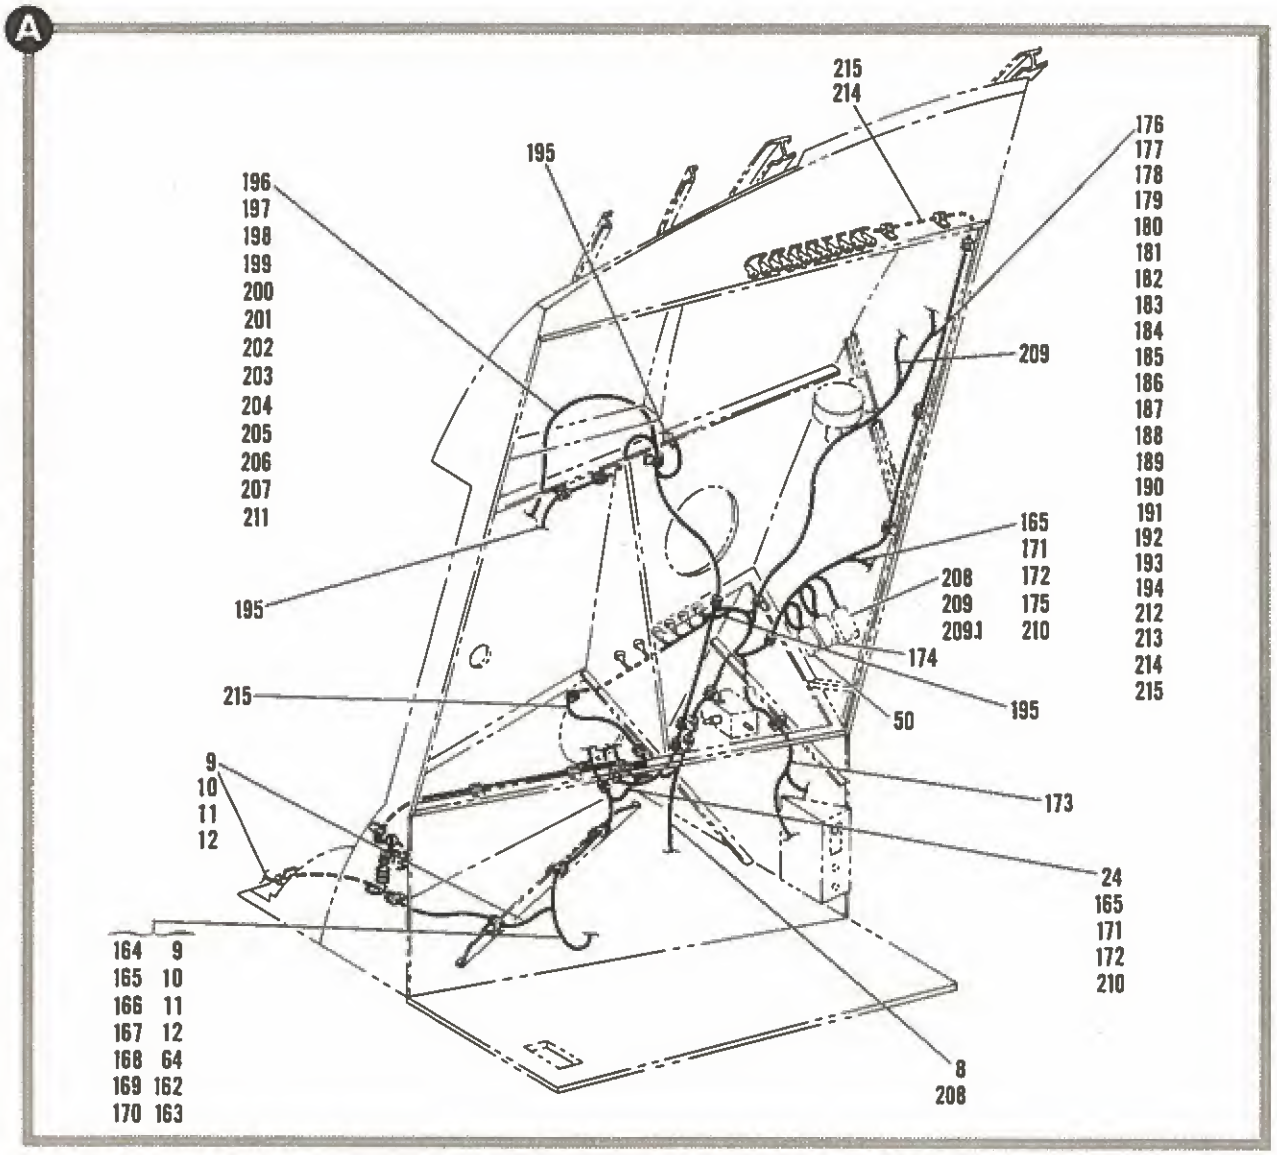

22.04.94.01.007A

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6		FLIGHT ENGINEER ELECTRICAL HARNESSES SEE 22-61001			
-162	22-61539	. HARNESS ASSEMBLY, TANK JETTISON SWITCHES TO PERMANENT SPLICE LH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		6
-163	22-61540	. HARNESS ASSEMBLY, FUEL TANK VALVE SWITCHES TO PERMANENT SPLICE RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		21
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		23
-164	22-61541	. HARNESS ASSEMBLY, FUEL TANK VALVE SWITCHES TO PERMANENT SPLICE LH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		25
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		16
-165	22-61542-1	. HARNESS ASSEMBLY, FUEL CONTROL PANEL TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		AR
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR
	EX06-14S2S	. . CONNECTOR, CONVAIR 92-40332-004 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
-166	22-61556	. HARNESS ASSEMBLY, EMERGENCY FUEL PUMP LIGHTS ENGINE 1 TO MASTER WARN RELAY	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		8
-167	22-61598	. HARNESS ASSEMBLY, EMERGENCY CROSS FEED INTRANSIT LIGHTS TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		7
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		4
-168	22-61673	. HARNESS ASSEMBLY, TANK JETTISON SWITCHES TO PERMANENT SPLICE RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		6
-169	22-61674	. HARNESS ASSEMBLY, EMERGENCY FUEL PUMP LIGHTS ENGINE 3 TO MASTER WARN RELAY	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		8
-170	22-61675	. HARNESS ASSEMBLY, EMERGENCY FUEL PUMP LIGHTS ENGINE 4 TO MASTER WARNING BOX 4 PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		2
-171	22-61753	. HARNESS ASSEMBLY, FUEL TEMPERATURE SELECTOR SWITCH ENGINE 1 TO PERMANENT SPLICE	1		1
-172	22-61779	. HARNESS ASSEMBLY, FUEL TEMPERATURE SELECTOR SWITCH ENGINE 2 TO PERMANENT SPLICE	1		1
-173	22-61670-801	. HARNESS ASSEMBLY, ENGINEER LIGHT CONTROL TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		9
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		3

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6 -174	22-61738	. HARNESS ASSEMBLY, ENGINEER FLOOD LIGHT CONTROL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7
-175	22-61604	. HARNESS ASSEMBLY, FUEL TEMPERATURE SELECTOR SWITCH ENGINE 4 TO PERMANENT SPLICE	1		1
-176	22-61501-1	. HARNESS ASSEMBLY, AC VOLTMETER SELECTOR SWITCH TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		2
-177	22-61502-1	. HARNESS ASSEMBLY, AC LOAD METER GENERATOR 1 TO RELAY 1 STA 306	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
-178	22-61544	. HARNESS ASSEMBLY, DC POWER PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		16
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		10
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
-179	22-61545	. HARNESS ASSEMBLY, DC INSTRUMENTS TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		10
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		5
-180	22-61546-1	. HARNESS ASSEMBLY,LOAD REDUCTION BUS SWITCH TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		15
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		32
-181	22-61547	. HARNESS ASSEMBLY, GENERATOR 1 CONTROL SWITCHES TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		12
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		18
-182	22-61548	. HARNESS ASSEMBLY, GENERATOR 2 CONTROL SWITCHES TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		18
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		15
-183	22-61549	. HARNESS ASSEMBLY, GENERATOR 3 CONTROL SWITCHES TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		16
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		17
-184	22-61550	. HARNESS ASSEMBLY, GENERATOR 4 CONTROL SWITCH TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		19
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		16

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6 -185	22-61551	. HARNESS ASSEMBLY, ENGINE 1 OIL INDICATORS TO REAR SPAR	1		1
	EX06-14S5S	. . CONNECTOR, CONVAIR 92-40332-005 -V71468-	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		1
	165-61	. . CONNECTOR, CONVAIR 92-40058-009 -V02660-	1		1
	EX06-14S2S	. . CONNECTOR, CONVAIR 92-40332-004 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		6
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-186	22-61552	. HARNESS ASSEMBLY, ENGINE 4 OIL INDICATORS TO REAR SPAR	1		1
	EX06-14S5S	. . CONNECTOR, CONVAIR 92-40332-005 -V71468-	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		1
	165-61	. . CONNECTOR, CONVAIR 92-40058-009 -V02660-	1		1
	EX06-14S2S	. . CONNECTOR, CONVAIR 92-40332-004 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		6
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-187	22-61553-1	. HARNESS ASSEMBLY, WATER PUMP SWITCH TO PERMANENT SPLICE	1		1
-188	22-61595	. HARNESS ASSEMBLY, CONSTANT SPEED DRIVE DISCONNECT SWITCHES ENGINE 2 TO PERMANENT SPLICE	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		AR
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		AR
-189	22-61626	. HARNESS ASSEMBLY, ENGINE 3 OIL INDICATORS TO REAR SPAR DISCONNECT	1		1
-190	22-61627	. HARNESS ASSEMBLY, ENGINE 2 OIL INDICATORS TO REAR SPAR DISCONNECT	1		1
	EX06-14S5S	. . CONNECTOR, CONVAIR 92-40332-005 -V71468-	1		1
	EX06-14S2S	. . CONNECTOR, CONVAIR 92-40332-004 -V71468-	1		1
	165-61	. . CONNECTOR, CONVAIR 92-40058-009 -V02660-	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		6
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-191	22-61672	. HARNESS ASSEMBLY, CONSTANT SPEED DRIVE DISCONNECT SWITCHES ENGINE 3 TO PERMANENT SPLICE	1		1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		AR
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		AR

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6 -192	22-61860-1	. HARNESS ASSEMBLY, AC LOAD METERS GENERATOR 2 TO RELAY STA 306	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		2
-193	22-61861-1	. HARNESS ASSEMBLY, AC LOAD METERS GENERATOR 3 TO RELAY STA 306	1		1
-194	22-61862-1	. HARNESS ASSEMBLY, AC LOAD METERS GENERATOR 4 TO RELAY STA 306	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		1
-195	22-61790	. HARNESS ASSEMBLY, CABIN AIR PRESSURE CONTROL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
-196	22-61525	. HARNESS ASSEMBLY, HYDRAULIC CONTROL PANEL TO PERMANENT SPLICE	1	10	1
	22-61525-1	. HARNESS ASSEMBLY, HYDRAULIC CONTROL PANEL TO PERMANENT SPLICE	11		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		6
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		18
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	EX06-14S2S	. . CONNECTOR, CONVAIR 92-40332-004 -V71468-	1	10	2
-197	22-61526	. HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE ENGINE 1 SWITCH TO PERMANENT SPLICE	1	10	1
	22-61526-1	. HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE ENGINE 1 SWITCH TO PERMANENT SPLICE	11		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		5
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		3
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
-198	22-61543	. HARNESS ASSEMBLY, HYDRAULIC FLUID QUANTITY INDICATOR TO PERMANENT SPLICE	1		1
	PT06E14-19S	. . CONNECTOR, CONVAIR 92-40325-011 -V06840-	1		1
-199	22-61622	. HARNESS ASSEMBLY, TURBO COMPRESSOR INDICATOR DISCONNECT TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	PT00E8-4S	. . CONNECTOR, CONVAIR 92-50288-010 -V06840-	1		2
	PT00F10-6S	. . CONNECTOR, CONVAIR 92-50288-011 -V06840-	1		2
-200	22-61623-1	. HARNESS ASSEMBLY, UPPER AIR CONDITIONING PANEL TO PERMANENT SPLICE	1	7	1
	22-61623-3	. HARNESS ASSEMBLY, UPPER AIR CONDITIONING PANEL TO PERMANENT SPLICE	8		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		17
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		20
-201	22-61624-803	. HARNESS ASSEMBLY, CABIN TEMPERATURE CONTROLS TO PERMANENT SPLICE	A		1
	22-61624-1	. HARNESS ASSEMBLY, CABIN TEMPERATURE CONTROLS TO PERMANENT SPLICE	2	6	1
	22-61624-5	. HARNESS ASSEMBLY, CABIN TEMPERATURE CONTROLS TO PERMANENT SPLICE	7	7	1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		4
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		AR
	320553	. . TERMINAL, CONVAIR 98-90805-20 -V00779-	1		AR
		A AIRPLANES 1, 8 AND ON			

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6 -202	22-61625-1	. HARNESS ASSEMBLY, FREON COMPRESSOR SYSTEM CONTROL SWITCH TO PERMANENT SPLICE	1	7	1
	22-61625-803	. HARNESS ASSEMBLY, FREON COMPRESSOR SYSTEM CONTROL SWITCH TO PERMANENT SPLICE	8		1
-203	22-61683	. HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 2 TO PERMANENT SPLICE	1	10	1
	22-61683-1	. HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 2 TO PERMANENT SPLICE	11		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V0779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		3
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		4
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
-204	22-61684	. HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT SPLICE	1	10	1
	22-61684-1	. HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 3 TO PERMANENT	11		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		4
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		3
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
-205	22-61685	. HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE	1	10	1
	22-61685-1	. HARNESS ASSEMBLY, HYDRAULIC EMERGENCY SHUTOFF VALVE SWITCH ENGINE 4 TO PERMANENT SPLICE	11		1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		2
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2
	320634	. . TERMINAL, CONVAIR 98-90817-003 -V00779-	11		1


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6 -206	22-61596-803	. HARNESS ASSEMBLY, FLIGHT ENGINEER AIR CONDITIONING PANEL TO PERMANENT SPLICE	A		1
	22-61596-1	. HARNESS ASSEMBLY, FLIGHT ENGINEER AIR CONDITIONING PANEL TO PERMANENT SPLICE	2	6	1
	22-61596-5	. HARNESS ASSEMBLY, FLIGHT ENGINEER AIR CONDITIONING PANEL TO PERMANENT SPLICE	7	7	1
-207	22-61793	. HARNESS ASSEMBLY, AIR FLOW INDICATOR TO PERMANENT SPLICE	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		1
	EX06-14S2S	. . CONNECTOR, CONVAIR 92-40332-004 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
-208	22-61928	. HARNESS ASSEMBLY, ENGINEER FLOOD LIGHT CONTINUE TO AC JUNCTION BOX FLOOD LIGHT	1		1
-209	22-61929	. HARNESS ASSEMBLY, ENGINEER FLOOD LIGHT CONTINUE TO CIRCUIT BREAKER FLOOD LIGHT	1	10	1
	22-61929-1	. HARNESS ASSEMBLY, ENGINEER FLOOD LIGHT CONTINUE TO CIRCUIT BREAKER FLOOD LIGHT	11		1
-209.1	22-61728-1	. HARNESS ASSEMBLY, AUTOPILOT DISENGAGE SWITCHES TO PERMANENT SPLICE	1		1
-210	22-61754	. HARNESS ASSEMBLY, FUEL TEMPERATURE SELECTOR SWITCH ENGINE 3 TO PERMANENT SPLICE	1		1
-211	22-61582	. HARNESS ASSEMBLY, FLIGHT ENGINEER LWR AIR CONDITIONING PANEL TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		13
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		13
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		11
-212	22-61941	. HARNESS ASSEMBLY, CONSTANT SPEED DRIVE SWITCH ENGINE 1 TO PERMANENT SPLICE	1		1
-213	22-61940	. HARNESS ASSEMBLY, CONSTANT SPEED DRIVE SWITCH ENGINE 4 TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		AR
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		AR
-214	22-61900	. HARNESS ASSEMBLY, PERMANENT SPLICE TO SAFETY PIN WARNING LIGHTS	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		13
-215	22-61901	. HARNESS ASSEMBLY, DOOR OPEN WARNING LIGHTS TO DIMENSION RELAY BOX 7	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		37

A AIRPLANES 1, 8 AND ON

SECTION V


Chapter 94
ELECTRICAL HARNESSES

FWD ENTRANCE ELECTRICAL HARNESSES

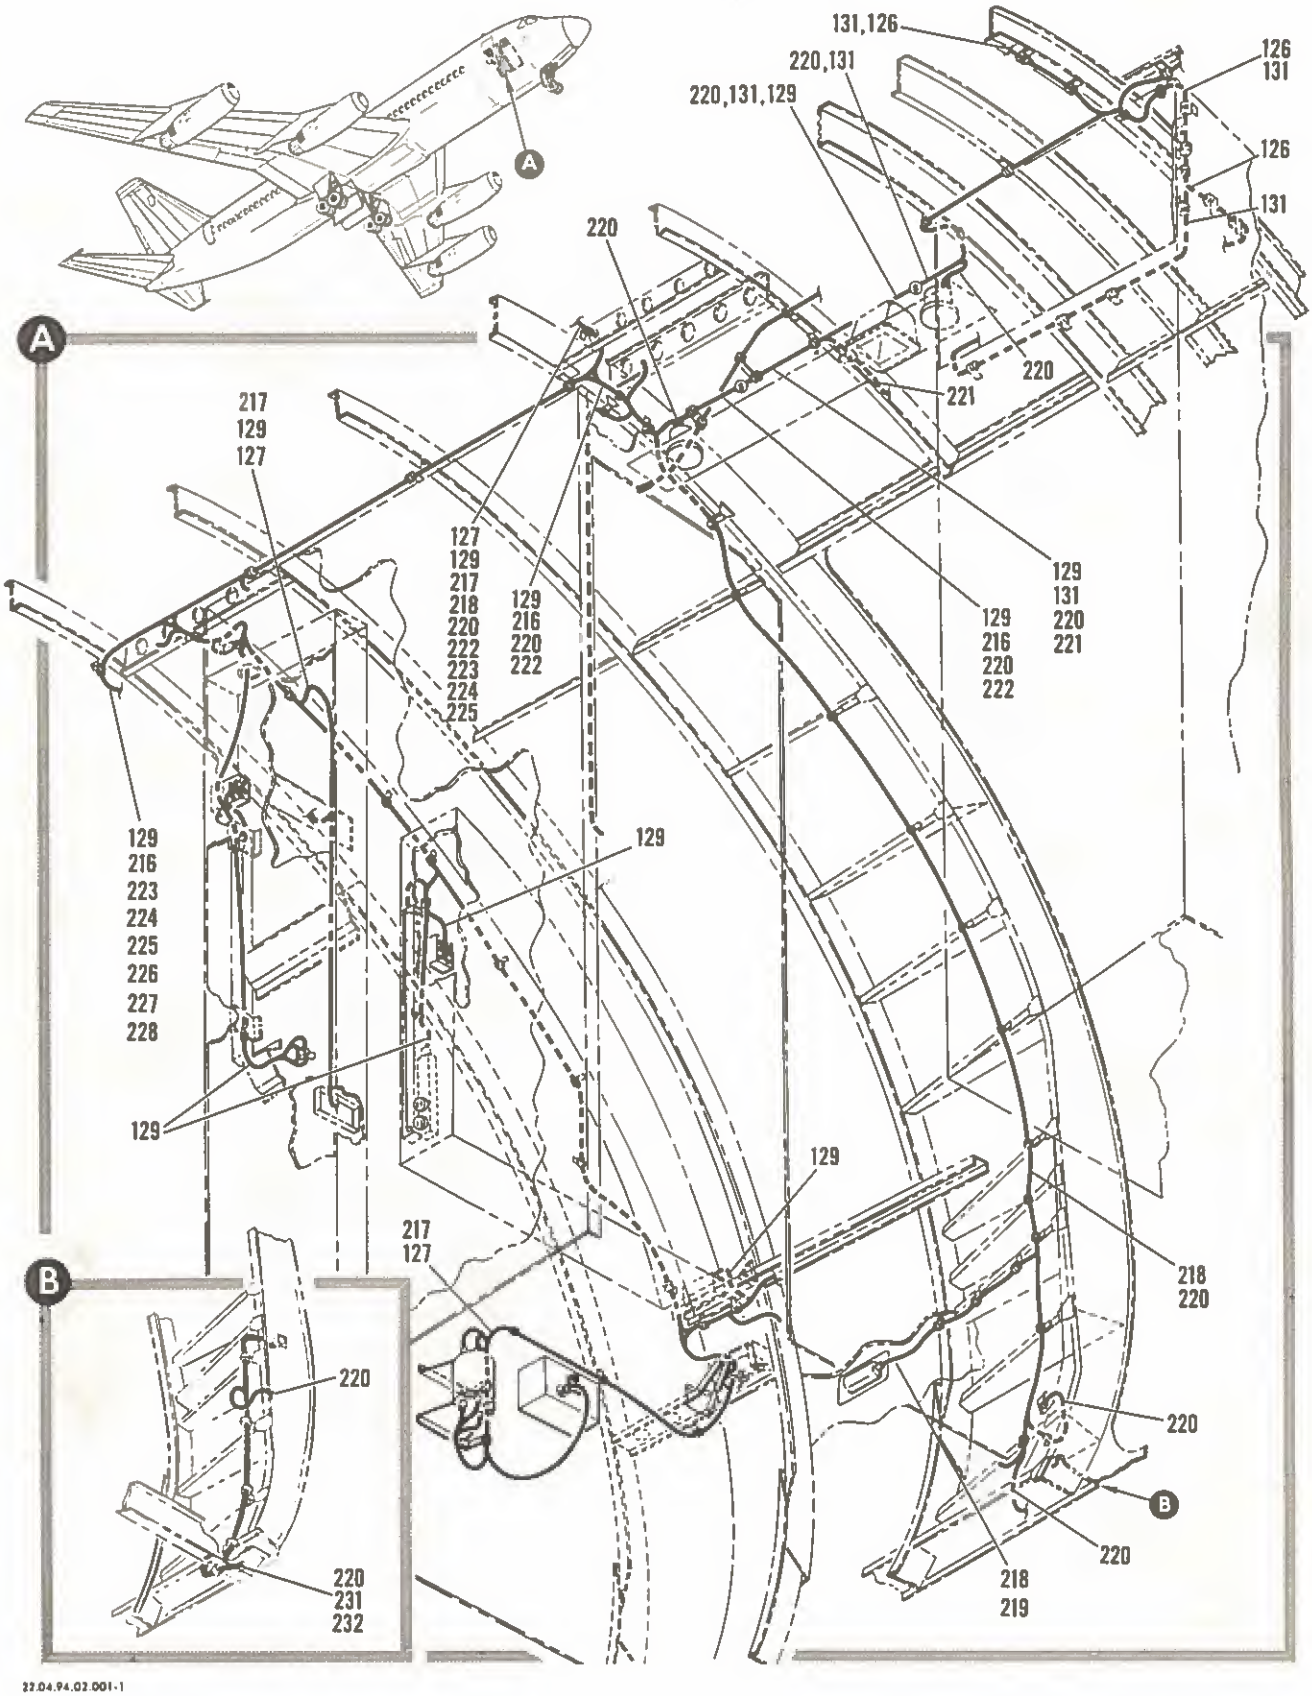

22.04.94.02.001-1

FWD ENTRANCE ELECTRICAL HARNESSES
STA 301 TO 413
FIGURE 1 (SHEET 1 OF 2)

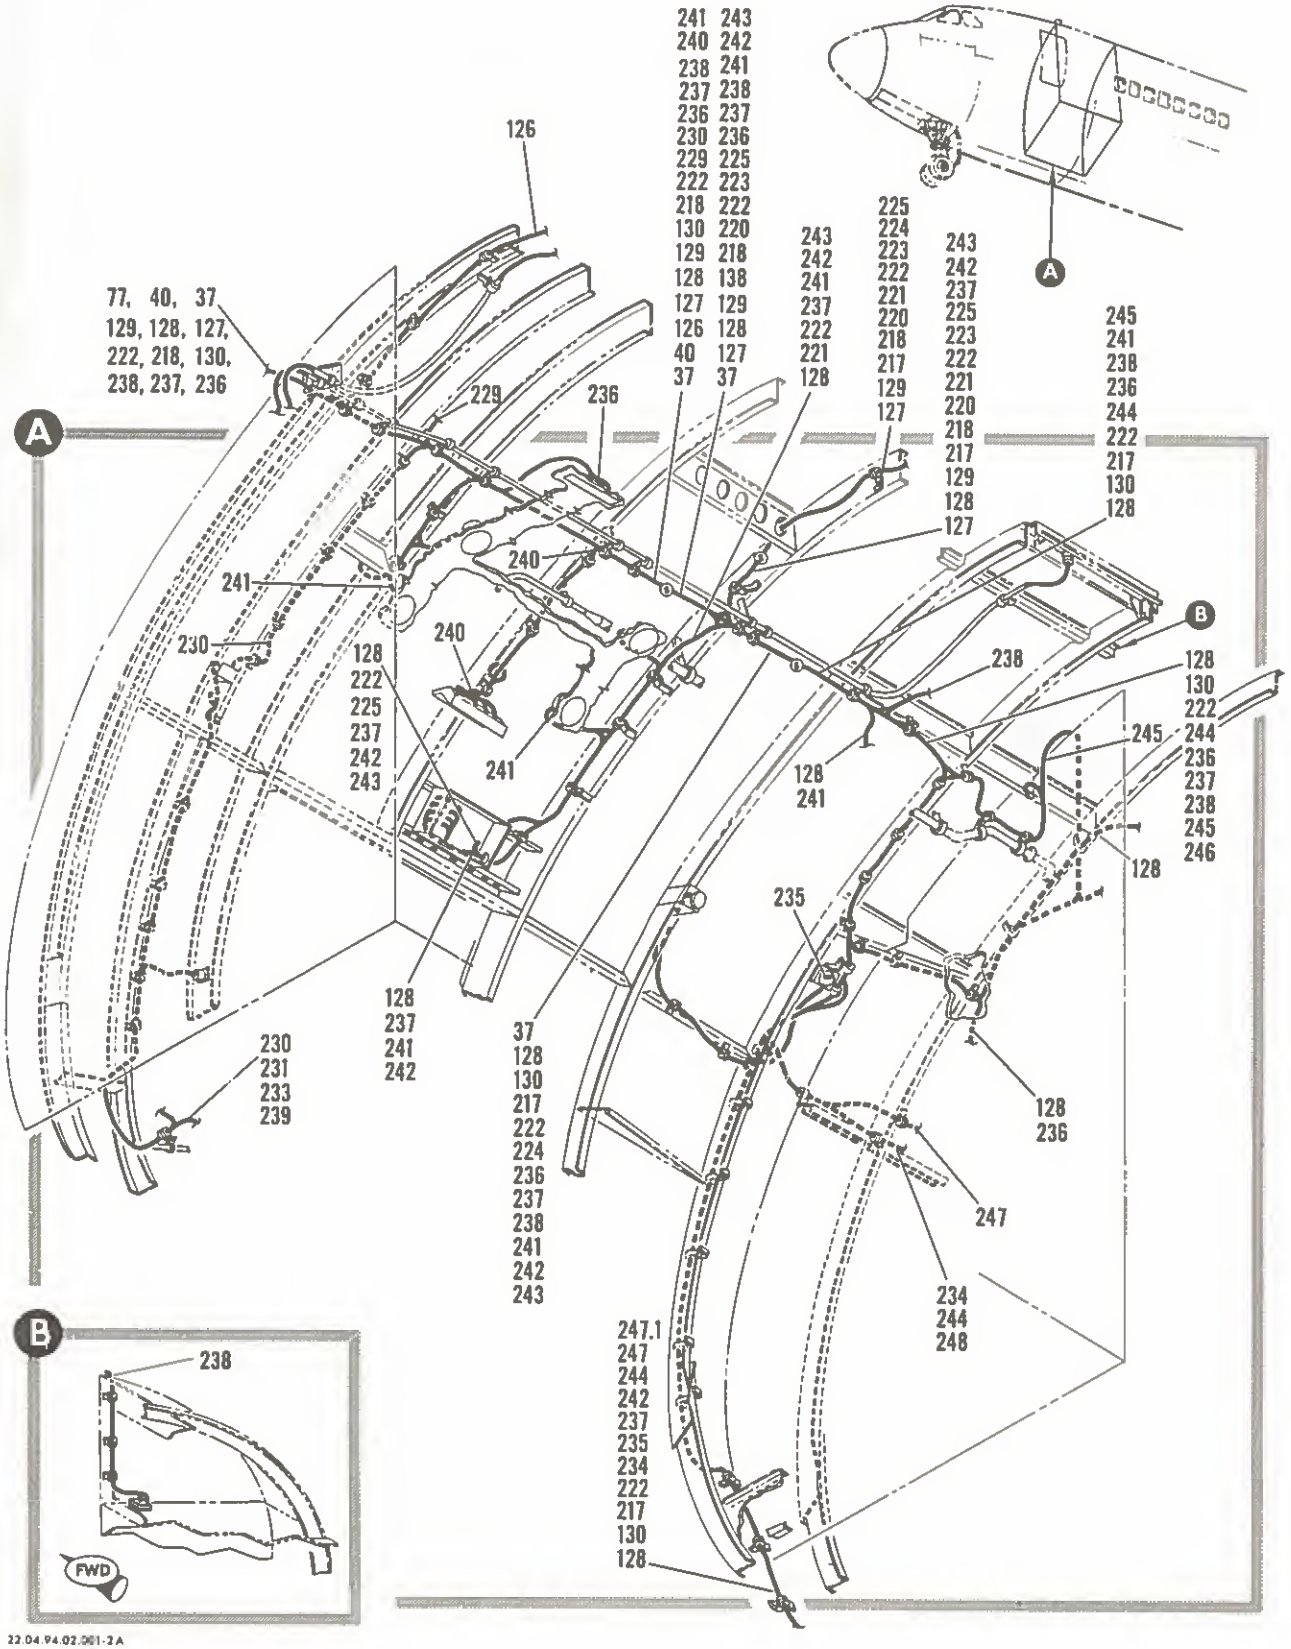

FWD ENTRANCE ELECTRICAL HARNESSES
STA 301 TO 413
FIGURE 1 (SHEET 2 OF 2)

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		FWD ENTRANCE ELECTRICAL HARNESSES STA 301 TO 413 SEE 22-63000			
-216	22-63553	. HARNESS ASSEMBLY, FWD DOOR PERMANENT SPLICE TO PERMANENT SPLICE LH	1		1
-217	22-62621	. HARNESS ASSEMBLY, FWD LAVATORY HEATER TO REAR SPAR PERMANENT SPLICE LH	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
-218	22-63562-1	. HARNESS ASSEMBLY, FWD LOADING RAMP DISCONNECT TO PERMANENT SPLICE LH	1		1
	PT06E12-3S	. . CONNECTOR, CONVAIR 92-40325-015 -V06840-	1		1
-219	22-63560-1	. HARNESS ASSEMBLY, FWD LOADING RAMP RECEPTACLE TO DISCONNECT LH	1		1
	PT00E12-3P	. . CONNECTOR, CONVAIR 92-50288-012 -V06840-	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		4
-220	22-63564	. HARNESS ASSEMBLY, FWD ENTRANCE LIGHTS TO PERMANENT SPLICE LH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		6
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
-221	22-63531	. HARNESS ASSEMBLY, FWD ENTRANCE DOOR SIGN TO PERMANENT SPLICE LH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		6
-222	22-63569	. HARNESS ASSEMBLY, FWD STEWARDESS PERMANENT SPLICE TO DIODES LH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-223	22-63500	. HARNESS ASSEMBLY, OVERHEAD PERMANENT SPLICE TO UPPER ANTI-COLLISION LIGHT LH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E8-4S	. . PLUG, CONVAIR 92-40325-006 -V06840-	1		1
-224	22-63554	. HARNESS ASSEMBLY, FWD WARNING SIGN SPLICE TO CENTER SPLICE LH	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		10
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		20
-225	22-63607	. HARNESS ASSEMBLY, FWD STEWARDESS PANEL PERMANENT SPLICE TO PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 1 LH	1		1
-226	22-63607-1	. HARNESS ASSEMBLY, FWD STEWARDESS PANEL PERMANENT SPLICE TO PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 1 TO 4 LH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
-227	22-63607-3	. HARNESS ASSEMBLY, FWD STEWARDESS PANEL PERMANENT SPLICE TO PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 8 LH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3
-228	22-63607-5	. HARNESS ASSEMBLY, FWD STEWARDESS PANEL PERMANENT SPLICE TO PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 10 TO 15 LH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -229	22-63512	. HARNESS ASSEMBLY, FWD EXIT SIGN TO PERMANENT SPLICE RH	1		1
-230	22-62554-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO BUFFET 1 RH	1		1
	PT00E12-3S	. . CONNECTOR, CONVAIR 92-50288-021 -V06840-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-231	22-61899-1	. HARNESS ASSEMBLY, ELECTRONIC AND ELECTRICAL COMPARTMENT ACCESS DOOR SWITCH TO PERMANENT SPLICE RH	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
-232	22-61568-1	. HARNESS ASSEMBLY, GENERATOR AND BUS TIE CONTACTOR 4 TO PERMANENT SPLICE RH	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	PT06E18-32P	. . CONNECTOR, CONVAIR 92-40325-019 -V06840-	1		1
-234	22-63556	. HARNESS ASSEMBLY, LOUNGE WARNING SIGNS PERMANENT SPLICE TO FWD WARNING SIGNS RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
-235	22-62553-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO BUFFET 2 RH	1	10	1
	22-62553-805	. HARNESS ASSEMBLY, PERMANENT SPLICE TO BUFFET 2 RH	11		1
	PT00E16-8S	. . CONNECTOR, CONVAIR 92-50288-023 -V06840-	1		1
-236	22-63518	. HARNESS ASSEMBLY, STEWARDESS FWD CHIME TO PERMANENT SPLICE RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-237	22-63581	. HARNESS ASSEMBLY, STEWARDESS FWD PANEL WARNING SIGNS TO PERMANENT SPLICE RH	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		35
-238	22-63609	. HARNESS ASSEMBLY, COAT CLOSET SWITCH TO LIGHT BALLAST RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -240	22-63532	. HARNESS ASSEMBLY, FWD SERVICE DOOR SIGN TO PERMANENT SPLICE RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7
-241	22-63544	. HARNESS ASSEMBLY, FWD BUFFET AFT LIGHTS TO PERMANENT SPLICE RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		14
-242	22-63586	. HARNESS ASSEMBLY, FWD STEWARDESS BOX DIODES TO PERMANENT SPLICE RH	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
-244	22-63566	. HARNESS ASSEMBLY, EMERGENCY EXIT TO FWD STEWARDESS PANEL RH	1		1
-245	22-63557	. HARNESS ASSEMBLY, FWD STEWARDESS PANEL PERMANENT SPLICE TO LOUNGE WARNING SIGNS PERMANENT SPLICE RH	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-246	22-63621	. HARNESS ASSEMBLY, CABIN VALANCE LIGHT TO BALLAST RH	1		1
-247.1	22-62623	. HARNESS ASSEMBLY, PERMANENT SPLICE TO REAR SPAR FEED THRU PERMANENT SPLICE ENGINE 1 STA 375	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
-248	22-63523	. HARNESS ASSEMBLY, WINDOW LIGHTS RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		3

CONVAIR 880
ILLUSTRATED PARTS CATALOG

SECTION V

Chapter 94
ELECTRICAL HARNESSES

CABIN ELECTRICAL HARNESSES

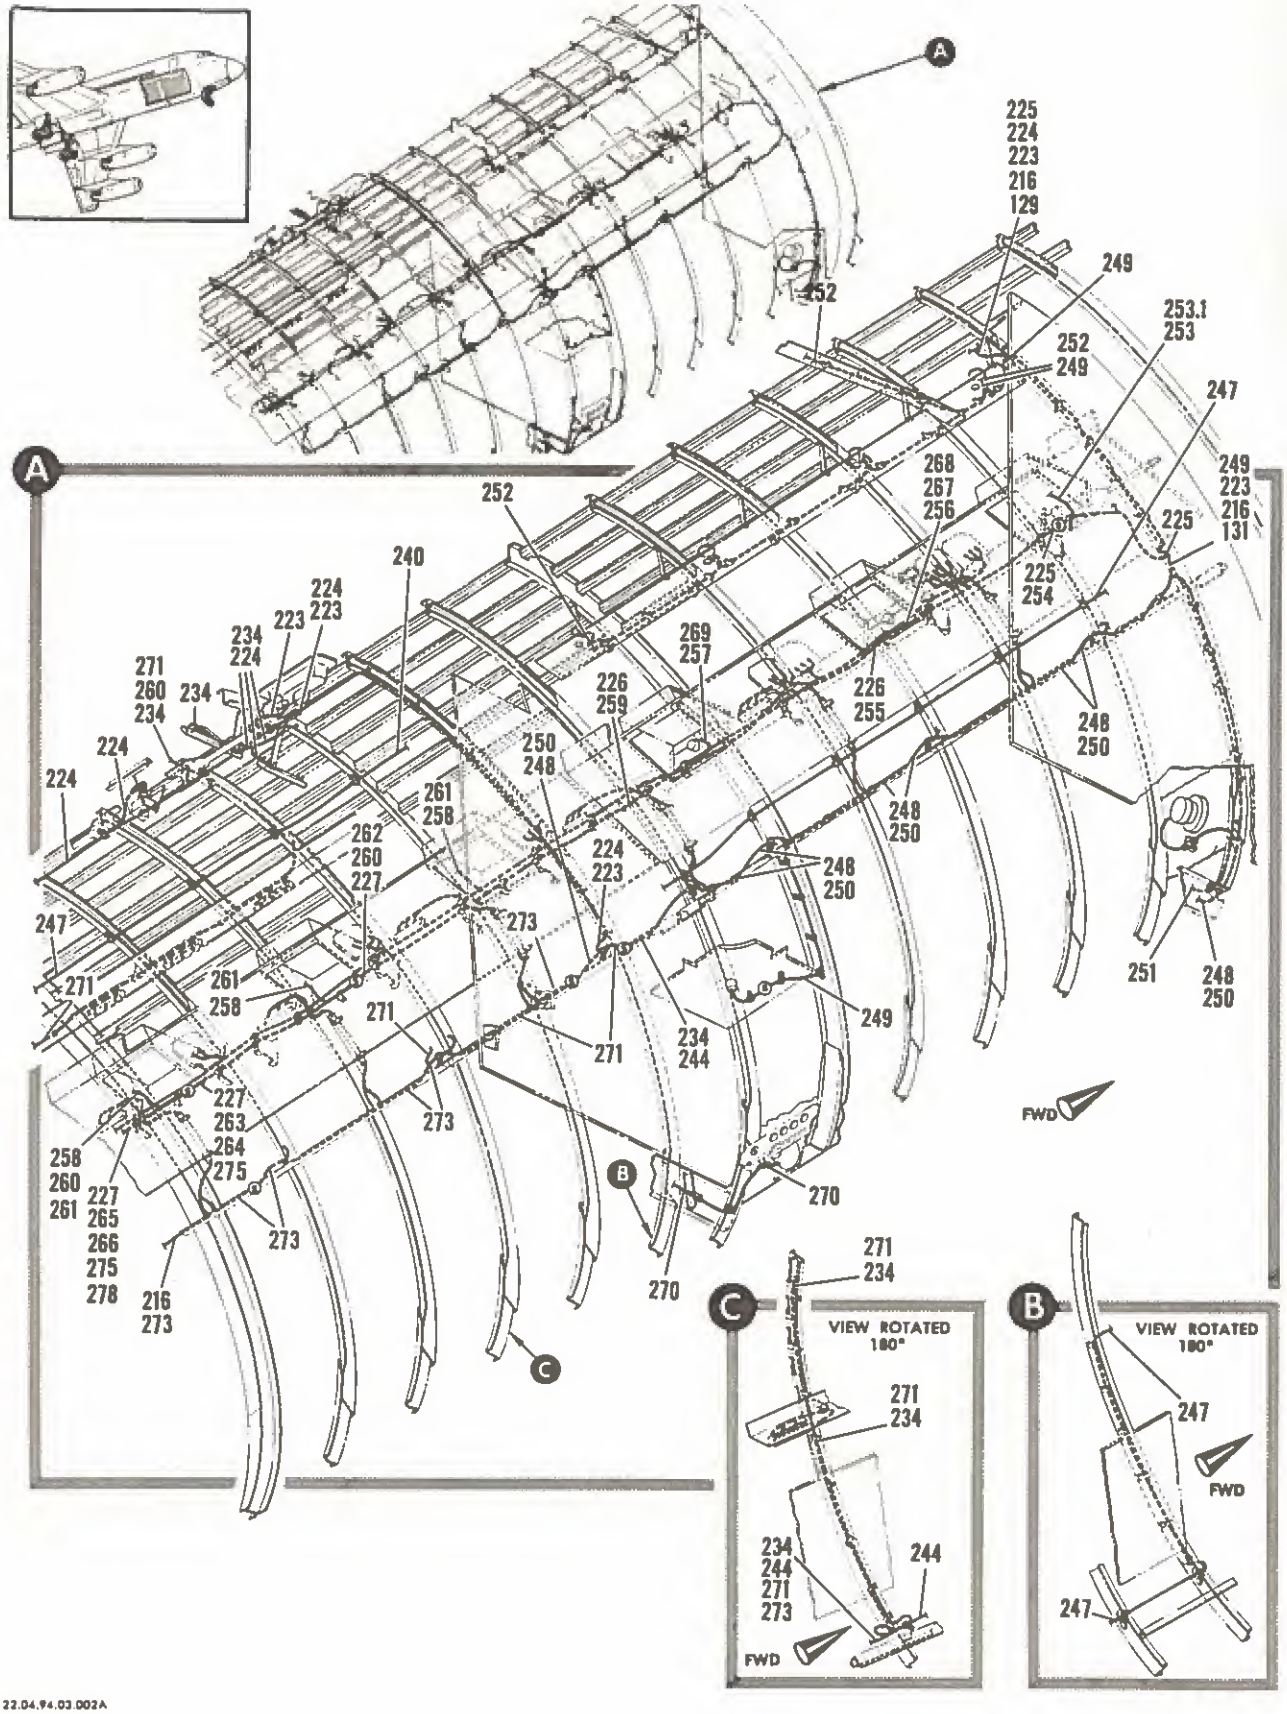


22.04.94.03.002A


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		PASSENGER COMPARTMENT STA 390 TO 640 ELECTRICAL HARNESSES SEE 22-63001			
-249	22-63521	. HARNESS ASSEMBLY, LOUNGE TABLE LAMP TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-250	22-63522	. HARNESS ASSEMBLY, WINDOW LIGHTS STA 432 TO 546 LH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		17
	36153	. . TERMINAL, CONVAIR 98-9805-003 -V00779-	1		3
-251	22-62570-1	. HARNESS ASSEMBLY, ANGLE OF ATTACK SENSOR TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		10
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	DM9609-19S	. . CONNECTOR, CONVAIR 92-40058-024 -V17419-	1		1
-252	22-63519	. HARNESS ASSEMBLY, OVERHEAD LOUNGE LIGHTS	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		26
-253	22-63558	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 1 LH	1		1
	22-63573	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 1 RH	1		1
	36151	. . TERMINAL, LH CONVAIR 98-90805-001 -V00779-	1		5
	36151	. . TERMINAL, RH CONVAIR 98-90805-001 -V00779-	1		2
-253.1	22-63577	. HARNESS ASSEMBLY, READING LIGHT STA 423 LH	1		1
	22-63578	. HARNESS ASSEMBLY, READING LIGHT STA 423 RH	1		1
	36157	. . TERMINAL, CONVAIR 98-9805-008 -V00779-	1		9
	320574	. . TERMINAL, CONVAIR 98-9805-010 -V00779	1		4
-254	22-63591	. HARNESS ASSEMBLY, READING LIGHT PERMANENT SPLICE SEAT 1 TO 2 LH	1		1
	22-63590	. HARNESS ASSEMBLY, READING LIGHT PERMANENT SPLICE SEAT 1 TO 2 RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		6
-255	22-63591-1	. HARNESS ASSEMBLY, READING LIGHT PERMANENT SPLICE SEAT 2 TO 3 LH	1		1
	22-63590-1	. HARNESS ASSEMBLY, READING LIGHT PERMANENT SPLICE SEAT 2 TO 3 RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		12
-256	22-63559	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 2 LH	1		1
	22-63574	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 2 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		5
-257	22-63572	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 3 LH	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		5
	22-63575	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 3 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		5

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -258	22-63579	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 4 TO 7 LH	1		4
	22-63576	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 4 TO 7 RH	1		4
	36151	. . TERMINAL, RH CONVAIR 98-90805-001 -V00779-	1		5
-259	22-63591-3	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE SEAT 3 TO 4 LH	1		1
	22-63590-3	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE SEAT 3 TO 4 RH	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
-260	22-63601	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 4 TO 5 LH	1		1
	22-63600	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 4 TO 5 RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
-261	22-63587	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE SEAT 4 TO 22 LH	1		19
	22-63588	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE SEAT 4 TO 22 RH	1		19
	320574	. . TERMINAL, LH CONVAIR 98-90805-010 -V00779-	1		6
	320574	. . TERMINAL, RH CONVAIR 98-90805-010 -V00779-	1		4
	36157	. . TERMINAL, LH CONVAIR 98-90805-008 -V00779-	1		14
	36157	. . TERMINAL, RH CONVAIR 98-90805-008 -V00779-	1		9
-262	22-63593	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE SEAT 4 TO 5 LH	1		1
	22-63592	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE SEAT 4 TO 5 RH	1		1
	323288	. . PLUG, CONVAIR 96-89500-002 -V00779-	1		1
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3
-263	22-63593-1	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 5 TO 6 LH	1		1
	22-63592-1	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 5 TO 6 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		8
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3
-264	22-63601-1	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 5 TO 6 LH	1		1
	22-63600-1	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 5 TO 6 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		6
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		FUSELAGE FWD UNDER FLOOR ELECTRONIC HARNESSES OVER WING AREA AND ABOVE WHEEL WELL SEE 22-33003			
-157	22-33811	. HARNESS ASSEMBLY, AIR CONDITIONING TO PRESSURE FEED THRU A LH	1		1
-157.1	22-33810	. HARNESS ASSEMBLY, AIR CONDITIONING TO PRESSURE FEED THRU C RH	1		1
-158	22-33751	. HARNESS ASSEMBLY, COAX AIR CONDITIONING COMPARTMENT DISCONNECT TO HYDRAULIC COMPARTMENT DISCONNECT ADF 1	1	2	1
	22-33751-803	. HARNESS ASSEMBLY, COAX AIR CONDITIONING COMPARTMENT DISCONNECT TO HYDRAULIC COMPARTMENT DISCONNECT ADF 1	3		1
-159	22-33751-801	. HARNESS ASSEMBLY, COAX AIR CONDITIONING COMPARTMENT DISCONNECT TO HYDRAULIC COMPARTMENT DISCONNECT ADF 2	1	2	1
	22-33751-805	. HARNESS ASSEMBLY, COAX AIR CONDITIONING COMPARTMENT DISCONNECT TO HYDRAULIC COMPARTMENT DISCONNECT ADF 2	3		1
	UG88C-U	. . CONNECTOR, CONVAIR 92-47001-007	1		2
-160	22-33890	. . HARNESS ASSEMBLY, AIR CONDITIONING COMPARTMENT TO SPLICE	1		1
-161	22-33957	. HARNESS ASSEMBLY, RADIO COMPARTMENT SPLICE TO HYDRAULIC COMPARTMENT SPLICE HF 1	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		13
-162	22-33968	. HARNESS ASSEMBLY, RADIO COMPARTMENT SPLICE TO HYDRAULIC COMPARTMENT SPLICE HF 2	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		26
-163	22-33887	. HARNESS ASSEMBLY, RADIO COMPARTMENT SPLICE TO HYDRAULIC COMPARTMENT SPLICE PUBLIC ADDRESS	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	323975	. . SPLICE, CONVAIR 98-34009-003 -V00779-	1		22

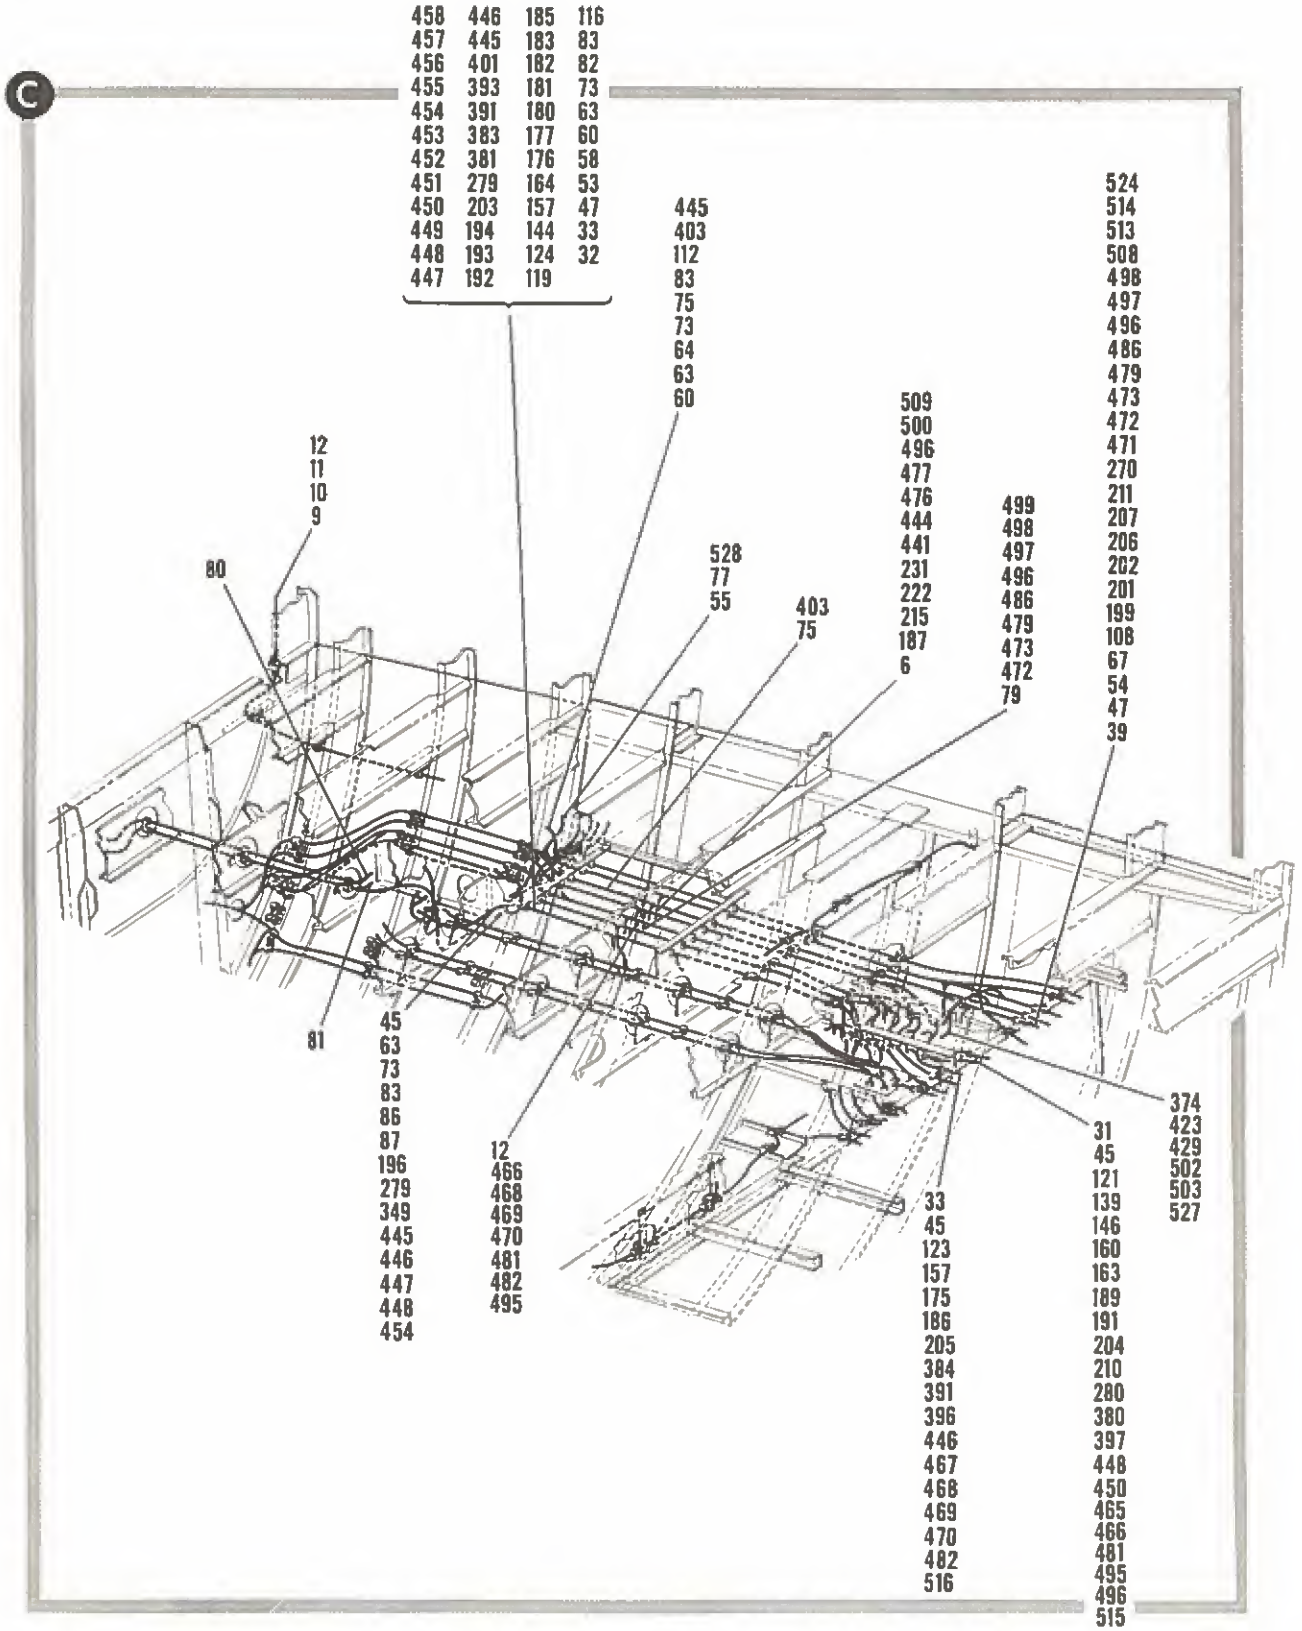

22.04.94.05.002-2

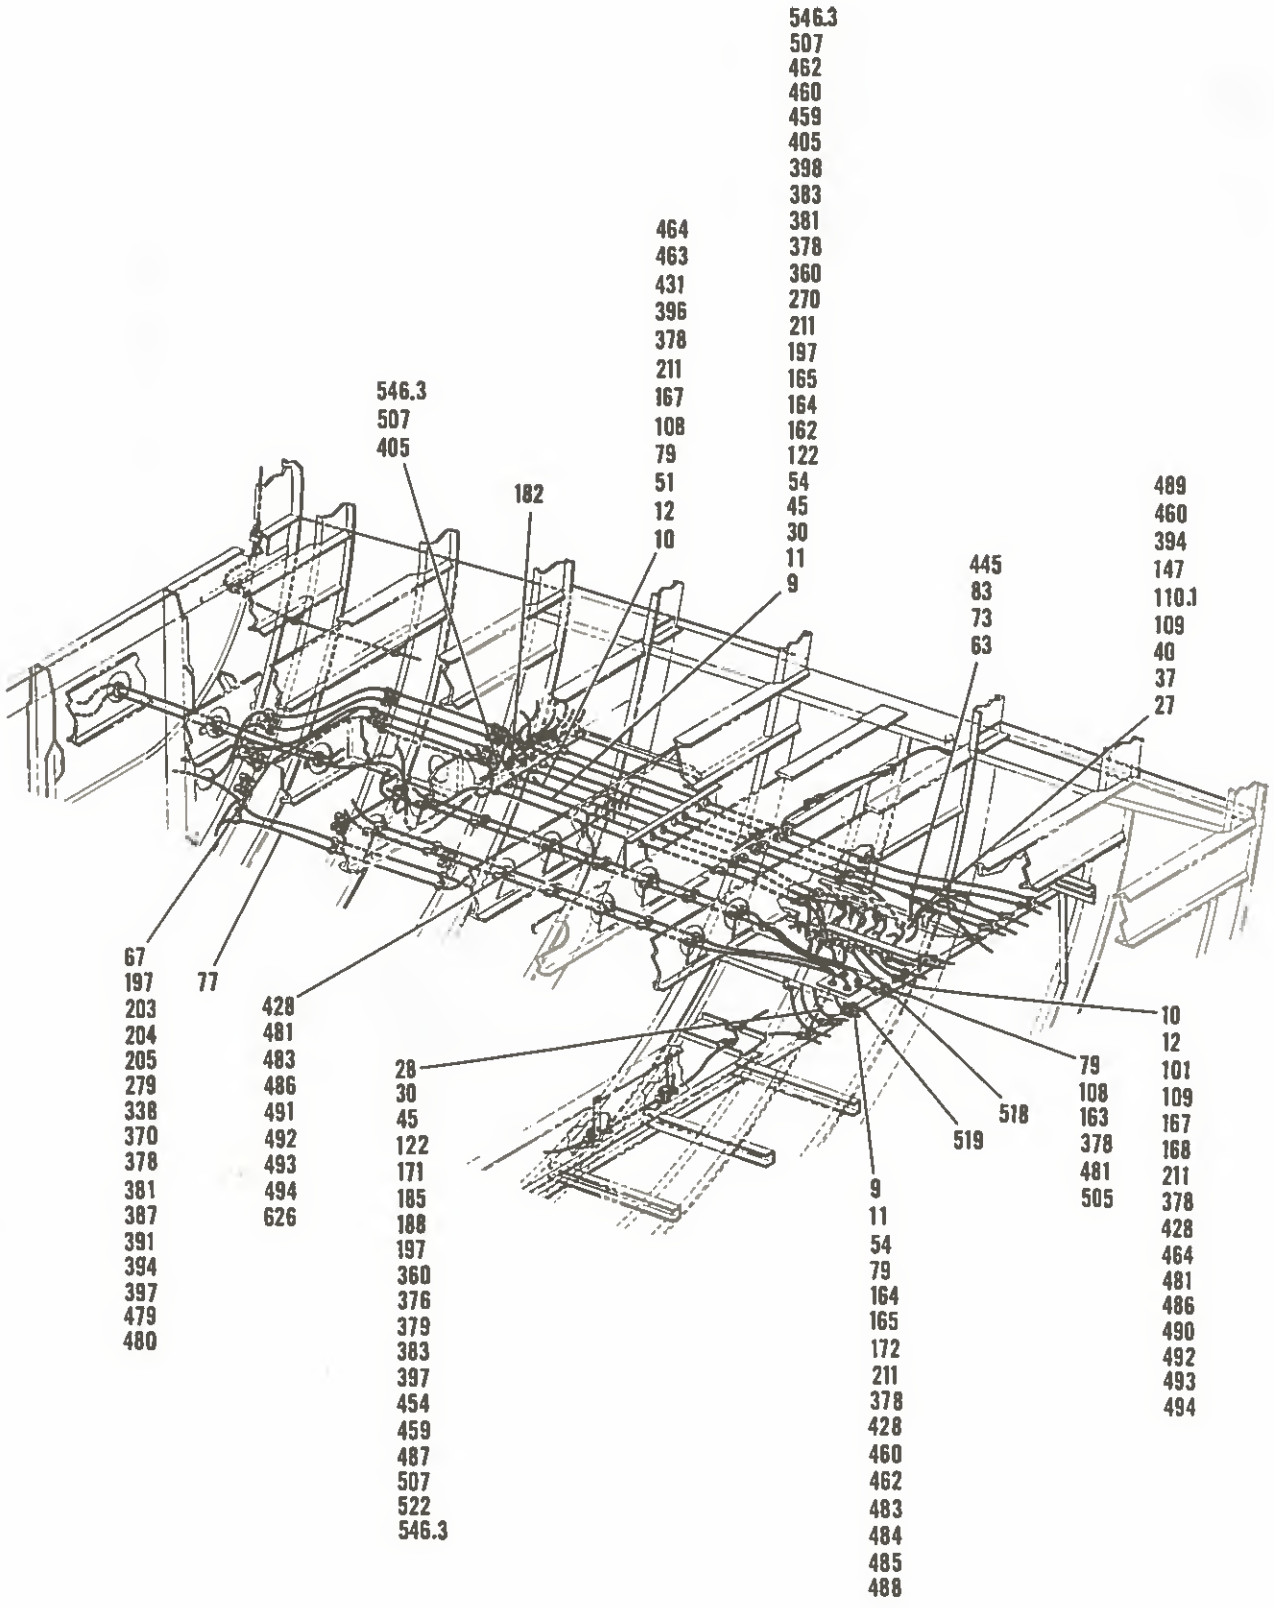


22.04.94.03.002-3


SECTION V

Chapter 94
ELECTRICAL HARNESSES

ELECTRONIC AND ELECTRICAL COMPARTMENT ELECTRICAL HARNESSES

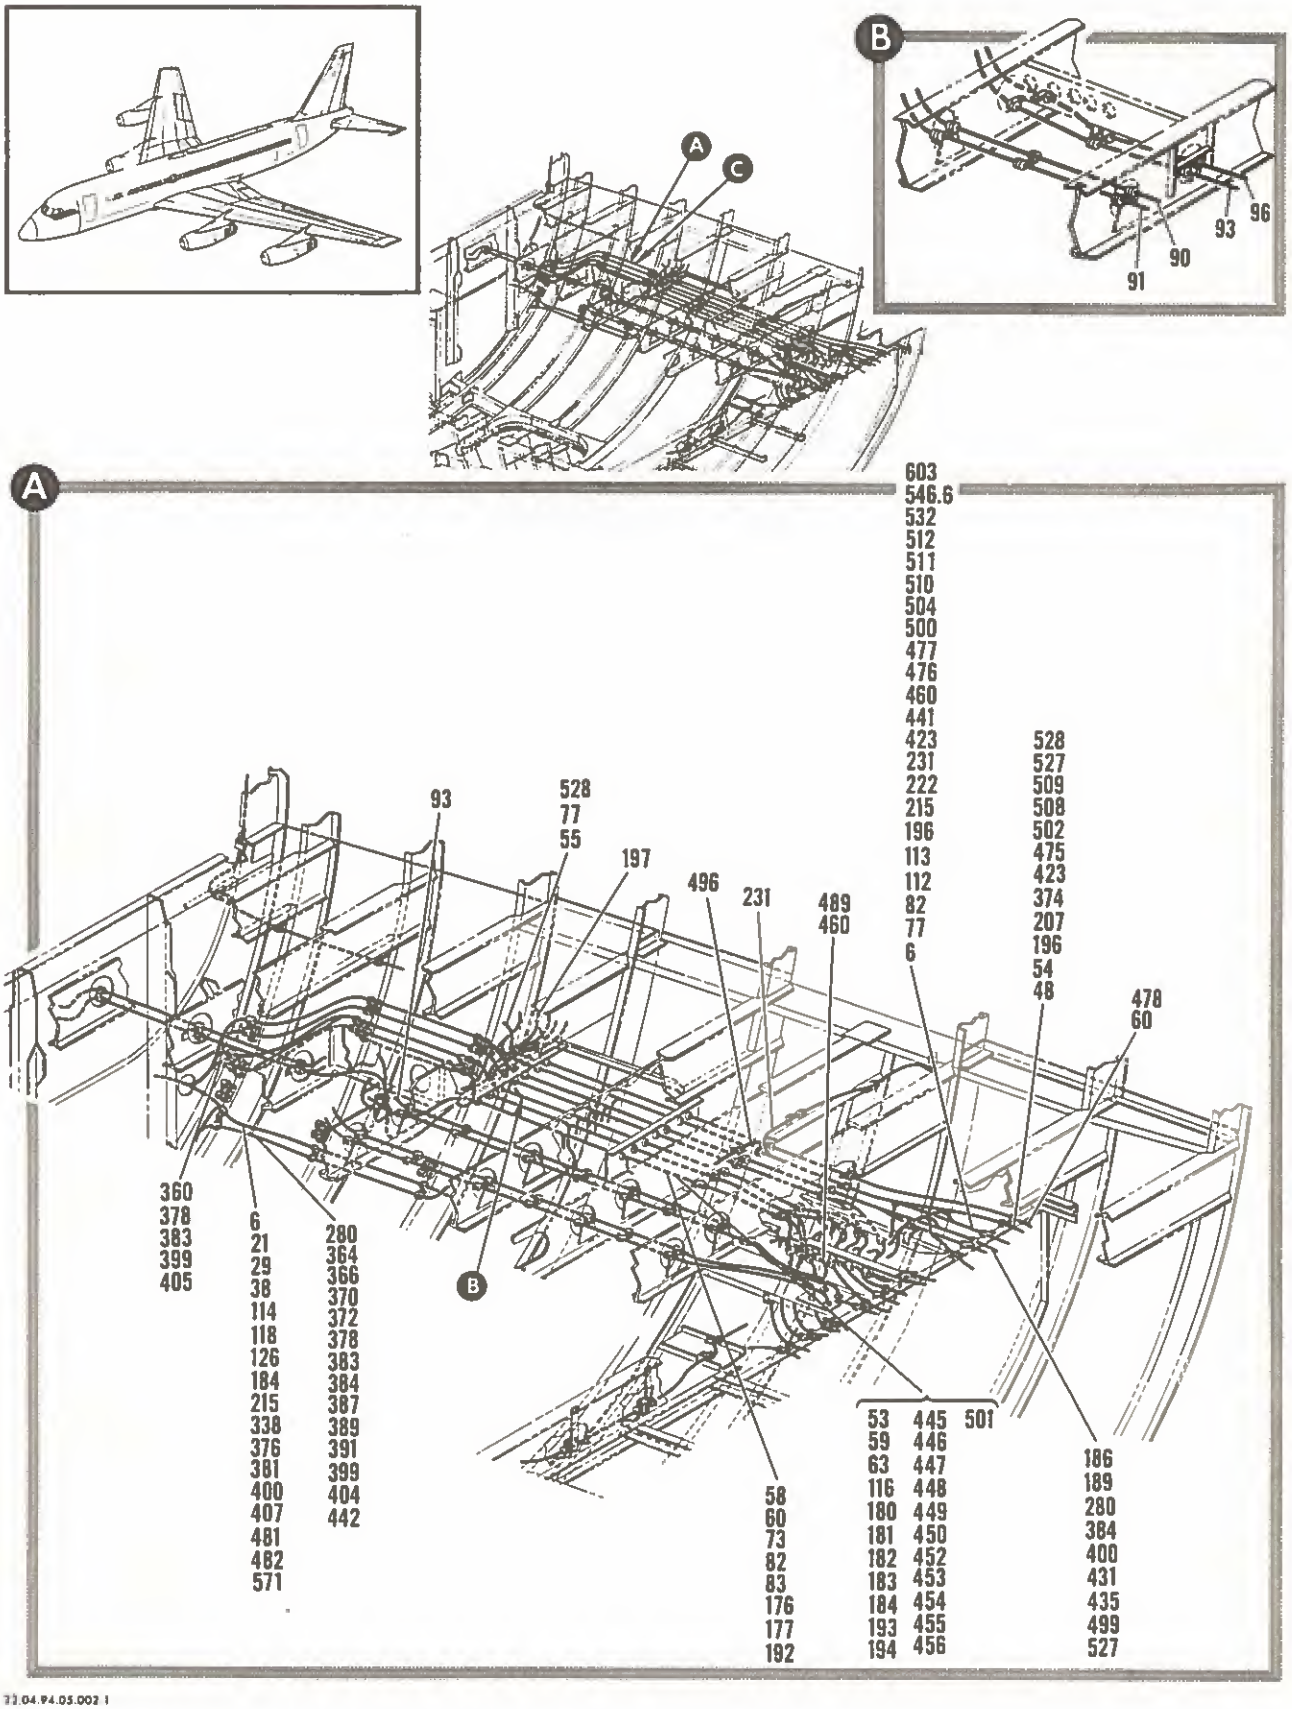

73.04.94.05.002 1

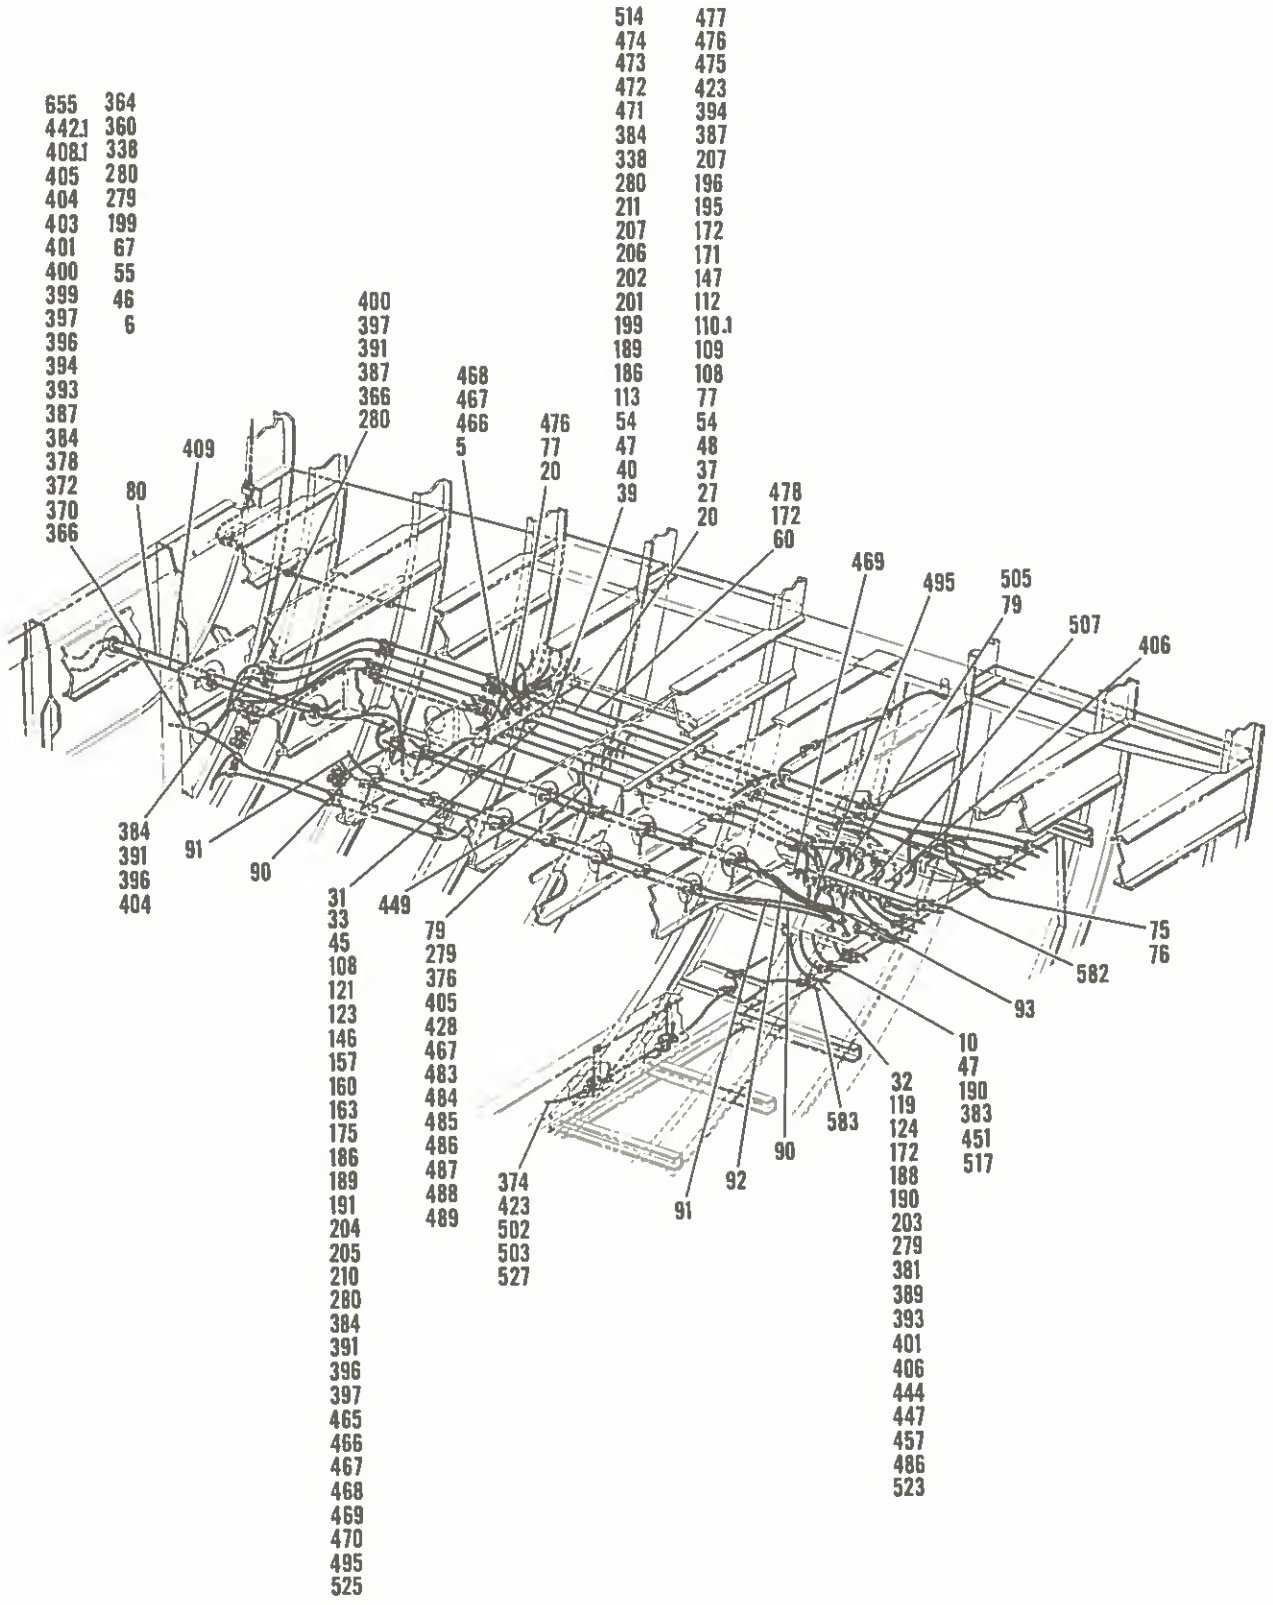

22.04.94.05.002-4

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		UNDERFLOOR STA 250 TO 375 RH ELECTRICAL HARNESSES SEE 22-61004			
-445	22-61845-1	. HARNESS ASSEMBLY, FLIGHT ENGINEER STATION TO TRANSFORMER RECTIFIER UNIT 2	1		1
	YAEV63L	. . TERMINAL, CONVAIR 98-90806-006 -V09922-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		2
	225-0017-000	. . PLUG, CONVAIR 92-91200-007 -V71468-	1		1
	024048-0000	. . CONNECTOR, CONVAIR 92-63901-012 -V71468-	1		4
	024049-0000	. . CONNECTOR, CONVAIR 92-63901-011 -V71468-	1		3
	EX06-16S1S	. . CONNECTOR, CONVAIR 92-40332-007 -V71468-	1		1
-446	22-61798-1	. HARNESS ASSEMBLY, CONTROLLER REGULATOR 4 TO PERMANENT SPLICE	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		7
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	JN10-104	. . FILTER, CONVAIR 93-78604-001 -V80183-	1		1
-447	22-61769-1	. HARNESS ASSEMBLY, CONTROLLER REGULATOR 2 TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		9
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
	JN10-104	. . FILTER, CONVAIR 93-78604-001 -V80183-	1		1
-448	22-61768-1	. HARNESS ASSEMBLY, CONTROLLER REGULATOR 3 TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		9
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
	JN10-104	. . FILTER, CONVAIR 93-78604-001 -V80183-	1		1
-449	22-61795-1	. HARNESS ASSEMBLY, RELAY INSTALLATION TO PERMANENT SPLICE STA 306	1		1
-450	22-61580	. HARNESS ASSEMBLY, MASTER WARNING BOX 3 TO PERMANENT SPLICE	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		17
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-451	22-62522	. HARNESS ASSEMBLY, STRUCTURE TEMPERATURE PERMANENT SPLICE TO FRONT SPAR FEED THRU PANEL A	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		8
-452	22-61858	. HARNESS ASSEMBLY, COPILOT POWER FAIL RELAYS TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		11

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -453	22-61857	. HARNESS ASSEMBLY, PILOT POWER FAIL RELAYS TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		7
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
-454	22-61799-1	. HARNESS ASSEMBLY, CONTROLLER REGULATOR 1 TO PERMANENT SPLICE	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		7
-455	22-61850	. HARNESS ASSEMBLY, PILOT ESSENTIAL 28 VOLT LIGHTING TRANSFORMER RELAY TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
-456	22-61633-1	. HARNESS ASSEMBLY, INSTRUMENT BUS TO INSTRUMENT POWER TRANSFER RELAY	1		1
-457	22-62517-1	. HARNESS ASSEMBLY, FEED THRU PANEL H TO INSTRUMENT PANEL STATION	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		15
-458	22-62506	. HARNESS ASSEMBLY, FEED THRU PANEL W TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		12
-459	22-61821	. HARNESS ASSEMBLY, ANTI-ICE RELAY 1 TO PERMANENT SPLICE	1		1
-460	22-62508-3	. HARNESS ASSEMBLY, FEED THRU PANEL W TO LANDING LIGHT RELAY LH	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		3
-461	22-62508-5	. HARNESS ASSEMBLY, FEED THRU PANEL W TO PERMANENT SPLICE	1		1
-462	22-62533-1	. HARNESS ASSEMBLY, FEED THRU PANEL F TO DIMMING RELAY BOX	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		6
-464	22-62548-1	. HARNESS ASSEMBLY, FEED THRU PANEL M TO DIMMING RELAY BOXES	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		9
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-465	22-62518-1	. HARNESS ASSEMBLY, FEED THRU PANEL P TO INSTRUMENT PANEL STATION	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		2
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		16
-466	22-62526	. HARNESS ASSEMBLY, FEED THRU PANEL R TO FLIGHT ENGINEER STATION	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		3
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		19
-467	22-62528-1	. HARNESS ASSEMBLY, FEED THRU PANEL N TO INSTRUMENT PANEL STATION	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		17
-468	22-62516-1	. HARNESS ASSEMBLY, FEED THRU PANEL Q TO FLIGHT ENGINEER STATION	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		3
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		18
-469	22-62530	. HARNESS ASSEMBLY, FEED THRU PANEL N TO RELAY INSTALLATION STA 306	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		11


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -470	22-61581	. HARNESS ASSEMBLY, MASTER WARNING BOX 4 TO PERMANENT SPLICE	1	10	1
	22-61581-1	. HARNESS ASSEMBLY, MASTER WARNING BOX 4 TO PERMANENT SPLICE	11		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-471	22-61836	. HARNESS ASSEMBLY, FLIGHT DECK PICKUP TO PERMANENT SPLICE	1		1
	CT06E14S9S	. . CONNECTOR, CONVAIR 92-40334-004 -V71468-	1		1
-472	22-62595-803	. HARNESS ASSEMBLY, LANDING GEAR SAFETY RELAY TO PLENUM CHAMBER FEED THRU V	A		1
	22-62595-5	. HARNESS ASSEMBLY, LANDING GEAR SAFETY RELAY TO PLENUM CHAMBER FEED THRU V	2	7	1
-473	22-61704-1	. HARNESS ASSEMBLY, WATER PUMP RELAY TO AIR PUMP MOTOR	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		3
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-474	22-62505	. HARNESS ASSEMBLY, FEED THRU PANEL X TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		12
-475	22-62616	. HARNESS ASSEMBLY, CIRCUIT BREAKER PERMANENT SPLICE TO REAR SPAR PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		2
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		9
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
		A AIRPLANES 1, 8 AND ON			

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -476	22-62617	. HARNESS ASSEMBLY, FLAP ASSYMMETRICAL RELAY INSTALLATION TO REAR SPAR PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		7
-477	22-62618-1	. HARNESS ASSEMBLY, HYDRAULIC MOTOR RELAY TO REAR SPAR PERMANENT SPLICE	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		4
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		16
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-478	22-62597-1	. HARNESS ASSEMBLY, PLENUM CHAMBER FEED THRU Y TO AC POWER DISTRIBUTION BOX	1		1
	YAEV6C-L1	. . TERMINAL, CONVAIR 98-90806-005 -V09922-	1		3
-479	22-61577-1	. HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX 6 TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		20
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
-480	22-61586	. HARNESS ASSEMBLY, FIRE CONTROL TO DISCONNECT LH	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		16
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		3
	PT06E14-19P	. . CONNECTOR, CONVAIR 92-40325-009 -V77820-	1		1
-481	22-61574-1	. HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX 3 TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		18
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
-482	22-61575-1	. HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX 4 TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		18
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V08640-	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -483	22-62607	. HARNESS ASSEMBLY, FEED THRU PANEL E TO OUTBD BOOST RELAY 2	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		3
-484	22-62601	. HARNESS ASSEMBLY, FEED THRU PANEL E TO INBD BOOST RELAY 1	1		1
-485	22-62605	. HARNESS ASSEMBLY, FEED THRU PANEL E TO OUTBD BOOST RELAY 1	1		1
-486	22-61573-1	. HARNESS ASSEMBLY, LIGHT DIMMING RELAY TO PERMANENT SPLICE BOX 2	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		18
-487	22-61578	. HARNESS ASSEMBLY, MASTER WARNING BOX 1 TO PERMANENT SPLICE	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		15
-488	22-62603	. HARNESS ASSEMBLY, FEED THRU PANEL E TO INBD BOOST RELAY 2	1		1
-489	22-62520-1	. HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL A TO INBD LANDING LIGHT RELAY LH	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		4
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		9
-490	22-62558	. HARNESS ASSEMBLY, FEED THRU PANEL M TO RELAYS STA 306	1		1
-491	22-62600	. HARNESS ASSEMBLY, FEED THRU PANEL L TO INBD BOOST RELAY 4	1		1
-492	22-62602	. HARNESS ASSEMBLY, FEED THRU PANEL L TO INBD BOOST RELAY 3	1		1
-493	22-62604	. HARNESS ASSEMBLY, FEED THRU PANEL L TO OUTBD BOOST RELAY 4	1		1
-494	22-62606	. HARNESS ASSEMBLY, FEED THRU PANEL L TO OUTBD BOOST RELAY 3	1		1
-495	22-62524	. HARNESS ASSEMBLY, FEED THRU PANEL P TO EQUIPMENT INSTALLATION STA 323	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		11

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		PASSENGER COMPARTMENT STA 640 TO 888 ELECTRICAL HARNESSES SEE 22-63002 AND 22-63003			
-274	22-63601-5	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 7 TO 8 LH	1		1
	22-63600-5	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 7 TO 8 RH	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
-275	22-63593-5	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 7 TO 8 LH	1		1
	22-63592-5	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 7 TO 8 RH	1		1
-276	22-63601-801	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 8 TO 9 LH	1		1
	22-63600-801	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 8 TO 9 RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		6
-277	22-63593-801	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 8 TO 9 LH	1		1
	22-63592-801	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 8 TO 9 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		8
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		6
	320574	. . TERMINAL, LH CONVAIR 98-90805-010 -V00779-	1		1
-278	22-63592-803	. HARNESS ASSEMBLY, READING LIGHTS TO SEAT 9 TO GROUND RH	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
-281	22-63617	. HARNESS ASSEMBLY, COAT RACK DISCONNECT TO PERMANENT SPLICE	1		1
	PT0E6E8-4P	. . CONNECTOR, CONVAIR 92-40325-029 -V77820-	1		1
-282	22-63520	. HARNESS ASSEMBLY, EMERGENCY EXIT SIGN TO CABIN PERMANENT SPLICE LH	1		1
	22-63530	. HARNESS ASSEMBLY, EMERGENCY EXIT SIGN TO CABIN PERMANENT SPLICE RH	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		1
	36151	. . TERMINAL, LH CONVAIR 98-90805-001 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320553	. . TERMINAL, LH CONVAIR 98-90805-020 -V00779-	1		3
	320553	. . TERMINAL, RH CONVAIR 98-90805-020 -V00779-	1		6
-283	22-63540	. HARNESS ASSEMBLY, CABIN COVE LIGHTS STA 807 TO 953 LH	1		1
	22-63541	. HARNESS ASSEMBLY, CABIN COVE LIGHTS STA 807 TO 953 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		37
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -284	22-63589	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 8 TO 14 LH	1		7
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		5
	22-63580	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 8 TO 14 RH	1		1
-285	22-63526	. HARNESS ASSEMBLY, WINDOW LIGHT TO PERMANENT SPLICE STA 659 TO 926 LH	1		1
	22-63527	. HARNESS ASSEMBLY, WINDOW LIGHT TO PERMANENT SPLICE STA 659 TO 926 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		35
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7
-286	22-63595	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 9 TO 10 LH	1		1
-287	22-63603	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 9 TO 10 LH	1		1
	22-63602	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 9 TO 10 RH	1		1
-288	22-63595-1	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 10 TO 11 LH	1		1
	22-63594	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 10 TO 11 RH	1		1
	323288	. . PLUG, LH CONVAIR 96-89500-002 -V00779-	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		8
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3
-289	22-63603-1	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 10 TO 11 LH	1		1
	22-63602-1	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 10 TO 11 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		6
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3
-290	22-63595-3	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 11 TO 12 LH	1		1
	22-63594-1	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 11 TO 12 RH	1		1
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3
-291	22-63603-3	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 11 TO 12 LH	1		1
	22-63602-3	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 11 TO 12 RH	1		1
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3
-292	22-63595-5	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 12 TO 13 LH	1		1
	22-63594-3	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 12 TO 13 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		8
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3
-293	22-63603-5	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 12 TO 13 LH	1		1
	22-63602-5	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 12 TO 13 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		6
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3

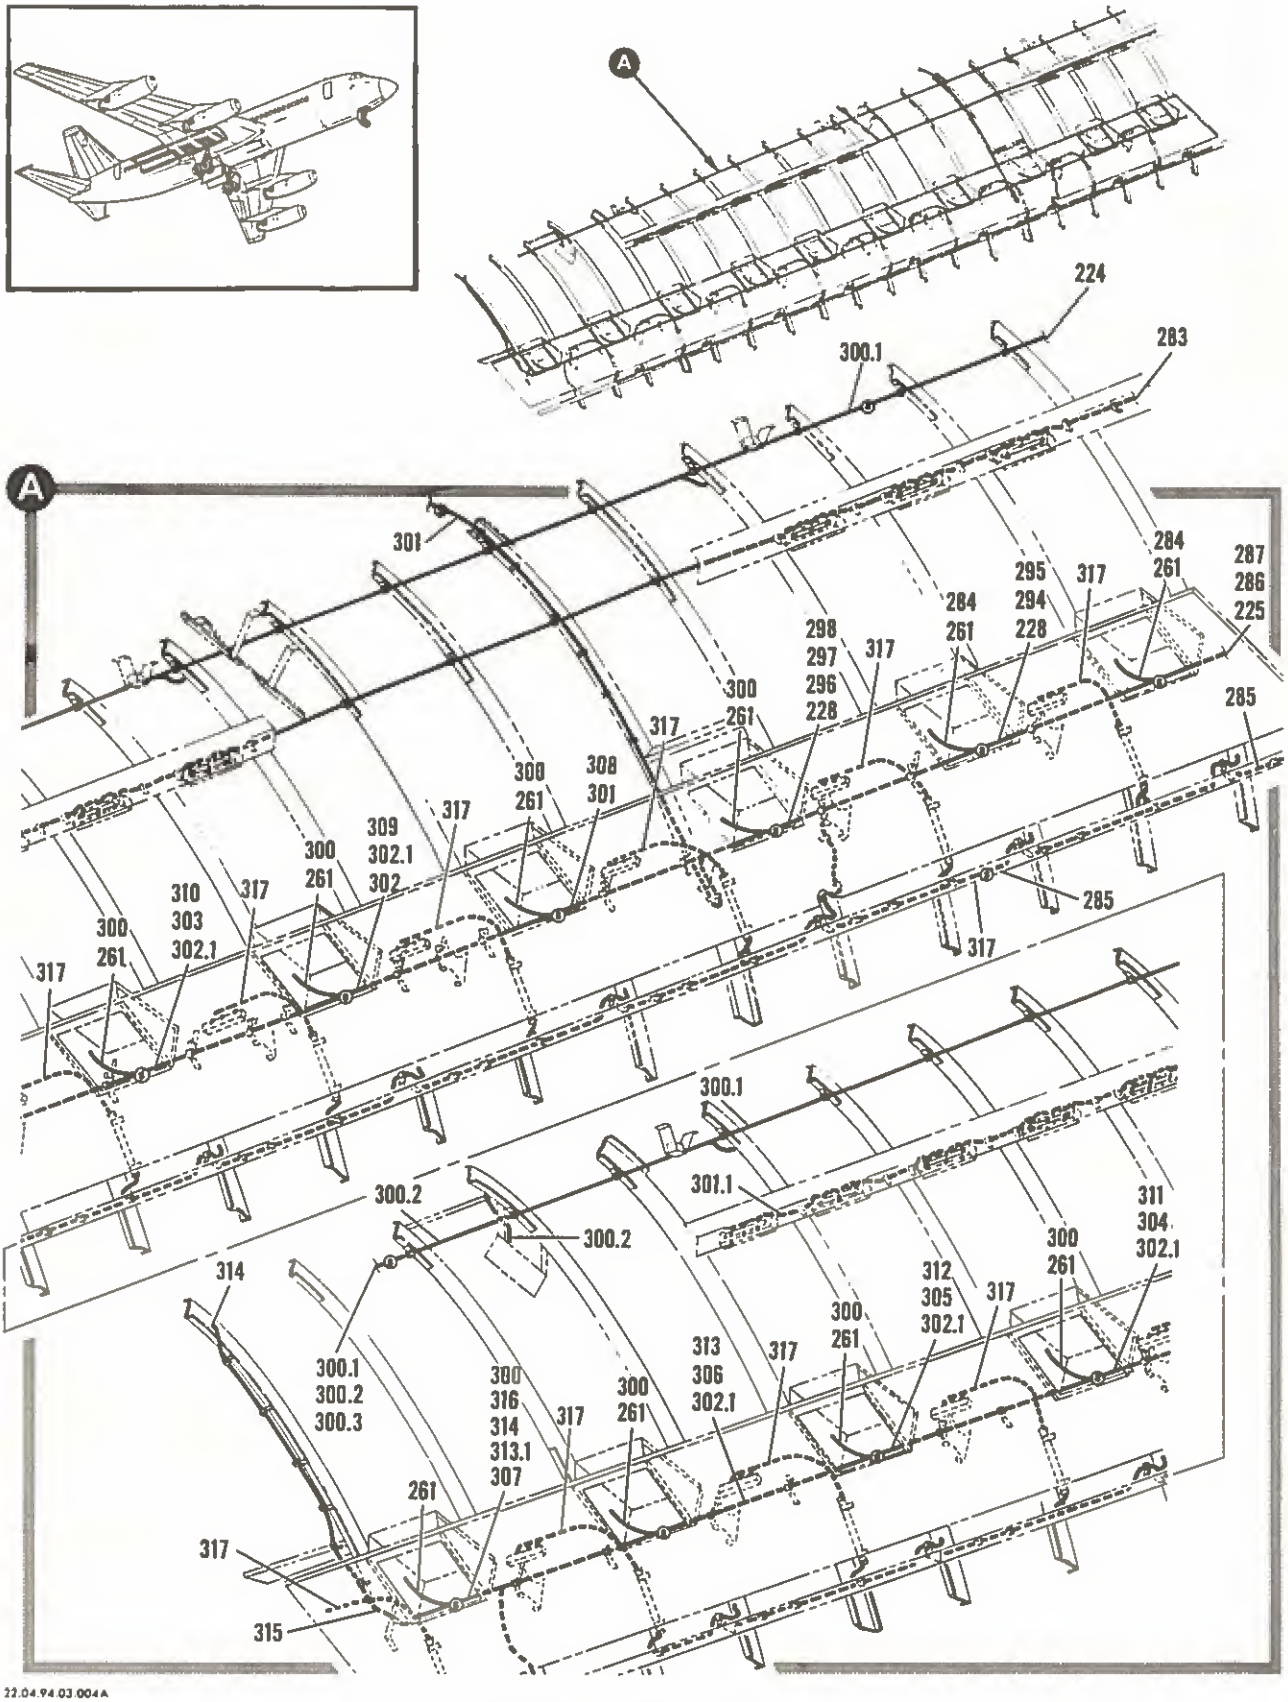


22.04.94.03.004A

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		PASSENGER COMPARTMENT STA 888 TO 1249 ELECTRICAL HARNESSES SEE 22-63003			
-294	22-63595-801	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 13 TO 14 LH	1		1
	22-63594-5	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 13 TO 14 RH	1		1
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3
-295	22-63603-801	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 LH	1		1
	22-63602-801	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 13 TO 14 RH	1		1
	320559	. . SPLICE, LH CONVAIR 98-34001-003 -V00779-	1		2
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		3
-296	22-63594-801	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 14 TO GROUND RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
-297	22-63603-803	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 14 TO 15 LH	1		1
	22-63602-803	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 14 TO 16 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		2
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		1
-298	22-63595-803	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 14 TO GROUND LH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		8
	320574	. . CONDUCTOR, CONVAIR 98-90805-010 -V00779-	1		1
	22-63594-803	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 15 TO 16 RH	1		1
-300	22-63549	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEATS 15 TO 22 LH	1		8
	22-63584	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH TO PERMANENT SPLICE SEAT 15 TO 22 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		5
-300.1	22-63555	. HARNESS ASSEMBLY, AISLE LIGHT TO STEWARDESS PANEL PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		16
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-300.2	22-63583	. HARNESS ASSEMBLY, STEWARDESS CALL SIGN AFT CABIN TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		17
-300.3	22-63622	. HARNESS ASSEMBLY, CABIN VALANCE LIGHT TO BALLAST TERMINAL STRIP LH	1		20
-301	22-63605	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 15 TO 16 LH	1		1
	22-63604	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 15 TO 16 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-301.1	22-63542	. HARNESS ASSEMBLY, CABIN COVE LIGHT STA 1035 TO 1179 LH	1		1
	22-63543	. HARNESS ASSEMBLY, CABIN COVE LIGHT STA 1033 TO 1179 RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		41
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-302	22-63605-1	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 16 TO 17 LH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		6
-302.1	22-63604-1	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 16 TO 18 RH	1		1


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3 -303	22-63605-3	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 17 TO 18 LH	1		1
	22-63604-3	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 17 TO 18 RH	1		1
-304	22-63605-5	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 18 TO 19 LH	1		1
	22-63604-5	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 18 TO 19 RH	1		1
-305	22-63605-801	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 19 TO 20 LH	1		1
	22-63604-801	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 19 TO 20 RH	1		1
-306	22-63605-803	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 20 TO 21 LH	1		1
	22-63604-803	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 20 TO 21 RH	1		1
-307	22-63605-805	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 21 TO 22 LH	1		1
	22-63604-805	. HARNESS ASSEMBLY, PASSENGER CALL SWITCH PERMANENT SPLICE SEAT 21 TO 22 RH	1		1
	320562	. . SPLICE, SEAT 16 TO 17, 18 TO 19, AND 20 TO 21 LH CONVAIR 98-34001-001	1		6
	320562	. . SPLICE, SEAT 21 TO 22 LH CONVAIR 98-34001-001 -V00779-	1		3
	320562	. . SPLICE, SEAT 16 TO 17, AND 19 TO 20 RH CONVAIR 98-34001-001 -V00779-	1		3
	320562	. . SPLICE, SEAT 17 TO 18, AND 20 TO 21 RH CONVAIR 98-34001-001 -V00779-	1		6
	320562	. . SPLICE, SEAT 21 TO 22 RH CONVAIR 98-34001-001 -V00779-	1		1
	323288	. . PLUG, SEAT 21 TO 22 LH CONVAIR 96-89500-002 -V00779-	1		1
	320570	. . CONDUCTOR, SEAT 21 TO 22 RH CONVAIR 98-34001-002 -V00779-	1		2
	320559	. . CONDUCTOR, SEAT 16 TO 18 RH CONVAIR 98-34001-003 -V00779-	1		2
-308	22-63597	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 15 TO 16 LH	1		1
-309	22-63597-1	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 16 TO 17 LH	1		1
	22-63596	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 16 TO 17 RH	1		1
-310	22-63597-3	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 17 TO 18 LH	1		1
	22-63596-1	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 17 TO 18 RH	1		1
-311	22-63597-5	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 18 TO 19 LH	1		1
	22-63596-3	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 18 TO 19 RH	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3 -312	22-63597-801	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 19 TO 20 LH	1		1
	22-63596-5	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 19 TO 20 RH	1		1
-313	22-63597-803	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 20 TO 21 LH	1		1
	22-63596-801	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 20 TO 21 RH	1		1
-313.1	22-63596-803	. HARNESS ASSEMBLY, READING LIGHTS PERMANENT SPLICE SEAT 21 TO 22 RH	1		1
	320562	. . SPLICE, SEAT 16 TO 17, 18 TO 19 AND 20 TO 21 LH CONVAIR 98-34001-001 -V00779-	1		8
	320562	. . SPLICE, SEAT 16 TO 17, AND 19 TO 20 RH CONVAIR 98-34001-001 -V00779-	1		3
	320562	. . SPLICE, SEAT 17 TO 18, AND 20 TO 21 RH CONVAIR 98-34001-001 -V00779-	1		6
	320562	. . SPLICE, SEAT 21 TO 22 RH CONVAIR 98-34001-001 -V00779-	1		1
	323288	. . PLUG, SEAT 16 TO 17 LH CONVAIR 98-89500-002 -V00779-	1		1
	320570	. . SPLICE, SEAT 21 TO 22 RH CONVAIR 98-34001-002 -V00779-	1		2
	320574	. . TERMINAL, SEAT 21 TO 22 RH CONVAIR 98-90805-010 -V00779-	1		1
-314	22-63599	. HARNESS ASSEMBLY, READING LIGHT PERMANENT SPLICE SEAT 21 TO GROUND LH	1		1
-315	22-63599-1	. HARNESS ASSEMBLY, READING LIGHT PERMANENT SPLICE SEAT 22 TO PERMANENT SPLICE LH	1		1
	320574	. . TERMINAL, SEAT 21 TO GROUND LH CONVAIR 98-90805-010 -V00779-	1		1
	323288	. . PLUG, SEAT 21 TO GROUND LH CONVAIR -V00779-	1		1
	320570	. . SPLICE, SEAT 21 TO GROUND LH CONVAIR -V00779-	1		4
	36153	. . TERMINAL, SEAT 22 TO PERMANENT SPLICE LH -V00779-	1		4
-316	22-63598	. HARNESS ASSEMBLY, AFT STEWARDESS PANEL READING LIGHT TO PERMANENT SPLICE RH	1		1
-317	22-63528	. HARNESS ASSEMBLY, WINDOW LIGHTS STA 926 TO 1230 LH	1		1
	22-63529	. HARNESS ASSEMBLY, WINDOW LIGHTS STA 926 TO 1230 RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		AR

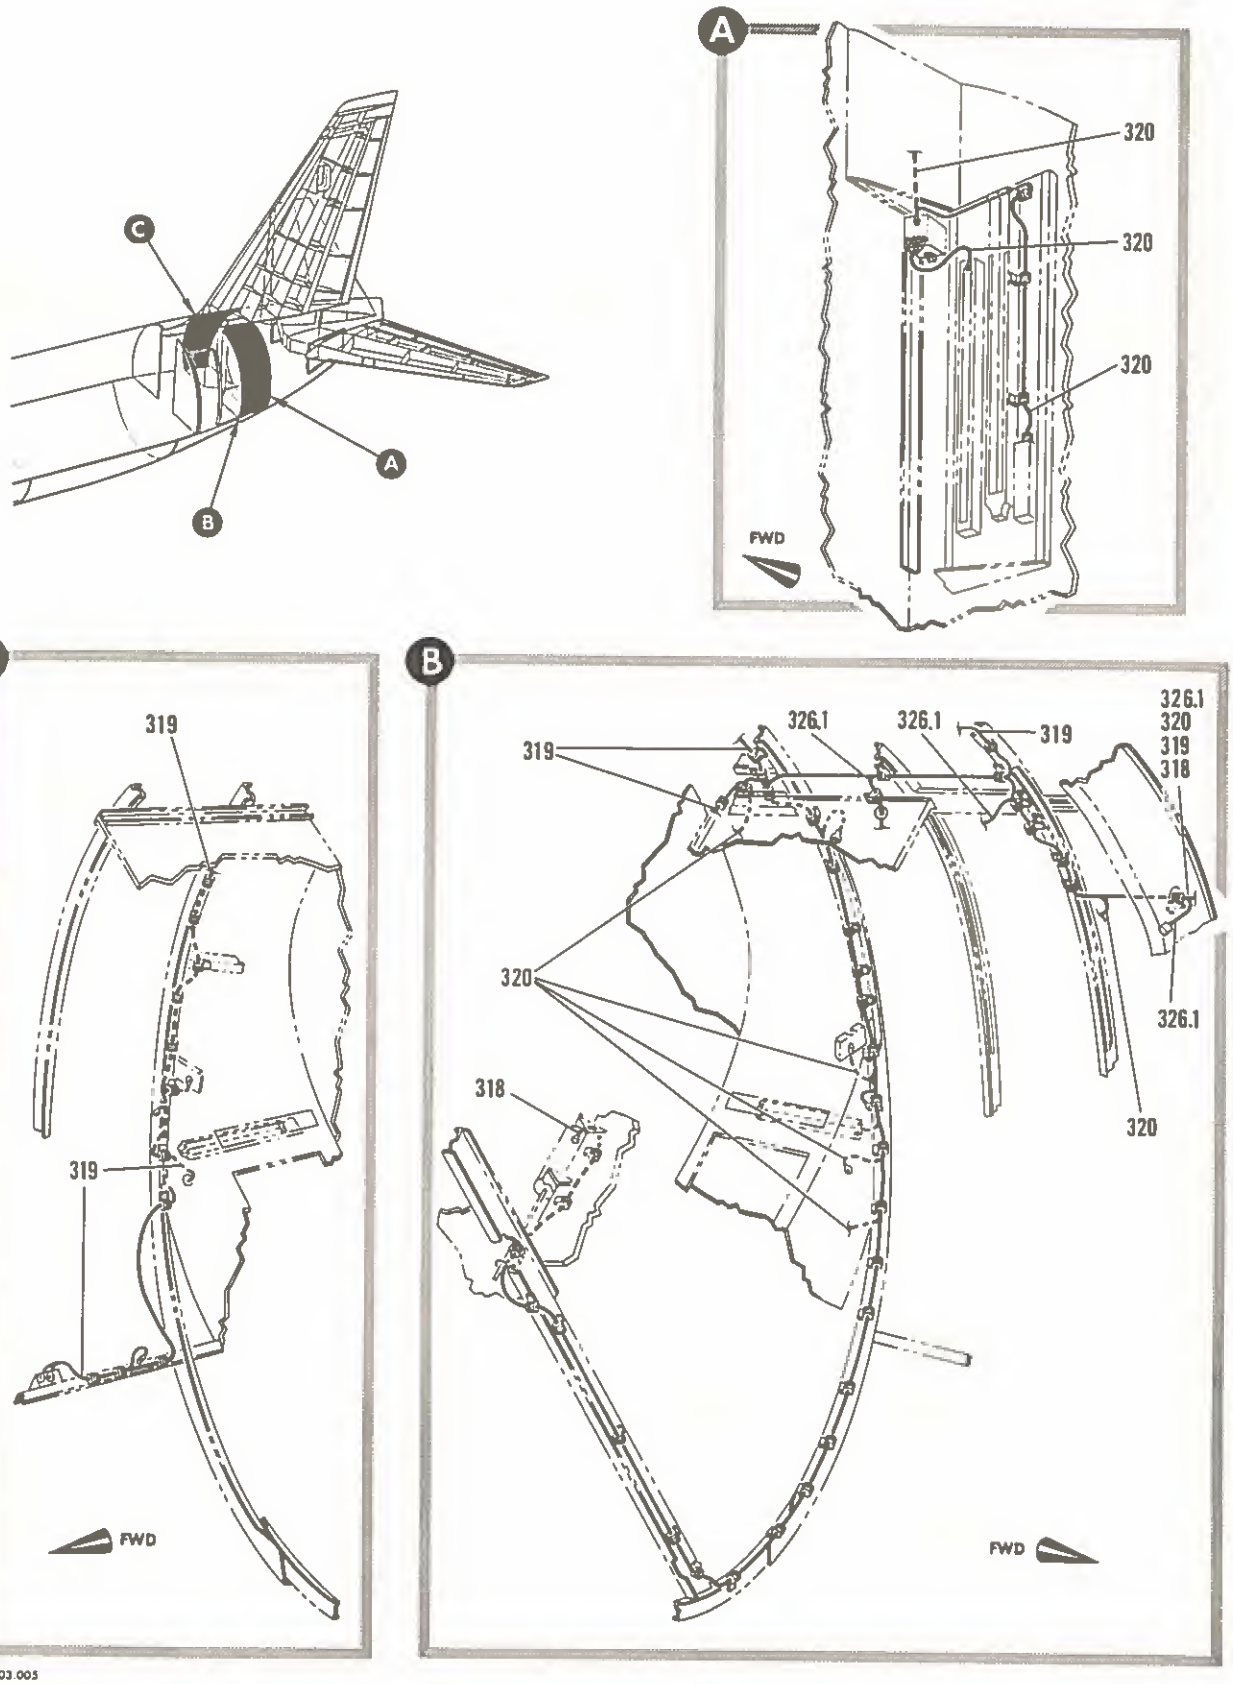

AFT LAVATORY ABOVE FLOOR ELECTRICAL HARNESSES
FIGURE 4

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4		AFT LAVATORY ABOVE FLOOR ELECTRICAL HARNESSES SEE 22-63003			
-318	22-62622-1	. HARNESS ASSEMBLY, AFT LAVATORY WATER HEATER TO REAR SPAR PERMANENT SPLICE	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1
	320569	. . TERMINAL, CONVAIR 98-90805-017 -V00779-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		5
-319	22-63510	. HARNESS ASSEMBLY, AFT LAVATORY CALL SWITCH TO PERMANENT SPLICE RH	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		17
-320	22-63511	. HARNESS ASSEMBLY, AFT LAVATORY DOOR SWITCH TO PERMANENT SPLICE LH	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		5
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
	323975	. . CONNECTOR, CONVAIR 98-34009-003 -V00779-	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		9
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		16

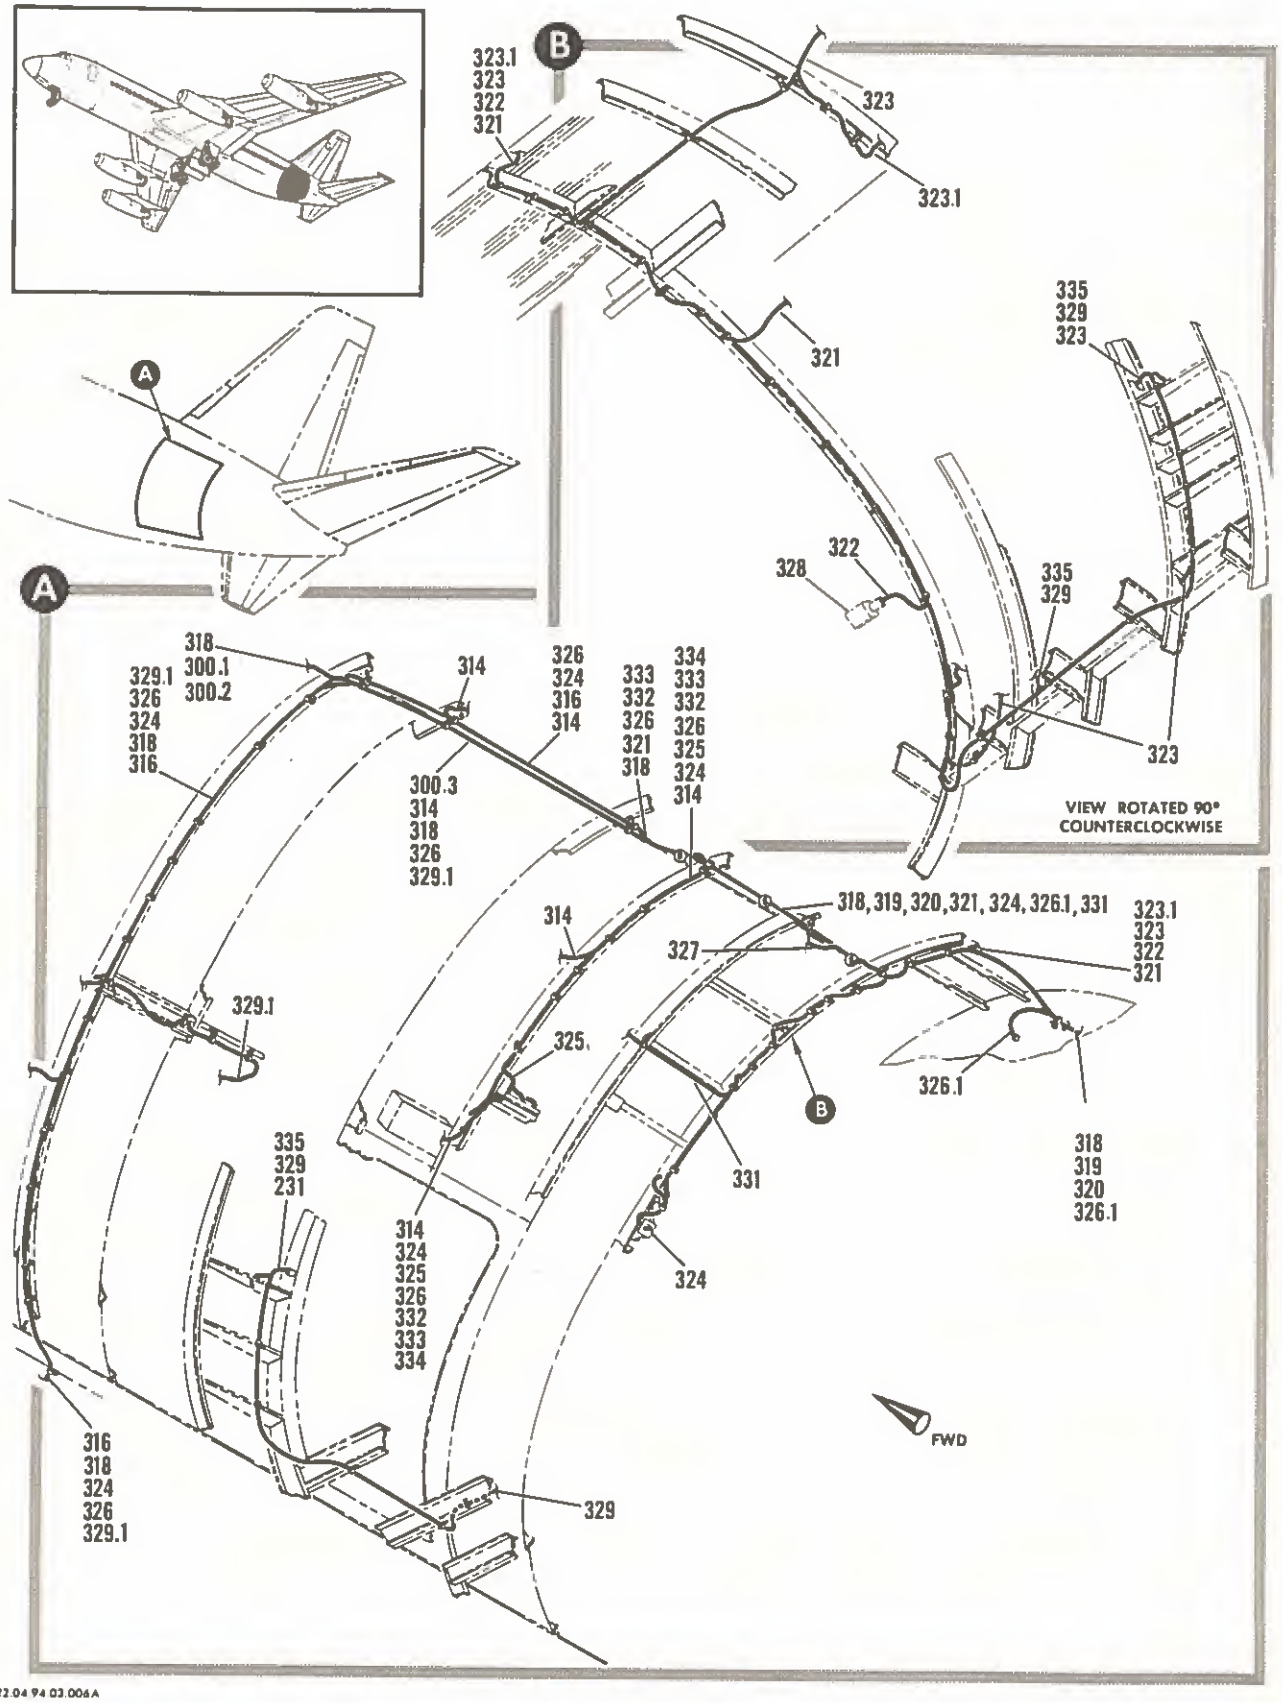

AFT ENTRANCE AREA ELECTRICAL HARNESSES
FIGURE 5


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5		AFT ENTRANCE AREA ELECTRICAL HARNESSES SEE 22-63003			
-321	22-63516	. HARNESS ASSEMBLY, AFT COAT CLOSET SWITCH TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		2
-322	22-63563-1	. HARNESS ASSEMBLY, AFT LOADING RAMP DISCONNECT TO PERMANENT SPLICE	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	PT06E12-3S	. . CONNECTOR, CONVAIR 92-40325-015 -V06840-	1		1
-323	22-63565	. HARNESS ASSEMBLY, AFT PASSENGER ENTRANCE LIGHTS TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		5
-324	22-63503-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO BUFFET 3	1	10	1
	22-63503-807	. HARNESS ASSEMBLY, PERMANENT SPLICE TO BUFFET 3	11		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	PT00E16-8S	. . TERMINAL, CONVAIR 98-50288-023 -V77820-	1		1
	CT00E24-22S	. . CONNECTOR, CONVAIR 92-50293-013 -V71468-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1
-326	22-63509	. HARNESS ASSEMBLY, STEWARDESS AFT SWITCH PANEL TO PERMANENT SPLICE	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		4
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		11
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		8
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		6
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		5
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		1
	YAEV4C-L	. . TERMINAL, CONVAIR 98-90806-011 -V09922-	1		1
	Y8V6C-L9	. . TERMINAL, CONVAIR 98-90813-005 -V09922-	1		1
-326.1	22-63551	. HARNESS ASSEMBLY, AFT LAVATORY WARNING SIGN TO PERMANENT SPLICE RH	1		1


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5 -327	22-63513	. HARNESS ASSEMBLY, AFT EXIT SIGN TO PERMANENT SPLICE	1		1
-328	22-63561-1	. HARNESS ASSEMBLY, AFT LOADING RAMP RECEPTACLE TO DISCONNECT	1		1
	PT00E12-3P	. . CONNECTOR, CONVAIR 92-50288-012 -V06840-	1		1
	323039	. . TERMINAL, CONVAIR 98-90817-002 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-329	22-62614-1	. HARNESS ASSEMBLY, AFT CARGO DOOR SWITCH TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
-329.1	22-63611	. HARNESS ASSEMBLY, BUFFET 4 TO PERMANENT SPLICE	1		1
	PT00E12-3S	. . CONNECTOR, CONVAIR 92-50288-021 -V06840-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-331	22-63545	. HARNESS ASSEMBLY, AFT BUFFET LIGHTS TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7
-332	22-63582	. HARNESS ASSEMBLY, AFT STEWARDESS PANEL WARNING SIGN TO PERMANENT SPLICE	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		37
-333	22-63585	. HARNESS ASSEMBLY, AFT STEWARDESS BOX DIODES TO PERMANENT SPLICE	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
-334	22-63571	. HARNESS ASSEMBLY, EMERGENCY LIGHT SWITCH TO AFT STEWARDESS PANEL PERMANENT SPLICE	1		1
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		2
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		2

SECTION V

Chapter 94
ELECTRICAL HARNESSES


FUSELAGE NOSE UNDERFLOOR ELECTRICAL HARNESSES

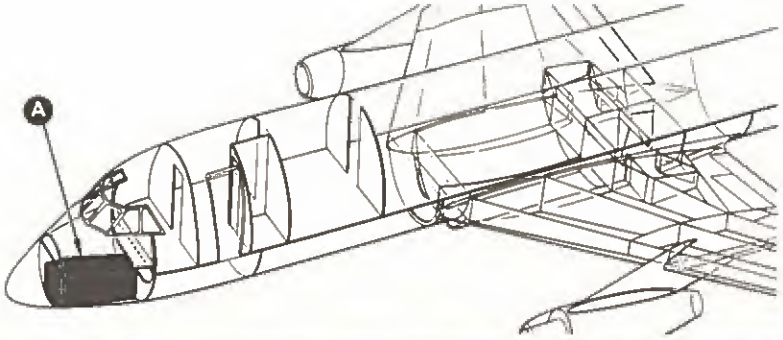

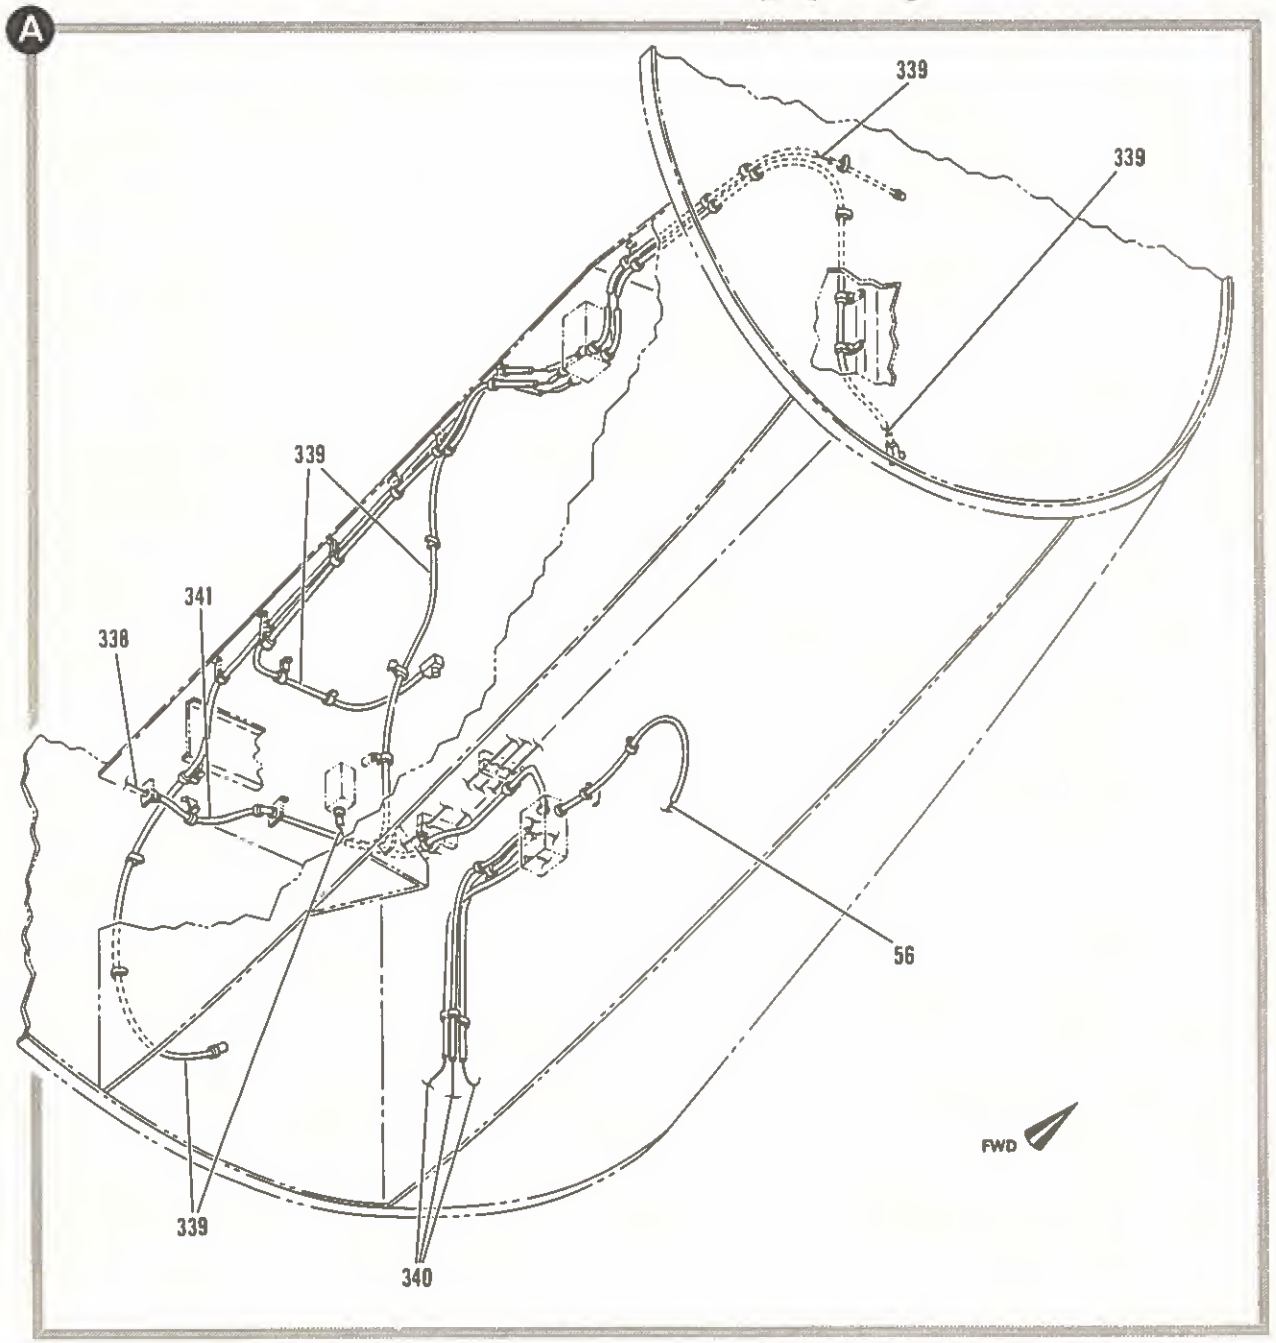

22.04.94.04.002

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		NOSE LANDING GEAR ELECTRICAL HARNESSES SEE 22-61000			
-338	22-61523-1	. HARNESS ASSEMBLY, NWW DISCONNECT A TO ANTISKID CONTROL BOX	1		1
	PT00E14-19S	. . CONNECTOR, CONVAIR 92-50288-008 -V06840-	1		1
-339	22-61524-801	. HARNESS ASSEMBLY, DISCONNECT PLUG C TO NWW	1		1
	5EN13-6	. . SWITCH, MFR TO SPEC CONT 22-06477-1 -V74059-	1		1
	1EN64-6	. . SWITCH, MFR TO SPEC CONT 22-06479-1 -V74059-	1		1
	590001-7-0914	. . CONDUIT, CONVAIR 92-30000-003 -V00624-	1		1
	590001-7-0414	. . CONDUIT, CONVAIR 92-30000-002 -V00624-	1		1
	590001-117-0600	. . CONDUIT, CONVAIR 92-30000-019 -V00624-	1		1
	590001-29-0520	. . CONDUIT, CONVAIR 92-30000-014 -V00624-	1		1
	590001-29-0024	. . CONDUIT, CONVAIR 92-30000-015 -V00624-	1		1
	PT06A8-4P	. . CONNECTOR, CONVAIR 92-40325-003 -V06840-	1		1
	PT06E20-39P	. . CONNECTOR, CONVAIR 92-40325-030 -V06840-	1		1
	71-184776-8-4S	. . CONNECTOR, CONVAIR 92-40325-065 -V06840-	1		1
-340	22-61522	. HARNESS ASSEMBLY, PEMANENT SPLICE BOX TO NOSE LANDING GEAR	1		1
	5EN13-6	. . SWITCH, LIMIT MFR TO SPEC CONT 22-06477-1 -V91929-	1		1
	71-184776-4S	. . PLUG, CONVAIR 92-40325-065 -V06840-	1		1
	590001-117-0680	. . CONDUIT, CONVAIR 92-30000-097 -V00624-	1		1
	590001-11-1410	. . CONDUIT, CONVAIR 92-30000-032 -V00624-	1		1
	590001-29-0680	. . CONDUIT, CONVAIR 92-30000-033 -V00624-	1		1
	AN3055	. . CONNECTOR	1		1
	1EN64-6	. . SWITCH, LIMIT MFR TO SPEC CONT 22-06479-1 -V74059-	1		1
-341	22-61529-1	. HARNESS ASSEMBLY, DISCONNECT PLUG A TO NLG PERMANENT SPLICE	1		1
	71-184779-14-	. . CONNECTOR, 19P CONVAIR 92-40325-073 -V06840-	1		1
	590001-49-0136	. . CONDUIT, CONVAIR 92-30000-035 -V00624-	1		1

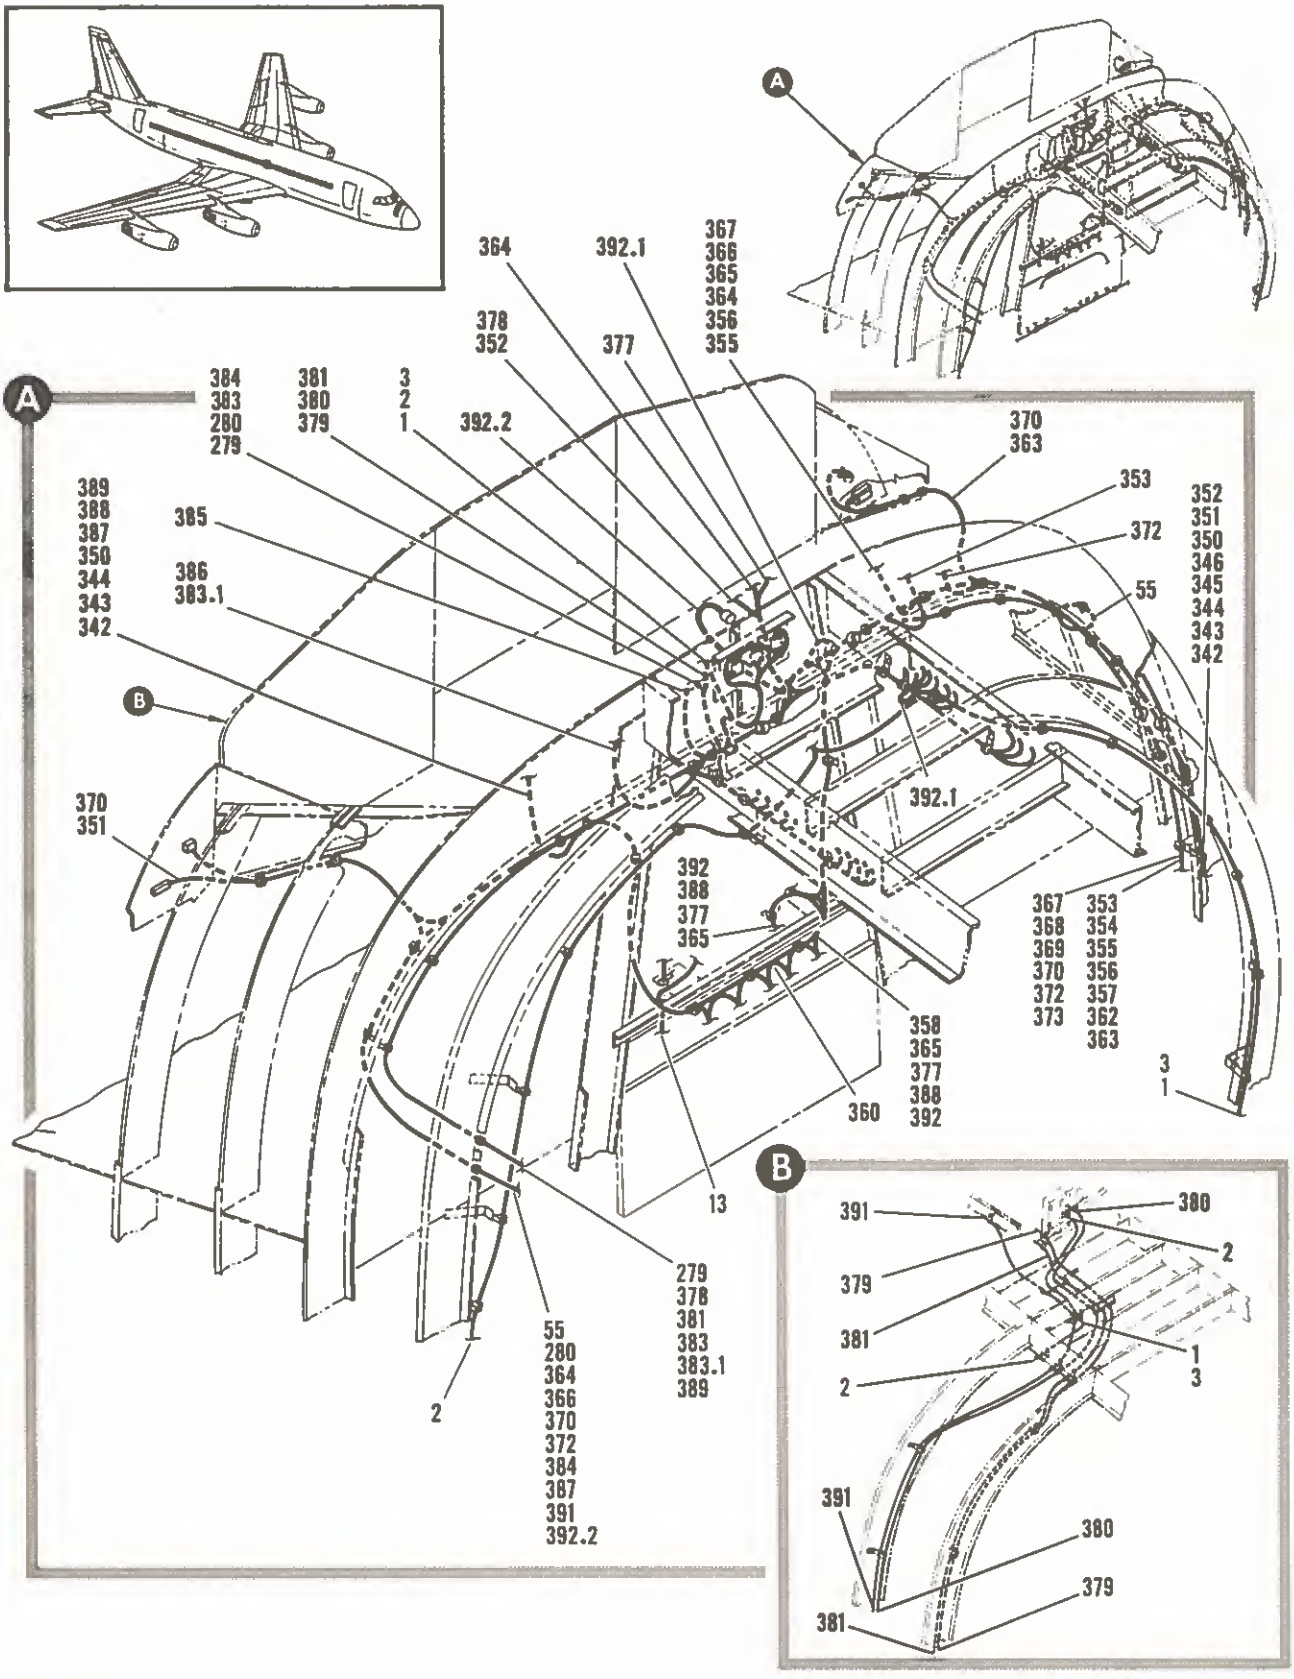

22.04.94.04.003

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		FWD FLIGHT DECK ELECTRICAL HARNESSES SEE 22-61003			
-343	22-61650-1	. HARNESS ASSEMBLY, COPILOT HORIZON DIRECTOR INDICATOR TO INSTRUMENT PANEL PERMANENT SPLICE	1		1
	1406-51SX	. . CONNECTOR, CONVAIR 92-40321-003 -V95238-	1		1
	1406M90	. . CONNECTOR, CONVAIR 98-03512-001 -V95238-	1		1
-344	22-61652-1	. HARNESS ASSEMBLY, COPILOT COURSE DEVIATION INDICATOR TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	1406-51SY	. . CONNECTOR, CONVAIR 92-40321-002 -V95238-	1		2
	1406HST	. . SHIELD, CONVAIR 98-03510-011 -V95238-	1		1
-345	22-61730-1	. HARNESS ASSEMBLY, AUTOPILOT TRIM INDICATOR TO PERMANENT SPLICE	1		1
	DM9700-19SY	. . CONNECTOR, CONVAIR 92-40317-006 -V17419-	1		1
	22-61773	. HARNESS ASSEMBLY, ENGINEER PANEL LIGHTS TO PILOT WHITE PANEL LIGHTS			1
-349	22-61877	. HARNESS ASSEMBLY, PILOT COMPASS INDICATOR TO PERMANENT SPLICE	1		1
	1406HST	. . SHIELD, CONVAIR 98-03510-011 -V95238-	1		1
	1406-55SQ	. . CONNECTOR, CONVAIR 92-40321-004 -V95238-	1		1


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -350	22-61776-1	. HARNESS ASSEMBLY, COPILOT MACH INDICATOR TO PERMANENT SPLICE	1		1
	DM9700-7S	. . CONNECTOR, CONVAIR 92-40317-001 -V17419-	1		1
	DM9700-7SY	. . CONNECTOR, CONVAIR 92-40317-010 -V17419-	1		1
	DM9700-19S	. . CONNECTOR, CONVAIR 92-40317-005 -V17419-	1		1
-351	22-61784	. HARNESS ASSEMBLY, COPILOT STATIC SOURCE VALVE TO PERMANENT SPLICE	1		1
	PT06E12-10S	. . CONNECTOR, CONVAIR 92-40325-002 -V06840-	1		1
-352	22-61854-1	. HARNESS ASSEMBLY, STATIC AIR TEMPERATURE INDICATOR TO PERMANENT SPLICE	1		1
-354	22-61638	. HARNESS ASSEMBLY, PERMANENT SPLICE TO INSTRUMENT PANEL PERMANENT SPLICE STA 250	1		1
-355	22-61647-1	. HARNESS ASSEMBLY, HORIZON DIRECTOR INDICATOR TO PERMANENT SPLICE	1		1
	1406-51SX	. . CONNECTOR, CONVAIR 92-40321-003 -V95238	1		1
	1406H90	. . SHIELD, CONVAIR 98-03512-001 -V95238-	1		1
-357	22-61651-1	. HARNESS ASSEMBLY, PILOT COURSE DEVIATION INDICATOR TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	1406-51SY	. . CONNECTOR, CONVAIR 92-40321-002 -V95238-	1		1
	1406HST	. . SHIELD, CONVAIR 98-03510-011 -V95238-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		25
-358	22-61621-1	. HARNESS ASSEMBLY, EXTERNAL POWER JUNCTION BOX TO PERMANANT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		4
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		16
-360	22-61871	. HARNESS ASSEMBLY, FIRE CONTROL RELAY PANEL TO FLASHER 1	1		1
-361	22-61770-1	. HARNESS ASSEMBLY, COPILOT PANEL LIGHTS TO ENGINE PANEL WHITE LIGHTS	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		20
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779	1		2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -362	22-61781-1	. HARNESS ASSEMBLY, TRUE AIRSPEED INDICATOR TO PERMANENT SPLICE	1		1
	DM9700-19S	. . CONNECTOR, CONVAIR 92-40317-005 -V17419-	1		1
-363	22-61783	. HARNESS ASSEMBLY, PILOT STATIC SOURCE VALVE TO PERMANENT SPLICE	1		1
-364	22-61557-1	. HARNESS ASSEMBLY, CENTER INSTRUMENT PANEL DISCONNECT TO DIMMING RELAY BOX	1		1
	YPP20H1	. . CONTACT, CONVAIR 92-63903-004 -V02198-	1		35
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
-365	22-61631-1	. HARNESS ASSEMBLY, PILOT RADIO-MAGNETIC INDICATOR TO PERMANENT SPLICE	1		1
	DM9700-37S	. . CONNECTOR, CONVAIR 92-40317-003 -V17419-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		15
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		5
-366	22-61797-1	. HARNESS ASSEMBLY, PILOT TURN AND BANK INDICATOR TO PERMANENT SPLICE	1		1
	EX06-14S5S	. . CONNECTOR, CONVAIR 92-40332-005 -V71468-	1		1
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		8


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -370	22-61722-1	. HARNESS ASSEMBLY, OUTBD AC PILOT ESSENTIAL CIRCUIT BREAKER PANEL PERMANENT SPLICE TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
-371	22-61772-1	. HARNESS ASSEMBLY, INSTRUMENT PANEL OUTBD LH DISCONNECT TO PERMANENT SPLICE	1		1
	XPP14H	. . CONTACT, CONVAIR 92-63903-001 -V02198-	1		6
	XPP20H	. . CONTACT, CONVAIR 92-63903-004 -V02198-	1		39
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98- 90805-001 -V00779-	1		8
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
-373	22-61775-1	. HARNESS ASSEMBLY, PILOT MACH INDICATOR TO PERMANENT SPLICE	1		1
	DM9700-7S	. . CONNECTOR, CONVAIR 92-40317-001 -V17419-	1		1
	DM9700-7SY	. . CONNECTOR, CONVAIR 92-40317-010 -V17419-	1		1
-374	22-61726-1	. HARNESS ASSEMBLY, COMPUTER AMPLIFIER TO PERMANANT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		8
	DPD78-33S1B	. . CONNECTOR, CONVAIR 92-50285-014 -V71468-			1
-375	22-61562-1	. HARNESS ASSEMBLY, RH INSTRUMENT PANEL TO DISCONNECT	1		1
	YPS14H2	. . CONTACT, CONVAIR 92-63903-003 -V02198-	1		3
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		9
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-			1
-376	22-61572-1	. HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX 1 TO PERMANENT SPLICE	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V06840-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		13

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -377	22-61671-1	. HARNESS ASSEMBLY, LH INBD INSTRUMENT PANEL DISCONNECT TO PERMANENT SPLICE	1		1
	YPP20H1	. . CONTACT, CONVAIR 92-63903-004 -V02198-	1		16
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		11
-378	22-61563-1	. HARNESS ASSEMBLY, PILOT CENTER INSTRUMENT PANEL TO FREE AIR TEMPERATURE BULB	1		1
	PT06E14-19S	. . CONNECTOR, CONVAIR 92-40325-011 -V06840-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	DM9700-7S	. . CONNECTOR, CONVAIR 92-40317-001 -V17419-	1		1
	DM9700-19S	. . CONNECTOR, CONVAIR 92-40317-005 -V17419-	1		1
-379	22-61904-1	. HARNESS ASSEMBLY, FIRE CONTROL PANEL ENGINE 1 DISCONNECT TO PERMANENT SPLICE	1	10	1
	22-61904-5	. HARNESS ASSEMBLY, FIRE CONTROL PANEL ENGINE 1 DISCONNECT TO PERMANENT SPLICE	11		1
	PT00E14-19S	. . CONNECTOR, CONVAIR 92-50288-008 -V06840-	1		1
-380	22-61906	. HARNESS ASSEMBLY, FIRE CONTROL PANEL DISCONNECT ENGINE 3 TO PERMANENT SPLICE	1	10	1
	22-61906-1	. HARNESS ASSEMBLY, FIRE CONTROL PANEL ENGINE 3 DISCONNECT TO PERMANENT SPLICE	11		1
	PT00E14-19S	. . CONNECTOR, CONVAIR 92-50288-008 -V06840-	1		1
-381	22-61587	. HARNESS ASSEMBLY, FIRE CONTROL PANEL LH DISCONNECT TO PERMANENT SPLICE	1	10	1
	22-61587-1	. HARNESS ASSEMBLY, FIRE CONTROL PANEL LH DISCONNECT TO PERMANENT SPLICE	11		1
	PT00E14-19S	. . CONNECTOR, CONVAIR 92-50288-008 -V06840-	1		1
-382	22-61897	. HARNESS ASSEMBLY, MAGNETIC COMPASS TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
-383	22-61591-1	. HARNESS ASSEMBLY, EXHAUST TEMPERATURE INDICATOR ENGINE 1 TO PERMANENT SPLICE	1		1
	AN5548-1	. . TERMINAL	1		1
	AN5548-2	. . TERMINAL	1		1
	PT06E12-10S	. . CONNECTOR, CONVAIR 92-40325-002 -V06840-	1		1
	PT06E10-6S	. . CONNECTOR, CONVAIR 92-40325-008 -V06840-	1		1
	DM9700-7S	. . CONNECTOR, CONVAIR 92-40317-001 -V17419-	1		1
	165-10-1009	. . CONNECTOR, CONVAIR 92-40058-013 -V02660-	1		1
-383.1	22-61909-1	. HARNESS ASSEMBLY, FUEL TOTALIZER INDICATOR TO PERMANENT SPLICE	1		1
	165-10	. . CONNECTOR, CONVAIR 92-40058-011 -V02660-	1		1
-384	22-61594-1	. HARNESS ASSEMBLY, EXHAUST TEMPERATURE INDICATOR ENGINE 4 TO PERMANENT SPLICE	1		1
	165-10-1009	. . CONNECTOR, CONVAIR 92-40058-013 -V02660-	1		1
	PT06E12-10S	. . CONNECTOR, CONVAIR 92-40325-002 -V06840-	1		1
	PT06E10-6S	. . CONNECTOR, CONVAIR 92-40325-008 -V06840-	1		1
	AN5548-1	. . TERMINAL	1		1
	AN5548-2	. . TERMINAL	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		9
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		4
	DM9700-7S	. . CONNECTOR, CONVAIR 92-40317-001 -V17419-	1		1
-385	22-61558-1	. HARNESS ASSEMBLY, RH INSTRUMENT PANEL DISCONNECT TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		4
	AN3116-2	. . CONNECTOR, CONVAIR 92-40139-001	1		1
	YPP20H1	. . CONTACT, CONVAIR 92-63903-004 -V02198-	1		18
	YPP14H	. . CONTACT, CONVAIR 92-63903-001 -V02198-	1		2


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -386	22-61771	. HARNESS ASSEMBLY, PILOT PANEL LIGHTS TO CONSOLE RED LIGHT CONTROL	1		1
-387	22-61599-1	. HARNESS ASSEMBLY, RH INSTRUMENT PANEL TO PERMANENT SPLICE	1		1
	DM9700-7S	. . CONTACT, CONVAIR 92-40317-001 -V17419-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
-388	22-61630-1	. HARNESS ASSEMBLY, COPILOT RADIO-MAGNETIC INDICATOR TO PERMANENT SPLICE	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		5
	320580	. . TERMINAL, CONVAIR 98-90819-001 -V00779-	1		12
	DM9700-3TS	. . CONNECTOR, CONVAIR 92-40317-003 -V17419-	1		1
-389	22-61796	. HARNESS ASSEMBLY, COPILOT TURN AND BANK INDICATOR TO PERMANENT SPLICE	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		3
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
-390	22-61876	. HARNESS ASSEMBLY, COPILOT COMPASS INDICATOR TO PERMANENT SPLICE	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		6
-391	22-61589	. HARNESS ASSEMBLY, FIRE CONTROL PANEL RH DISCONNECT TO PERMANENT SPLICE	1	10	1
	22-61589-1	. HARNESS ASSEMBLY, FIRE CONTROL PANEL RH DISCONNECT TO PERMANENT SPLICE	11		1
	PT00E14-19S	. . CONNECTOR, CONVAIR 92-50288-008 -V06840-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-392	22-61702-1	. HARNESS ASSEMBLY, INSTRUMENT PANEL JUNCTION BOX TO PERMANENT SPLICE	1		1
	320580	. . TERMINAL, CONVAIR 98-90814-001 -V00779-	1		5
-392.1	22-61908-1	. HARNESS ASSEMBLY, WINDSHIELD RAIN CLEARING VALVE TO THERMO SWITCH	1		1
	EX06-10SL4S	. . PLUG, CONVAIR 92-40332-002 -V71468-	1		1
-392.2	22-61934	. HARNESS ASSEMBLY, ALTIMETER THUMPER CONTROL TO PERMANENT SPLICE	1		1
	67-06E14-9S	. . PLUG, CONVAIR 92-40058-026 -V02660-	1		1

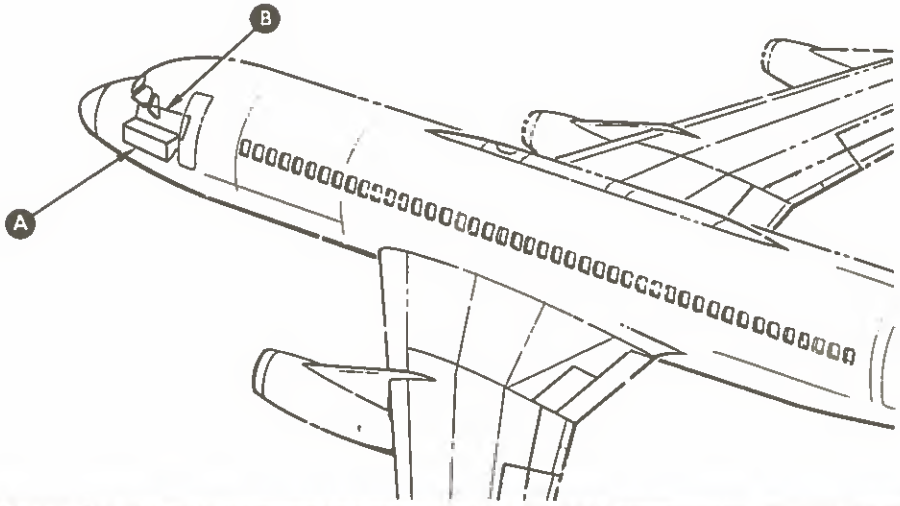


A

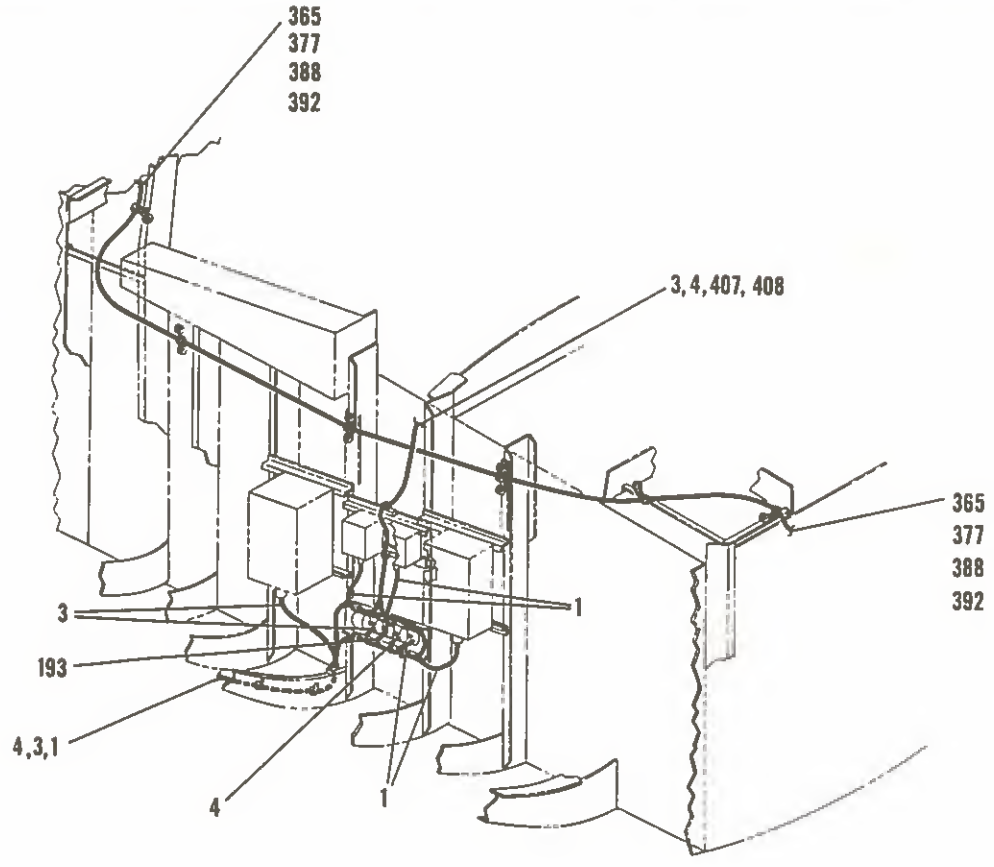

22.04.94.04.005-1

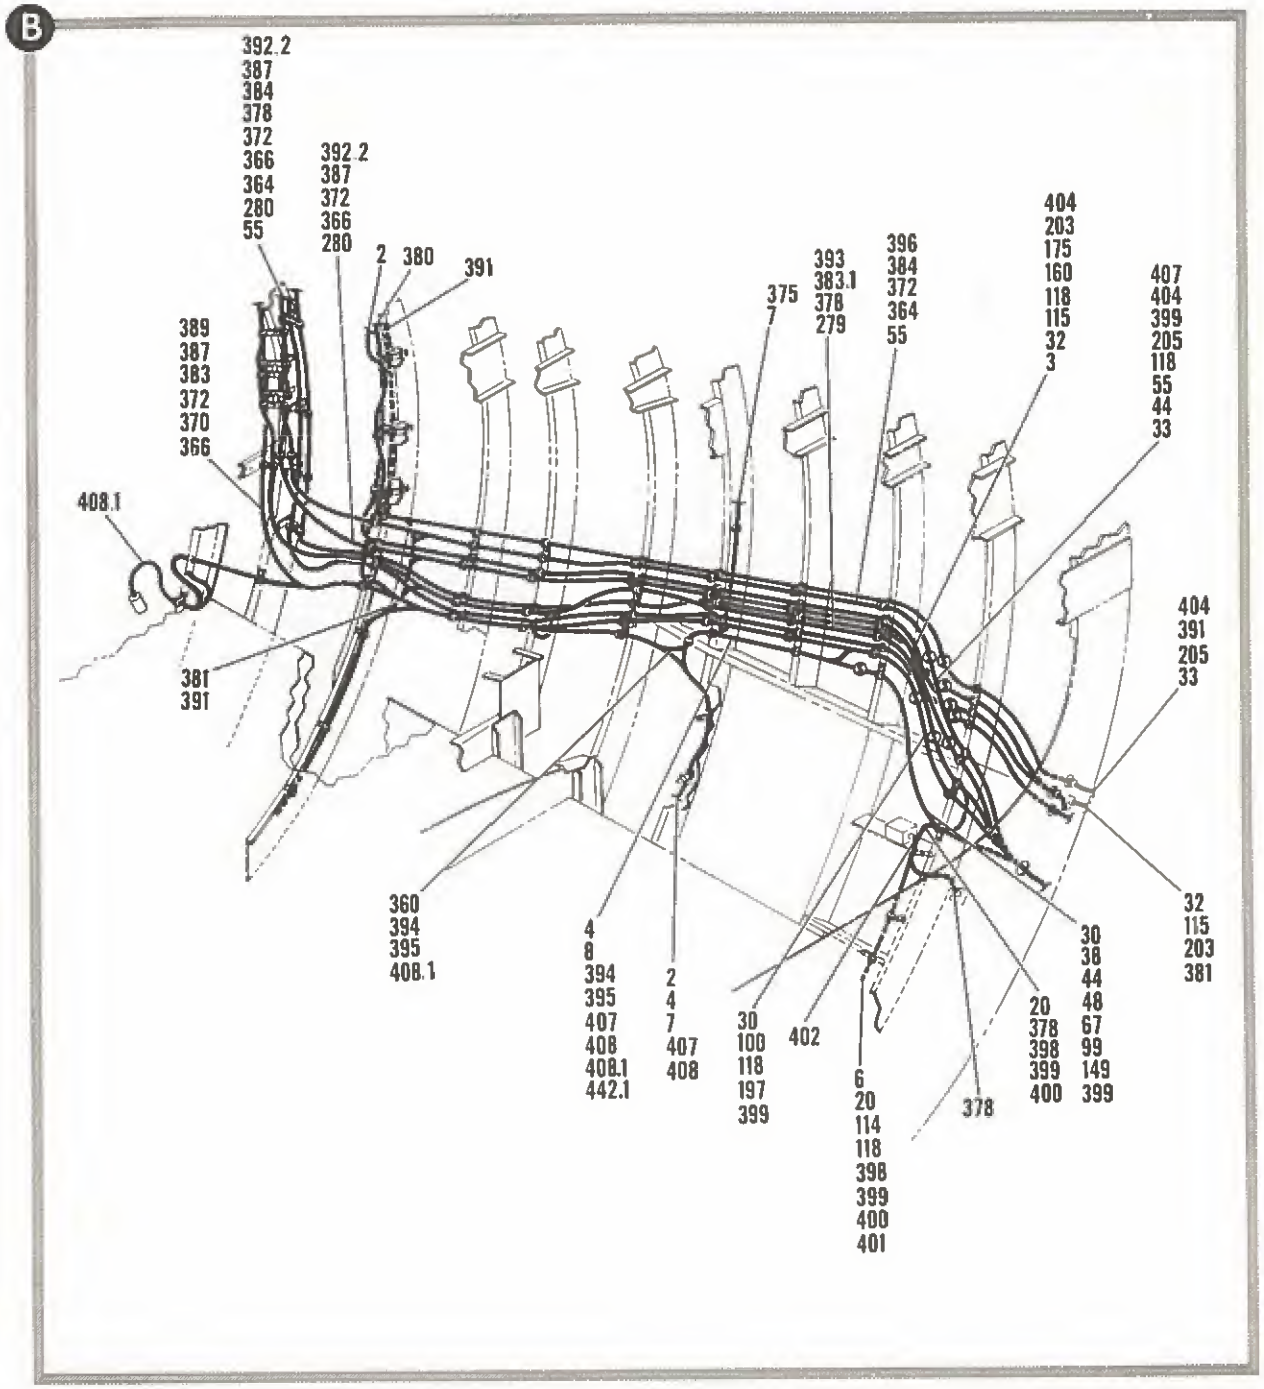


22.04 94.04.005-2

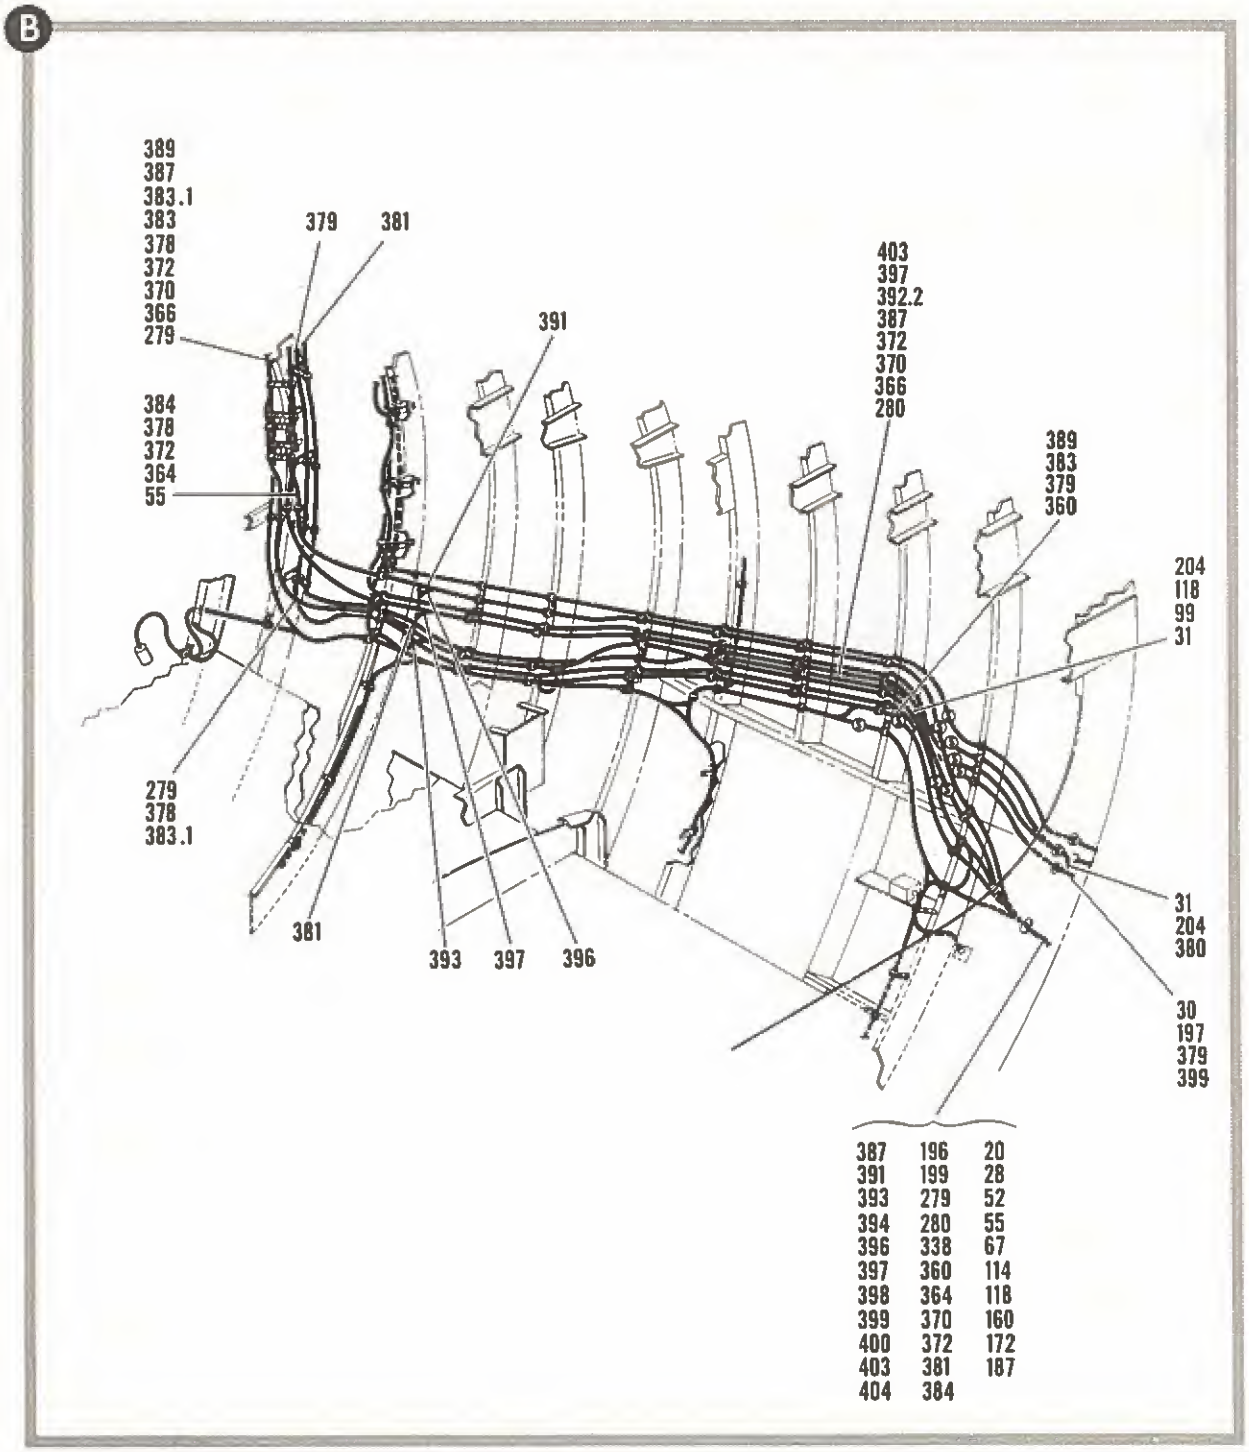


22.04.94.04.005-3


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		NWW RH ELECTRICAL HARNESSES SEE 22-61003			
-393	22-61873	. HARNESS ASSEMBLY, FIRE CONTROL RELAY PANEL TO FLASHER 2	1		1
-394	22-61531-1	. HARNESS ASSEMBLY, NWW DISCONNECT C TO DIMMING RELAY BOX	1		1
	PT00E20-39S	. . CONNECTOR, CONVAIR 92-50288-013 -V06840-	1		1
-395	22-61774	. HARNESS ASSEMBLY, FIRE AND OVERHEAT CONTROL BOX TO POWER RELAY	1		1
	PT06E14-19S	. . CONNECTOR, CONVAIR 92-40325-011 -V06840-	1		2
-396	22-61874	. HARNESS ASSEMBLY, FIRE CONTROL RELAY PANEL TO FLASHER 4	1		1
-397	22-61872	. HARNESS ASSEMBLY, FIRE CONTROL RELAY PANEL TO FLASHER 3	1		1
-398	22-61503	. HARNESS ASSEMBLY, PEDESTAL PERMANENT SPLICE TO STA 306 RELAYS	1		1
-399	22-61659	. HARNESS ASSEMBLY, FIRE CONTROL PANEL PERMANENT SPLICE TO DIMMING RELAY BOX 1	1	10	1
	22-61659-1	. HARNESS ASSEMBLY, FIRE CONTROL PANEL PERMANENT SPLICE TO DIMMING RELAY BOX 1	11		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		6
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
-400	22-61894	. HARNESS ASSEMBLY, PEDESTAL PERMANENT SPLICE TO RELAY RACK	1		1
-401	22-62525	. HARNESS ASSEMBLY, FEED THRU PANEL K TO FLIGHT ENGINEER STATION	1		1
-402	22-61677	. HARNESS ASSEMBLY, NOSE WHEEL ANTISKID CONTROL BOX TO PERMANENT SPLICE	1		1
	PT06E12-10S	. . CONNECTOR, CONVAIR 92-40325-002 -V06840-	1		1
-403	22-61588	. HARNESS ASSEMBLY, FIRE CONTROL PANEL TO DISCONNECT RH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		1
	PT06E14-19P	. . CONNECTOR, CONVAIR 92-40325-009 -V06840-	1		1
	323975	. . CONNECTOR, CONVAIR 98-34009-003 -V06840-	1		1
-404	22-61660	. HARNESS ASSEMBLY, FIRE CONTROL PANEL PERMANENT SPLICE TO DIMMING RELAY BOX 4	1	10	1
	22-61660-1	. HARNESS ASSEMBLY, FIRE CONTROL PANEL PERMANENT SPLICE TO DIMMING RELAY BOX 4	11		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		3
-405	22-62515	. HARNESS ASSEMBLY, FEED THRU PANEL J TO FLIGHT ENGINEER STATION	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		3
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		19
-406	22-62519-1	. HARNESS ASSEMBLY, FEED THRU PANEL H TO RELAY INSTALLATION	1		1
	320559	. . CONNECTOR, CONVAIR, 98-34001-003 -V00779-	1		11
-407	22-61867-5	. HARNESS ASSEMBLY, CIRCUIT BREAKER PANEL PERMANENT SPLICE TO NOSE PANEL LH	A		1
	22-61867-1	. HARNESS ASSEMBLY, CURCUIT BREAKER PANEL PERMANENT SPLICE TO NOSE PANEL LH	2	7	1
-408	22-61866	. HARNESS ASSEMBLY, OVERHEAT CONTROLLER TO PERMANENT SPLICE	1		1
	PT06E12-10S	. . CONNECTOR, CONVAIR 92-40325-002 -V06840-	1		1
-408.1	22-61983	. HARNESS ASSEMBLY, COPILOT PITOT TUBE HEATER TO PERMANENT SPLICE	1		1
	DM9700-3S	. . PLUG, CONVAIR 92-40317-008 -V17419-	1		1

A AIRPLANES 1, 8 AND ON

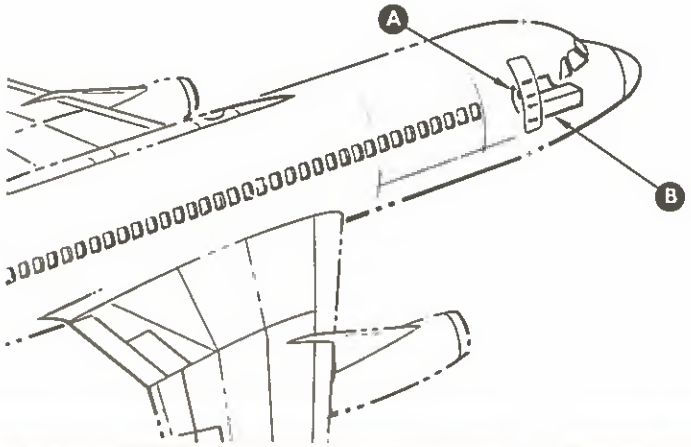

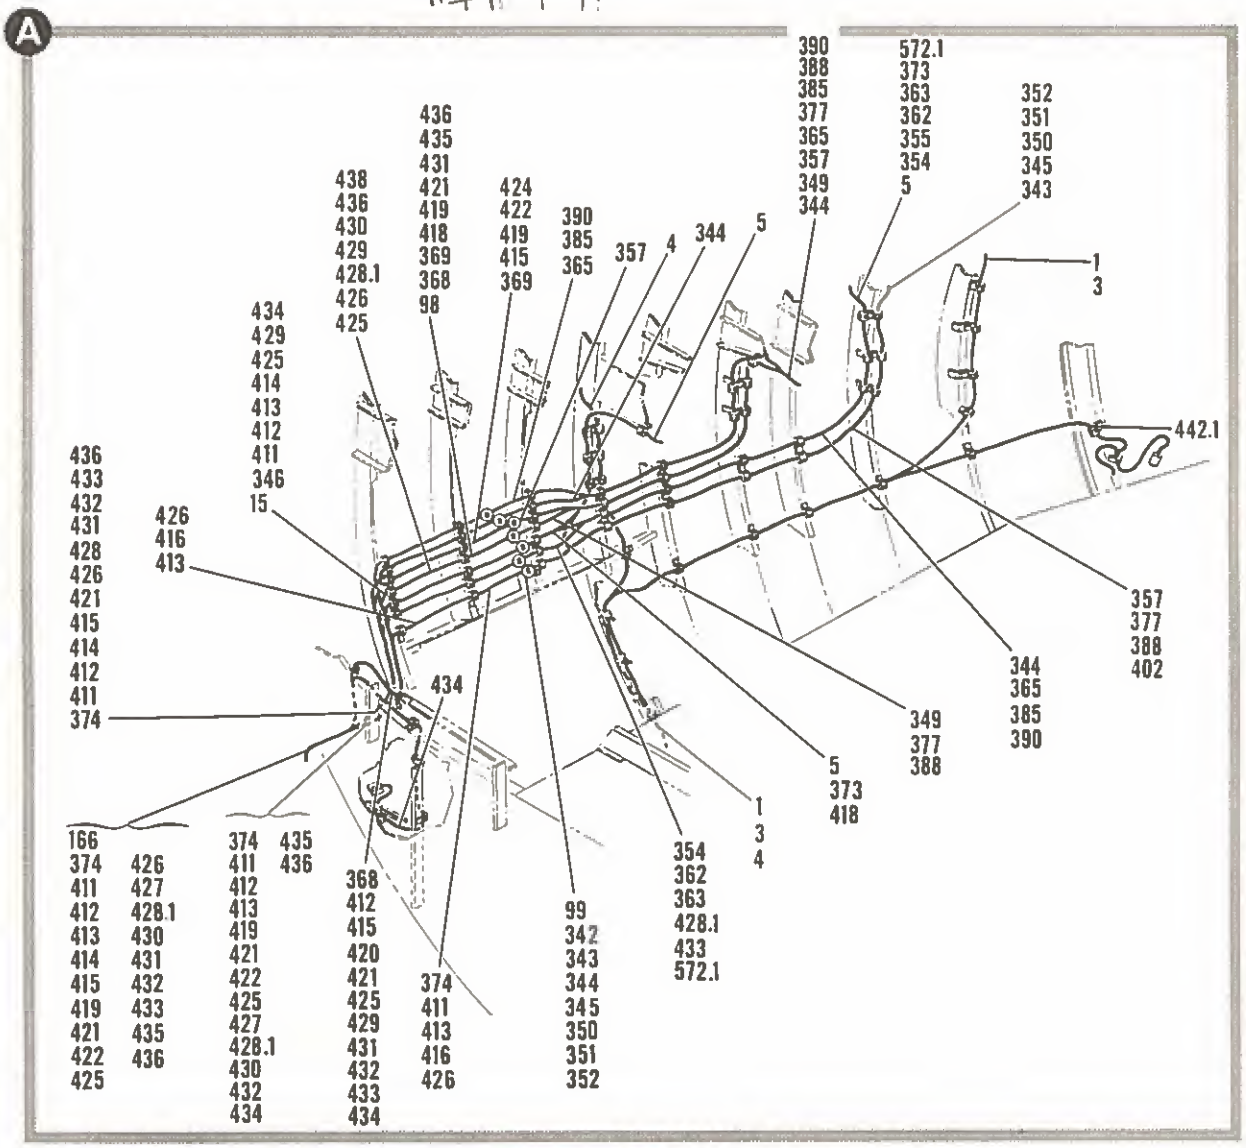

22.04 94.04 006-1A

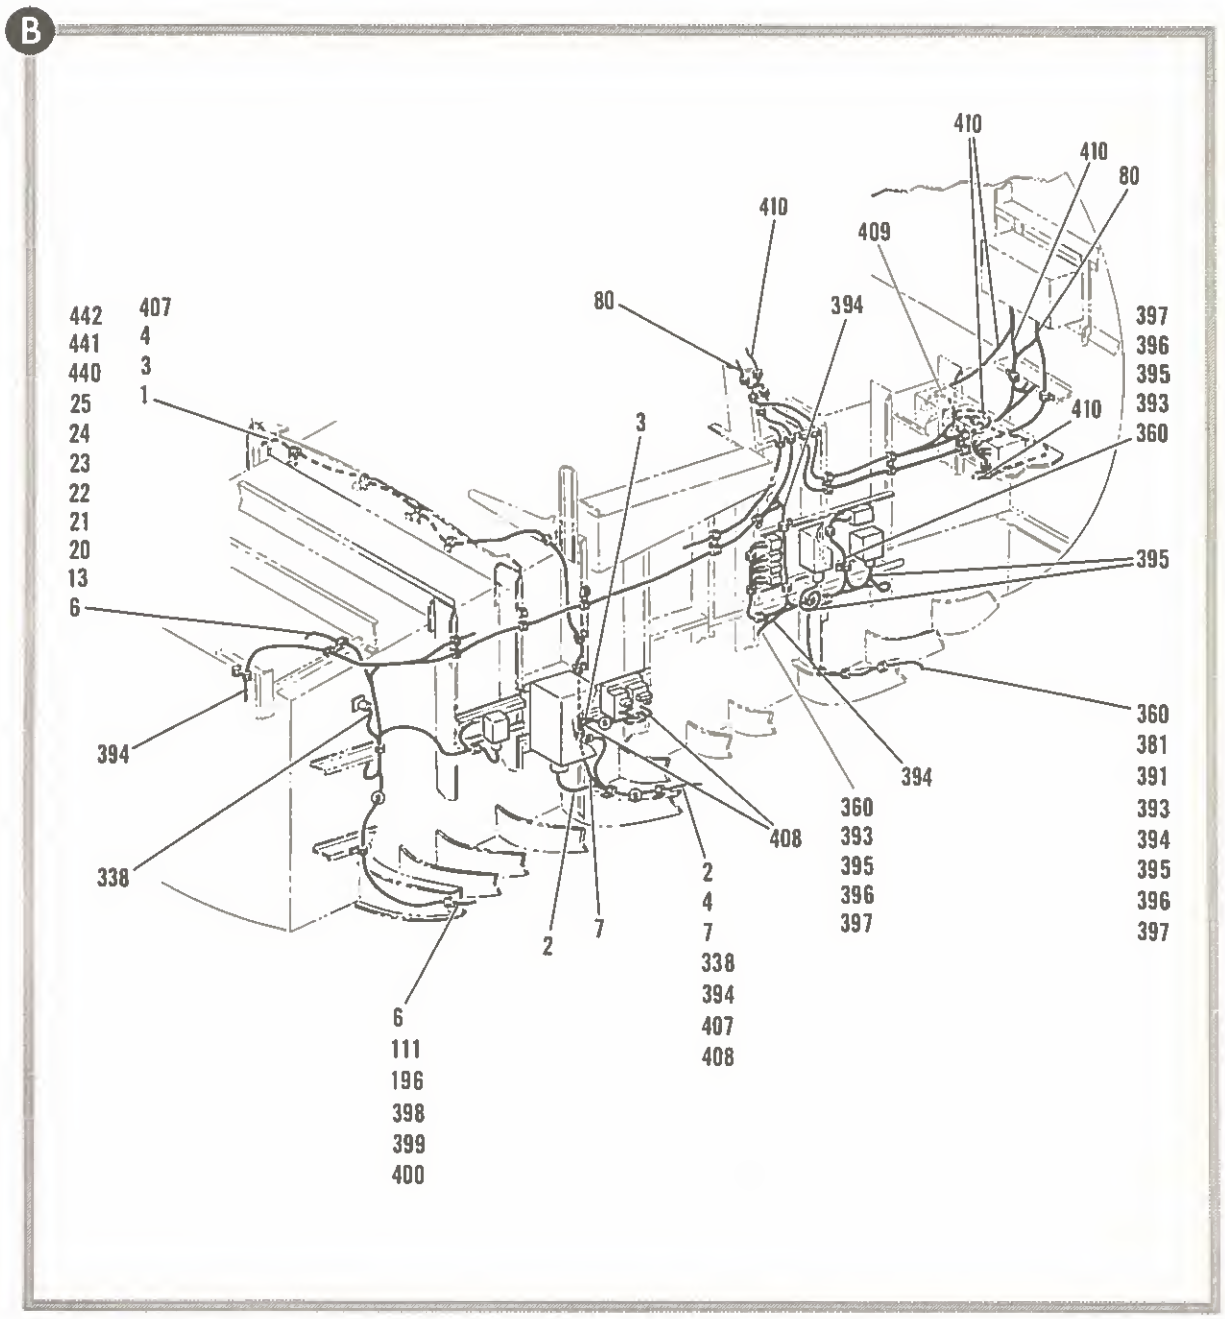


22 04 94.04.006-2A


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4		NWW LH ELECTRICAL HARNESSES SEE 22-61003			
-409	22-61887	. HARNESS ASSEMBLY, BATTERY INSTALLATION TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		15
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		3
	320567	. . TERMINAL, CONVAIR 98-90805-015 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		2
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		2
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
-410	22-61887-1	. HARNESS ASSEMBLY, BATTERY INSTALLATION TO CURRENT RELAY	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1
	320577	. . TERMINAL, CONVAIR 98-90805-019 -V00779-	1		1
-411	22-61646-1	. HARNESS ASSEMBLY, COPILOT INSTRUMENT AMPLIFIER TO PERMANENT SPLICE	1		1
	DPA32-33S5	. . CONNECTOR, CONVAIR 92-50285-026 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		7
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
-412	22-61640-1	. HARNESS ASSEMBLY, COPILOT RADIO-MAGNETIC INDICATOR SERVO-AMPLIFIER TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
-413	22-61645-1	. HARNESS ASSEMBLY, COPILOT INSTRUMENT AMPLIFIER TO INSTRUMENT PANEL PERMANENT SPLICE	1		1
	DPA32-33S	. . CONNECTOR, CONVAIR 92-50285-007 -V71468-	1		1
-414	22-61724-1	. HARNESS ASSEMBLY, VERTICAL GYRO 2 TO PERMANENT SPLICE	1		1
	K21993	. . CONNECTOR, CONVAIR 92-40116-002 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		7

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 -415	22-61735-1	. HARNESS ASSEMBLY, STA 250 PERMANENT SPLICE TO AUTOPILOT RACK PERMANENT SPLICE	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		15
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		30
-416	22-61737-1	. HARNESS ASSEMBLY, AUTOPILOT RACK PERMANENT SPLICE TO RELAY RACK PERMANENT SPLICE	1		1
-419	22-61644-1	. HARNESS ASSEMBLY, PILOT INSTRUMENT AMPLIFIER TO PERMANENT SPLICE	1		1
	DPA32-33S	. . CONNECTOR, CONVAIR 92-50285-007 -V71468-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		28
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		6

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 -421	22-61725-1	. HARNESS ASSEMBLY, COMPUTER AMPLIFIER TO PEDESTAL PERMANENT SPLICE	2	5	1
	22-61725-3	. HARNESS ASSEMBLY, COMPUTER AMPLIFIER TO PERMANENT SPLICE	6		1
	DPD78-33S1B	. . CONNECTOR, CONVAIR 92-50285-014 -V71468-	2		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	2		8
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	2		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	2		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	2		12
-422	22-61727-1	. HARNESS ASSEMBLY, COMPUTER AMPLIFIER TO POWER JUNCTION BOX	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		2
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		18
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	DPD78-33S1B	. . CONNECTOR, CONVAIR 92-50285-014 -V71468-	1		1
-423	22-61743	. HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE TO AUTOPILOT PERMANENT SPLICE	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		3
-424	22-61758	. HARNESS ASSEMBLY, FREQUENCY CHART LIGHTS TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	WK3-23C3-8	. . CONNECTOR, CONVAIR 92-40318-005 -V71468-	1		1
-425	22-61785	. HARNESS ASSEMBLY, CONTROL CHASSIS TO PILOT STATIC VALVE PERMANENT SPLICE	1		1
-426	22-61786	. HARNESS ASSEMBLY, CONTROL CHASSIS TO COPILOT STATIC VALVE PERMANENT SPLICE	1		1
	DM6502-37S	. . CONNECTOR, CONVAIR 92-40330-004 -V17419-	1		1
-427	22-61656-1	. HARNESS ASSEMBLY, VERTICAL GYRO 1 TO PERMANENT SPLICE	1		1
	K21993	. . CONNECTOR, CONVAIR 92-40116-002 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		8
-428	22-61756	. HARNESS ASSEMBLY, FUEL GAGING TRANSFER SWITCH BOX TO PERMANENT SPLICE	1		1
	165-26	. . CONNECTOR, CONVAIR 92-40058-012 -V02660-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-428.1	22-61869-1	. HARNESS ASSEMBLY, PILOTS AUTOPILOT RACK PERMANENT SPLICE TO STA 230 PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		36
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		2
	98-89500-001	. . PLUG	1		2


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 -429	22-61787	. HARNESS ASSEMBLY, CONTROL CHASSIS TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		13
	DM6502-19S	. . CONNECTOR, CONVAIR 92-40330-003 -V17419-	1		1
-430	22-61789	. HARNESS ASSEMBLY, AUTOPILOT RACK PERMANENT SPLICE TO INSTRUMENT PANEL PERMANENT SPLICE	1		1
-431	22-61637-1	. HARNESS ASSEMBLY, COPILOT COMPASS COUPLER TO INSTRUMENT PANEL PERMANENT SPLICE	1		1
	DPA32-33S	. . CONNECTOR, CONVAIR 92-50285-026 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		23
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		5
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
	K03-19-20SN	. . CONNECTOR, CONVAIR 92-40058-004 -V71468-	1		1
	K06-191-2	. . SHELL, CONVAIR 98-02500-002 -V71468-	1		1
-432	22-61641-1	. HARNESS ASSEMBLY, PILOT RADIO-MAGNETIC INDICATOR SERVO-AMPLIFIER TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-433	22-61736-1	. HARNESS ASSEMBLY, PEDESTAL PERMANENT SPLICE TO RELAY RACK PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		11
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		2
-434	22-61788	. HARNESS ASSEMBLY, AIR DATA TEMPERATURE BULB TO PERMANENT SPLICE	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
-435	22-61635-1	. HARNESS ASSEMBLY, PILOT COMPASS COUPLER TO INSTRUMENT PANEL PERMANENT SPLICE	1		1
	DPA32-33S	. . CONNECTOR, CONVAIR 92-50285-026 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	K03-19-20SN	. . CONNECTOR, CONVAIR 92-40058-004 -V71468-	1		1
	K06-191-2	. . SHELL, CONVAIR 98-02500-002 -V71468-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		23
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		5
-436	22-61643-1	. HARNESS ASSEMBLY, PILOT INSTRUMENT AMPLIFIER TO INSTRUMENT PANEL PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		15
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		4
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	323287	. . CONNECTOR, CONVAIR 96-89500-001 -V00779-	1		1
-440	22-61504	. HARNESS ASSEMBLY, COPILOT YOKE TO STA 306 DIODE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320572	. . TERMINAL, CONVAIR 98-90805-006 -V00779-	1		1
-441	22-61516	. HARNESS ASSEMBLY, POWER LEVER SWITCHES 1 AND 2 TO PERMANENT SPLICE	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		8
-442	22-61759	. HARNESS ASSEMBLY, EMERGENCY STABILIZER TRIM CONTROL TO PERMANENT SPLICE	1		1
	PT06E14-5S	. . CONNECTOR, CONVAIR 92-40325-016 -V06840-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-442.1	22-61982	. HARNESS ASSEMBLY, PILOT PITOT TUBE HEATER TO PERMANENT SPLICE	1		1
	DM9700-3S	. . PLUG, CONVAIR 92-40317-008 -V17419-	1		1

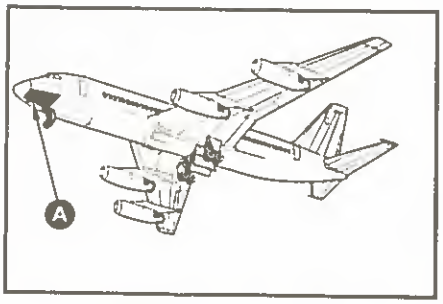


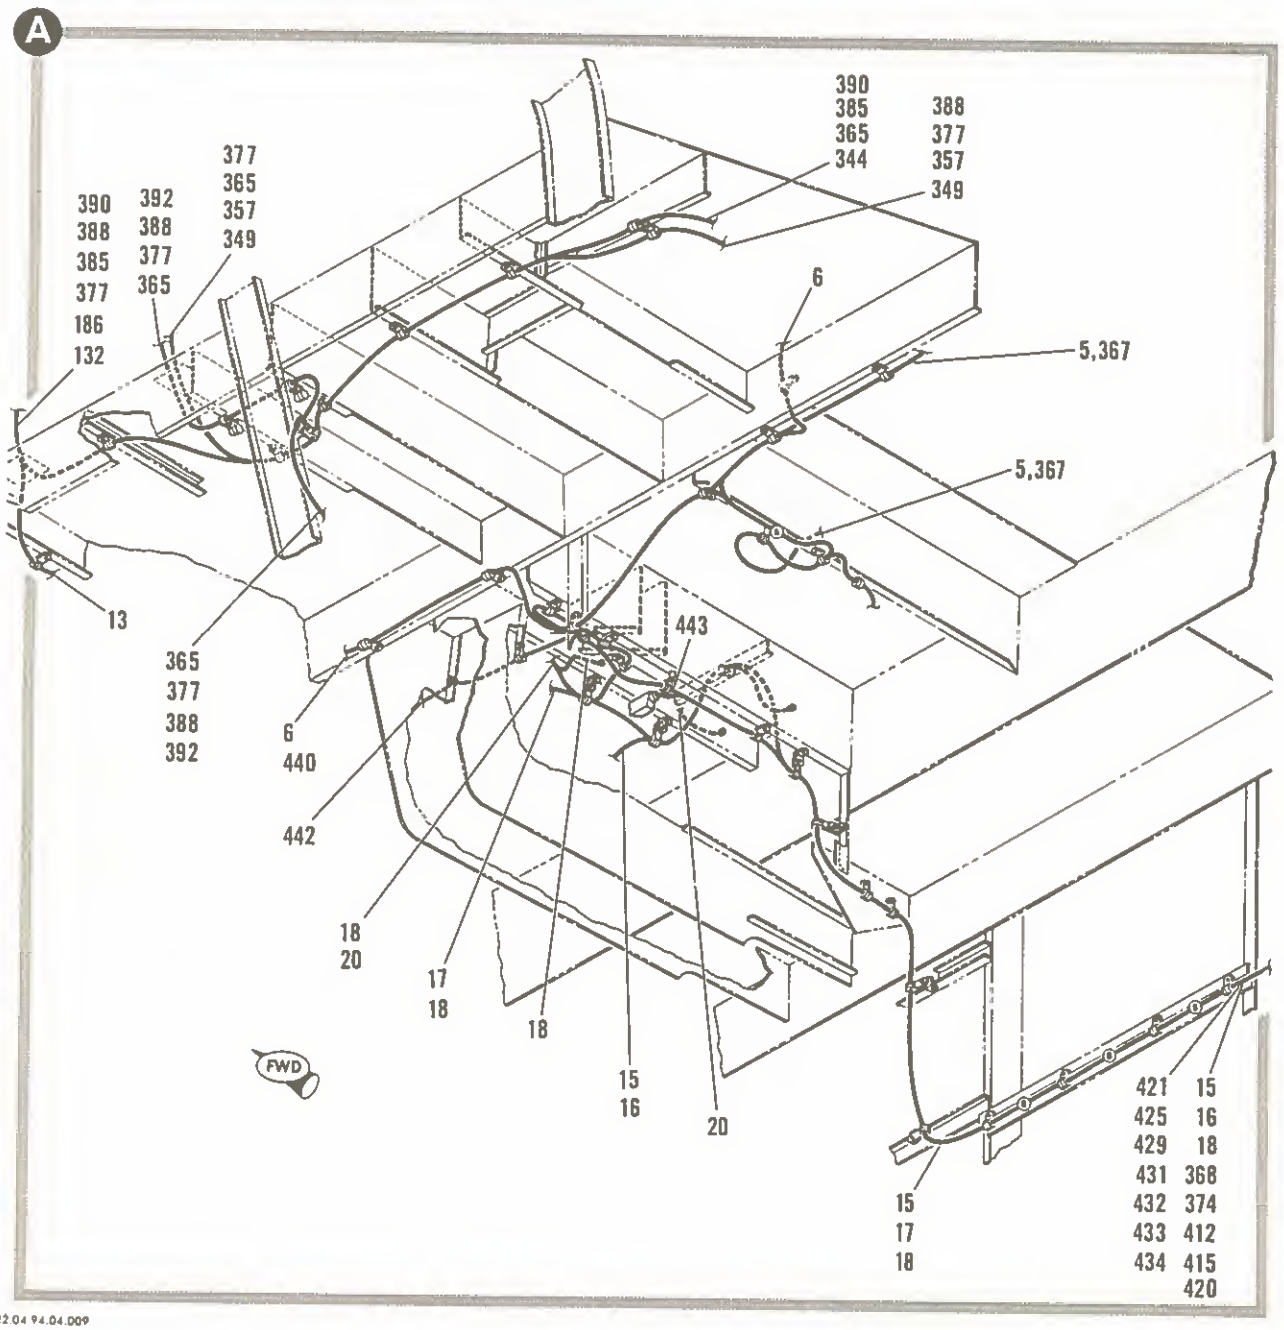

22.04 94.04.009

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5		UNDERFLOOR STA 187 TO 250 LH ELECTRICAL HARNESSES SEE 22-61003			
-443	22-61668-1	. HARNESS ASSEMBLY, ELEVATOR TRIM SERVO TO PERMANENT SPLICE	2	5	1
	22-61668-3	. HARNESS ASSEMBLY,ELEVATOR TRIM SERVO TO PERMANENT SPLICE	6		1
	EX06-16S1S	. . CONNECTOR, CONVAIR 92-40332-007 -V71468-	2		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	2		4
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	2		3

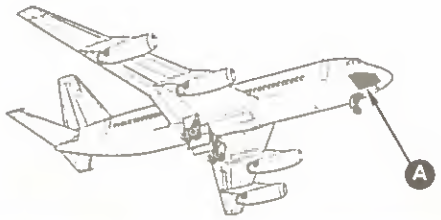

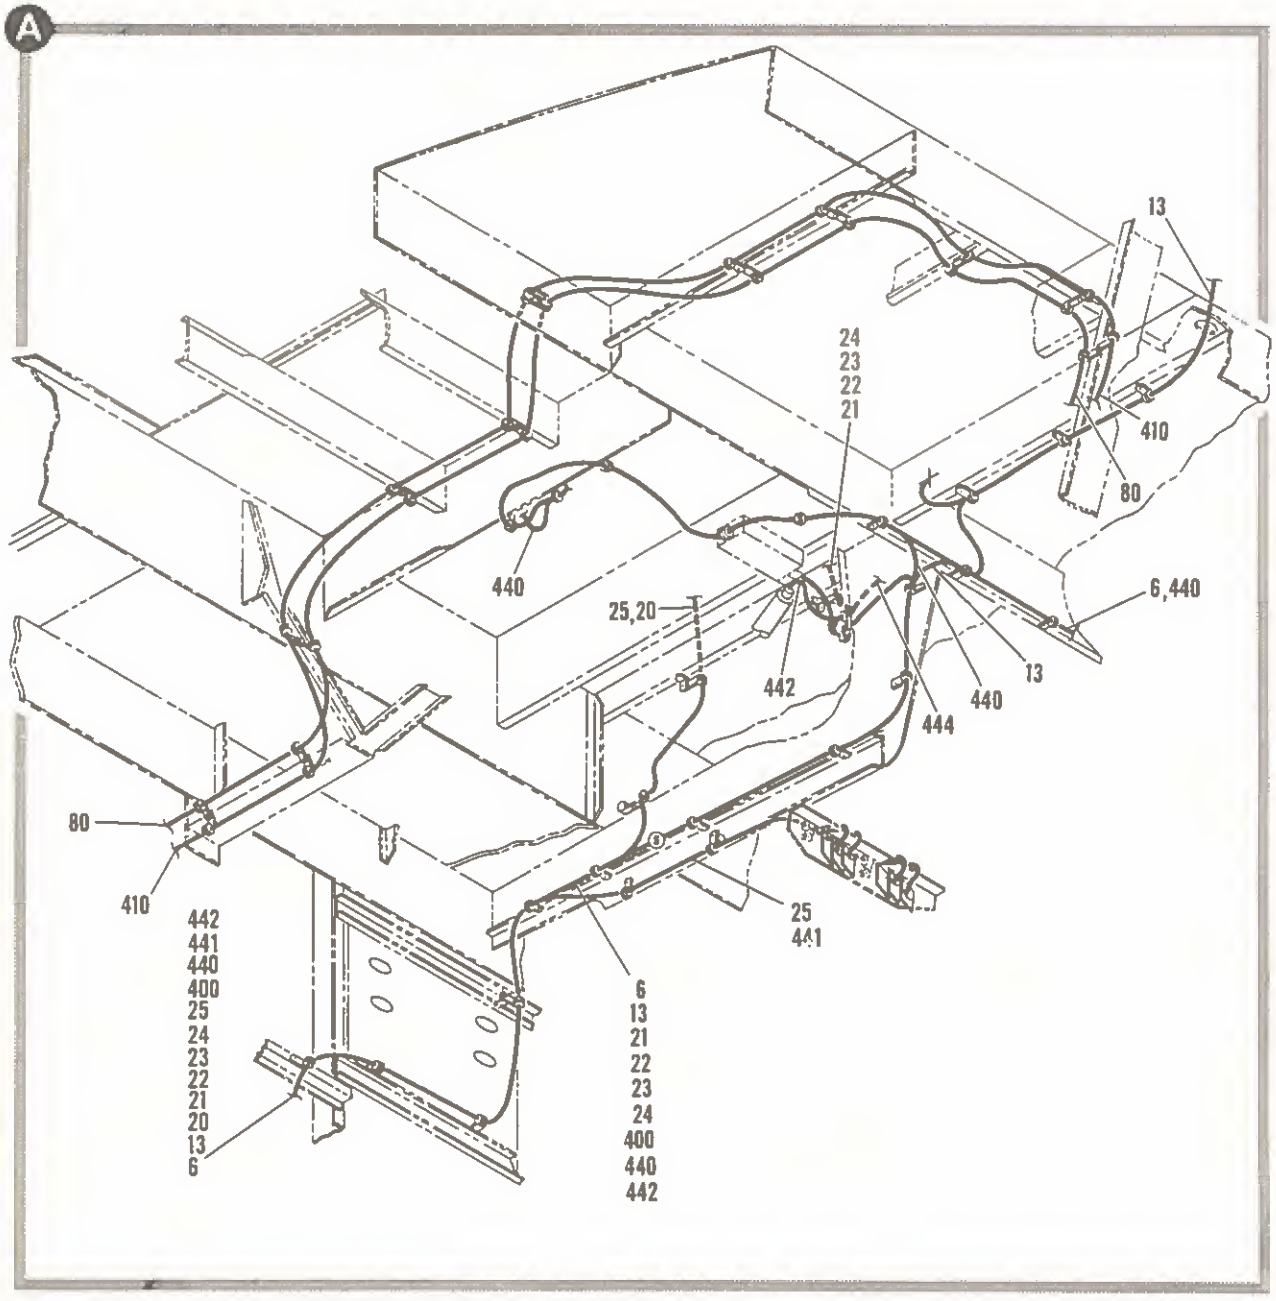

22.04 94.04.010

UNDERFLOOR STA 187 TO 250 RH ELECTRICAL HARNESSES
FIGURE 6


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6		UNDERFLOOR STA 187 TO 250 RH ELECTRICAL HARNESSES SEE 22-61003			
-444	22-61579	. HARNESS ASSEMBLY, MASTER WARNING BOX 2 TO PERMANENT SPLICE	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V06840-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		16


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -496	22-61694-1	. HARNESS ASSEMBLY, LANDING GEAR GROUND SAFETY RELAY TO OVERHEAT DETECTOR RELAY	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E20-39S	. . CONNECTOR, CONVAIR 92-40325-075 -V77820-	1		1
-497	22-61746	. HARNESS ASSEMBLY, WING SKIN TEMPERATURE OVERHEAT POWER SUPPLY TO PERMANENT SPLICE RH	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E16-26S	. . CONNECTOR, CONVAIR 92-40325-018 -V77820-	1		1
-498	22-62521-1	. HARNESS ASSEMBLY, FRONT SPAR FEED THRU PANEL C TO INBD LANDING LIGHT RELAY RH	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		3
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
-499	22-62581	. HARNESS ASSEMBLY, TRANSFER SWITCH BOX FUEL PROBE 4 MAIN TANK TO REAR SPAR DISCONNECT	1		1
	1-822-1	. . CONNECTOR, CONVAIR 92-47000-027 -V95712-	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		3
-500	22-61693	. HARNESS ASSEMBLY, PERMANENT SPLICE TO REAR SPAR PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		9
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		4
-501	22-61851-1	. HARNESS ASSEMBLY, GROUND MAINTENANCE RELAY TO PERMANENT SPLICE	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	320569	. . TERMINAL, CONVAIR 98-90805-017 -V00779-	1		3
-502	22-61895-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO AUTOPILOT PERMANENT SPLICE STA 375	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		18
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		12
-503	22-62571	. HARNESS ASSEMBLY, AUTOPILOT RACK PERMANENT SPLICE TO ANGLE OF ATTACK SENSOR PERMANENT SPLICE	1		1
-504	22-62503	. HARNESS ASSEMBLY, FEED THRU L TO DIMMING RELAY BOX	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		12
-505	22-62507-3	. HARNESS ASSEMBLY, FEED THRU PANEL X TO POSITION LIGHT RELAY	1		1
-506	22-62507-5	. HARNESS ASSEMBLY, FEED THRU PANEL X TO AIR CONDITION COMPARTMENT PERMANENT SPLICE	1		1
-507	22-62529	. HARNESS ASSEMBLY, FEED THRU PANEL G TO EQUIPMENT INSTALLATION STA 323	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		8
-508	22-61576-1	. HARNESS ASSEMBLY, LIGHT DIMMING RELAY BOX TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		17
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -509	22-61837	. HARNESS ASSEMBLY, WARNING HORN TIMER TO TIMER DIODES	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
-510	22-61794	. HARNESS ASSEMBLY, CABIN GENERAL LIGHT DIMMING CONTROL TO FWD STEWARD PANEL PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
-511	22-62559	. HARNESS ASSEMBLY, PERMANENT SPLICE TO AFT CABIN OUTFLOW VALVE	1		1
	CT06E16S8S	. . CONNECTOR, CONVAIR 92-40334-012 -V71468-	1		1
-512	22-62562	. HARNESS ASSEMBLY, HYDRAULIC FLUID QUANTITY AMPLIFIER BRIDGE TO REAR SPAR PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		9
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E12-10S	. . CONNECTOR, CONVAIR 92-40325-002 -V77820-	1		1
-513	22-62523	. HARNESS ASSEMBLY, STRUCTURE TEMPERATURE PERMANENT SPLICE TO FRONT SPAR FEED THRU PANEL C	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		9
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		3
	22-62538-5	. HARNESS ASSEMBLY, RELAY INSTALLATION TO FEED THRU PANEL U	2	7	1
-514	22-62538-803	. HARNESS ASSEMBLY, RELAY INSTALLATION TO FEED THRU PANEL U	A		1
-515	22-61802	. HARNESS ASSEMBLY, PERMANENT SPLICE TO LOAD CONTROLLER 3	1		1
	CT06E20-27S	. . CONNECTOR, CONVAIR 92-40334-017 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-516	22-61800	. HARNESS ASSEMBLY, PERMANENT SPLICE TO LOAD CONTROLLER 4	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	CT06E20-27S	. . CONNECTOR, CONVAIR 92-40334-017 -V71468-	1		1

A AIRPLANES 1, 8 AND ON

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -265	22-63601-3	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 6 TO 7 LH	1		1
	22-63600-3	. HARNESS ASSEMBLY, PERMANENT SPLICE CALL SWITCH SEAT 6 TO 7 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		2
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		5
	320559	. . SPLICE, RH CONVAIR 98-34001-003 -V00779-	1		1
-266	22-63593-3	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 6 TO 7 LH	1		1
	22-63592-3	. HARNESS ASSEMBLY, READING LIGHTS TO PERMANENT SPLICE SEAT 6 TO 7 RH	1		1
	320562	. . SPLICE, LH CONVAIR 98-34001-001 -V00779-	1		4
	320562	. . SPLICE, RH CONVAIR 98-34001-001 -V00779-	1		6
-267	22-63534	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE STA 461 LH	1		1
	36157	. . TERMINAL, CONVAIR 96-90805-008 -V00779-	1		4
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		9
-268	22-63536	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE STA 456 RH	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		9
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		4
-269	22-63535	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE STA 506 LH	1		1
	22-63537	. HARNESS ASSEMBLY, READING LIGHT TO PERMANENT SPLICE STA 499 RH	1		1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		9
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		4
-270	22-61695	. HARNESS ASSEMBLY, WING ICE LIGHT RELAY TO LH LIGHT	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-271	22-63538	. HARNESS ASSEMBLY, CABIN COVE LIGHT TO PERMANENT SPLICE STA 581 TO 719 LH	1		1
	22-63539	. HARNESS ASSEMBLY, CABIN COVE LIGHT TO PERMANENT SPLICE STA 581 TO 719 RH	1		1
	36151	. . TERMINAL, LH CONVAIR 98-90805-001 -V00779-	1		43
	36151	. . TERMINAL, RH CONVAIR 98-90805-001 -V00779-	1		42
	320571	. . TERMINAL, LH CONVAIR 98-90805-005 -V00779-	1		1
	320559	. . SPLICE, RH CONVAIR 98-34001-003 -V00779-	1		1
	36153	. . TERMINAL, RH CONVAIR 98-90805-003 -V00779-	1		1
-273	22-63524	. HARNESS ASSEMBLY, WINDOW LIGHT TO PERMANENT SPLICE STA 546 TO 659 LH	1		1
	22-63525	. HARNESS ASSEMBLY, WINDOW LIGHT TO PERMANENT SPLICE STA 546 TO 659 RH	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		AR
	320574	. . TERMINAL, RH CONVAIR 98-90805-001 -V00779-	1		9

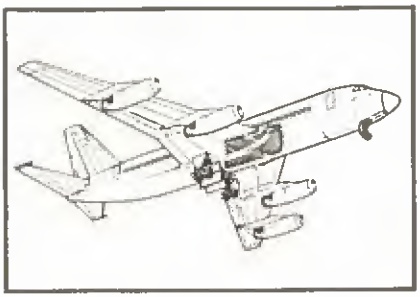


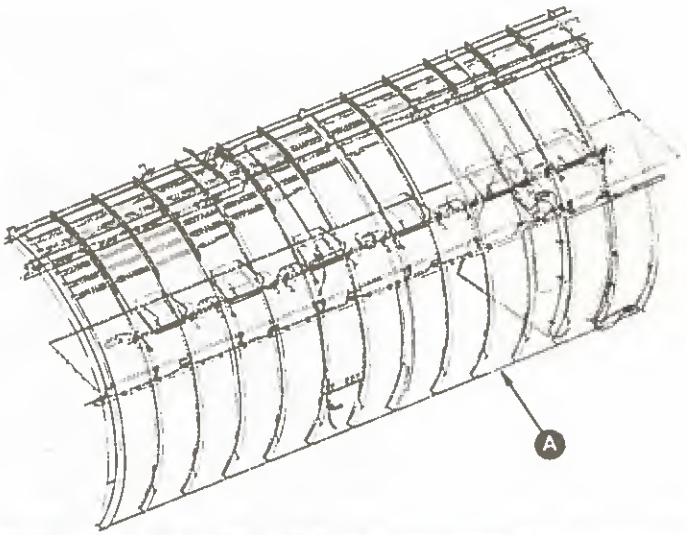


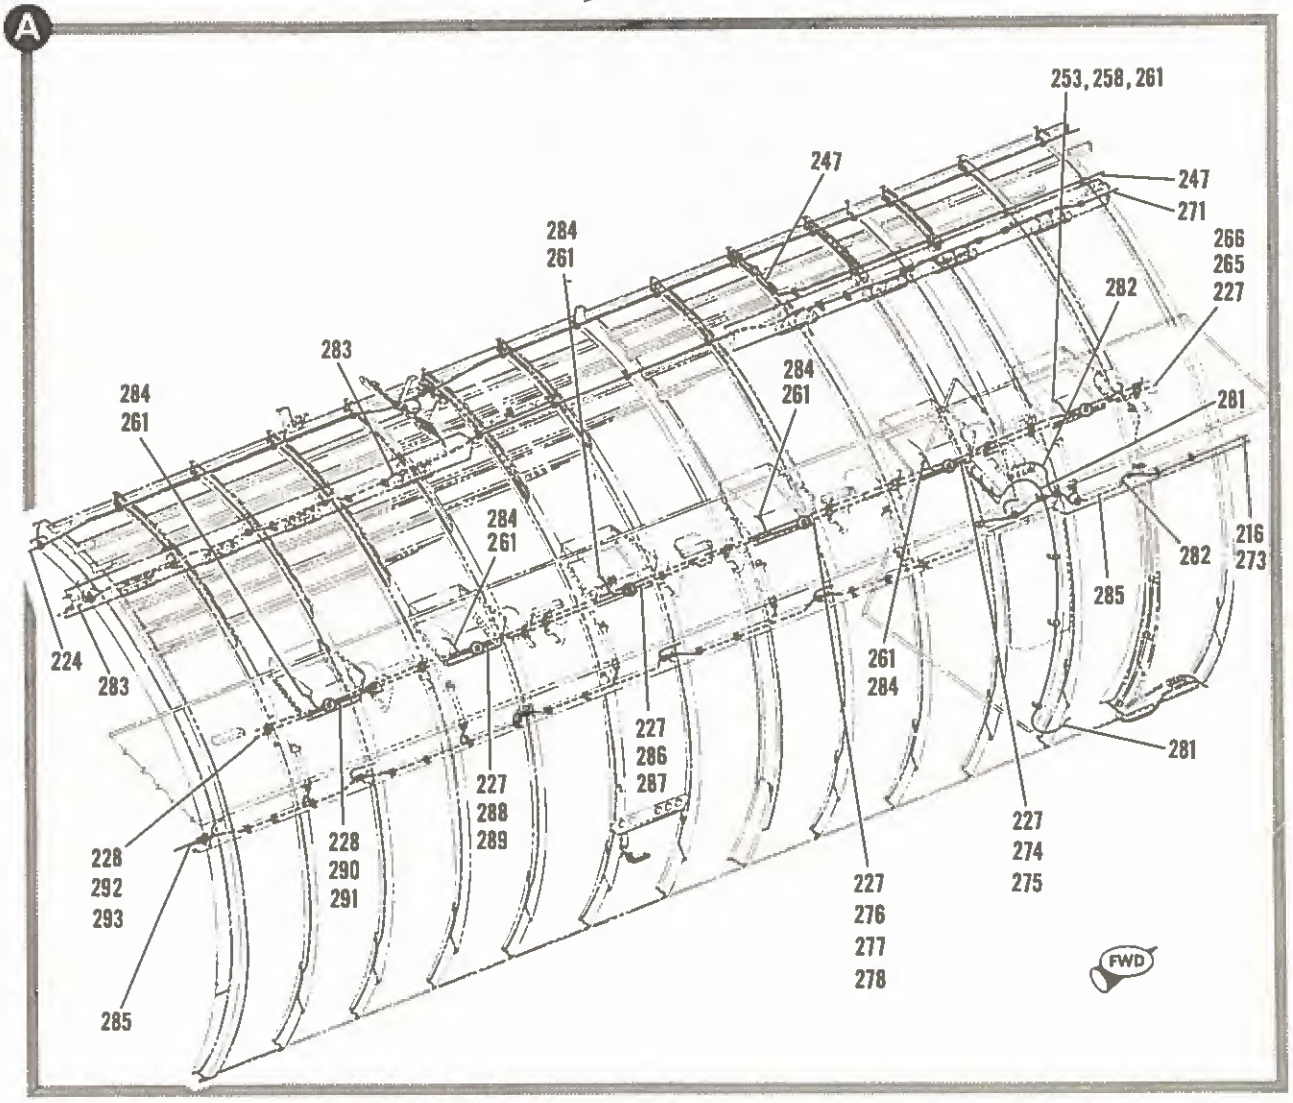



22.04.94.03.003A

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -517	22-62580	. HARNESS ASSEMBLY, TRANSFER SWITCH BOX FUEL PROBE 2 MAIN TANK TO REAR SPAR DISCONNECT	1		1
	1-821-1	. . CONNECTOR, CONVAIR 92-47000-026 -V95712-	1		1
	1-820-1	. . CONNECTOR, CONVAIR 92-47000-025 -V95712-	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		2
-518	22-62534	. HARNESS ASSEMBLY, REAR SPAR TO GENERATOR LINE AND BUS TIE CONTACTOR 3 RH	1		1
-519	22-62543	. HARNESS ASSEMBLY, REAR SPAR TO GENERATOR LINE AND BUS TIE CONTACTOR 2 LH	1		1
	YAEV6C-L2	. . TERMINAL, CONVAIR 98-90806-008 -V09922-	1		3
-522	22-61801	. HARNESS ASSEMBLY, PERMANENT SPLICE TO LOAD CONTROLLER 1	1		1
-523	22-61803	. HARNESS ASSEMBLY, PERMANENT SPLICE TO LOAD CONTROLLER 2	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	CT06E20-27S	. . CONNECTOR, CONVAIR 92-40334-017 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-524	22-61605	. HARNESS ASSEMBLY, PERMANENT SPLICE TO FEED THRU PANEL AC	1		1
-525	22-61616	. HARNESS ASSEMBLY, FREON SWITCHES TO PERMANENT SPLICE	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		6
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		6
-527	22-61902	. HARNESS ASSEMBLY, AUTOPILOT RACK PERMANENT SPLICE TO PERMANENT SPLICE STA 375	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		19
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		17
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		2
-528	22-61910	. HARNESS ASSEMBLY, PRESSURE TRANSDUCER TO PERMANENT SPLICE	1		1
-532	22-62500	. HARNESS ASSEMBLY, ANTI-COLLISION LIGHT LWR TO PERMANENT SPLICE	1		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
-533	22-62577	. HARNESS ASSEMBLY, FEED THRU AC TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		14

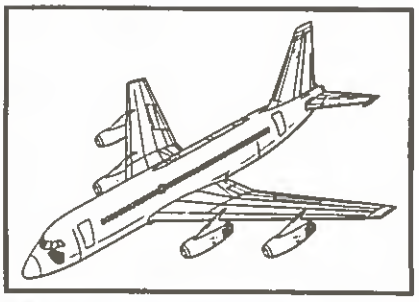


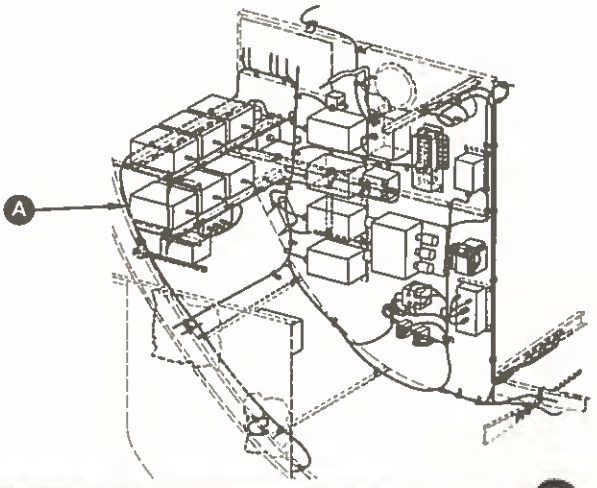

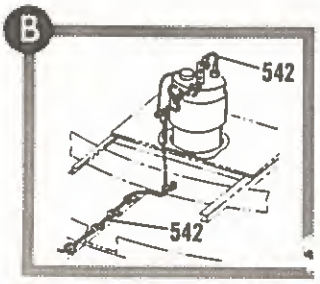

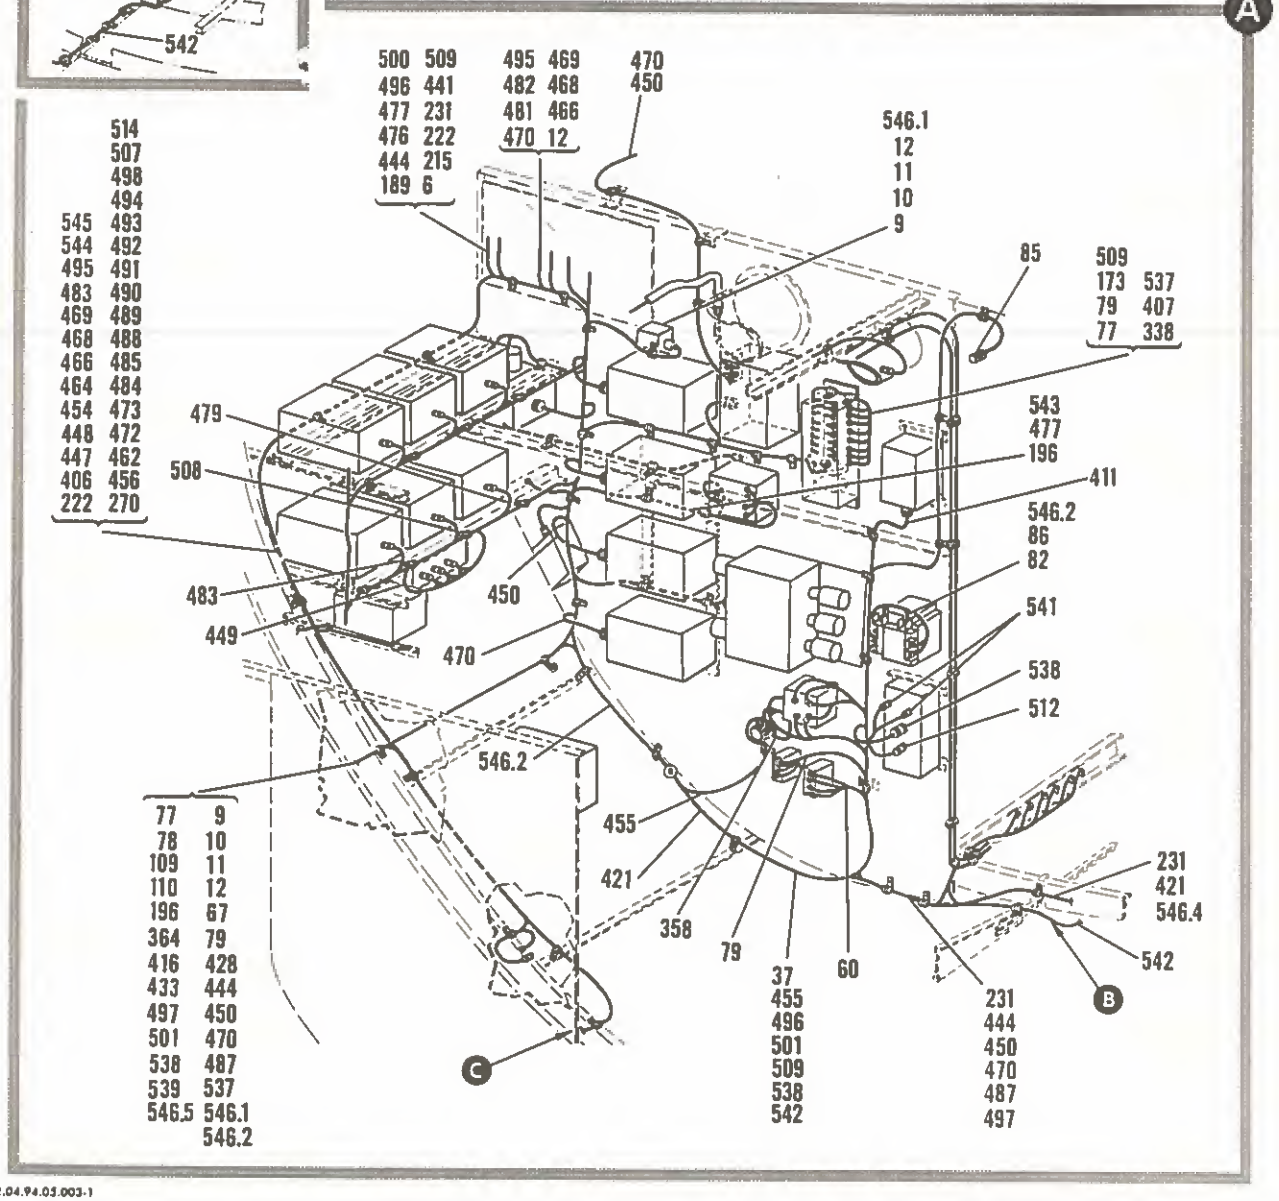


22.04.94.03.003-1

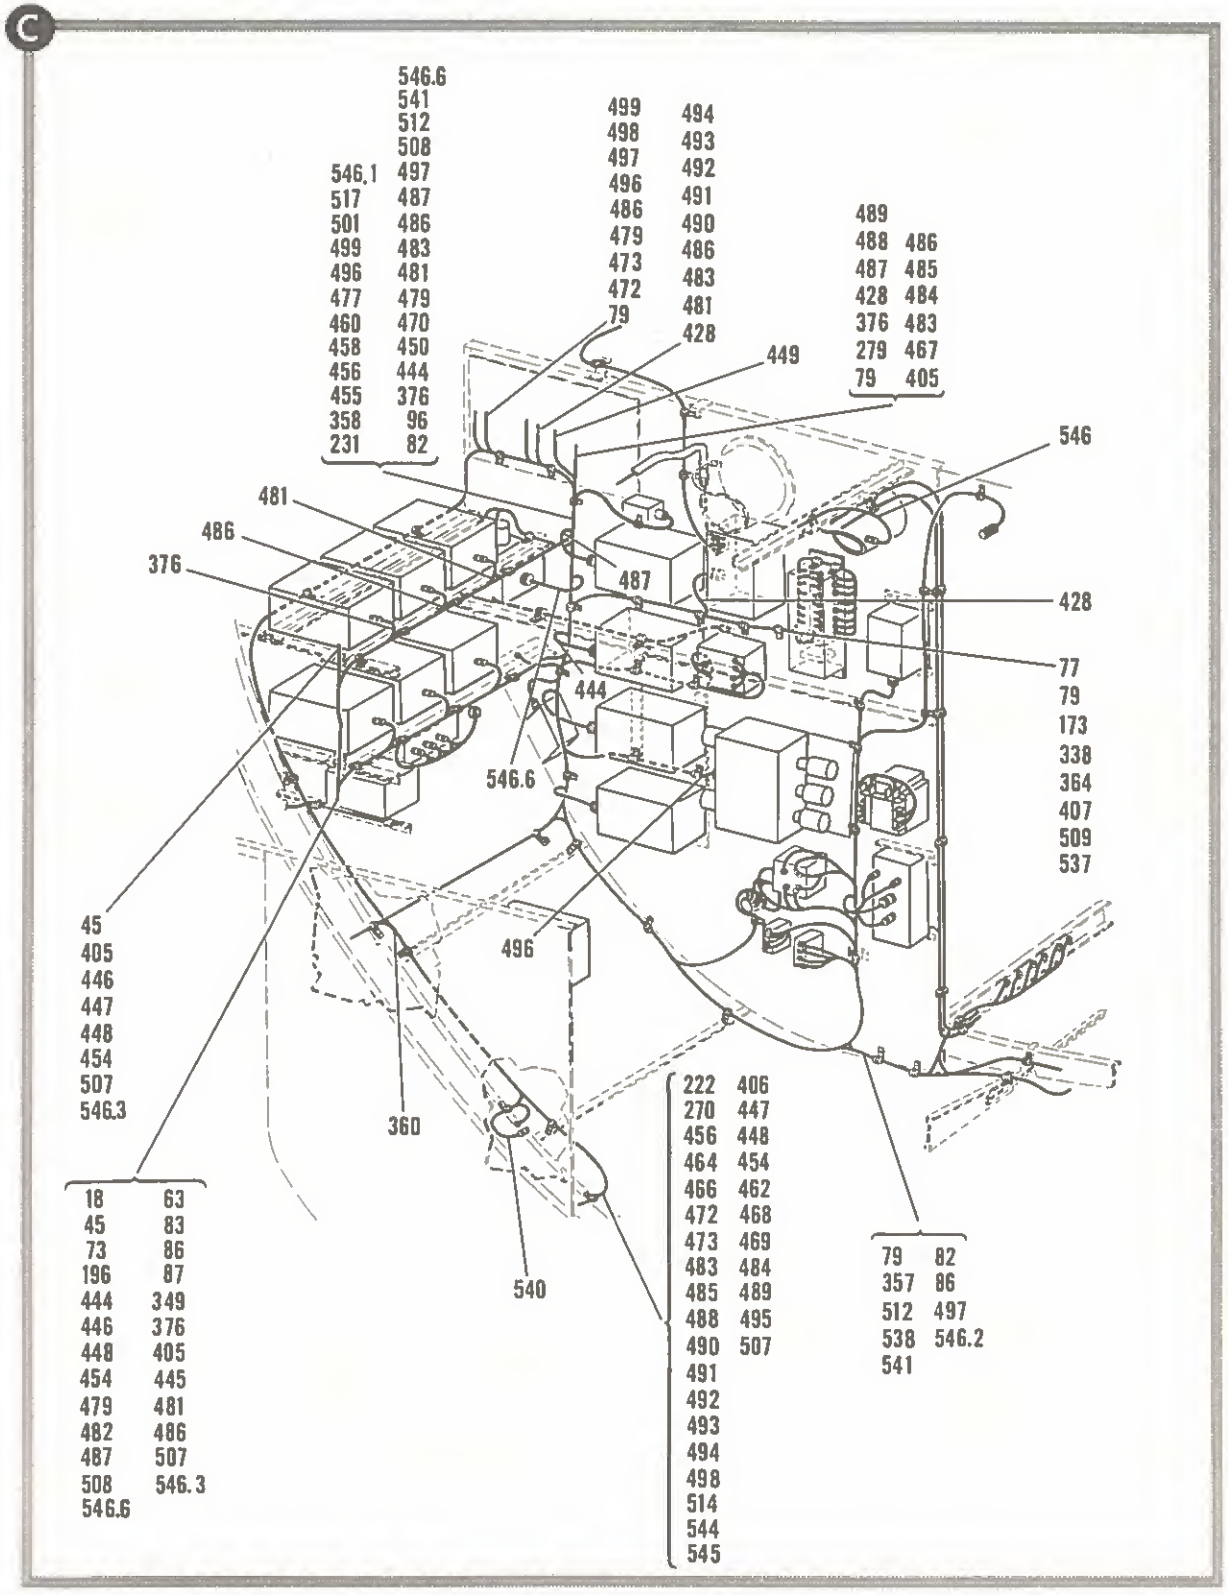


22.04.94.05.003-2


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		RELAY PANEL FWD ELECTRICAL HARNESSES SEE 22-61004	1		
-537	22-61676	. HARNESS ASSEMBLY, DIODE INSTALLATION TO REVERSE THRUST RELAY	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		8
-538	22-61856	. HARNESS ASSEMBLY, AMPLIFIER BRIDGE TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		13
	PT06E14-19S	. . CONNECTOR, CONVAIR 98-40325-011 -V06840-	1		1
-539	22-61560-1	. HARNESS ASSEMBLY, INSTRUMENT PANEL DISCONNECT INBD TO INSTRUMENT PANEL LH	1		1
	YPS20H1	. . CONTACT, CONVAIR 92-63903-005 -V02299-	1		16
	PHP45M1	. . CONNECTOR, CONVAIR 92-40329-001 -V09922-	1		1
-540	22-61870	. HARNESS ASSEMBLY, UTILITY RECEPTACLE TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
-541	22-62619	. HARNESS ASSEMBLY, HYDRAULIC TANK PROBES TO REAR SPAR PERMANENT SPLICE	1		1
	PT06E12-10S	. . CONNECTOR, CONVAIR 92-40325-002 -V77820-	1		2
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		1
	1-821-1	. . CONNECTOR, CONVAIR 92-47000-026 -V95712-	1		1
-542	22-62560	. HARNESS ASSEMBLY, PERMANENT SPLICE TO FWD CABIN OUTFLOW VALVE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
	CT06E16SBS	. . CONNECTOR, CONVAIR 92-40334-012 -V71468-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-543	22-62613	. HARNESS ASSEMBLY, AFT CARGO COMPARTMENT LIGHTS TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		9
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
	A1783	. . SPRING, CONVAIR 98-36008-009 -V72914-	1		1
	A1111	. . NUT, CONVAIR 96-35004-001 -V72914-	1		1
	A4149	. . INSULATOR, CONVAIR 95-07002-001 -V72914-	1		1
	AN3046-3	. . TERMINAL	1		1
-544	22-61696	. HARNESS ASSEMBLY, WING ICE LIGHT RELAY TO LIGHT RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
-545	22-62625	. HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE TO REAR SPAR FEED THRU PERMANENT SPLICE ENGINE 2	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		8
-546	22-61744	. HARNESS ASSEMBLY, ELECTRONIC COMPARTMENT FAN TO RELAY	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	320572	. . TERMINAL, CONVAIR 98-90805-006 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	PT06E14-5S	. . CONNECTOR, CONVAIR 92-40325-016 -V06840-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -546.1	22-61932-801	. HARNESS ASSEMBLY, ANTI-ICE VALVE DELAY RELAY LH	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		1
-546.2	22-61911	. HARNESS ASSEMBLY, STATIC INVERTER EMERGENCY IGNITION TO PERMANENT SPLICE	1		1
	MS3106R24-11S	. . CONNECTOR	1		1
-546.3	22-62527-1	. HARNESS ASSEMBLY, FEED THRU PANEL G TO INSTRUMENT PANEL STATION	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		17
-546.5	22-61639-1	. HARNESS ASSEMBLY, COPILOT AUTOPILOT RACK PERMANENT SPLICE TO CIRCUIT BREAKER PERMANENT SPLICE	1		1
-546.6	22-61096	. HARNESS ASSEMBLY, DIMMING BOX 7 TO PERMANENT SPLICE	1	10	1
	22-61096-3	. HARNESS ASSEMBLY, DIMMING BOX 7 TO PERMANENT SPLICE	11		1
	PT06E22-55S	. . CONNECTOR, CONVAIR 92-40325-010 -V06840-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		20

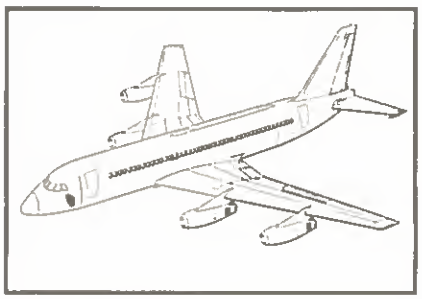


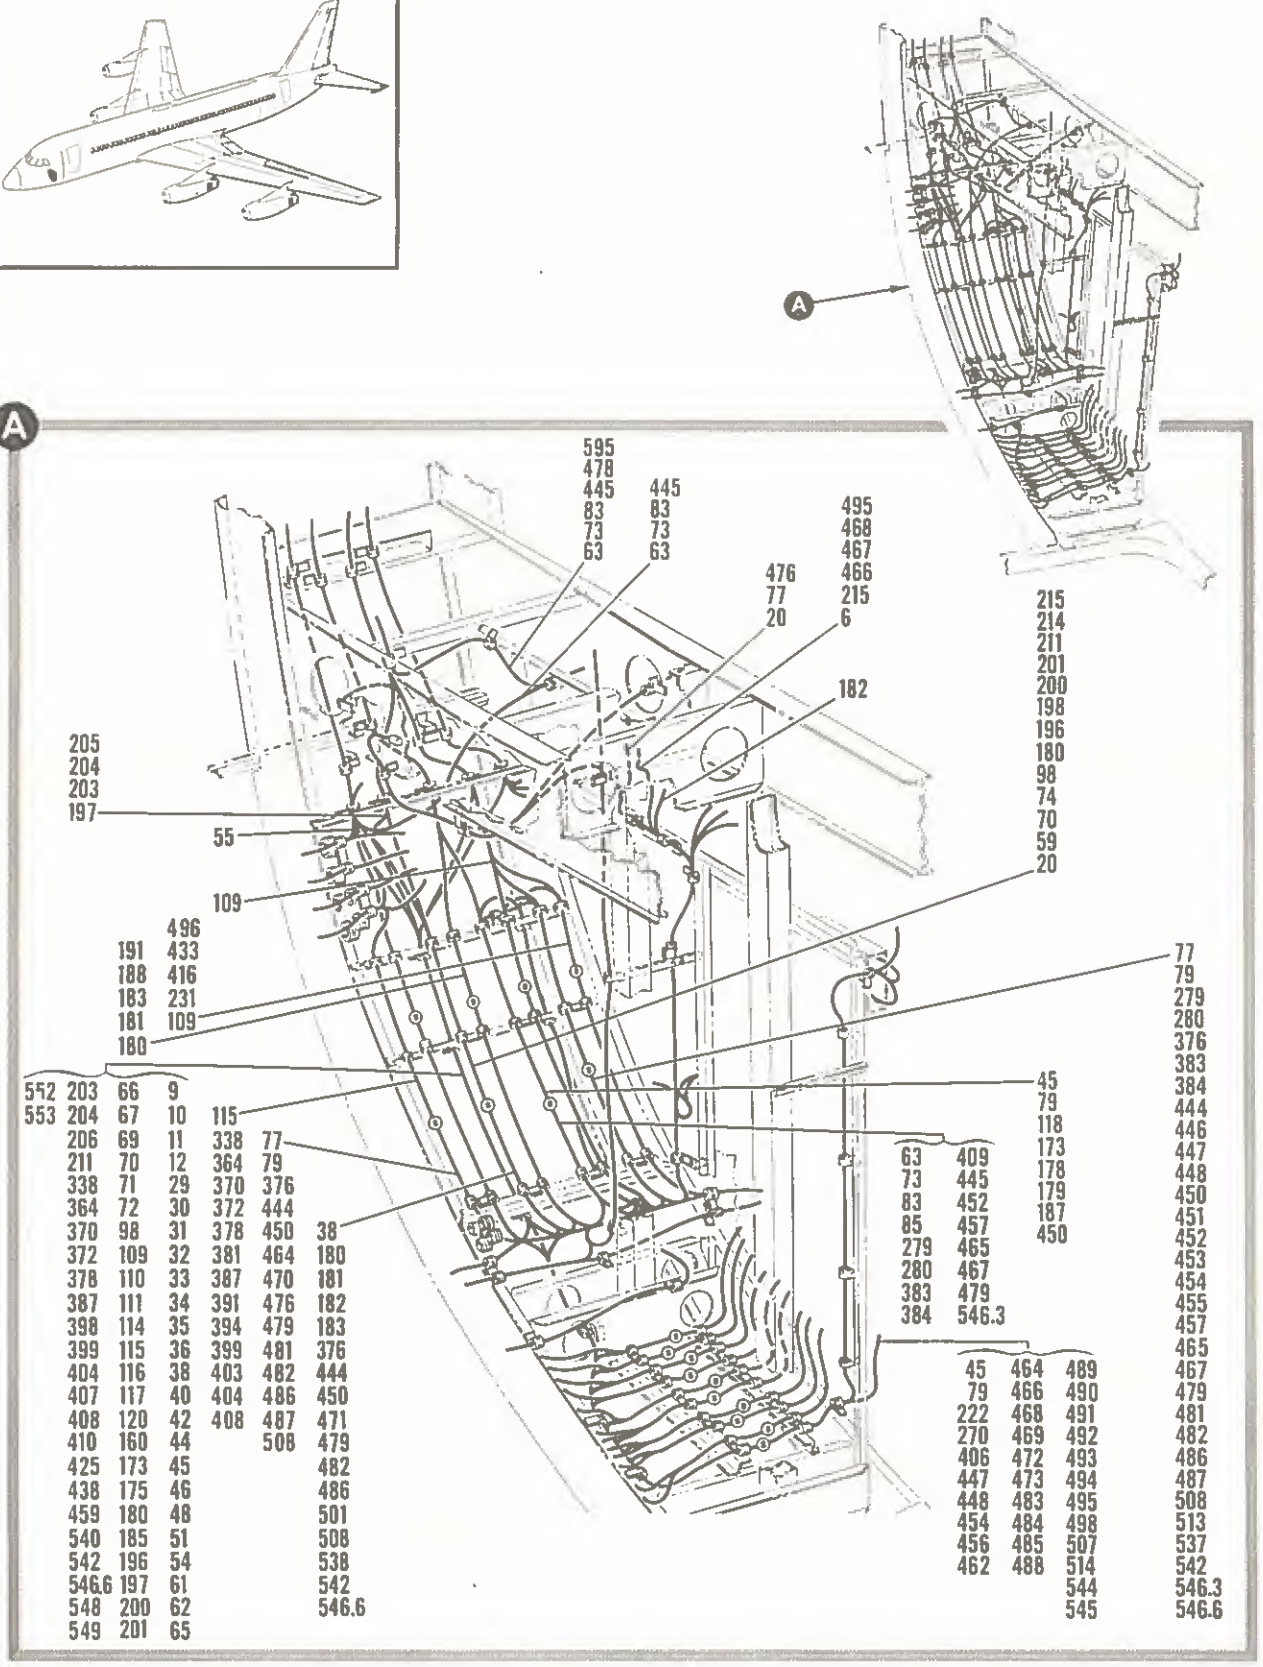

22 04 94 03 004-1

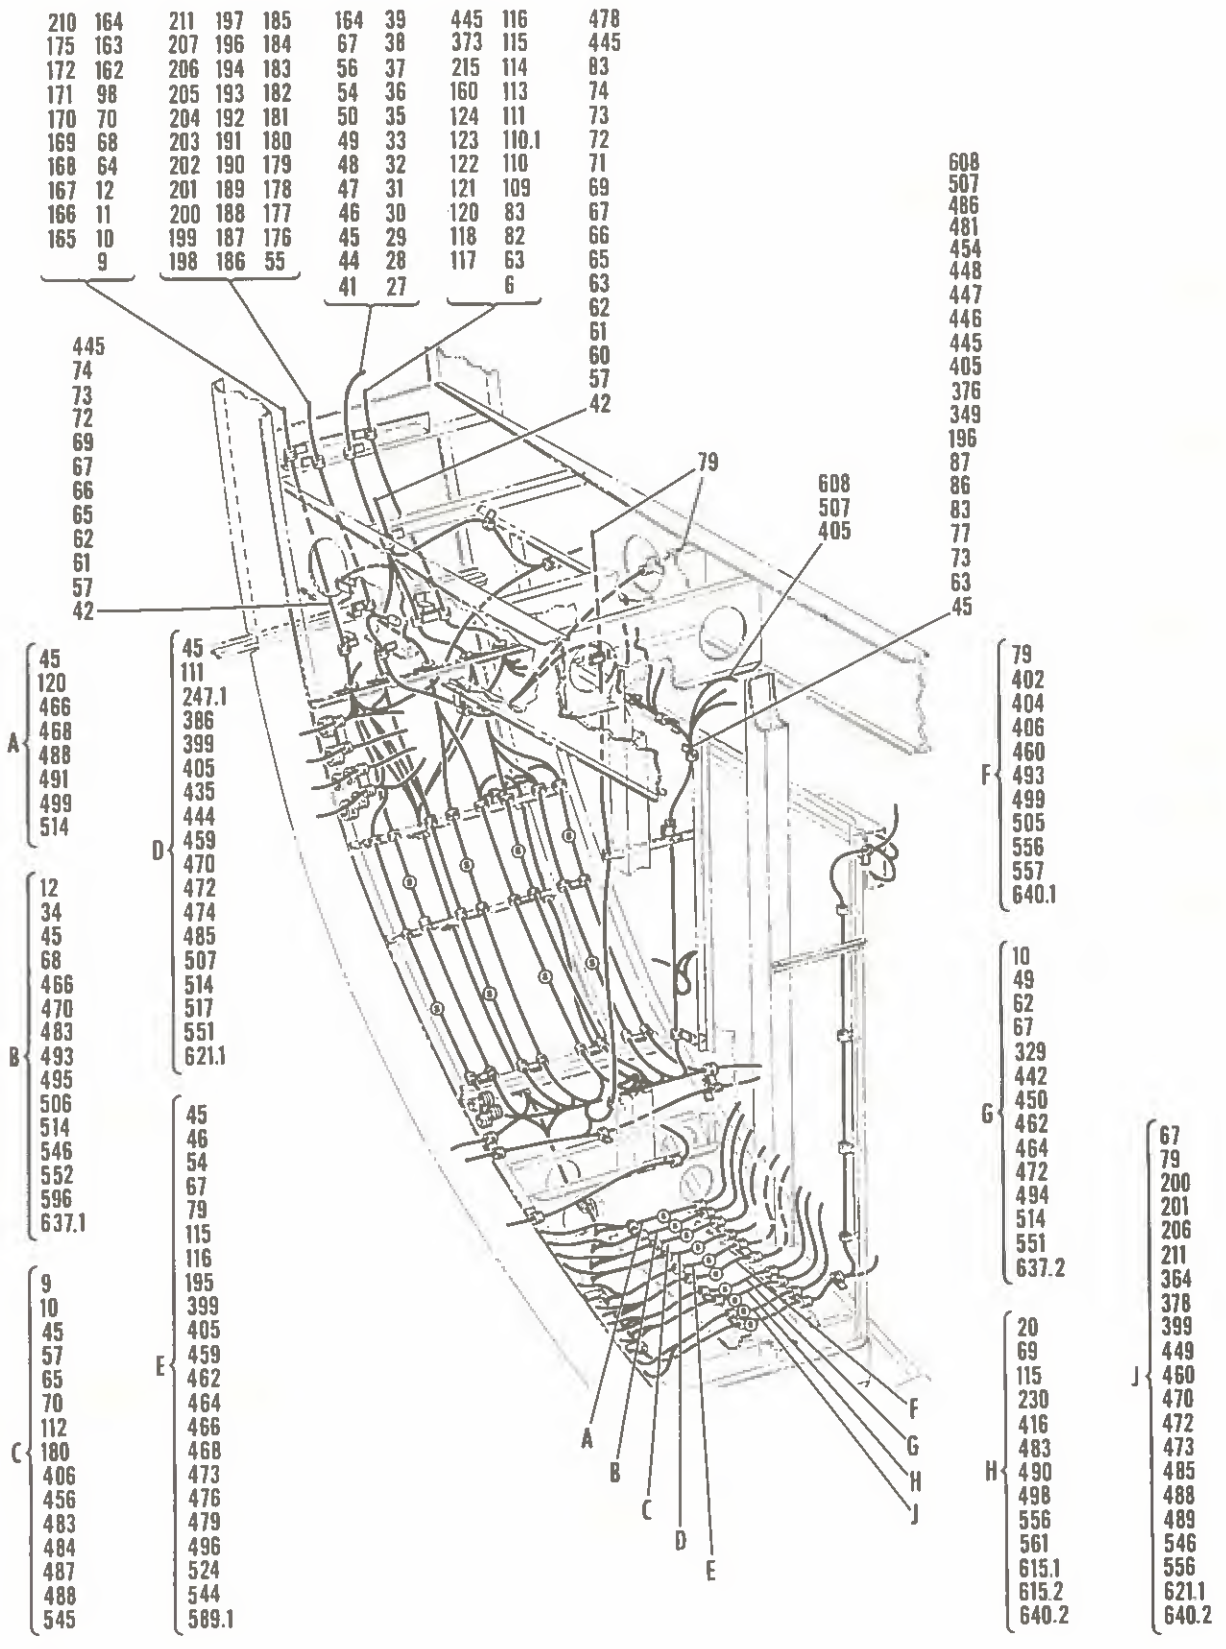


22.04.94.05.004-2

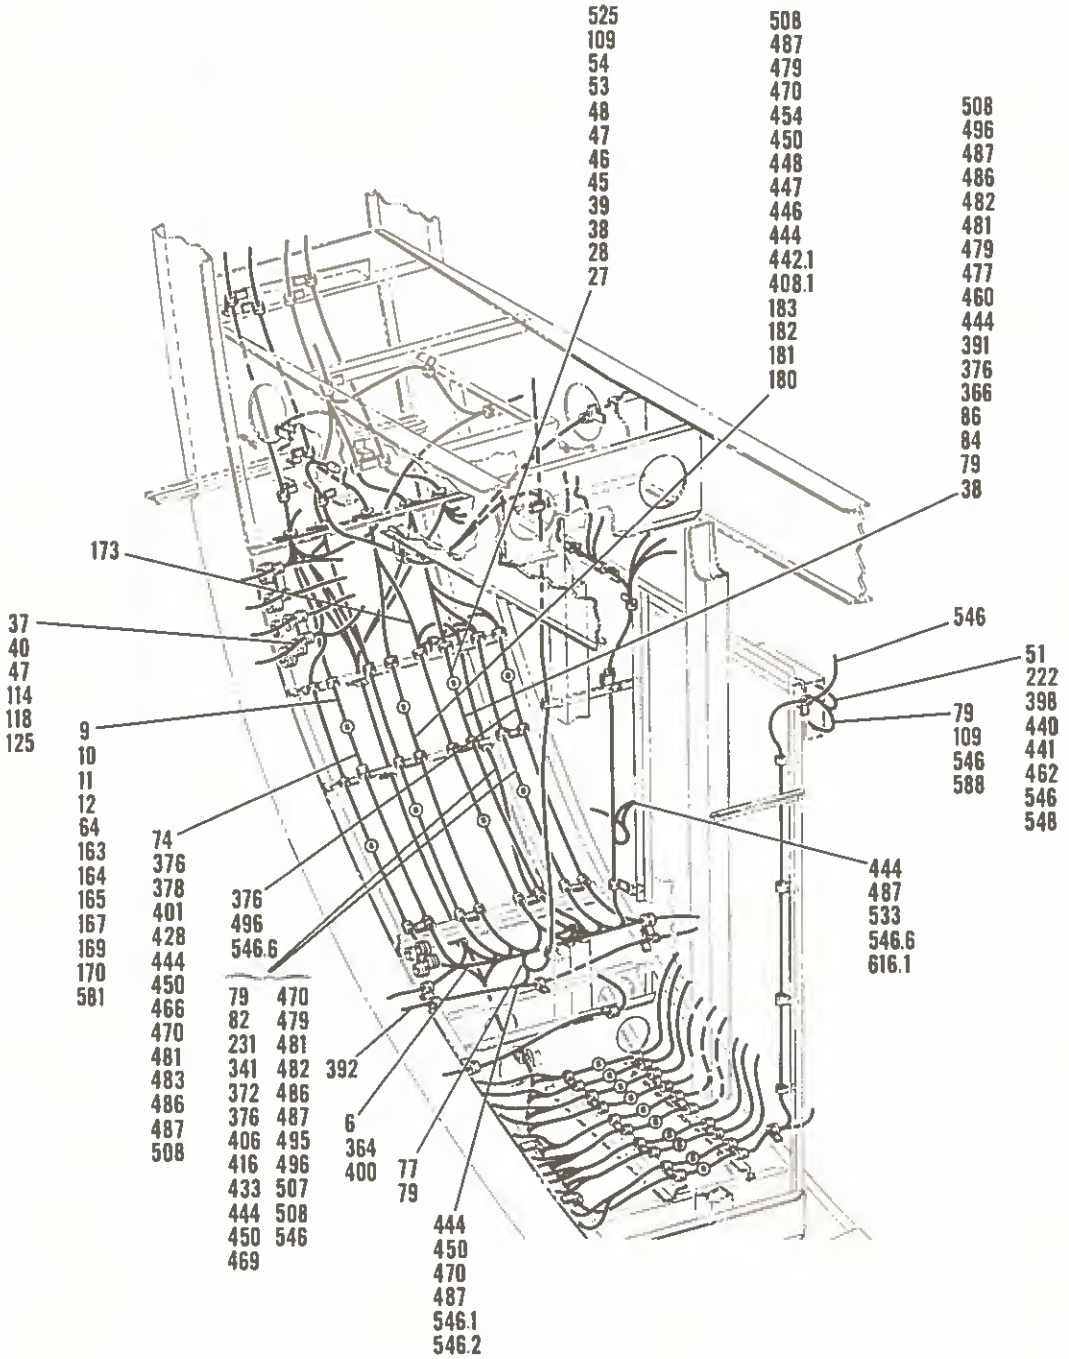


22.04 94.05.004-3


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		RELAY PANEL AFT ELECTRICAL HARNESSES SEE 22-61004			
-548	22-61848	. HARNESS ASSEMBLY, STA 306 DIODE TO GRAVITY AND ALTITUDE SWITCH PERMANENT SPLICE	1		1
	320575	. . TERMINAL, CONVAIR 98-90805-013 -V00779-	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		3
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		1
-549	22-61698	. HARNESS ASSEMBLY, PERMANENT SPLICE TO LH WING OVER HEAT DETECTOR LOOP PERMANENT SPLICE	1		1
-551	22-62596-803	. HARNESS ASSEMBLY, FEED THRU U TO FLIGHT ENGINEER PERMANENT SPLICE	A		1
	22-62596-1	. HARNESS ASSEMBLY, FEED THRU U TO FLIGHT ENGINEER PERMANENT SPLICE	2	6	1
	22-62596-5	. HARNESS ASSEMBLY, FEED THRU U TO FLIGHT ENGINEER PERMANENT SPLICE	7	7	1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
-552	22-61818-1	. HARNESS ASSEMBLY, ANTI-ICE RELAY 3 TO PERMANENT SPLICE	A		1
	22-61818	. HARNESS ASSEMBLY, ANTI-ICE RELAY 3 TO PERMANENT SPLICE	2	7	1
-553	22-61618	. HARNESS ASSEMBLY, ACCELEROMETER STA 325 TO AUTOPILOT RACK PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	2	7	1
	CT00E16S1S	. . CONNECTOR, CONVAIR 92-50293-008 -V71468-	1		1
-556	22-62510	. HARNESS ASSEMBLY, THERMOCOUPLE SPLICE TO REAR SPAR FEED THRU LH	1		1
-557	22-62511	. HARNESS ASSEMBLY, THERMOCOUPLE SPLICE TO REAR SPAR FEED THRU RH	1		1
	CS3100C14S57S	. . CONNECTOR, CONVAIR 92-50220-003 -V77820-	1		1
	AN5548-3	. . TERMINAL, CONVAIR 98-90819-003	1		2
	AN5548-4	. . TERMINAL, CONVAIR 98-90819-004	1		2
	AN3420-6	. . BUSHING	1		1
	AN3057-6B	. . FITTING	1		1
-561	22-62579	. HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE TO PRESSURE DISCONNECT	1		1
	PT00E14-5S	. . CONNECTOR, CONVAIR 92-50288-022 -V77820-	1		1
		A AIRPLANES 1, 8 AND ON			

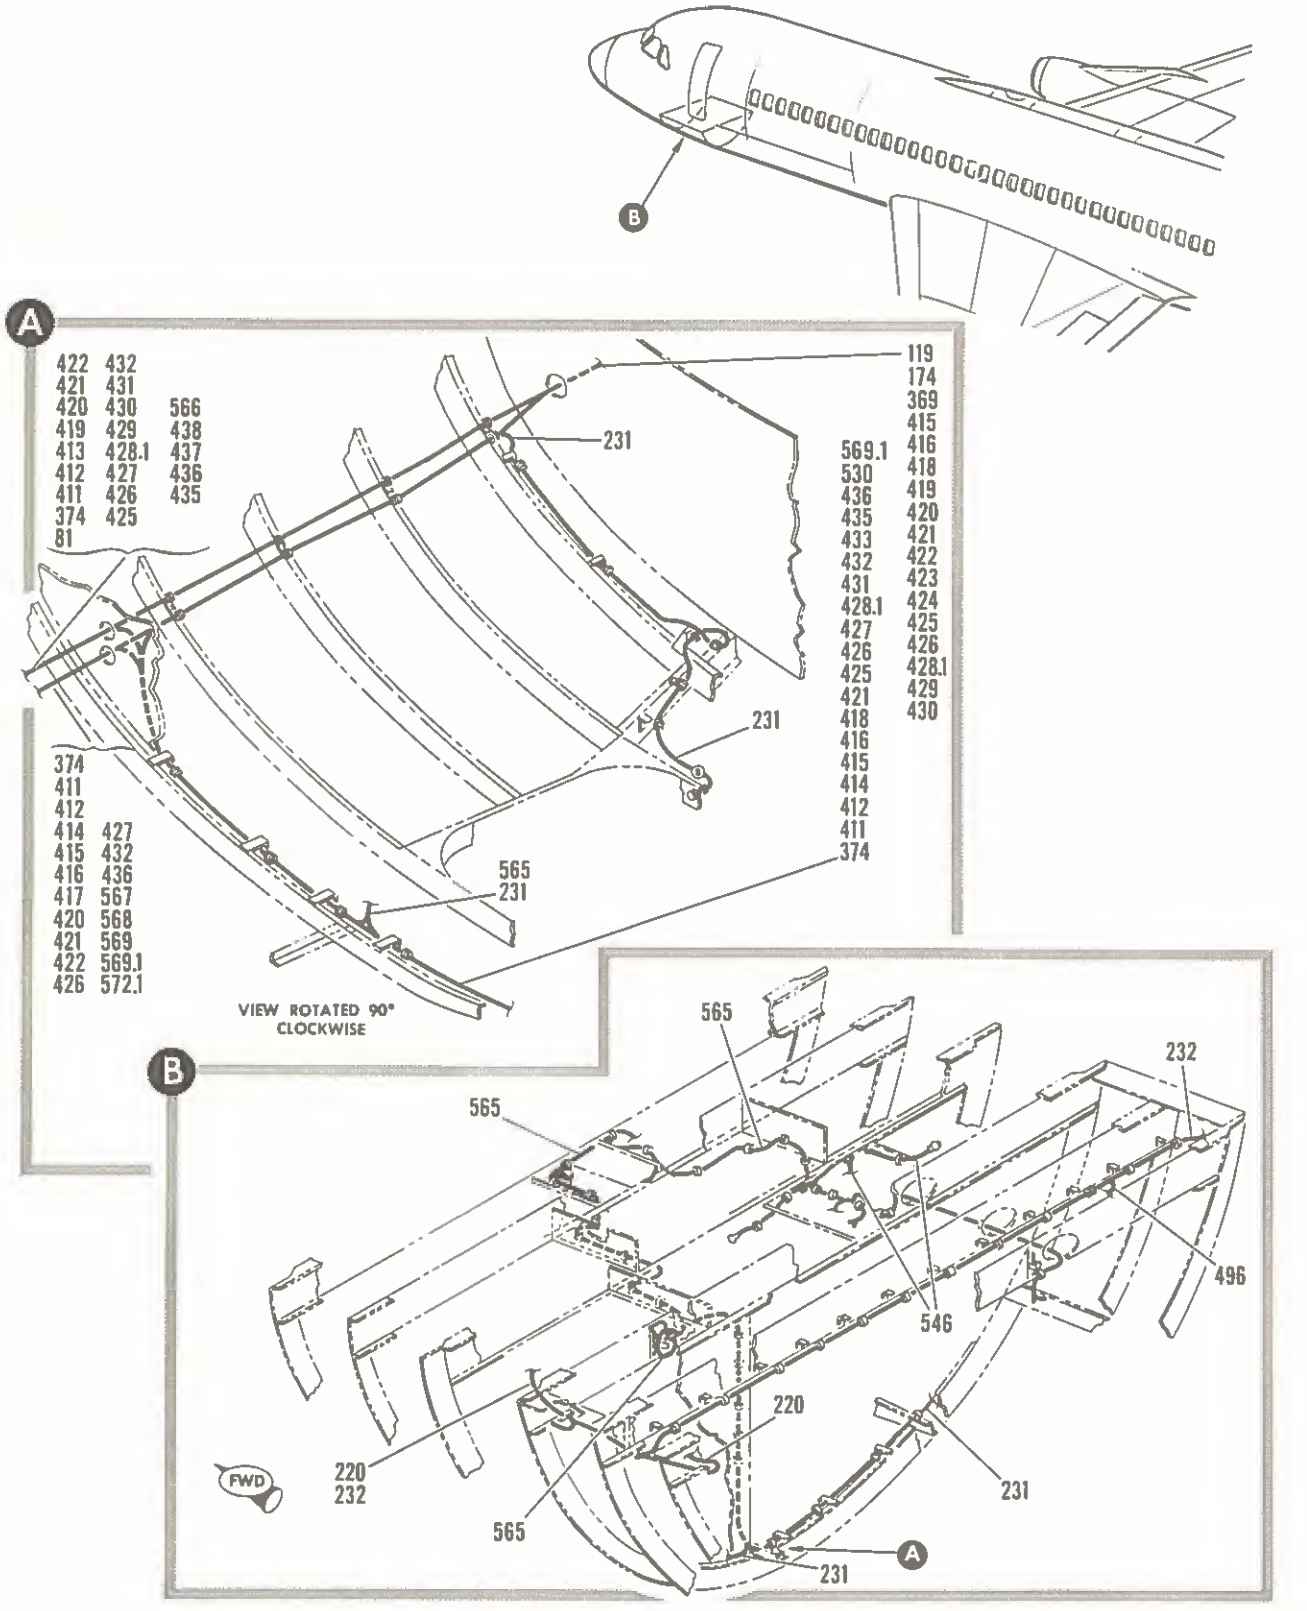


22.04 94.05.005

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4		ELECTRONIC AND ELECTRICAL COMPARTMENT SWITCH AND LIGHT ELECTRICAL HARNESSES SEE 22-61004	1		
-565	22-61898	. HARNESS ASSEMBLY, ELECTRONIC AND ELECTRICAL COMPARTMENT LIGHTS TO SWITCH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		12
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4

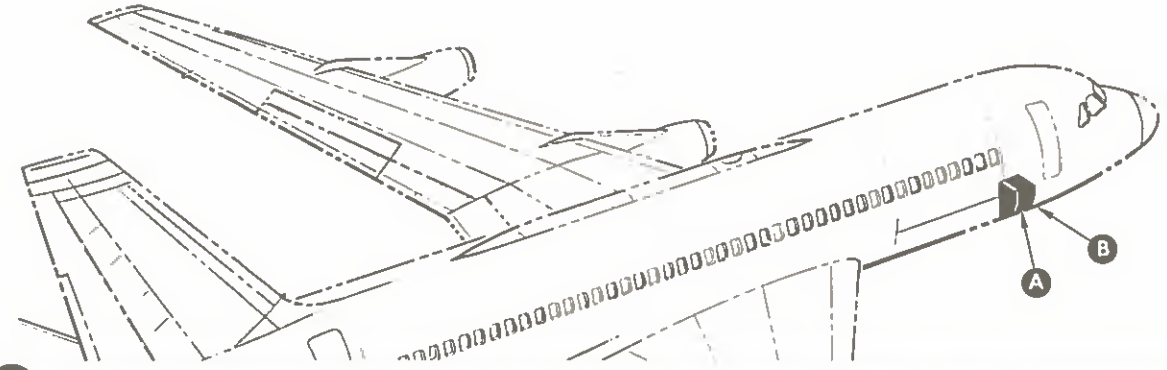

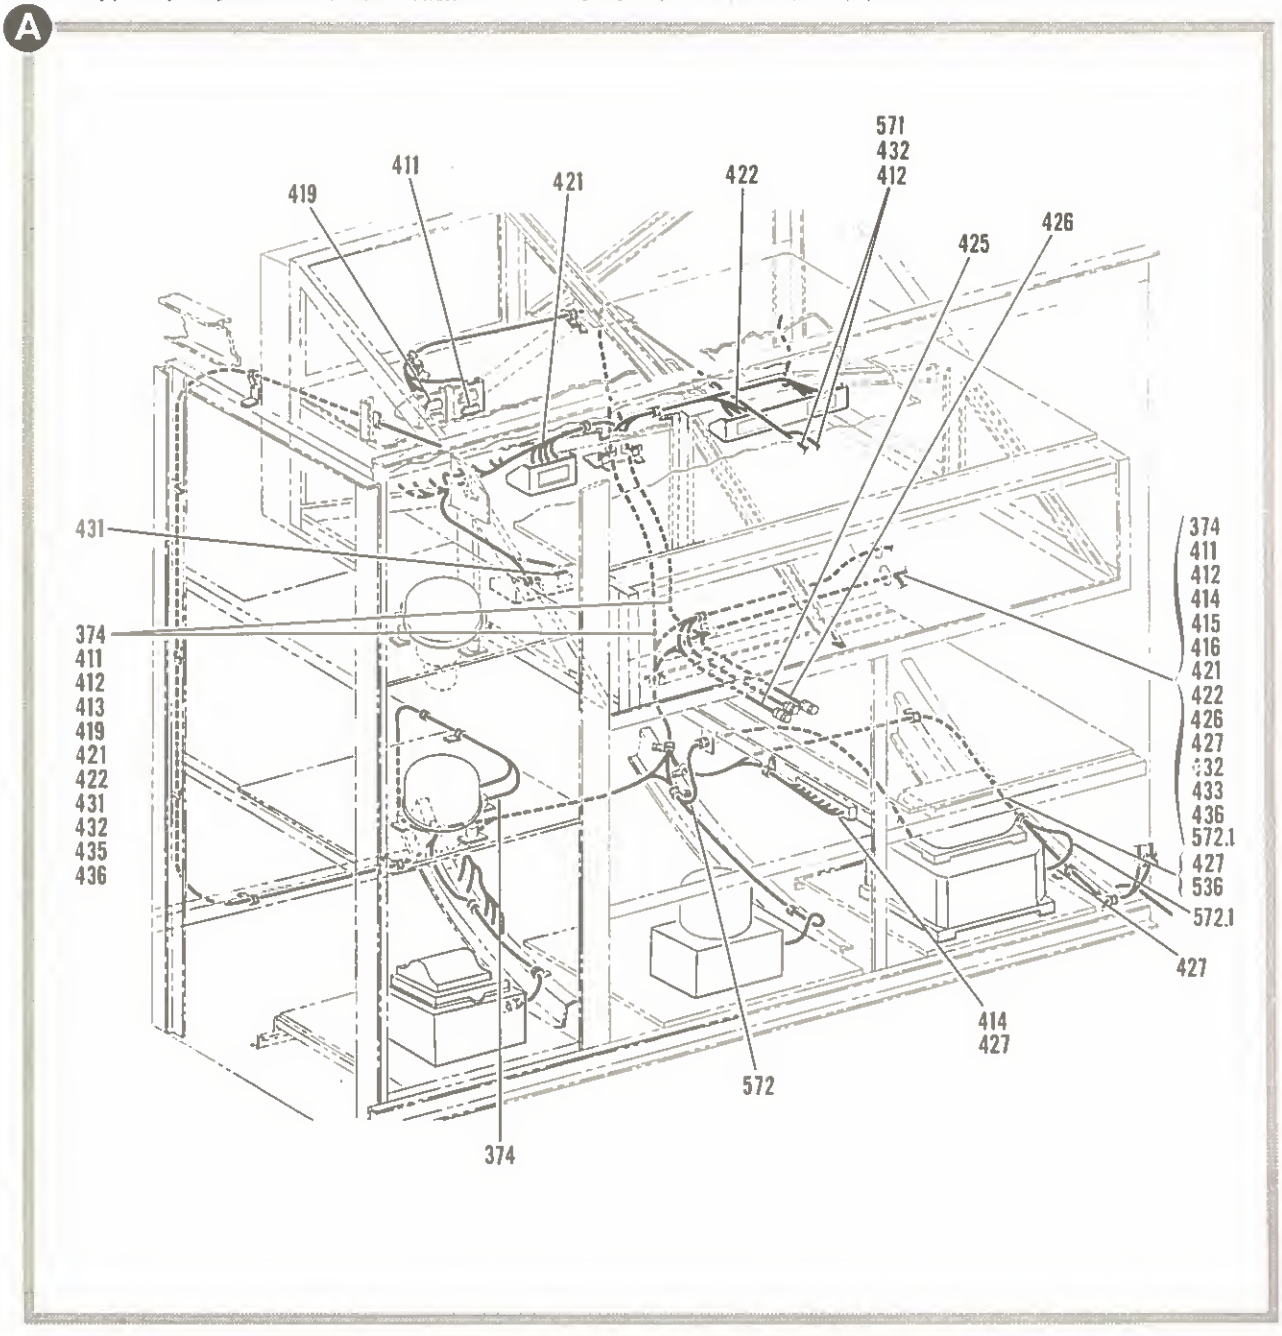


22.04 94.05.006-1A

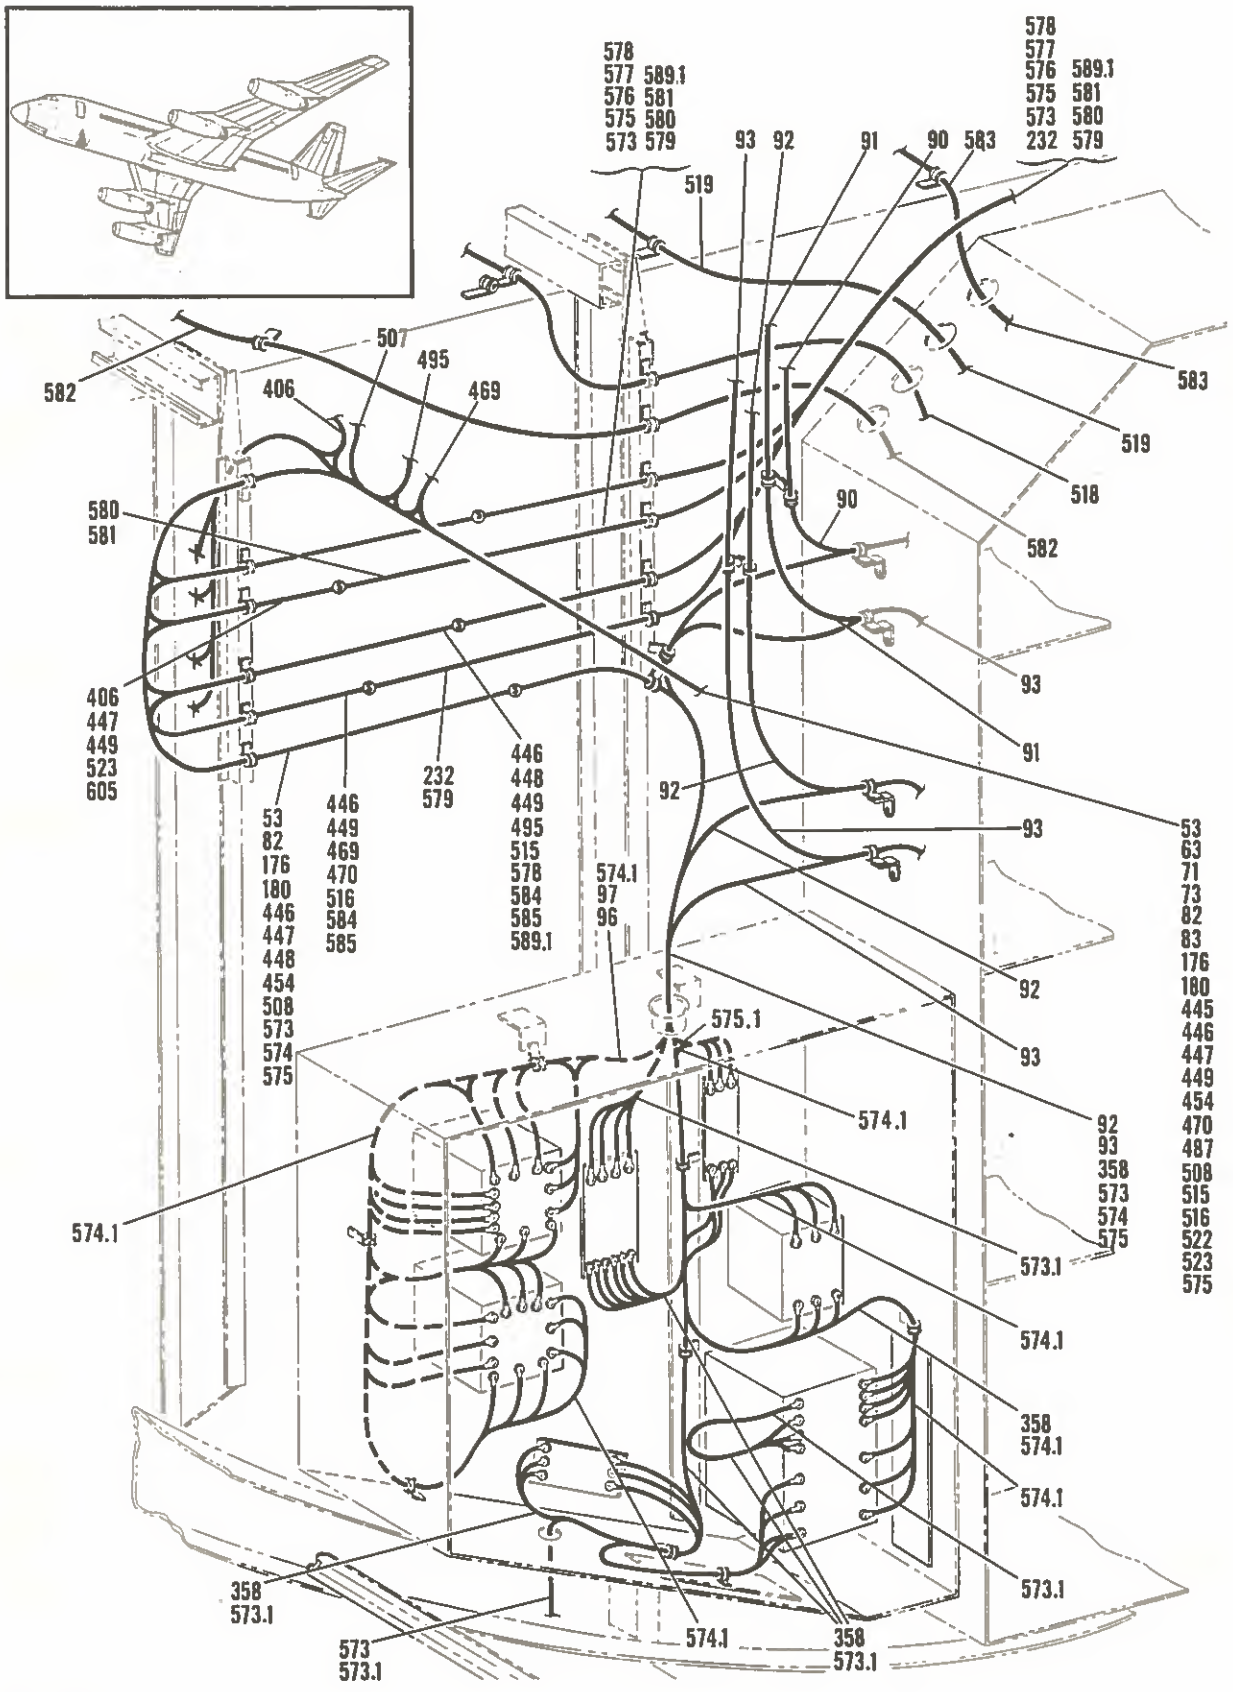



22.04.94.05.008


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6		AC EXTERNAL POWER JUNCTION BOX ELECTRICAL HARNESSES SEE 22-61004			
-573.1	22-61778-1	. HARNESS ASSEMBLY, AC EXTERNAL POWER RECEPTACLE TO AC JUNCTION BOX	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		3
	YEAV6C-L1	. . TERMINAL, CONVAIR 98-90806-005 -V09922-	1		2
	YEAV6C-L2	. . TERMINAL, CONVAIR 98-90806-008 -V09922-	1		2
	320564	. . TERMINAL, CONVAIR 98-90805-014 -V00779-	1		3
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		12
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
-574.1	22-61620-1	. HARNESS ASSEMBLY, EXTERNAL POWER JUNCTION BOX TO LIMITERS	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		15
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		19
	320564	. . TERMINAL, CONVAIR 98-90805-014 -V00779-	1		3
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		5
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
-575.1	22-61777-1	. HARNESS ASSEMBLY, SYNCHRONIZING BUS PROTECTION TO PERMANENT SPLICE	1		1
	PT06E14-15S	. . CONNECTOR, CONVAIR 92-40325-017 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-576	22-61565-1	. HARNESS ASSEMBLY, GENERATOR AND BUS TIE CONTACTOR 1 TO PERMANENT SPLICE	1		1
	PT06E18-32P	. . CONNECTOR, CONVAIR 92-40325-019 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		6
	323975	. . CONNECTOR, CONVAIR 98-34009-003 -V00779-	1		4
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
-577	22-61585	. HARNESS ASSEMBLY, PERMANENT SPLICE TO CURRENT TRANSFORMER UNIT 1	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		7
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	CT06E16S1P	. . CONNECTOR, CONVAIR 92-40334-001 -V71468-	1		1
	CT06E18-12P	. . CONNECTOR, CONVAIR 92-40334-011 -V71468-	1		1


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6 -578	22-61567-1	. HARNESS ASSEMBLY, GENERATOR AND BUS TIE CONTACTOR 3 TO PERMANENT SPLICE	1		1
	PT06E18-32P	. . CONNECTOR, CONVAIR 92-40325-019 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		5
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
-580	22-61584	. HARNESS ASSEMBLY, PERMANENT SPLICE TO CURRENT TRANSFORMER UNIT 2	1		1
	CT06E18-12P	. . CONNECTOR, CONVAIR 92-40334-011 -V71468-	1		1
	CT06E16S1P	. . CONNECTOR, CONVAIR 92-40334-001 -V71468-	1		1
-581	22-61566-1	. HARNESS ASSEMBLY, GENERATOR AND BUS TIE CONTACTOR 2 TO PERMANENT SPLICE	1		1
	PT06E18-32P	. . CONNECTOR, CONVAIR 92-40325-019 -V77820-	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		5
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
	323975	. . CONNECTOR, CONVAIR 98-34009-003 -V00779-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
-582	22-62532	. HARNESS ASSEMBLY, REAR SPAR TO GENERATOR LINE AND BUS TIE CONTACTOR 4 RH	1		1
	YAEV6C-L2	. . TERMINAL, CONVAIR 98-90806-008 -V09922-	1		3
-583	22-62539	. HARNESS ASSEMBLY, REAR SPAR TO GENERATOR LINE AND BUS TIE CONTACTOR 1 LH	1		1
	YAEV6C-L2	. . TERMINAL, CONVAIR 98-90806-008 -V09922-	1		3
-584	22-61569	. HARNESS ASSEMBLY, GENERATOR BUS TIE CONTACTORS TO PERMANENT SPLICE	1		1
-585	22-61842	. HARNESS ASSEMBLY, CURRENT TRANSFORMER CONTROL 1 PERMANENT SPLICE TO CURRENT TRANSFORMER CONTROL 4 PERMANENT SPLICE	1		1

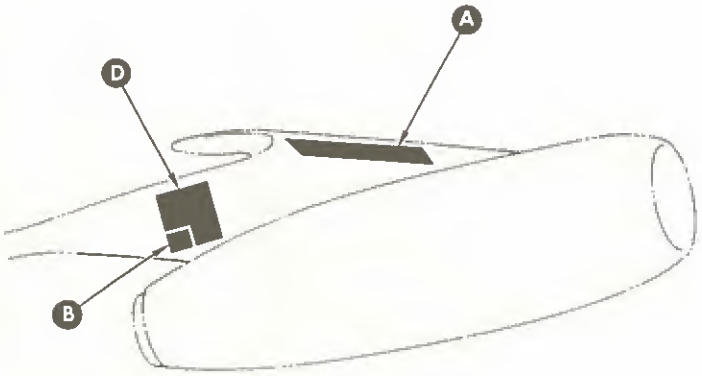

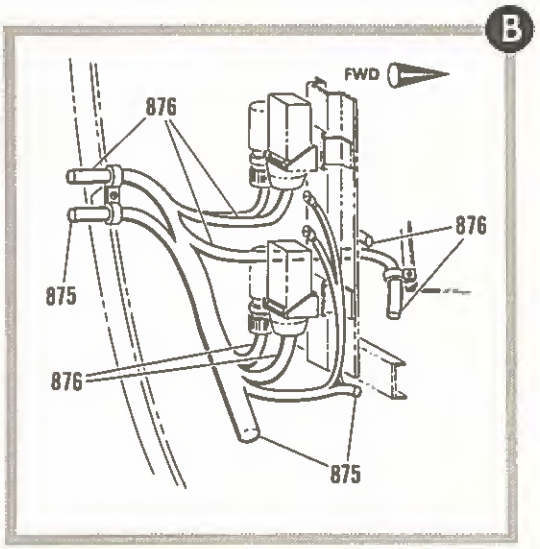

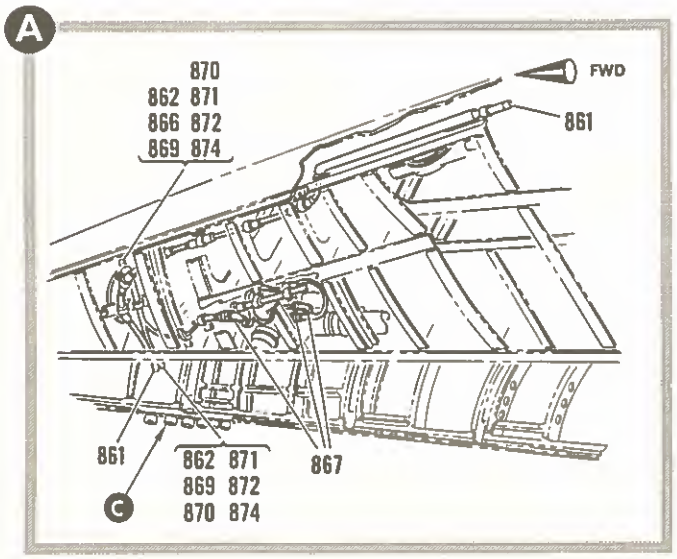

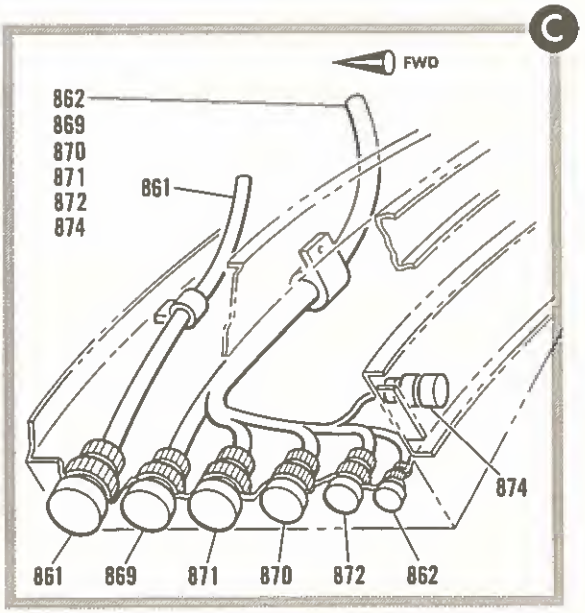


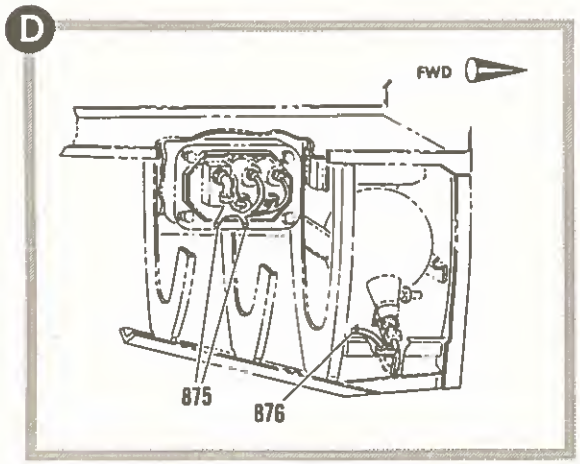

22.04.94.12.003-2


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		POD AND PYLON 3 ELECTRICAL HARNESSES	1		REF
-861	22-64902	. HARNESS ASSEMBLY, PYLON 3 A C GENERATOR FIREWALL DISCONNECT TO REAR SPAR	1		1
	AN3057-20A	. . ADAPTER	1		1
	YAEV6C-L	. . TERMINAL, CONVAIR 98-90806-006 -V09922-	1		1
	FW00-32-17P	. . CONNECTOR, CONVAIR 92-50292-004 -V71468-	1		1
-862	22-64918	. HARNESS ASSEMBLY, PYLON 3 OIL QUANTITY FIREWALL DISCONNECT TO REAR SPAR	1		1
	1-817-1	. . PLUG, CONVAIR 92-47000-020 -V95712-	1		1
	CA00KE12S3S	. . CONNECTOR, CONVAIR 92-50291-008 -V71468-	1		1
-863	22-64932	. HARNESS ASSEMBLY, PYLON 3 FIRE EXTINGUISHER AND DETECTOR TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	CA00KE22I9S	. . CONNECTOR, CONVAIR 92-50291-005 -V71468-	1		1
-864	22-64928	. HARNESS ASSEMBLY, PYLON 3 REFUEL DEFUEL PANEL DISCONNECT TO REAR SPAR	1		1
	CT00E28I2S	. . CONNECTOR, CONVAIR 92-50293-026 -V71468-	1		1
-865	22-64936-1	. HARNESS ASSEMBLY, PYLON 3 HYDRAULIC VALVE TO REAR SPAR	A		1
	22-64936	. HARNESS ASSEMBLY, PYLON 3 HYDRAULIC VALVE TO REAR SPAR	2	6	1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E10-6S	. . CONNECTOR, CONVAIR 92-40325-008 -V06840-	1		1
-866	22-64941	. HARNESS ASSEMBLY, PYLON 3 BLEED AIR VALVE FIREWALL DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA06KE14S2S	. . CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		1
-867	22-64938-1	. HARNESS ASSEMBLY, PYLON 3 BLEED AIR VALVE TO FIREWALL DISCONNECT	1		1
	AN3057-4A	. . ADAPTER	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA3108KE10SL4S	. . PLUG, CONVAIR 92-40341-007 -V71468-	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90305-003 -V00779-	1		1
	CA00KE14S2P	. . CONNECTOR, CONVAIR 92-50291-001 -V71468-	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
-868	22-64949	. HARNESS ASSEMBLY, PYLON 3 FUEL SHUTOFF VALVE TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	CA06KE14S5S	. . CONNECTOR, CONVAIR 92-40327-001 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1

A AIRPLANES 1, 7 AND ON

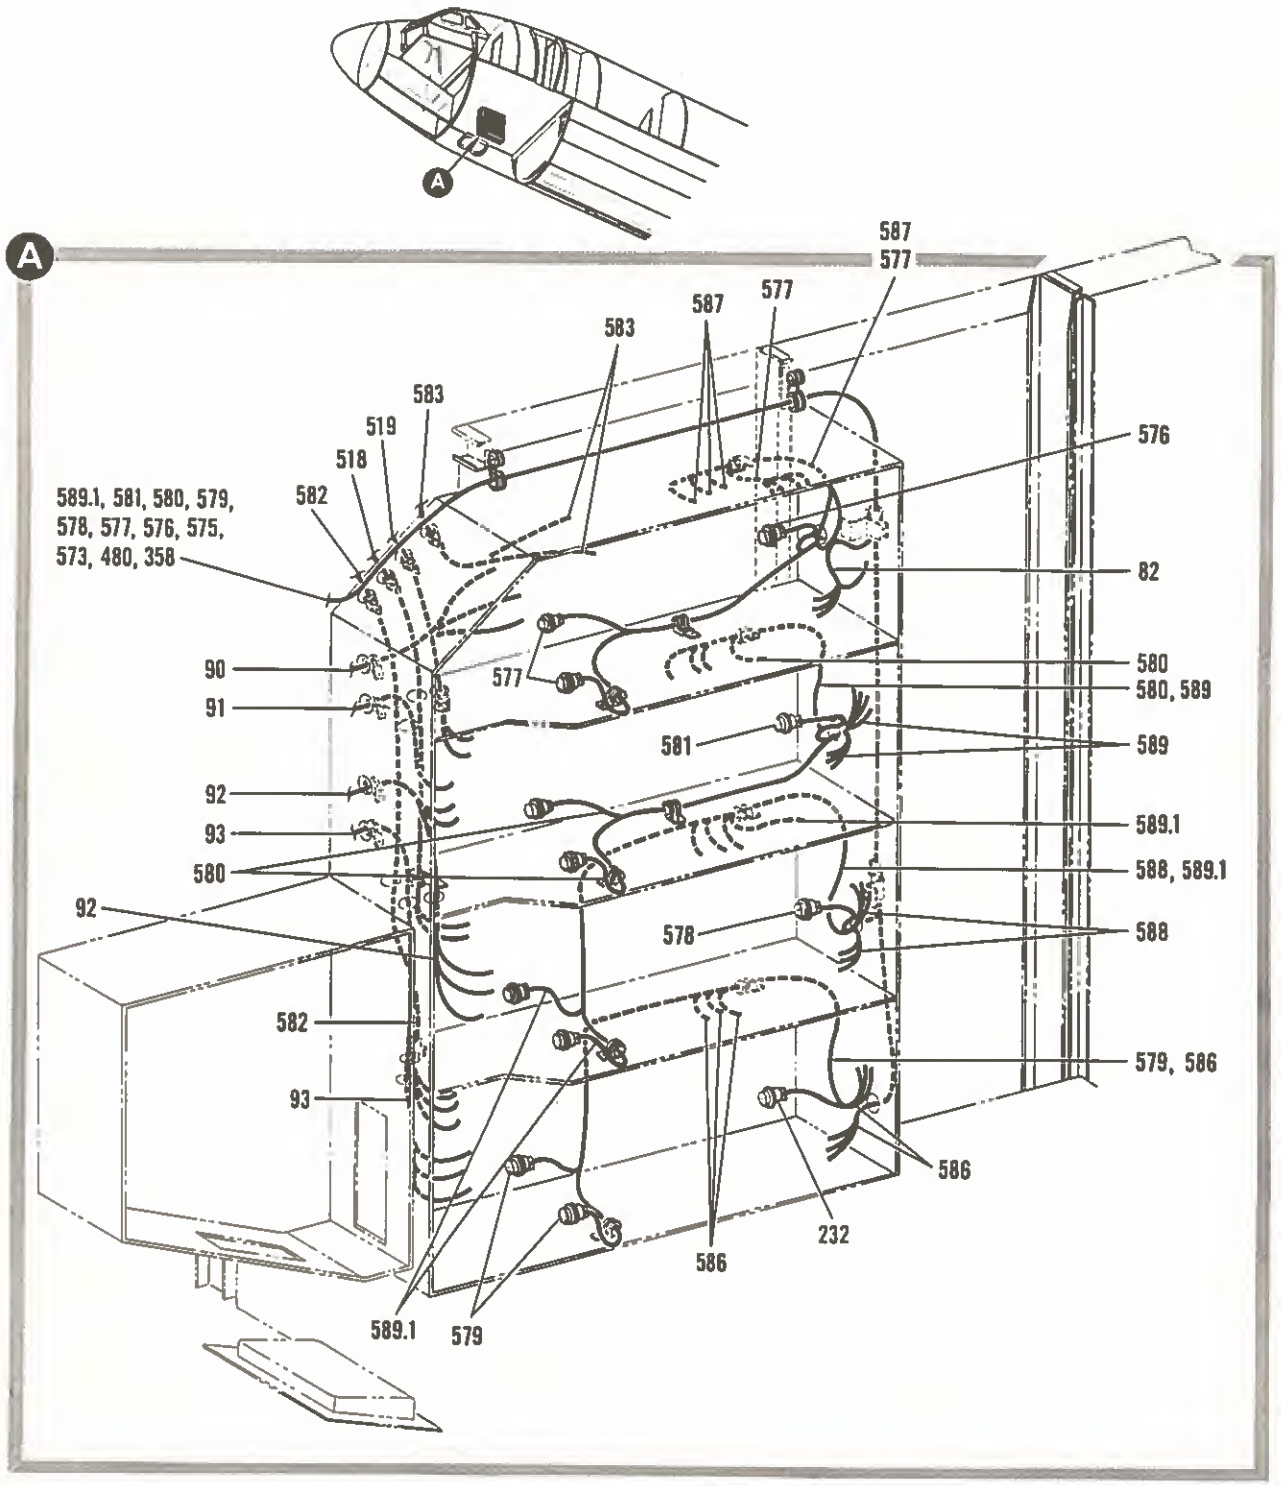


22.04.94.03.009

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
7		AC INTERNAL POWER JUNCTION BOX ELECTRICAL HARNESSES SEE 22-61004			
-586	22-61838	. HARNESS ASSEMBLY, GENERATOR 4 LINE AND BUS TIE CONTACTORS TO LIMITERS	1		1
-587	22-61839	. HARNESS ASSEMBLY, GENERATOR 1 LINE AND BUS TIE CONTACTORS TO LIMITERS	1		1
-588	22-61840	. HARNESS ASSEMBLY, GENERATOR 3 LINE AND BUS TIE CONTACTORS TO LIMITERS	1		1
-589	22-61841	. HARNESS ASSEMBLY, GENERATOR 2 LINE AND BUS TIE CONTACTORS TO LIMITERS	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		9
	320564	. . TERMINAL, CONVAIR 98-90805-014 -V00779-	1		3
-589.1	22-61583	. HARNESS ASSEMBLY, PERMANENT SPLICE TO CURRENT TRANSFORMER UNIT 3	1		1
	CT06E18-12P	. . CONNECTOR, CONVAIR 92-40334-011 -V71468-	1		1
	CT006E16S1P	. . CONNECTOR, CONVAIR 92-40334-001 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320559	. . CONDUCTOR, CONVAIR 92-34001-003 -V00779-	1		4
	320562	. . CONDUCTOR, CONVAIR 92-34001-001 -V00779-	1		4

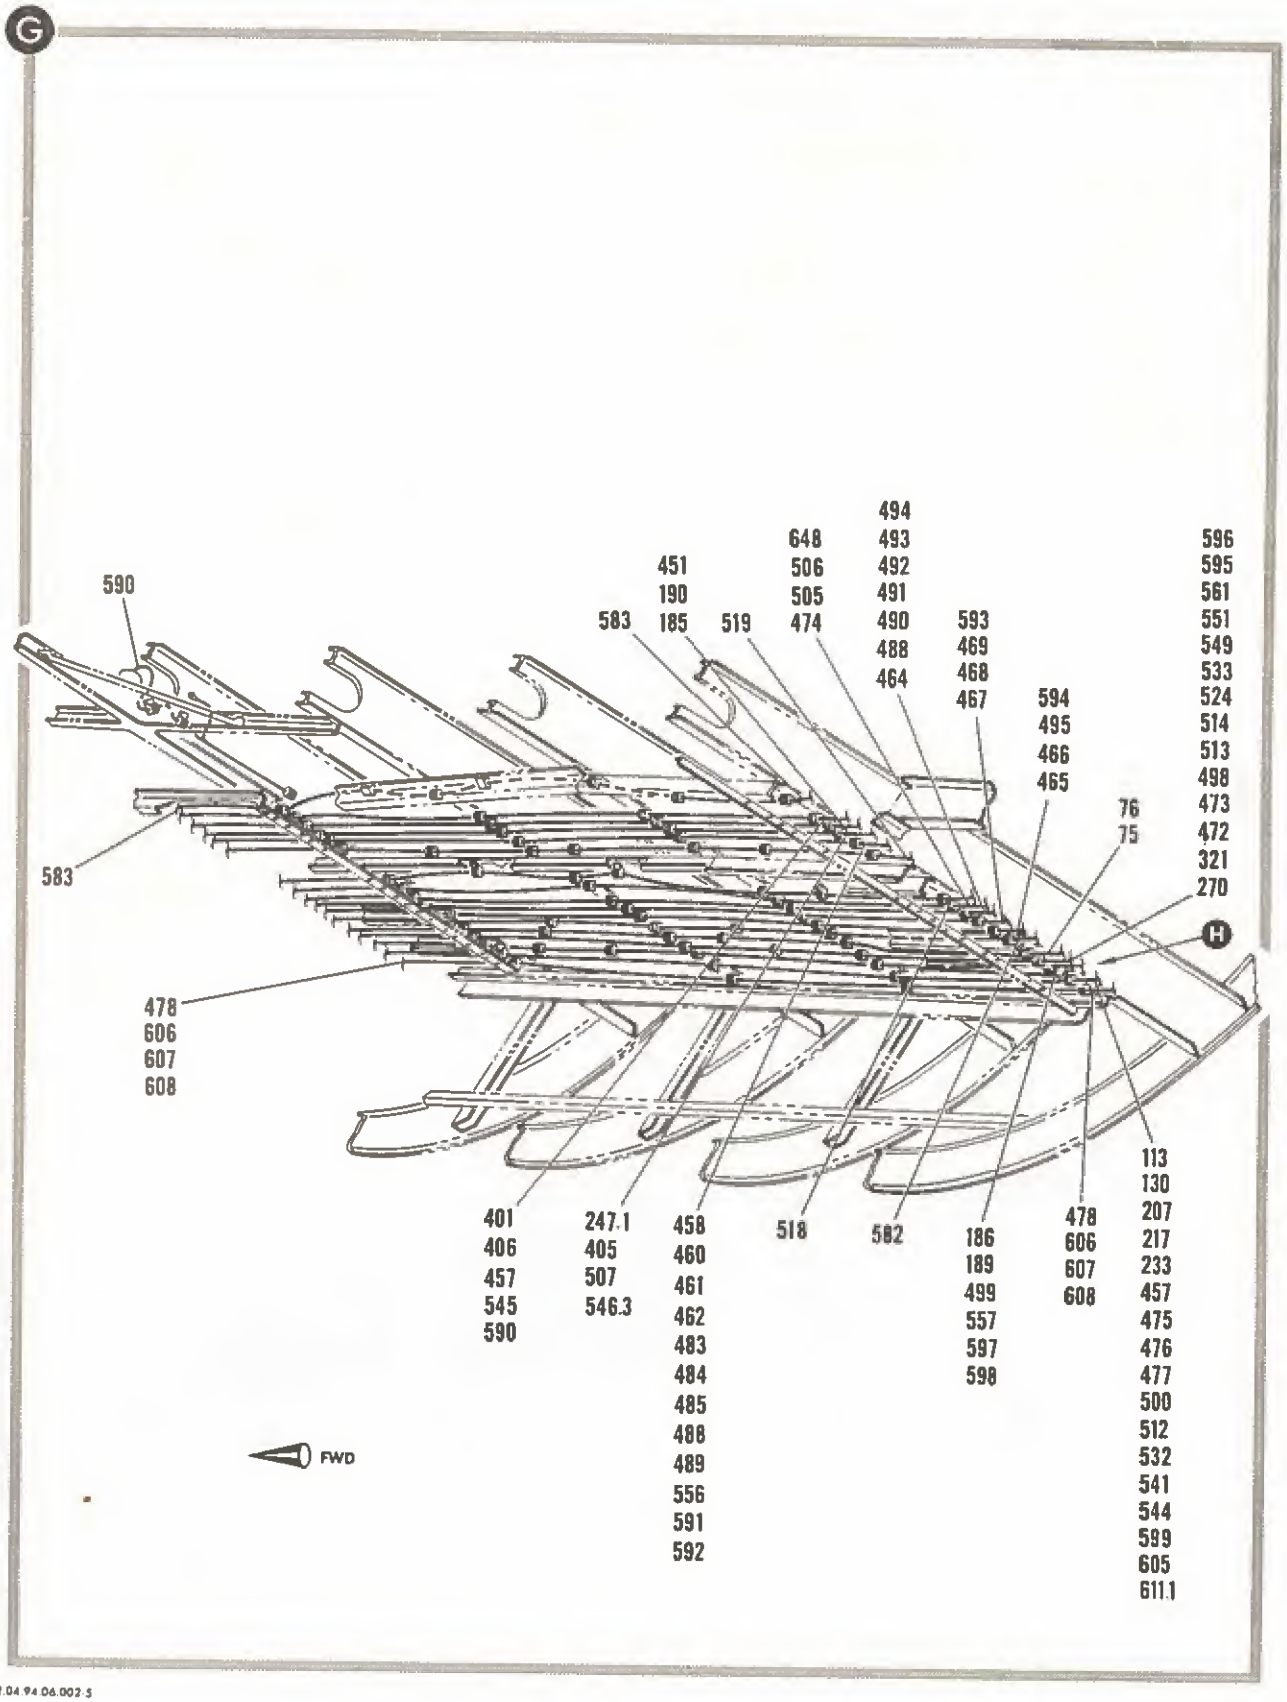


22.04.94.06.002-5

FWD CARGO COMPARTMENT UNDERFLOOR
ELECTRICAL HARNESSES
FIGURE 1 (SHEET 5 OF 7)

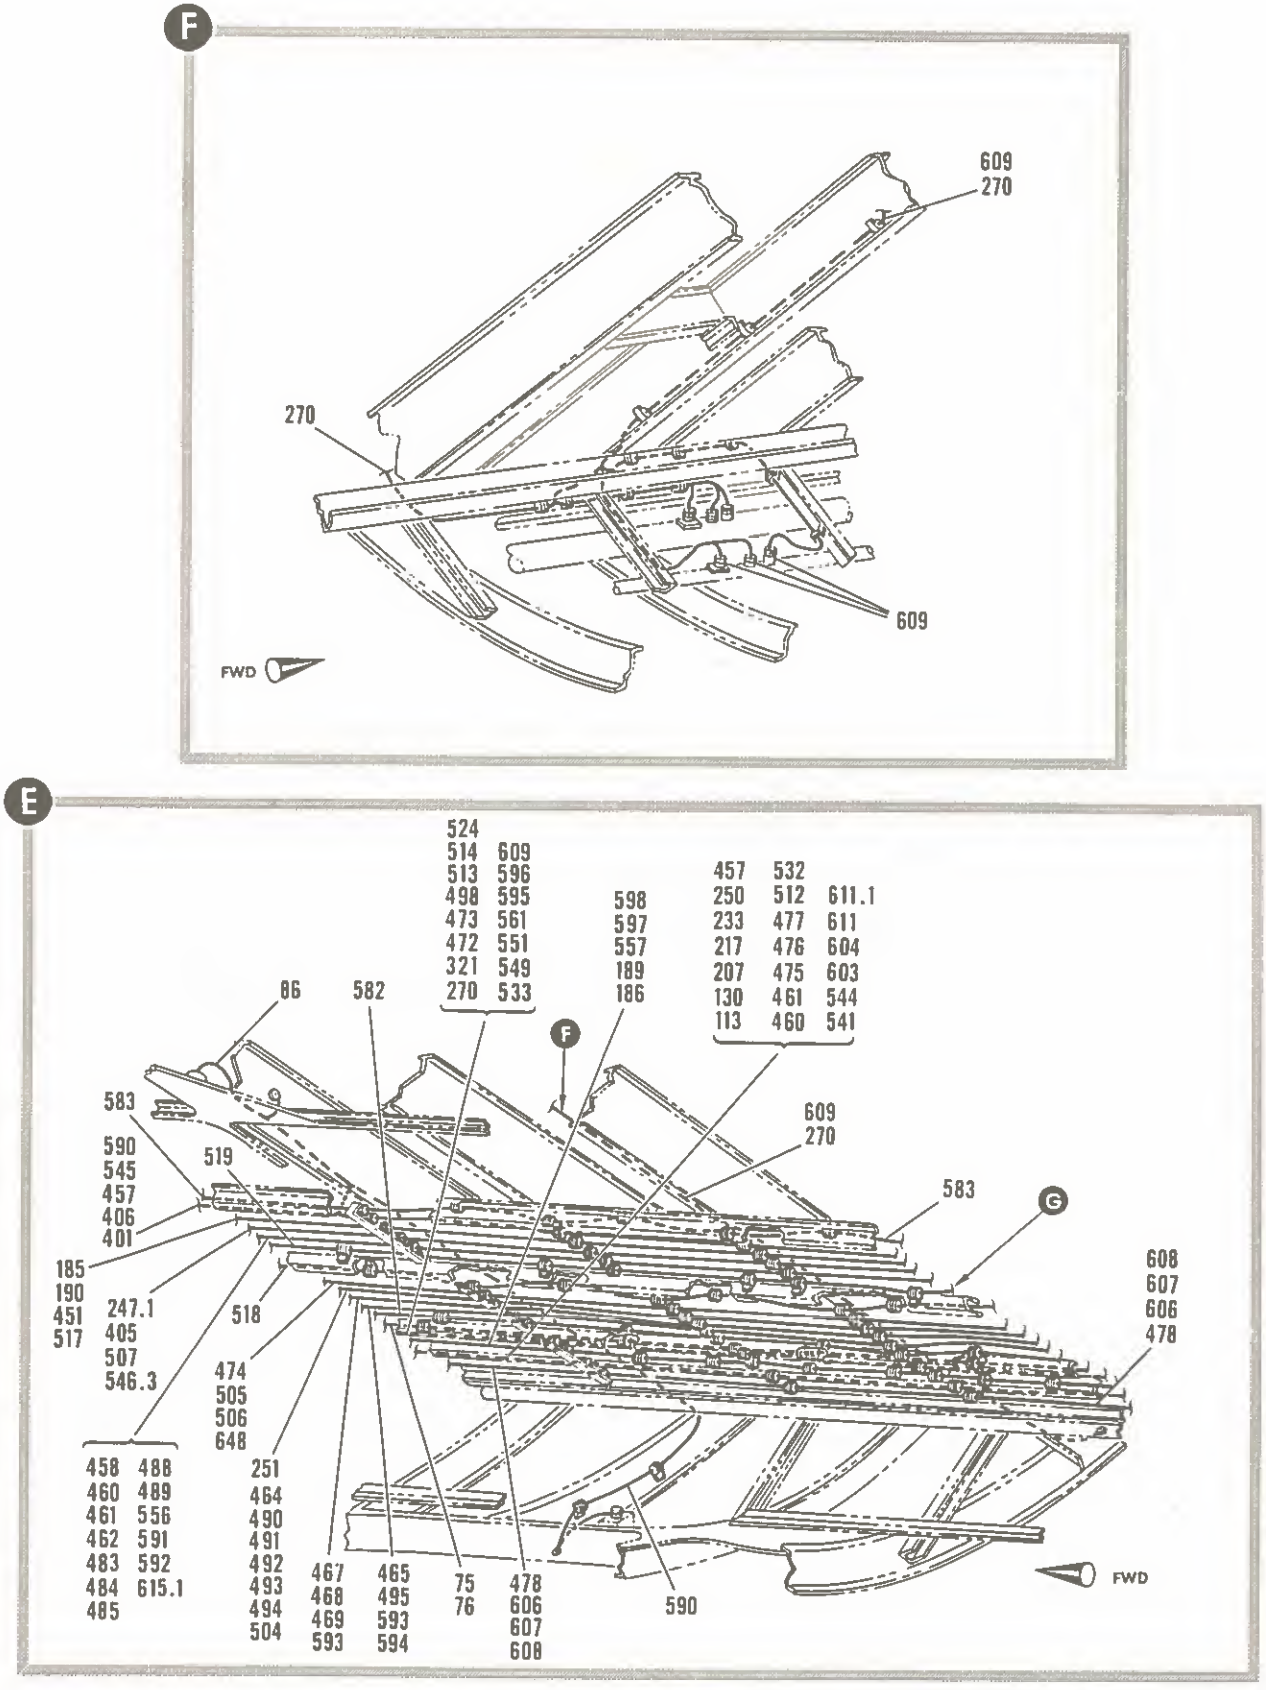


22.04 94.06.002-4

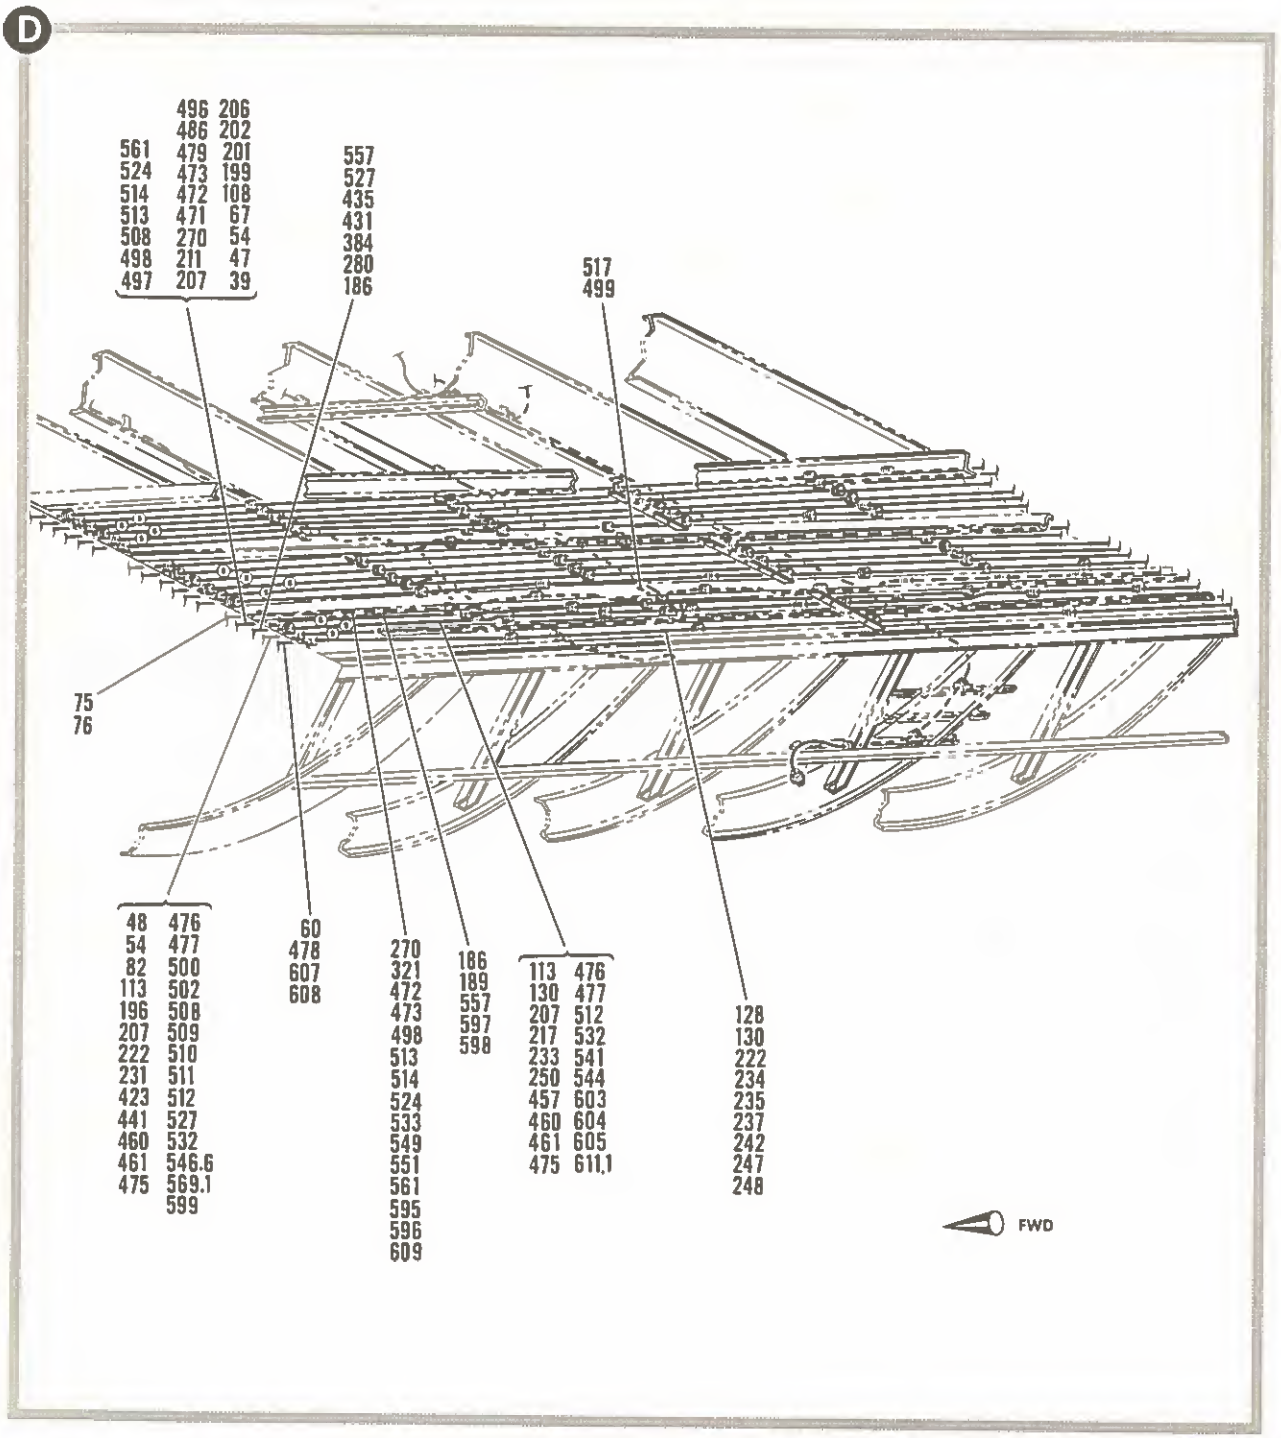



22 04 94 06 002 3


FWD CARGO COMPARTMENT UNDERFLOOR
ELECTRICAL HARNESSES
FIGURE 1 (SHEET 3 OF 7)

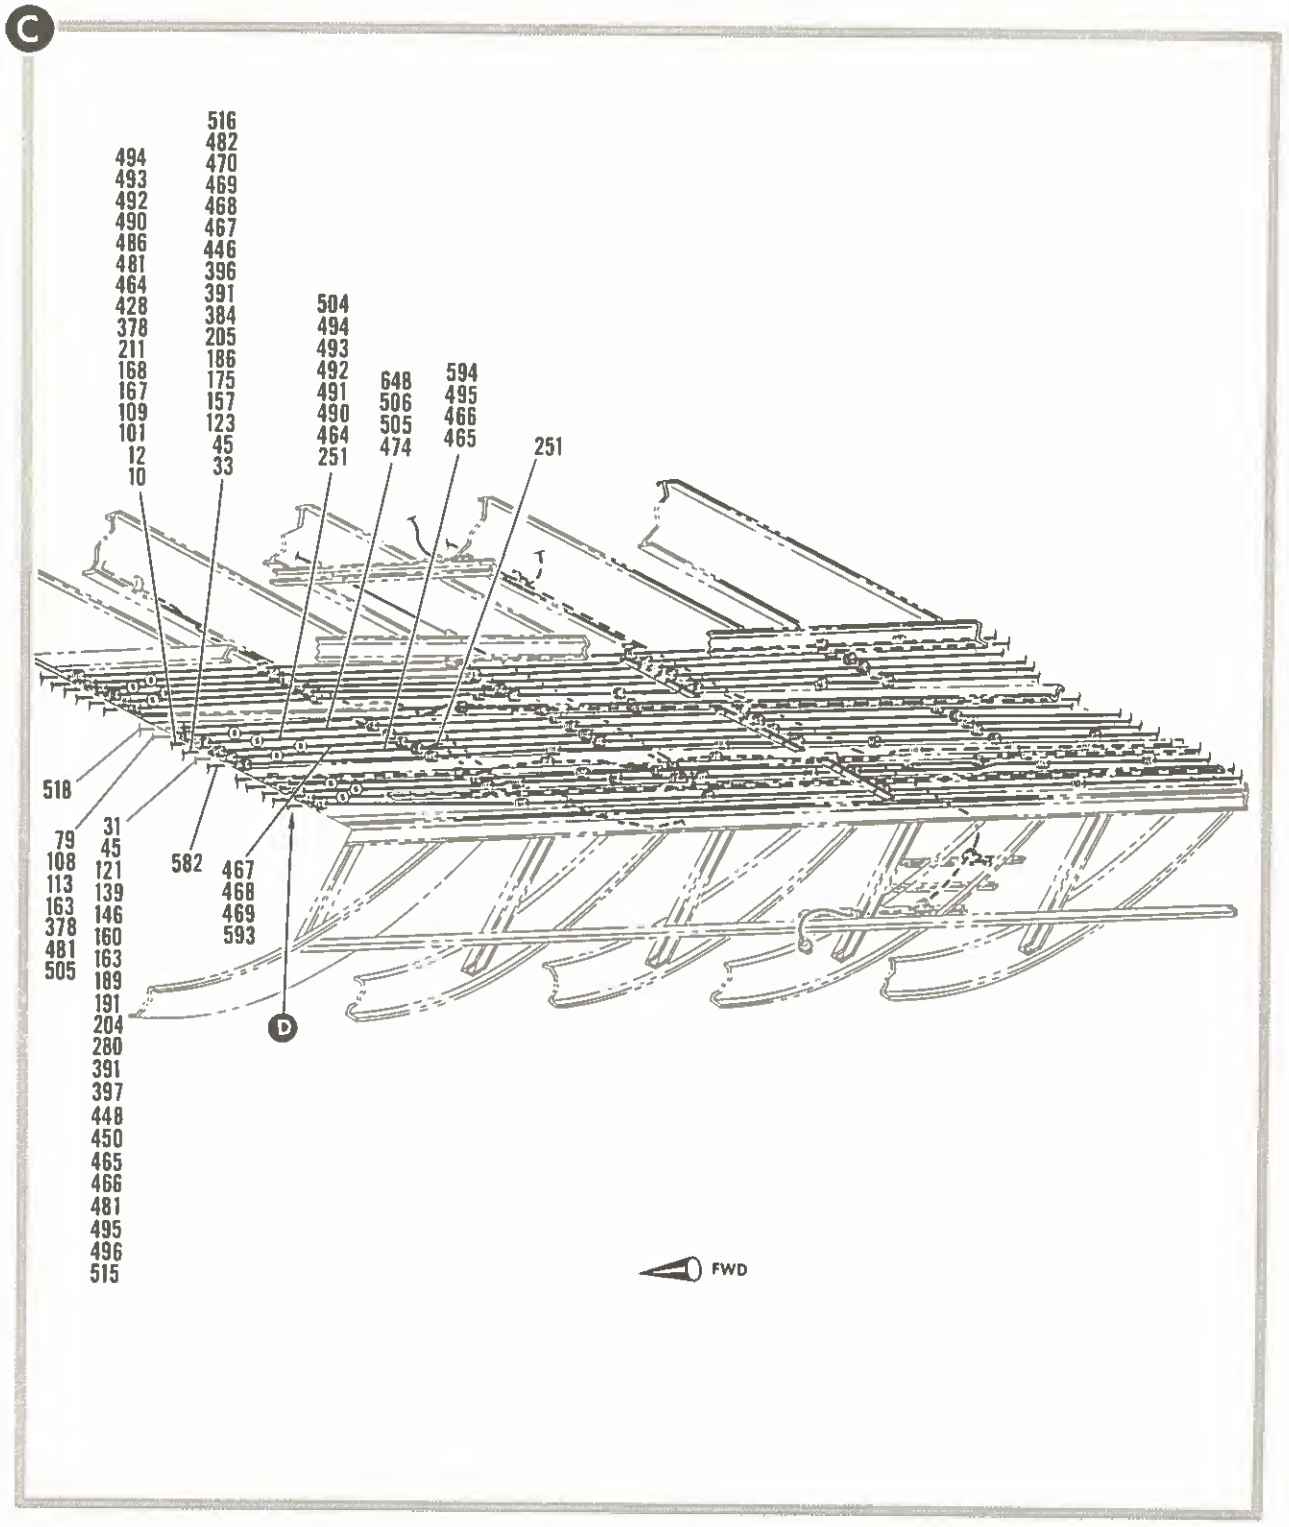

22.04 94.06 002 2

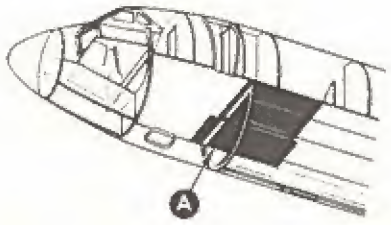

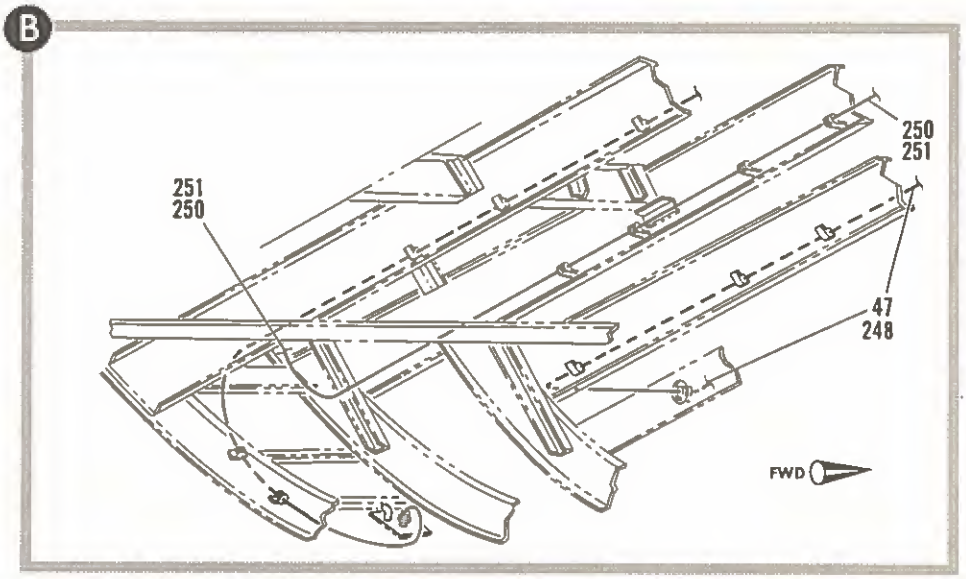

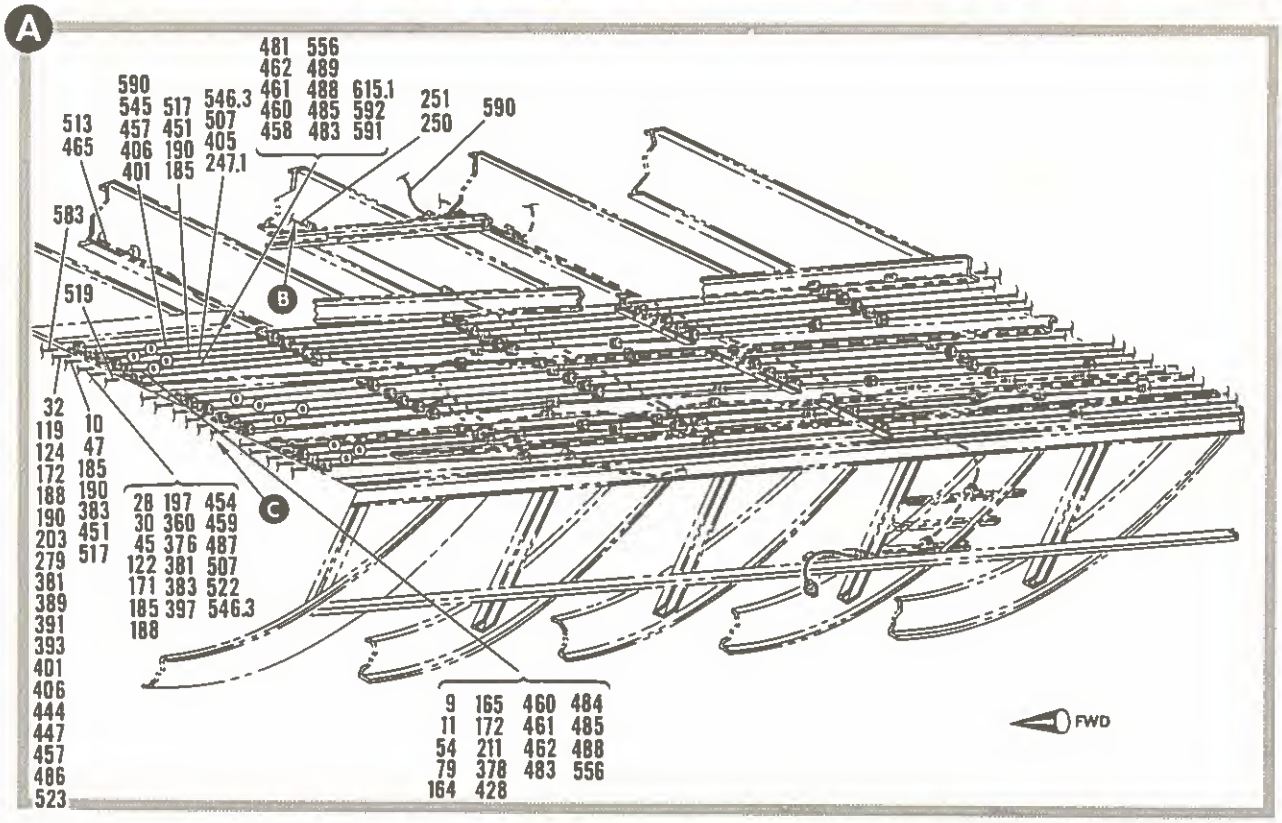

22.04.94.06.002-1


FWD CARGO COMPARTMENT UNDERFLOOR
ELECTRICAL HARNESSES
FIGURE 1 (SHEET 1 OF 7)

SECTION V


Chapter 94
ELECTRICAL HARNESSES


FUSELAGE FWD COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5		AUTOPILOT RACK ELECTRICAL HARNESSES SEE 22-61004			
-571	22-61893-1	. HARNESS ASSEMBLY, RECORDER AND DRUM TO PERMANENT SPLICE	5	6	1
	CT06E14S9S	. . CONNECTOR, CONVAIR 92-40334-004 -V00779-	5	6	1
	CT06E14S2P	. . CONNECTOR, CONVAIR 92-40334-019 -V00779-	5		1
-572	22-61653	. HARNESS ASSEMBLY, ACCELEROMETER STA 338 TO AUTOPILOT RACK PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	CT00E16S1SW	. . CONNECTOR, CONVAIR 92-50293-017 -V71468-	1		1
-572.1	22-61721-1	. HARNESS ASSEMBLY, YAW DAMPER TESTER TO PERMANENT SPLICE	1		1
	DM9700-37S	. . CONNECTOR, CONVAIR 92-40317-003 -V17419-	1		1

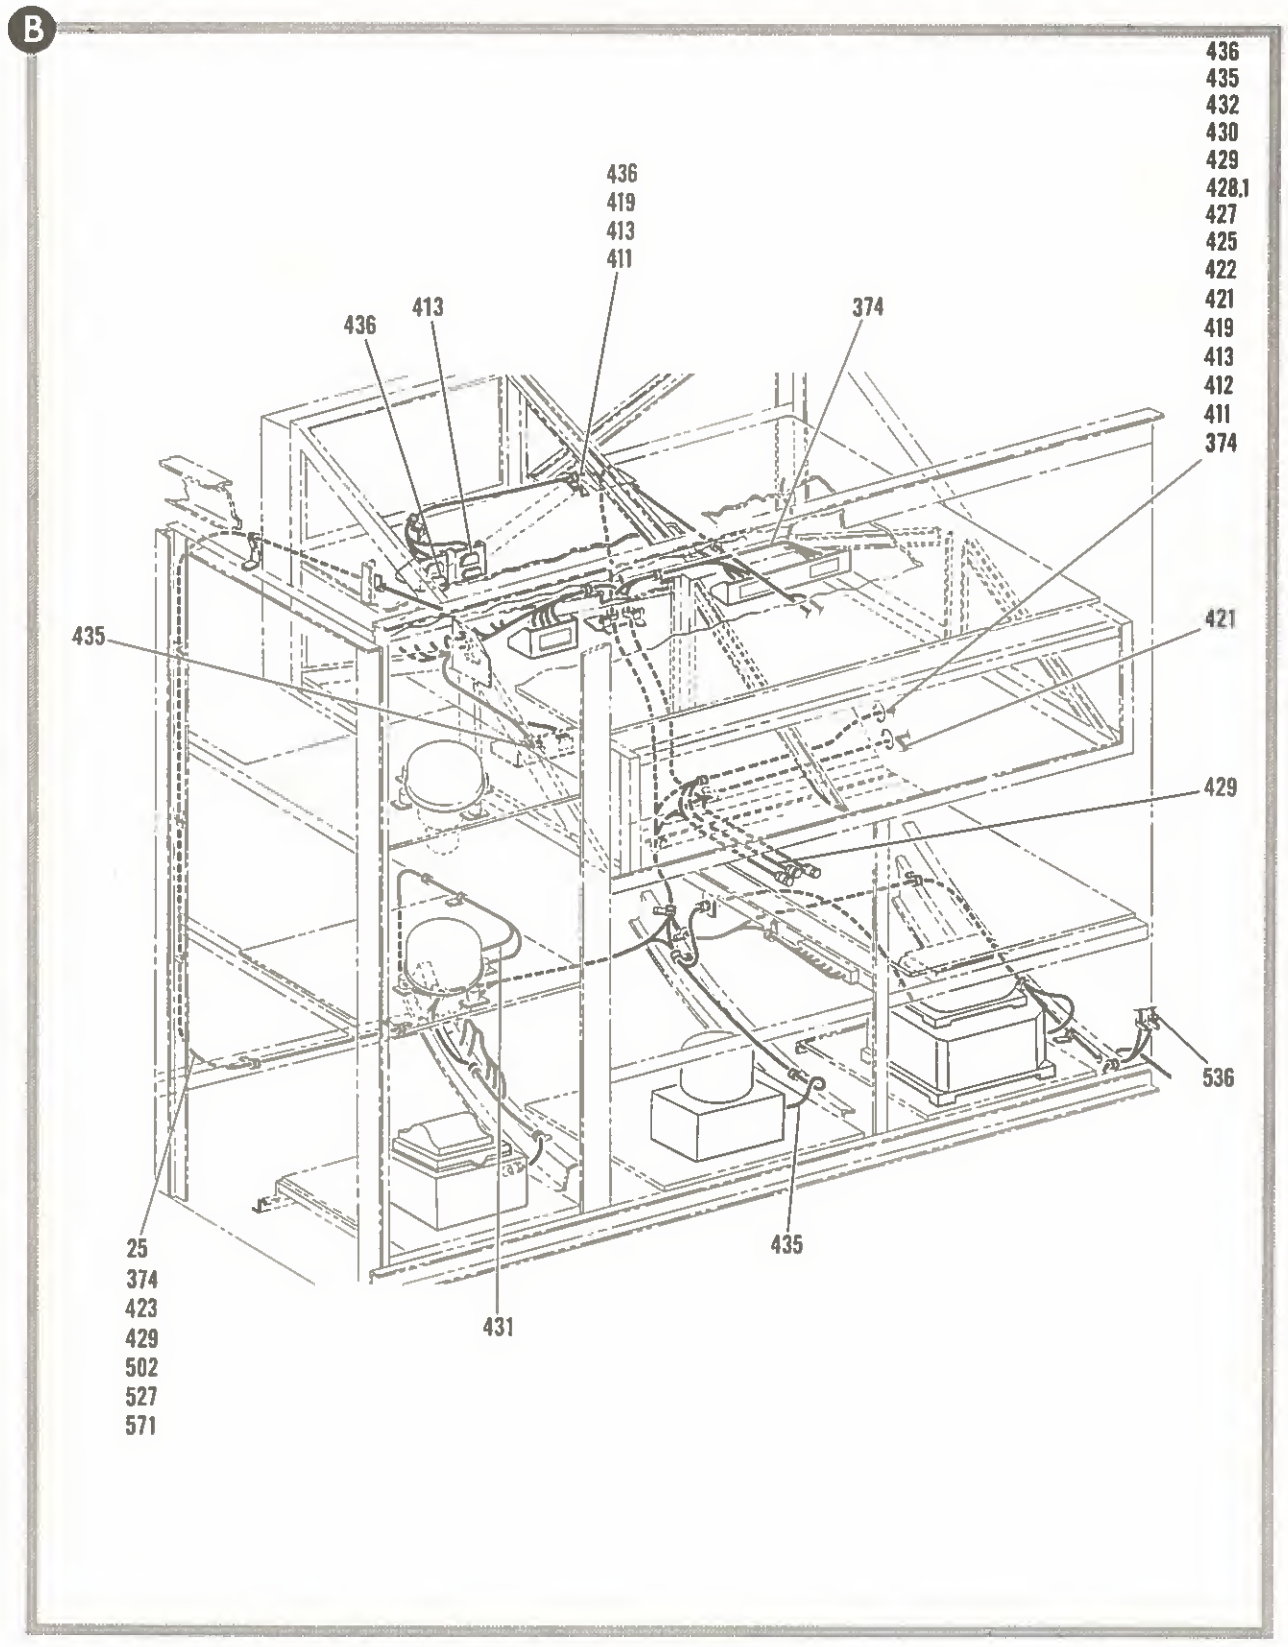


22.04.94.03.006-2A

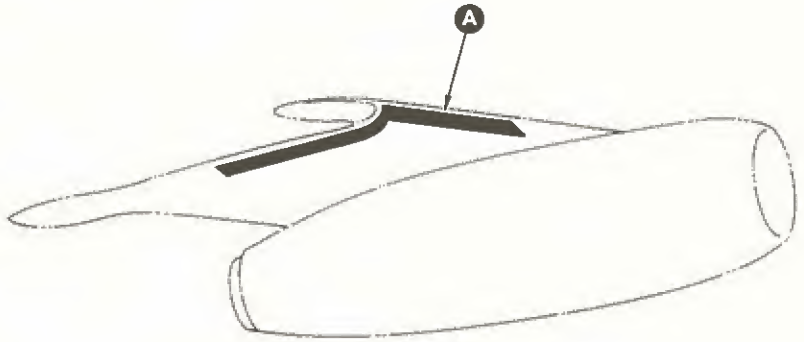


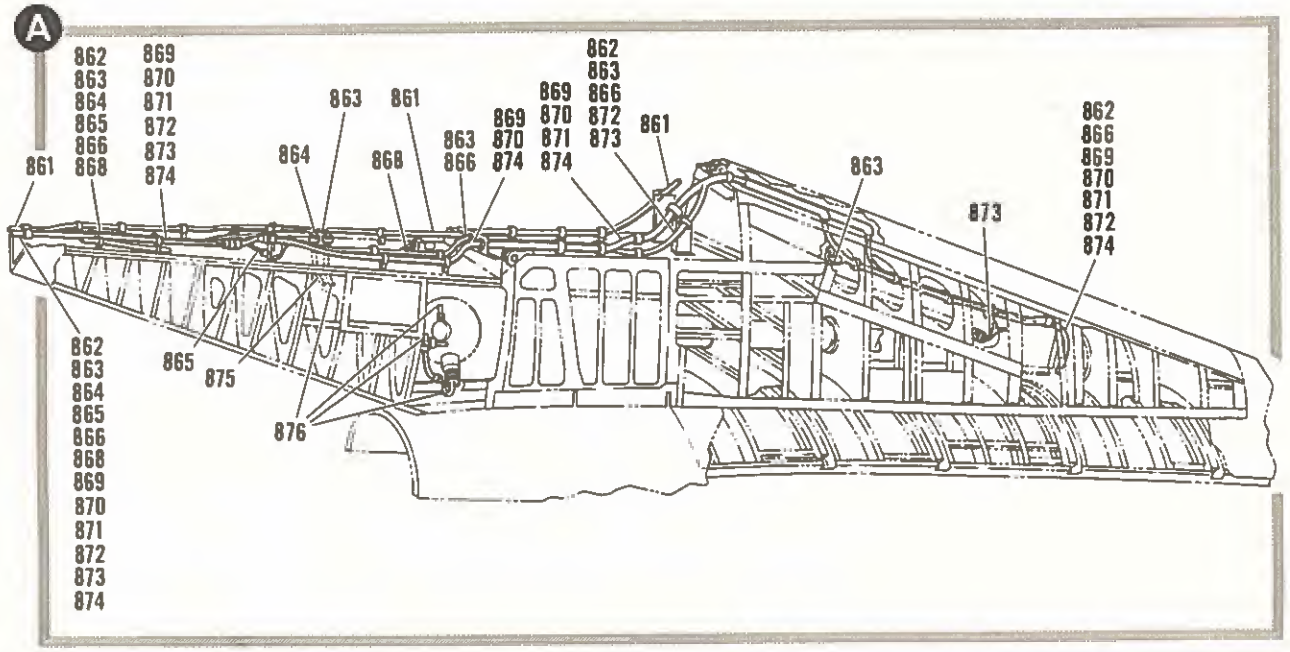

22.04.94.12.003-1

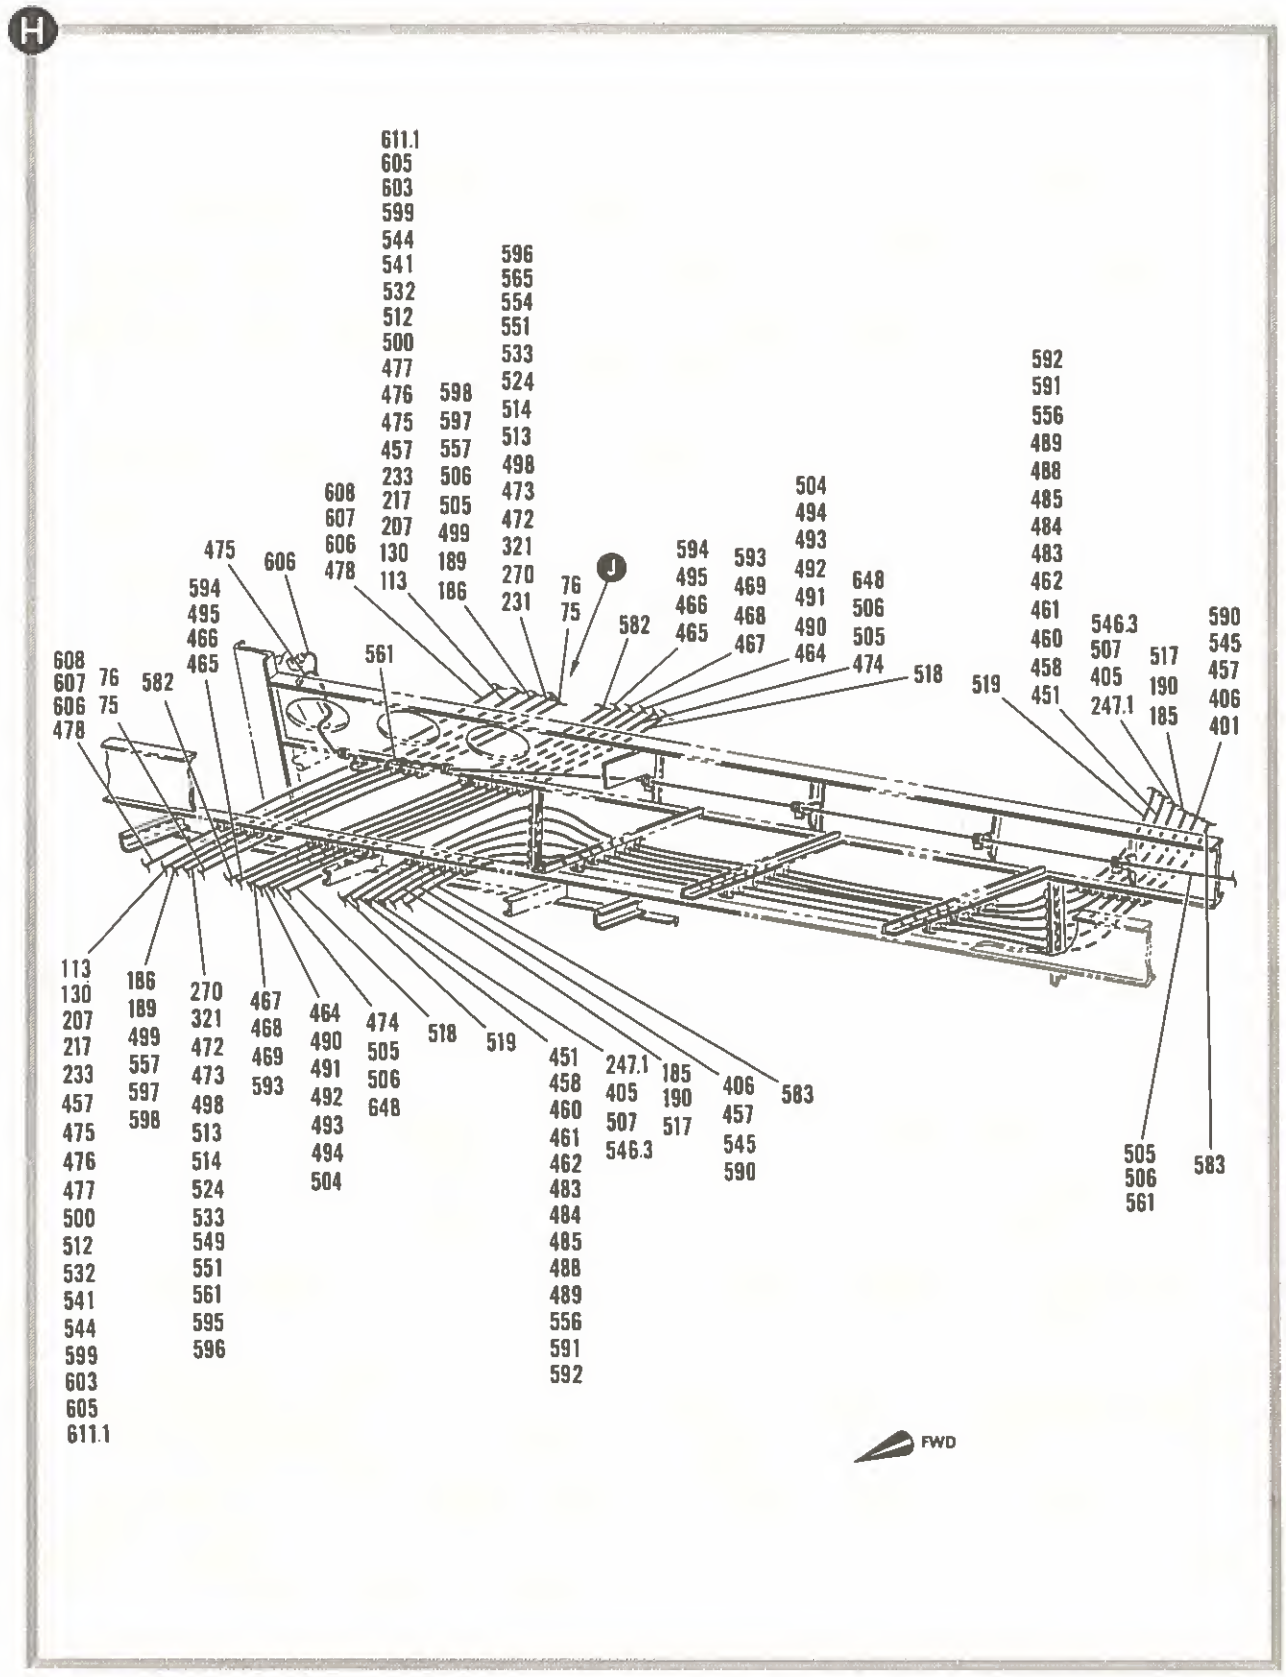

22.04.94.06.002 6

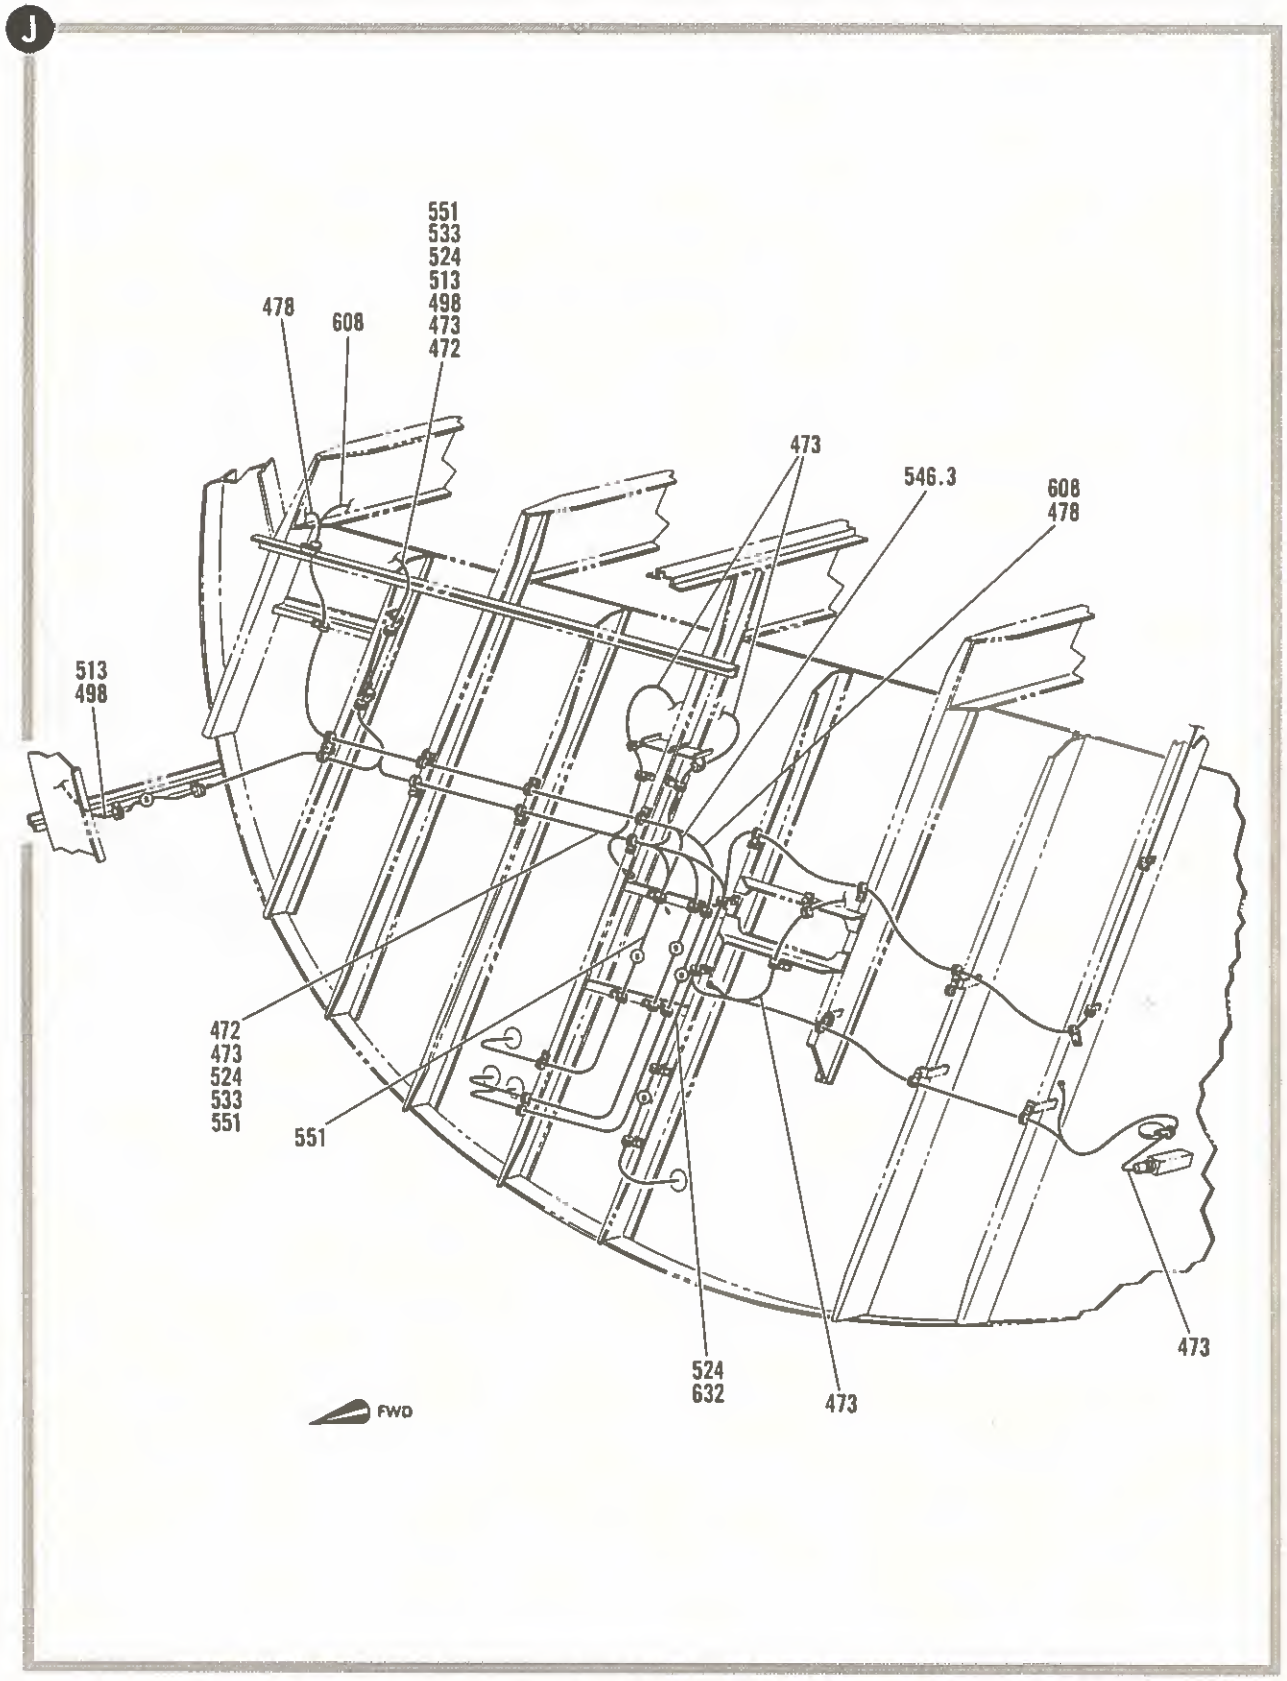

FWD CARGO COMPARTMENT UNDERFLOOR
ELECTRICAL HARNESSES
FIGURE 1 (SHEET 7 OF 7)

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		FORWARD CARGO COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES SEE 22-62000			
-590	22-62612	. HARNESS ASSEMBLY, FWD CARGO COMPARTMENT LIGHTS TO PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		10
	A4149	. . INSULATOR, CONVAIR 95-07002-001 -V72914-	1		1
	A1111	. . NUT, CONVAIR 96-35004-001 -V72914-	1		1
	A1783	. . SPRING, CONVAIR 98-36008-009 -V72914-	1		1
	AN3046-3	. . TERMINAL	1		1
-591	22-62501	. HARNESS ASSEMBLY, FEED THRU E TO PERMANENT SPLICE	1		1
-592	22-62541	. HARNESS ASSEMBLY, INSTRUMENT PANEL PERMANENT SPLICE TO FEED THRU PANEL W LH	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		3
-593	22-62626	. HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE TO REAR SPAR FEED THRU PERMANENT SPLICE ENGINE 4	1		1
-594	22-62624	. HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE TO REAR SPAR FEED THRU PERMANENT SPLICE ENGINE 3	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		8
-595	22-61699	. HARNESS ASSEMBLY, PERMANENT SPLICE TO WING OVERHEAT DETECTOR LOOP PERMANENT SPLICE RH	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -596	22-62537-805	. HARNESS ASSEMBLY, FEED THRU V TO FLIGHT ENGINEER PERMANENT SPLICE	A		1
	22-62537-5	. HARNESS ASSEMBLY, FEED THRU V TO FLIGHT ENGINEER PERMANENT SPLICE	2	7	1
-597	22-62551	. HARNESS ASSEMBLY, COPILOT FLUX GATE REAR SPAR DISCONNECT TO PERMANENT SPLICE	1		1
-598	22-62550	. HARNESS ASSEMBLY, PILOT FLUX GATE REAR SPAR DISCONNECT TO PERNANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	CT00E14S6P	. . CONNECTOR, CONVAIR 92-50293-005 -V71468-	1		1
-599	22-62635	. HARNESS ASSEMBLY, MOVABLE CLOSET PERMANENT SPLICE STA 400 TO PERMANENT SPLICE STA 660	1		1
-600	22-62635-1	. HARNESS ASSEMBLY, MOVABLE CLOSET PERMANENT SPLICE STA 660 TO PERMANENT SPLICE STA 737	1		1
-601	22-62635-3	. HARNESS ASSEMBLY, MOVABLE CLOSET PERMANENT SPLICE STA 737 TO PERMANENT SPLICE STA 813	1		1
-602	22-62635-5	. HARNESS ASSEMBLY, MOVABLE CLOSET PERMANENT SPLICE STA 813 TO PERMANENT SPLICE STA 889	1		1
-603	22-62513-803	. HARNESS ASSEMBLY, REAR SPAR PERMANENT SPLICE TO STA 375 PERMANENT SPLICE	A		1
	22-62513	. HARNESS ASSEMBLY, REAR SPAR PERMANENT SPLICE TO STA 375 PERMANENT SPLICE	2	7	1


A AIRPLANES 1, 8 AND ON


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -604	22-62502	. HARNESS ASSEMBLY, FLIGHT RECORDER TO REAR SPAR PERMANENT SPLICE	1		1
	DM9700-7S	. . PLUG, CONVAIR 92-40317-001 -V17419-	1		1
	DM9700-19S	. . PLUG, CONVAIR 92-40317-005 -V17419-	1		1
-605	22-62569-1	. HARNESS ASSEMBLY, STA 375 PERMANENT SPLICE TO PERMANENT SPLICE	1		1
-606	22-61835	. HARNESS ASSEMBLY, CABIN PICKUP TO PERMANENT SPLICE	1		1
	CT06E14S9S	. . CONNECTOR, CONVAIR 92-40334-004 -V71468-	1		1
-608	22-62627-1	. HARNESS ASSEMBLY, REAR SPAR SPLICE TO AC DISTRIBUTION BOX PERMANENT SPLICE	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		6
-609	22-61808	. HARNESS ASSEMBLY, FLIGHT DECK THERMAL SWITCH TO PERMANENT SPLICE	1		1

SECTION V

Chapter 94
ELECTRICAL HARNESSES


FUSELAGE WING SECTION UNDERFLOOR ELECTRICAL HARNESSES

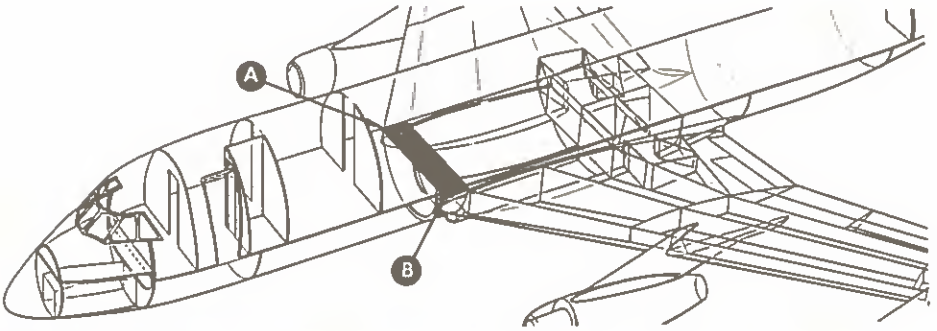

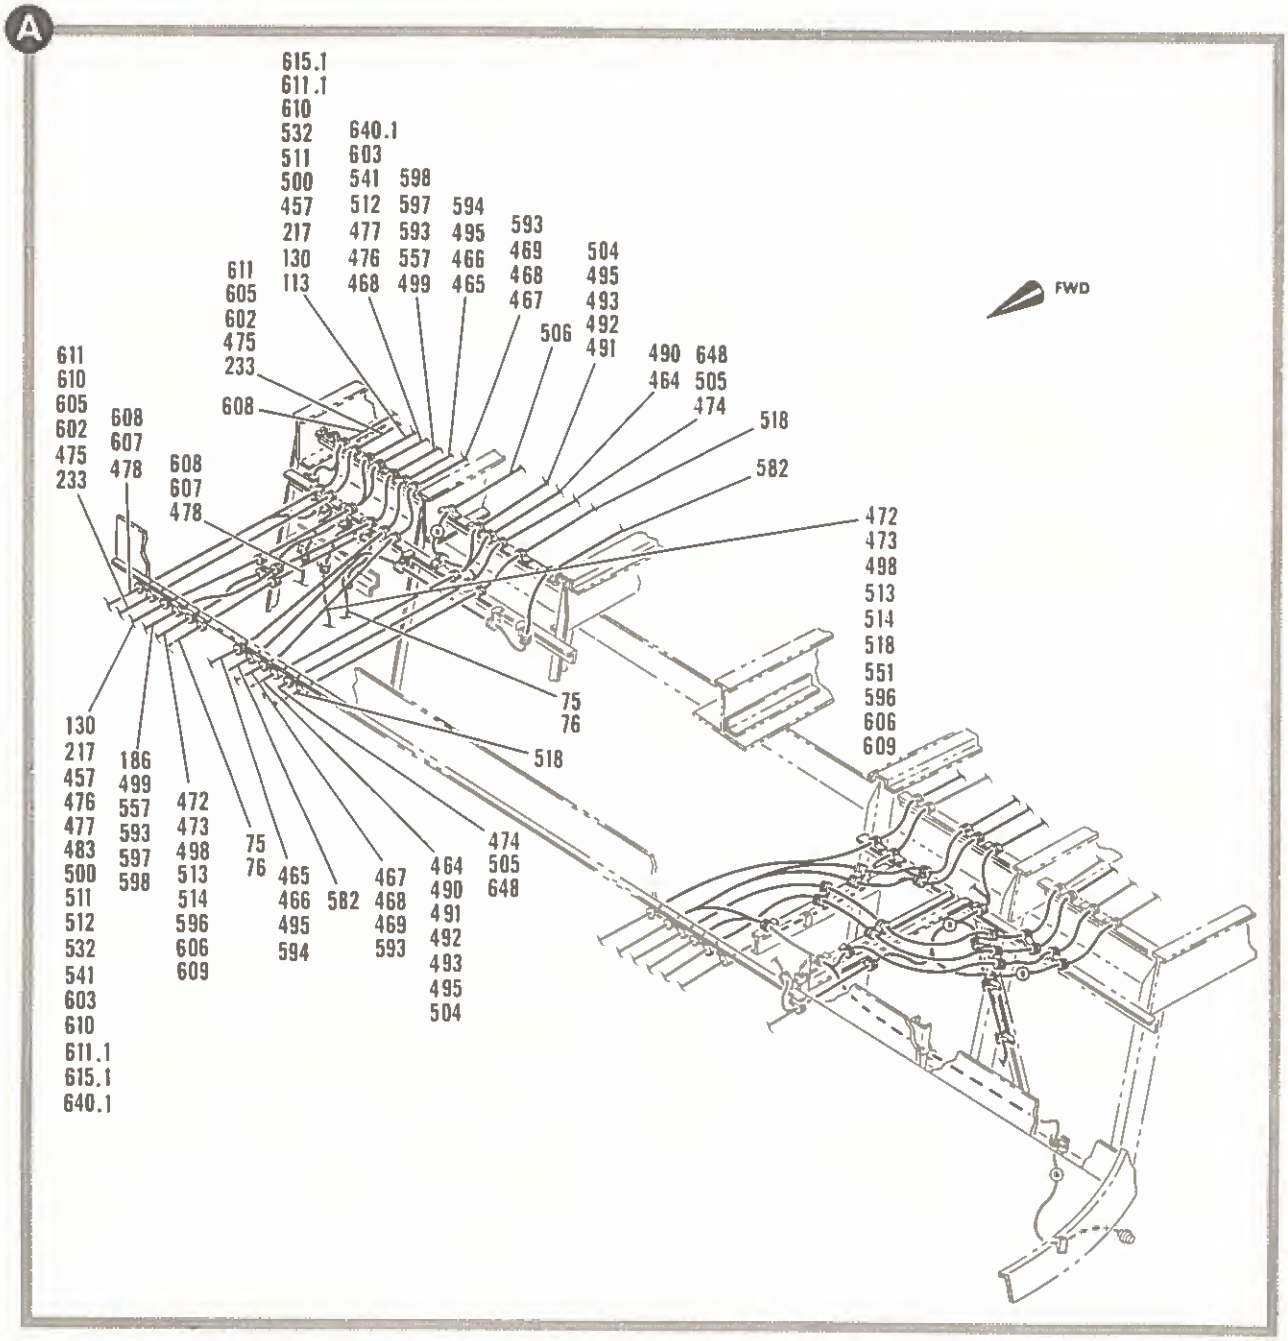


22.04 94.07.002-1


UNDERFLOOR FRONT SPAR OVERWING
ELECTRICAL HARNESSES
FIGURE 1 (SHEET 1 OF 2)

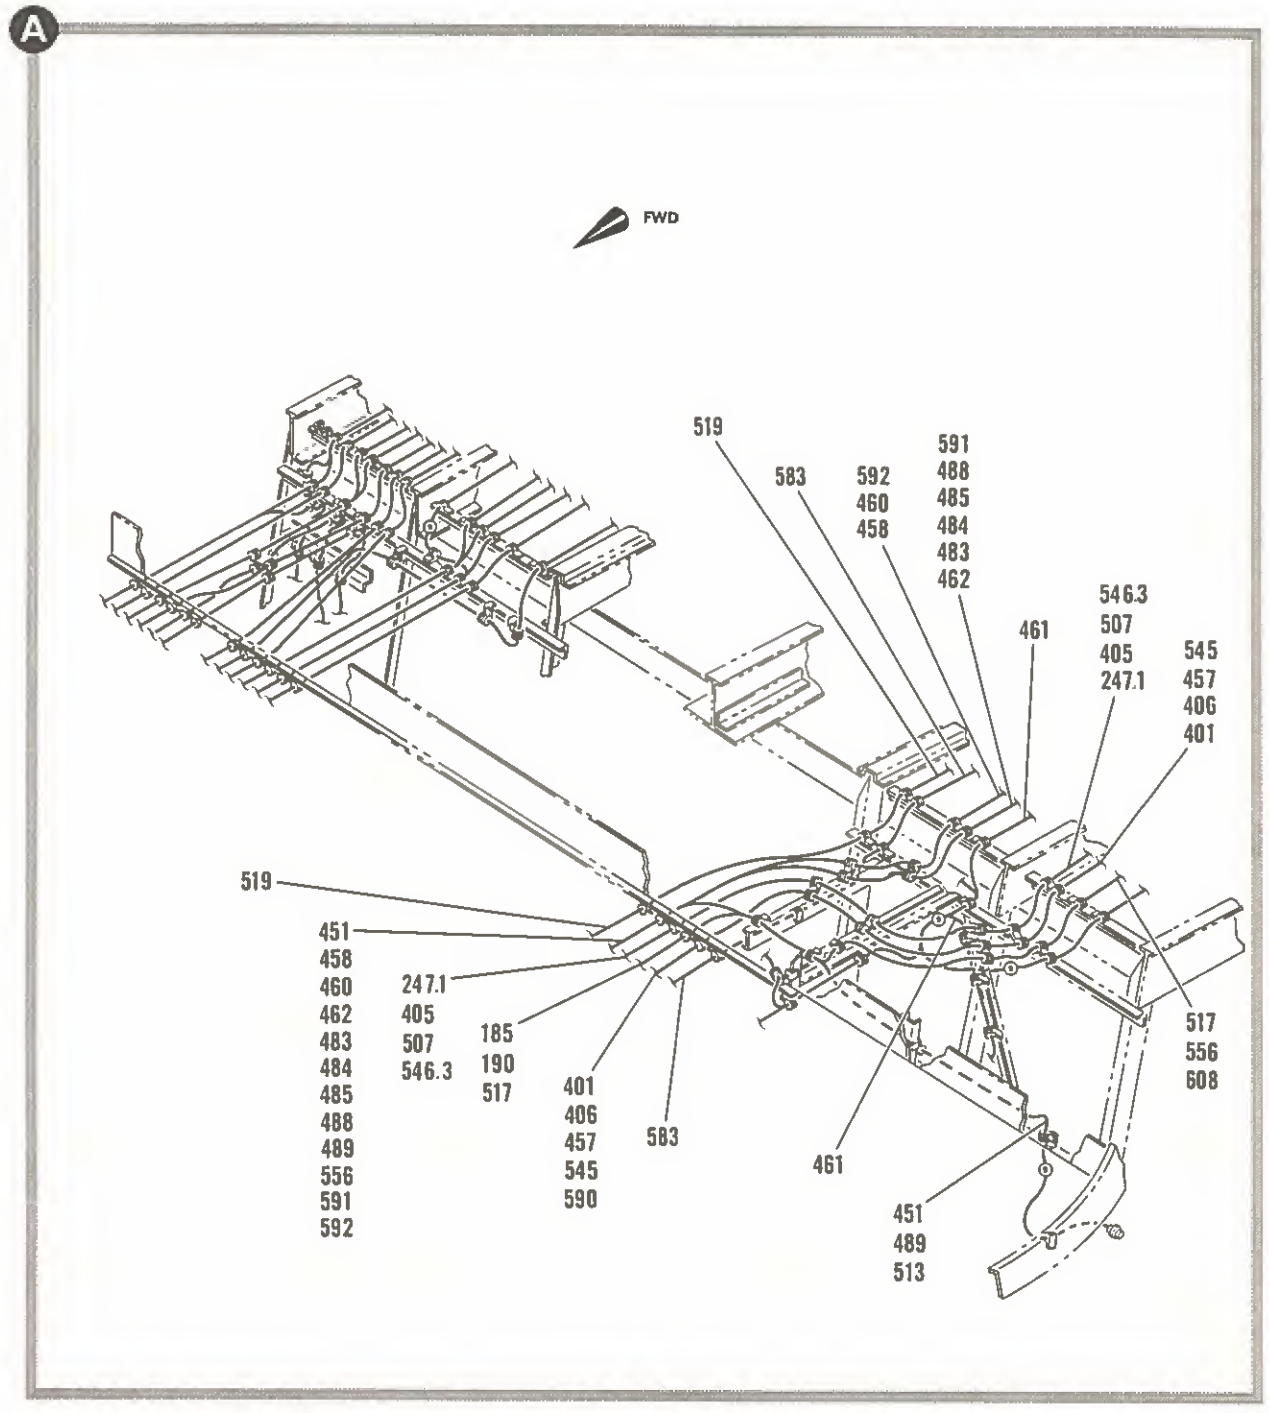

22.04.94.07.002 2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		UNDERFLOOR FRONT SPAR OVERWING ELECTRICAL HARNESSES SEE 22-62001			
-610	22-62563-1	. HARNESS ASSEMBLY, BYPASS PRESSURE MODULATOR TO PERMANENT SPLICE	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
-611	22-62564-1	. HARNESS ASSEMBLY, AILERON SERVO TO PERMANENT SPLICE	1		1
	PC06E16-26S	. . CONNECTOR, CONVAIR 92-40320-001 -V06840-	1		1
	CT00E24-28S	. . RECEPTACLE, CONVAIR 92-50293-015 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V71468-	1		3
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
	PC06E16-26S	. . CONNECTOR, CONVAIR 92-40320-001 -V06840-	1		1
-611.1	22-62504	. HARNESS ASSEMBLY, REAR SPAR PERMANENT SPLICE TO PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		15

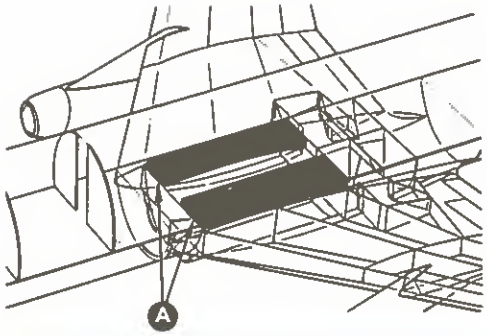

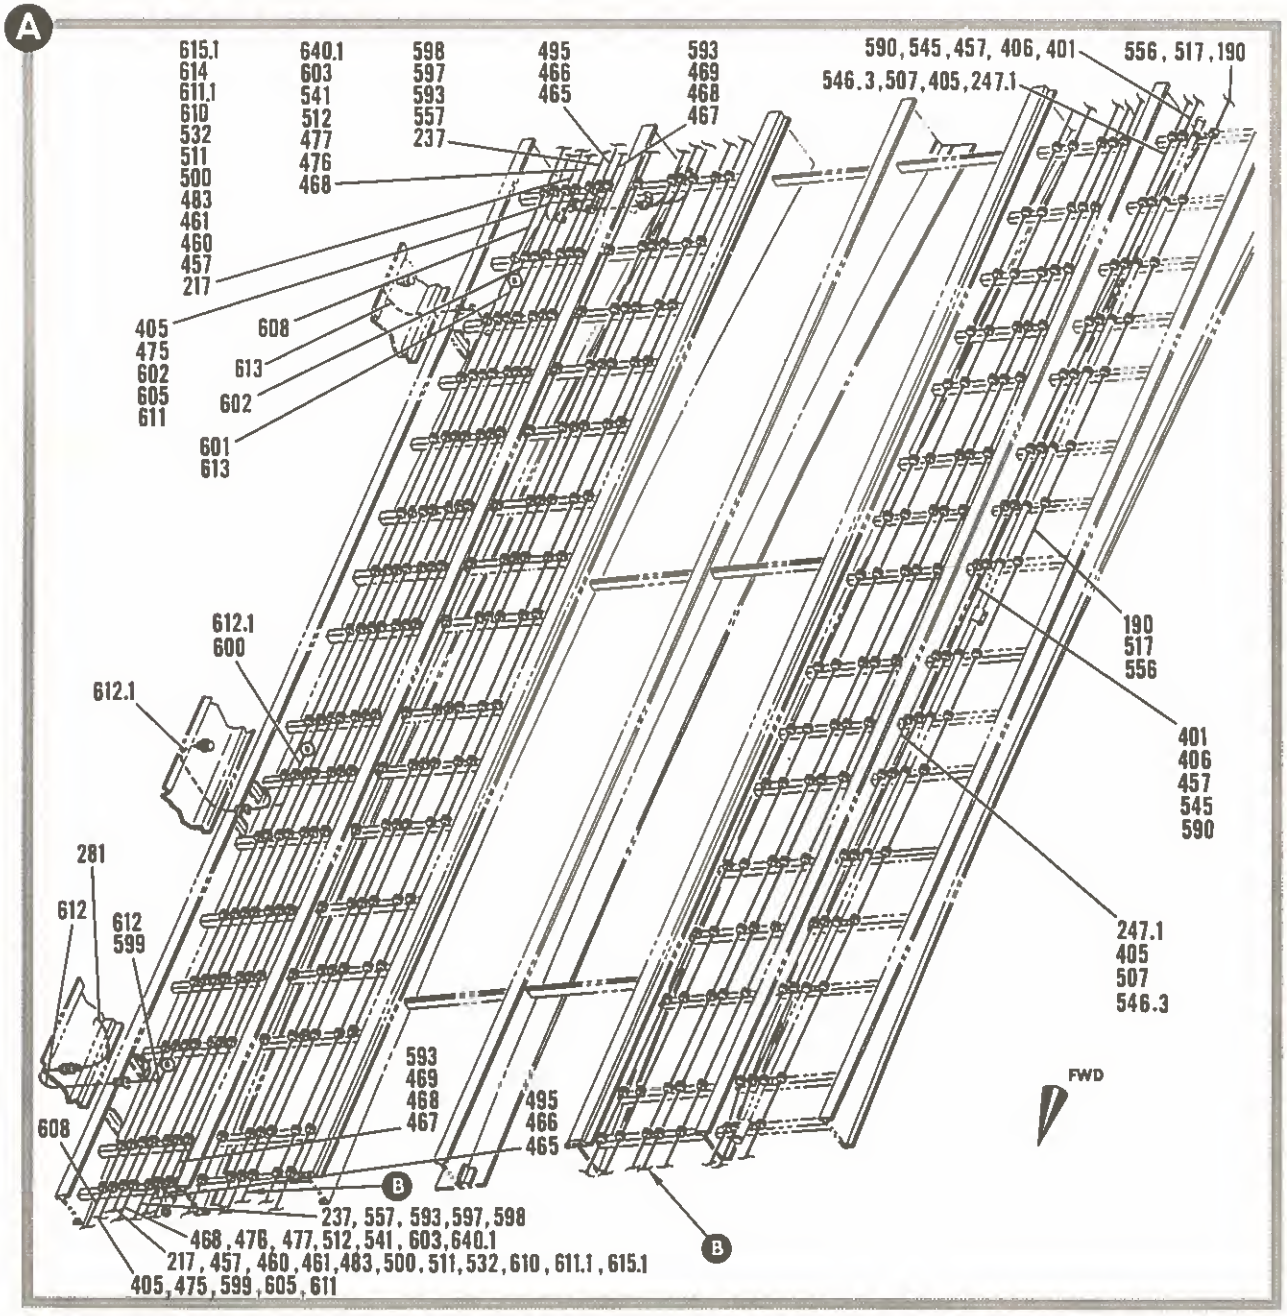

22.04.94.07.003-1



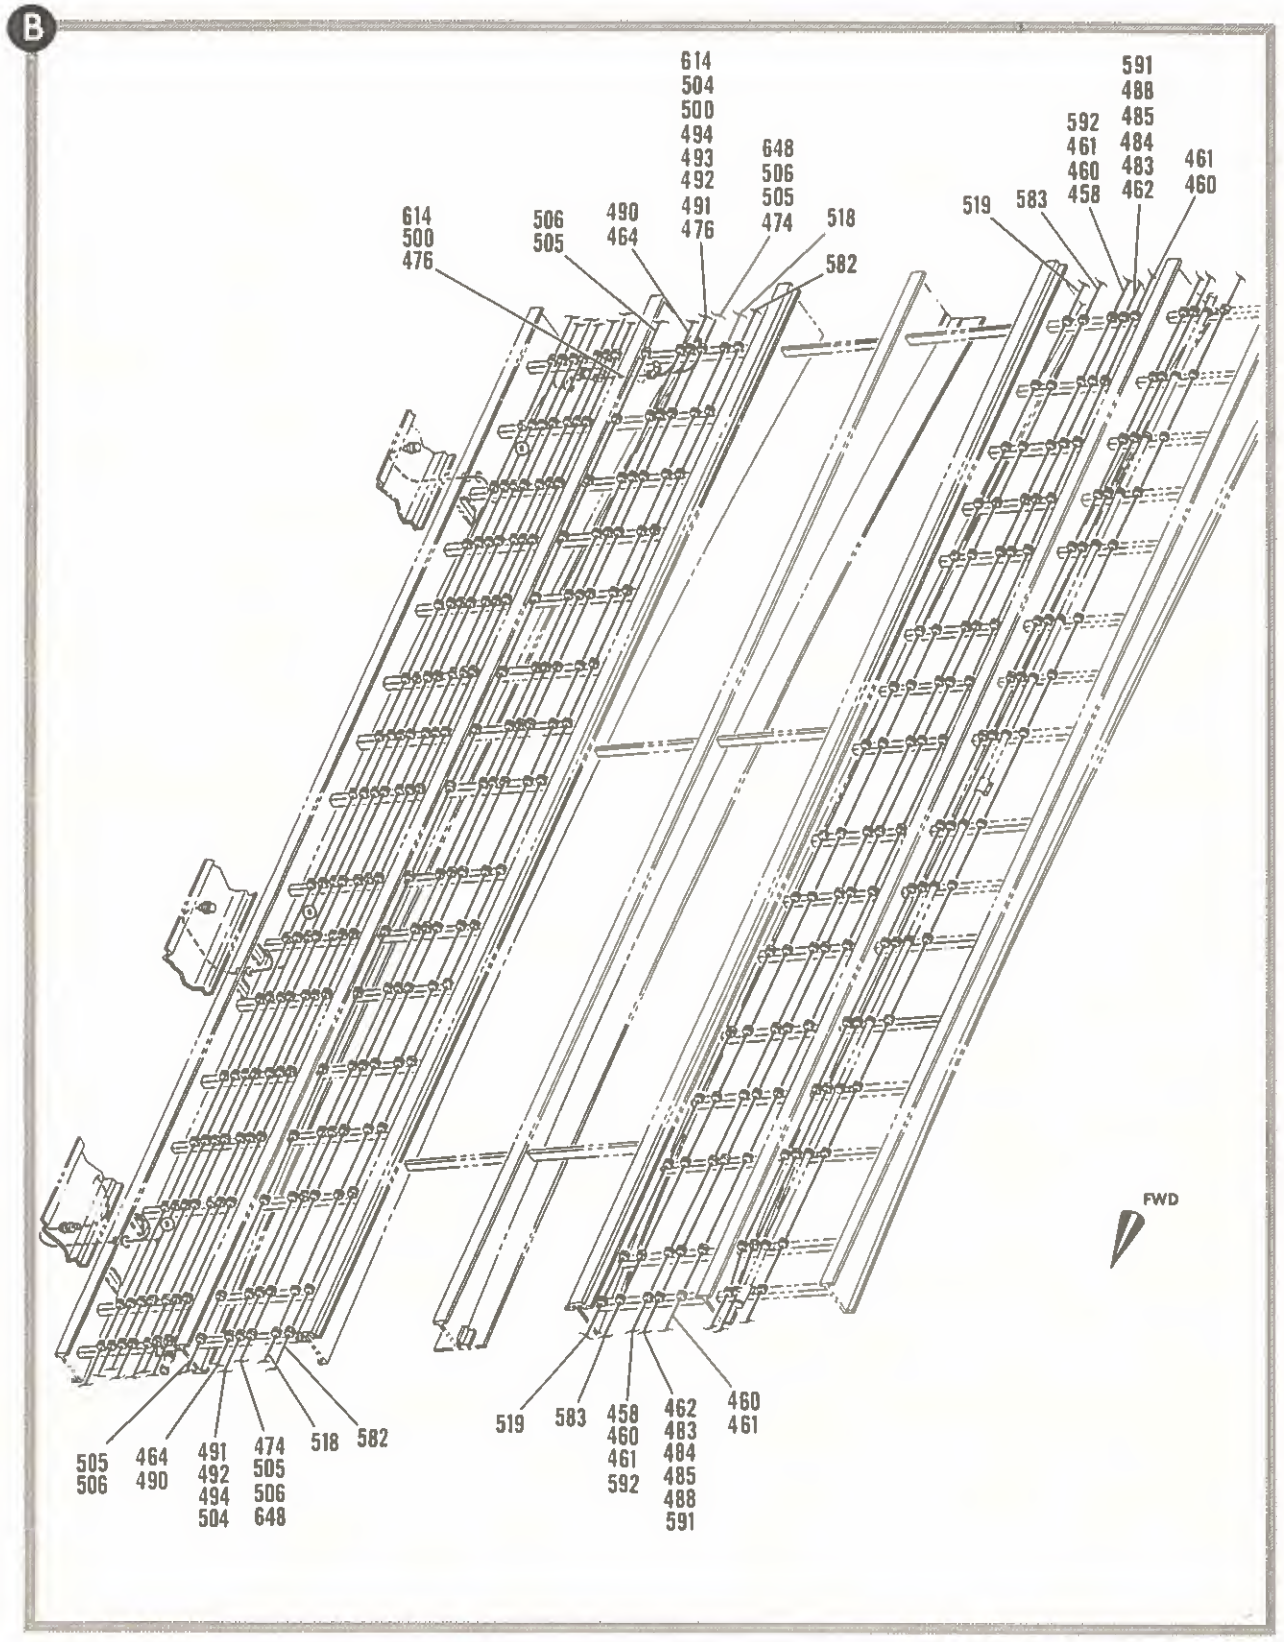

B
614
504
500
494
493
492
491
476
648
506
505
474
518
582
614
500
476
506
505
490
464
591
488
485
484
483
462
592
461
460
458
461
460
519
583
FWD
505
506
464
490
491
492
494
504
474
505
506
648
518
582
519
583
458
460
461
592
462
483
484
485
488
591
460
461
22.04.94.07 003 2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		OVERWING ELECTRICAL HARNESSES SEE 22-62001			
-612	22-63612	. HARNESS ASSEMBLY, CLOSET RECEPTACLE STA 661 TO PERMANENT SPLICE	1		1
-612.1	22-63613	. HARNESS ASSEMBLY, CLOSET RECEPTACLE TO PERMANENT SPLICE	1		1
	PT00E8-45	. . RECEPTACLE, CONVAIR 92-50288-010 -V77820-	1		1
	10-101960-83	. . COVER, CONVAIR 92-74211-004 -V77820-	1		1
-613	22-63614	. HARNESS ASSEMBLY, CLOSET RECEPTACLE STA 813 TO PERMANENT SPLICE	1		1
	PT00E8-45	. . RECEPTACLE, CONVAIR 92-50288-010 -V77820-	1		1
	10-101960-83	. . COVER, CONVAIR 92-74211-004 -V77820-	1		1
-614	22-62544	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANELS TO PERMANENT SPLICE RH	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		6
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		2

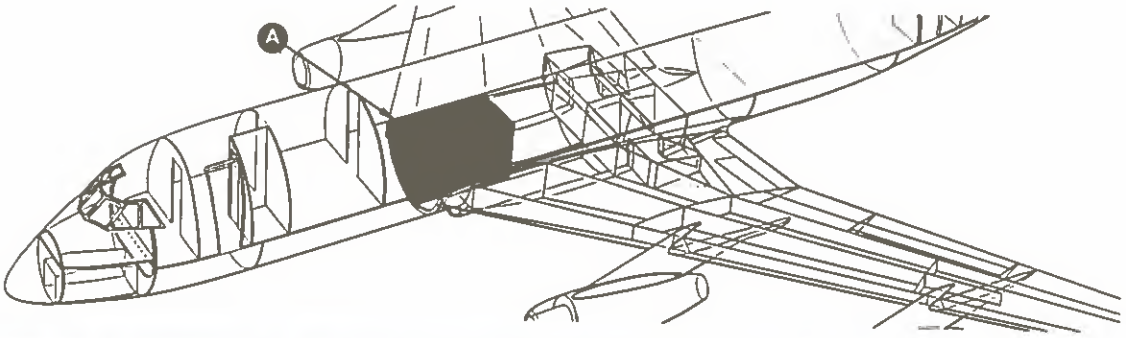

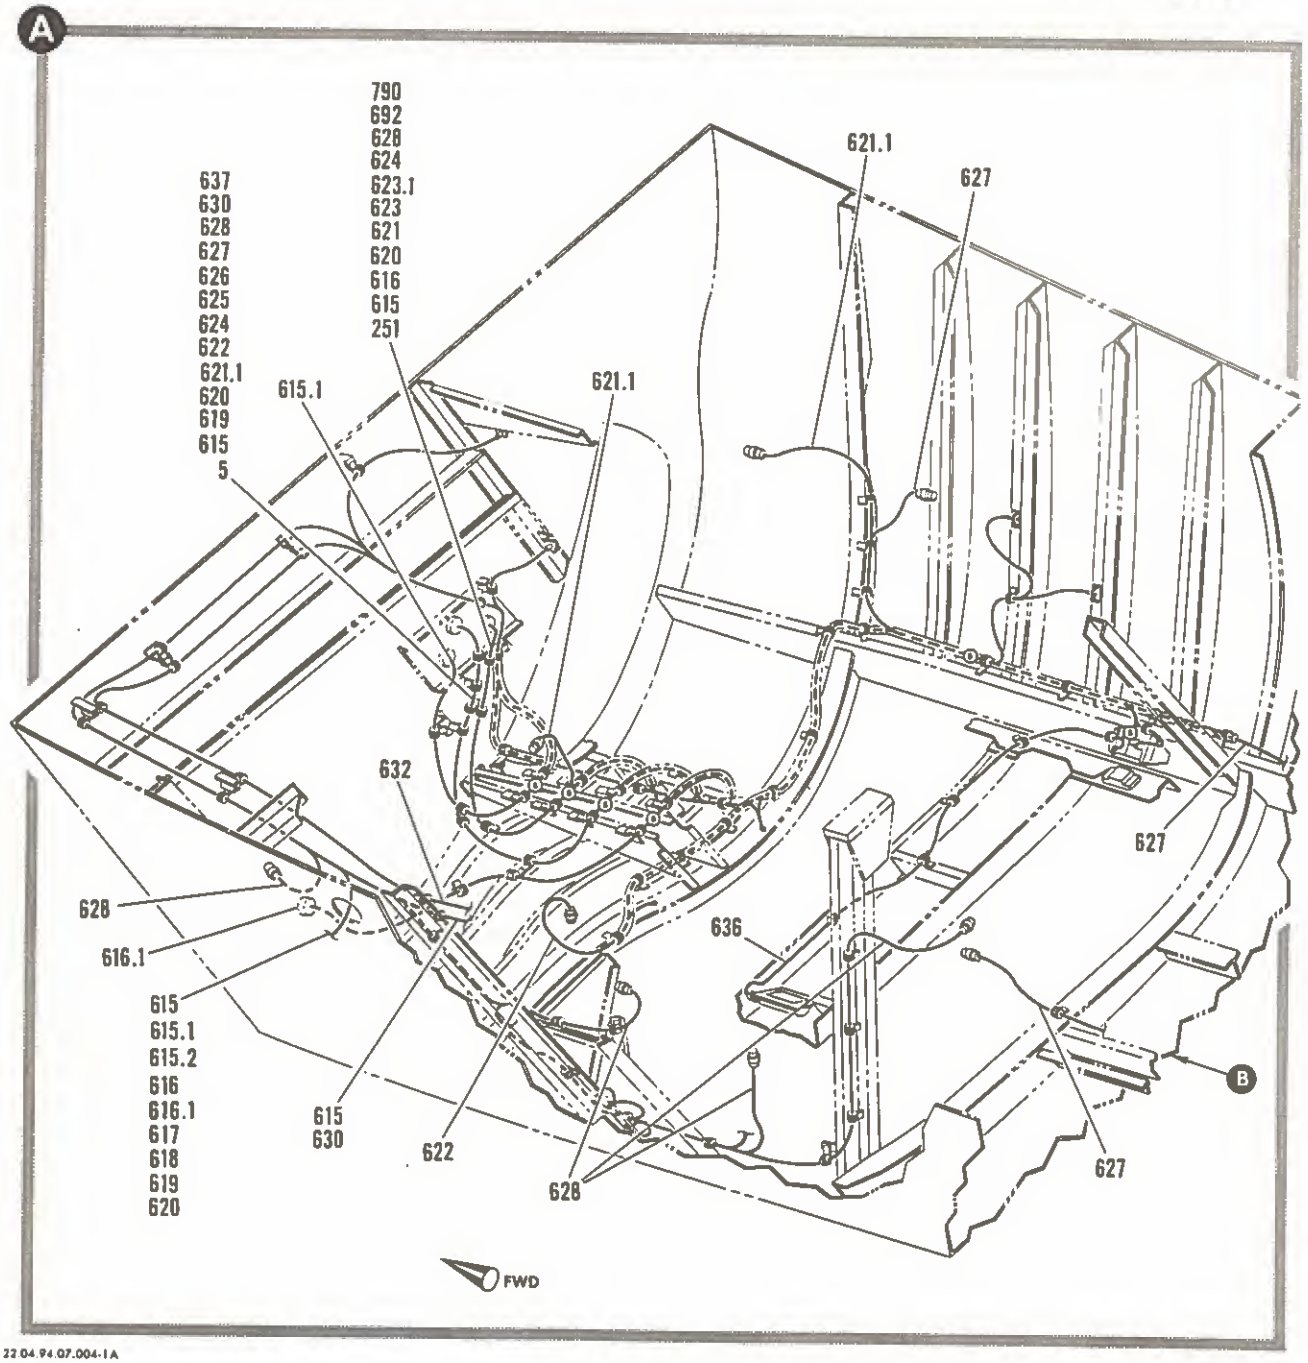


22.04.94.07.004-1A

PLENUM AREA UNDERFLOOR STA 640 TO 926
RH ELECTRICAL HARNESSES
FIGURE 3 (SHEET 1 OF 3)

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		PLENUM AREA UNDERFLOOR STA 640 TO 926 RH ELECTRICAL HARNESSES SEE 22-62001			
-615	22-62535-803	. HARNESS ASSEMBLY, FEED THRU V TO PLENUM CHAMBER LH	A		1
	22-62535-1	. HARNESS ASSEMBLY, FEED THRU V TO PLENUM CHAMBER LH	2	6	1
	22-62535-5	. HARNESS ASSEMBLY, FEED THRU V TO PLENUM CHAMBER LH	7	7	1
	CT06E18-11S	. . CONNECTOR, CONVAIR 92-40334-005 -V71468-	1		3
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		7
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V/0779-	A		AR
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	2		7
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	7	7	AR
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
-615.1	22-62608	. HARNESS ASSEMBLY, PLENUM CHAMBER FEED THRU TO ACCELERATION TRANSMITTER	5	6	1
	EX06-14S2S	. . CONNECTOR, CONVAIR 92-40332-004 -V71468-	5	6	1
	CT06E14S9S	. . CONNECTOR, CONVAIR 92-40334-004 -V71468-	5	6	1
	PT06E14-5P	. . CONNECTOR, CONVAIR 92-40325-040 -V71468-	5	6	1
-615.2	22-62572-1	. HARNESS ASSEMBLY, FLIGHT DECK AIR CONDITION PROGRAMMER TO PERMANENT SPLICE	1		1
	EX06-22-14S	. . CONNECTOR, CONVAIR 92-40332-016 -V71468-	1		1
	225-0017-000	. . CONNECTOR, CONVAIR 96-91200-007 -V71468-	1		5
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		12
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		7
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-616	22-62582-1	. HARNESS ASSEMBLY, TURBO COMPRESSOR PACKAGE TO TEMPERATURE CONTROL SPLICE	1		1
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
	EX06-22-14S	. . CONNECTOR, CONVAIR 92-40332-016 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		22
-616.1	22-62576	. HARNESS ASSEMBLY, FEED THRU PANEL AC TO ACCELEROMETERS	1		1
	CT00E16S1S	. . CONNECTOR, CONVAIR 92-50293-008 -V71468-	1		2
	CT00E16S1SW	. . CONNECTOR, CONVAIR 92-50293-017 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
-617	22-62583-1	. HARNESS ASSEMBLY, FLIGHT DECK CONDENSER TEMPERATURE PLUGS TO PERMANENT SPLICE	1	7	1
	22-62583-3	. HARNESS ASSEMBLY, FLIGHT DECK CONDENSER TEMPERATURE PLUGS TO PERMANENT SPLICE	8		1
	CT06E18-19S	. . CONNECTOR, CONVAIR 92-40334-006 -V71468-	1		1
	CT06E18-8S-C22	. . CONNECTOR, CONVAIR 92-40334-018 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7
		A AIRPLANES 1, 8 AND ON			


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3 -618	22-62587-1	. HARNESS ASSEMBLY, FLIGHT DECK CONDENSER FAN TO RELAY	1		1
	MS3108E10SL3S	. . CONNECTOR, CONVAIR 92-40316-006	1		1
	AN3057-4B	. . ADAPTER, CONVAIR 90-04200-014 AND TRANSMITTER TO FEED THRU V	1		2
-619	22-62629-1	. HARNESS ASSEMBLY, FLIGHT DECK FLOW SENSOR AND TRANSMITTER TO FEED THRU V	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	MC11E10-6SN	. . CONNECTOR, CONVAIR 92-40179-002 -V71468-	1		1
-620	22-62634-801	. HARNESS ASSEMBLY, CABIN AIR RECIRCULATING VALVE TO PERMANENT SPLICE	A		1
	22-62634-5	. HARNESS ASSEMBLY, CABIN AIR RECIRCULATING VALVE TO PERMANENT SPLICE	2	7	1
	CT06E18-19S	. . CONNECTOR, CONVAIR 92-40332-006 -V00779-	A		1
	CA3106E18-8S	. . CONNECTOR, CONVAIR 92-40334-018 -V71468-	2	7	1
	CA3106E18-8S	. . CONNECTOR, CONVAIR 92-40334-018 -V71468-	A		AR
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR
-621	22-62512-1	. HARNESS ASSEMBLY, FLIGHT DECK MODULATION VALVE TO PERMANENT SPLICE	1		1
	CT06E18-19S	. . CONNECTOR, CONVAIR 92-40334-006 -V71486-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-621.1	22-62536-1	. HARNESS ASSEMBLY, FEED THRU U TO PLENUM CHAMBER RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		4
	CT06E18-11S	. . CONNECTOR, CONVAIR 92-40334-005 -V71468-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
-622	22-62545-3	. HARNESS ASSEMBLY, CABIN AIR VALVES TO PERMANENT SPLICE	A		1
	22-62545	. HARNESS ASSEMBLY, CABIN AIR VALVES TO PERMANENT SPLICE	2	7	1
	CT06E18-19S	. . CONNECTOR, CONVAIR 92-40334-006 -V71468-	1		1
-623	22-62584-1	. HARNESS ASSEMBLY, FLIGHT DECK FREON COMPRESSOR TO RELAY	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		7
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		12
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		11
	323975	. . CONDUCTOR, CONVAIR 98-34009-003 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	EX06-22-14S	. . PLUG, CONVAIR 92-40332-016 -V71468-	1		1
-623.1	22-64536	. HARNESS ASSEMBLY, FEED THRU PANEL P TO ENGINE 3 REAR SPAR PERMANENT SPLICE	1		1

A AIRPLANES 1, 8 AND ON

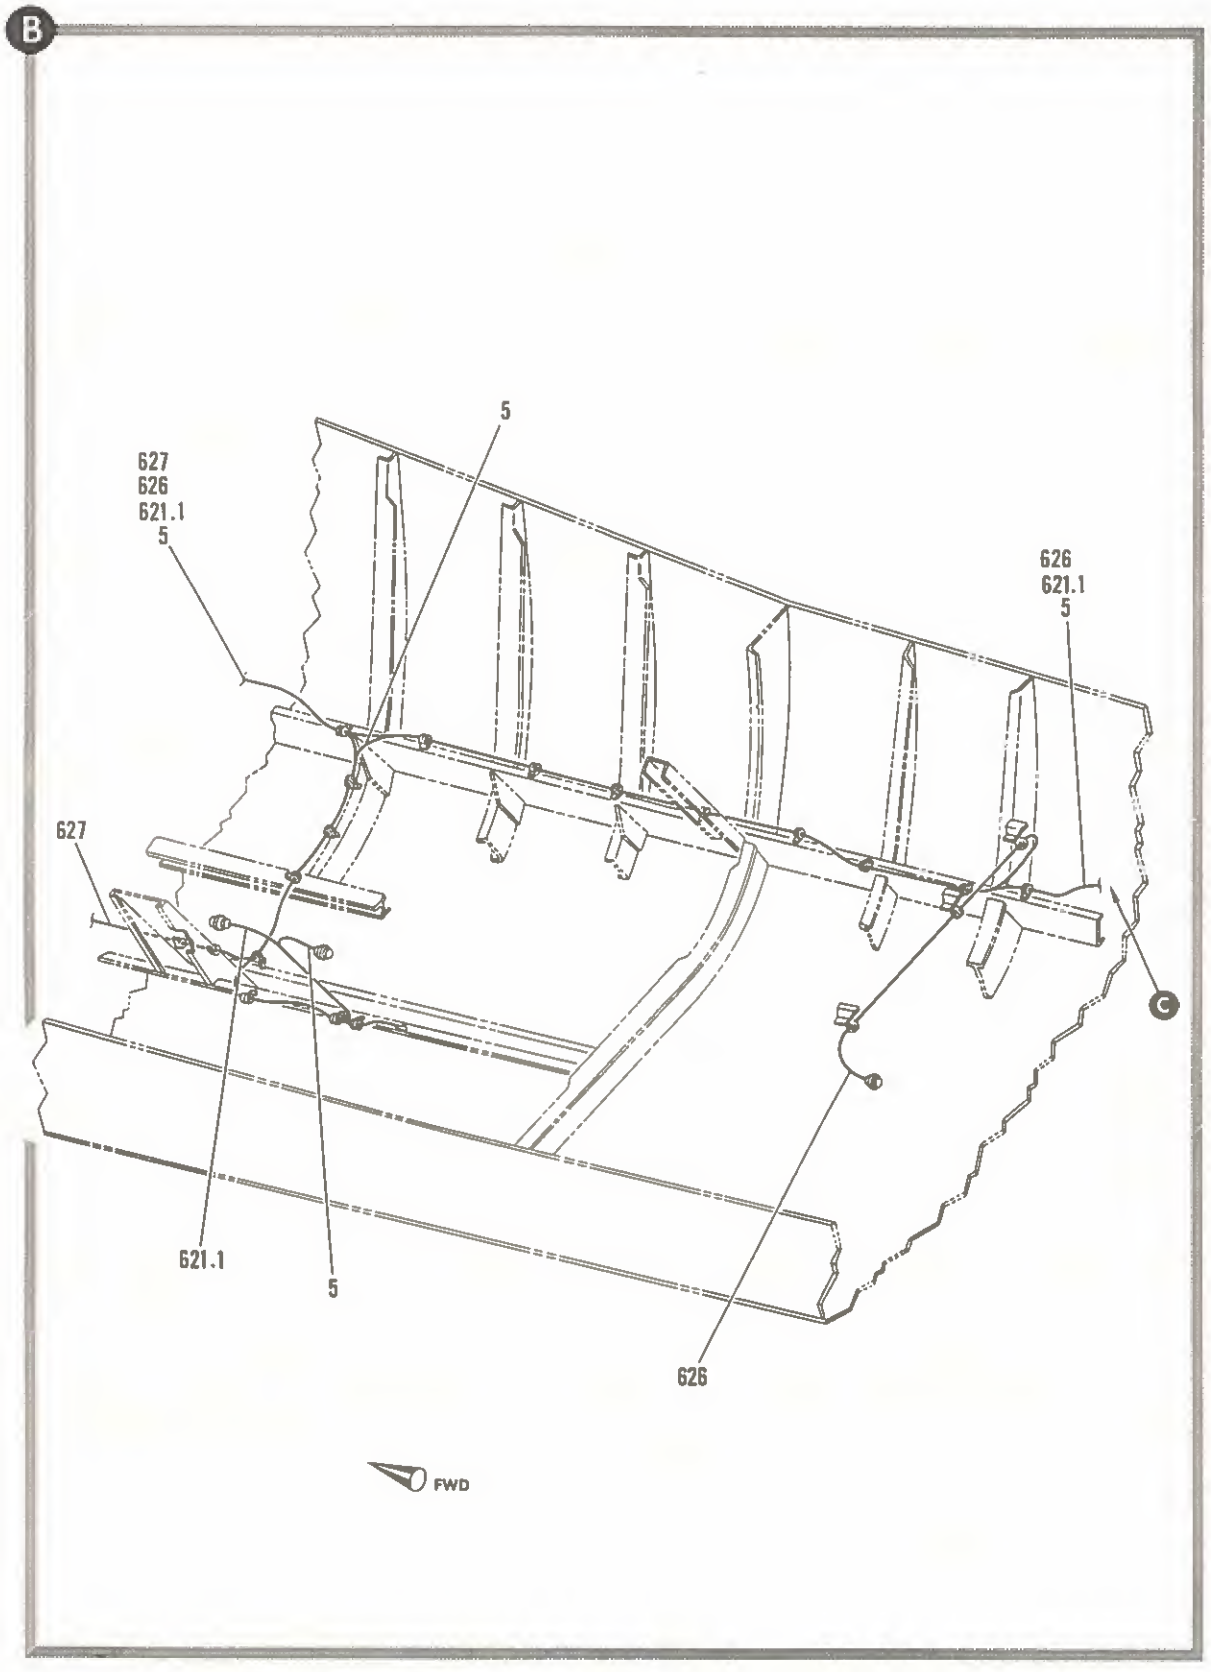

PLENUM AREA UNDERFLOOR STA 640 TO 926
RH ELECTRICAL HARNESSES
FIGURE 3 (SHEET 2 OF 3)

C

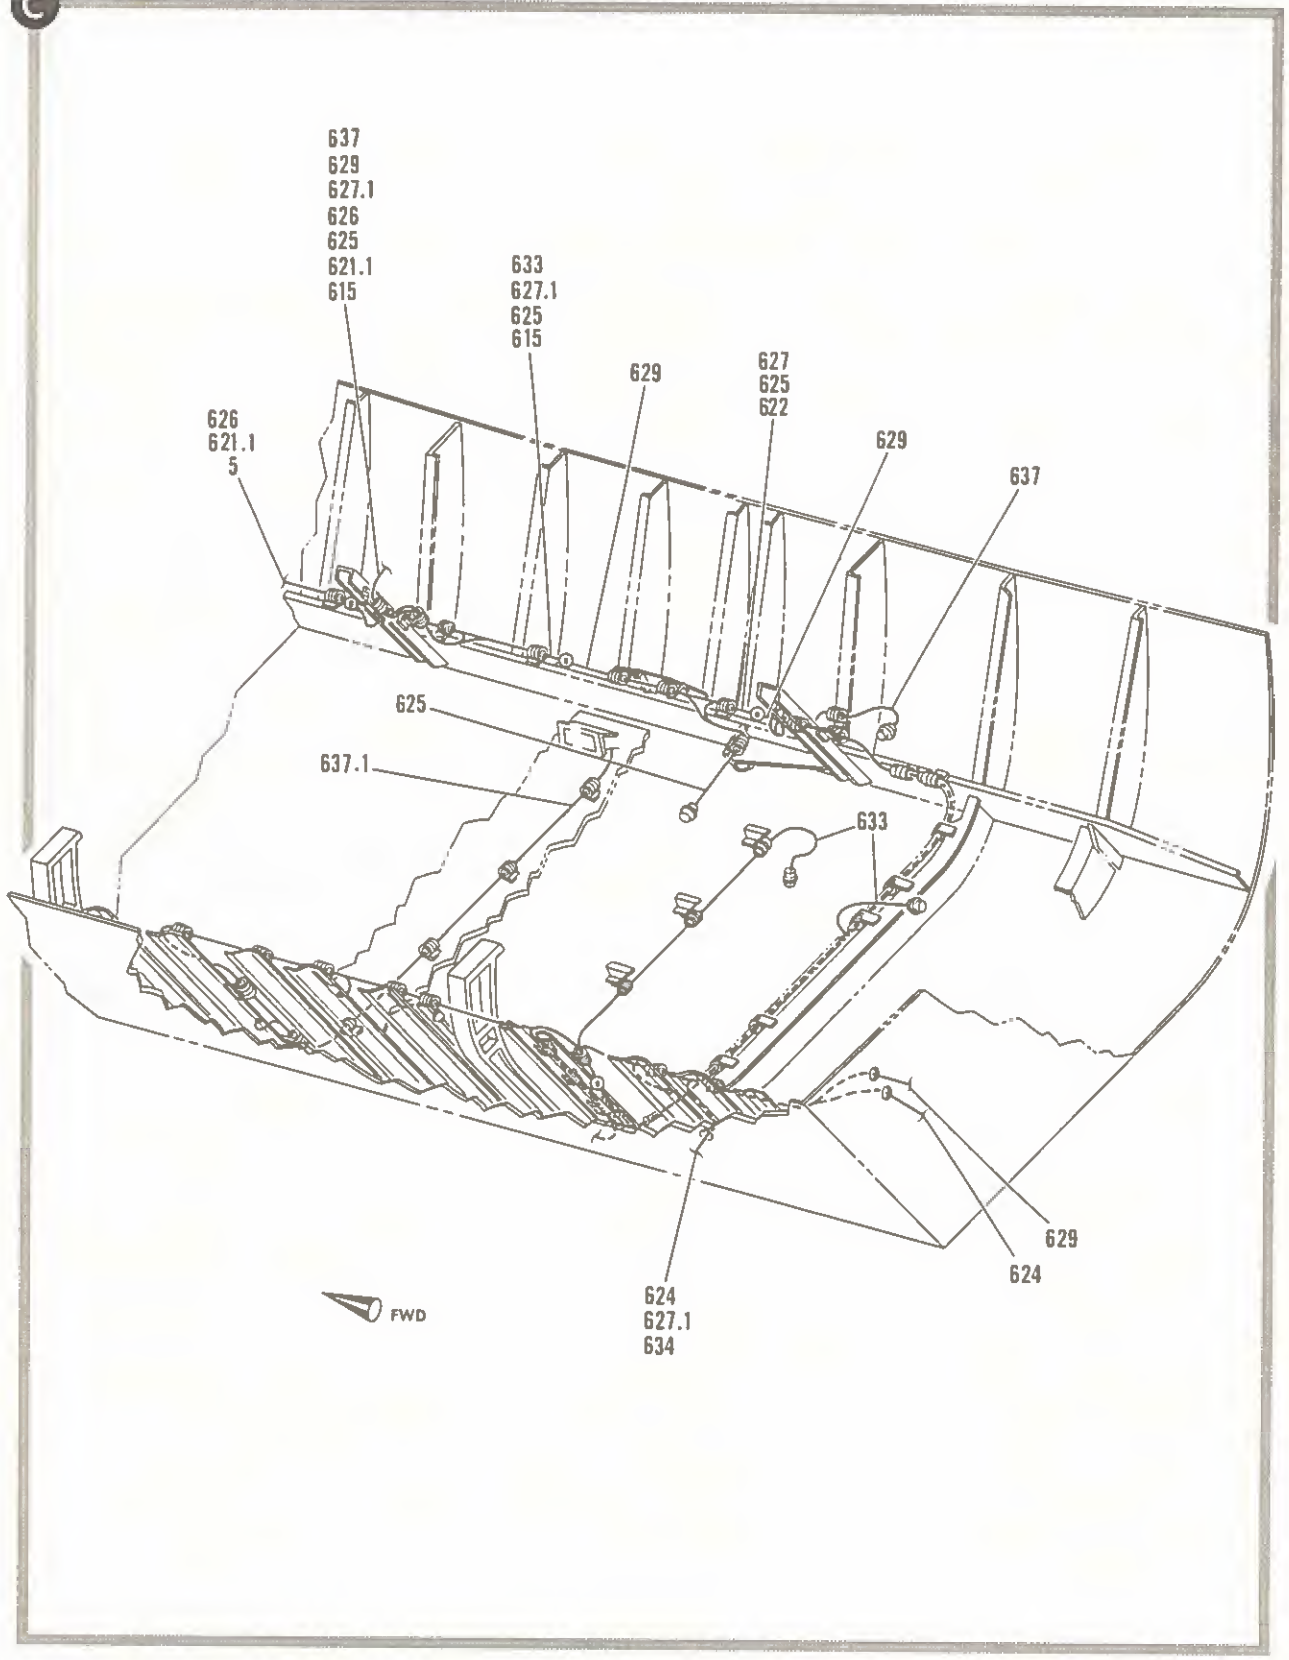


22.04.94.07.004.3A


PLENUM AREA UNDERFLOOR STA 640 TO 926
RH ELECTRICAL HARNESSES
FIGURE 3 (SHEET 3 OF 3)

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3 -624	22-64633-1	. HARNESS ASSEMBLY, FLIGHT DECK ELECTRONIC TEMPERATURE CONTROLLER TO PERMANENT SPLICE	1		1
	10-35918-14	. . ADAPTER, CONVAIR 90-04401-005 -V77820-	1		1
	DPD45-33S1B	. . CONNECTOR, CONVAIR 92-50285-016 -V71468-	1		1
	19929	. . SHELL, CONVAIR 98-02504-005 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		9
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		3
-625	22-62573-5	. HARNESS ASSEMBLY, CABIN AIR CONDITION PROGRAMMER TO PERMANENT SPLICE	A		1
	22-62573-1	. HARNESS ASSEMBLY, CABIN AIR CONDITIONING PROGRAMMER TO PERMANENT SPLICE	2	6	1
	36153	. . TERMINAL, CONVAIR 98-90305-003 -V00779-	A		AR
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	2	6	1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	A		4
	021621-0001	. . CONTACT, CONVAIR 92-63901-008 -V71468-	2	6	5
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	A		14
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	2	6	1
	EX06-22-14S	. . CONNECTOR, CONVAIR 92-40332-016 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	323975	. . CONNECTOR, CONVAIR 98-34009-003 -V00779-	A		AR
	323975	. . CONNECTOR, CONVAIR 98-34009-003 -V00779-	2	6	1
-626	22-62588-1	. HARNESS ASSEMBLY, CABIN FREON COMPRESSOR TO RELAY	1		1
	EX06-22-14S	. . CONNECTOR, CONVAIR 92-40332-016 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		7
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		12
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		11
	320572	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-627	22-62592-5	. HARNESS ASSEMBLY, CABIN TURBO COMPRESSOR TO CABIN TEMPERATURE CONTROL PERMANENT SPLICE	A		1
	22-62592-1	. HARNESS ASSEMBLY, CABIN TURBO COMPRESSOR TO CABIN TEMPERATURE CONTROL PERMANENT SPLICE	2	6	1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		19
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		3
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
	EX06-22-14S	. . CONNECTOR, CONVAIR 92-40332-016 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-627.1	22-62594	. HARNESS ASSEMBLY, LANDING GEAR SAFETY RELAY 5 TO PERMANENT SPLICE	1		1
		A AIRPLANES 1, 7 AND ON			

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3 -628	22-62628-1	. HARNESS ASSEMBLY, CABIN FLOW SENSOR AND TRANSMITTER TO FEED THRU V	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		4
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
	MC11E10-6SN	. . CONNECTOR, CONVAIR 92-40179-002 -V71468-	1		1
	CT06E18-11S	. . CONNECTOR, CONVAIR 92-40334-005 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-629	22-64634-1	. HARNESS ASSEMBLY, CABIN ELECTRONIC TEMPERATURE CONTROLLER TO PERMANENT SPLICE	1	6	1
	22-64634-5	. HARNESS ASSEMBLY, CABIN ELECTRONIC TEMPERATURE CONTROLLER TO PERMANENT SPLICE	7	7	1
	22-64634-801	. HARNESS ASSEMBLY, CABIN ELECTRONIC TEMPERATURE CONTROLLER TO PERMANENT SPLICE	8		1
	19929	. . SHELL, CONVAIR 98-02504-005 -V71468-	1		1
	DPD34CL1	. . ADAPTER, CONVAIR 90-04401-005 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1	6	1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	7		AR
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1	6	1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	7		AR
	DPD45-33S1B	. . CONNECTOR, CONVAIR 92-50285-016 -V71468-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1	6	13
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	7		AR
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1	6	1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	7		AR
-630	22-62556-1	. HARNESS ASSEMBLY, RECIRCULATING FAN TO RELAY	1		1
	YAEV8C-L1	. . TERMINAL, CONVAIR 98-90806-002 -V09922-	1		1
	320571	. . TERMINAL, CONVAIR 98-90805-005 -V00779-	1		1
	YAEV8C-L	. . TERMINAL, CONVAIR 98-90806-001 -V09922-	1		1
-632	22-62557-1	. HARNESS ASSEMBLY, RECIRCULATING FAN MOTOR TO FEED THRU Y	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
	YAEV8C-L	. . TERMINAL, CONVAIR 98-90806-001 -V09922-	1		3
-633	22-62589-1	. HARNESS ASSEMBLY, CABIN CONDENSER TEMPERATURE PLUGS TO PERMANENT SPLICE	1		1
	CT06E18-19S	. . CONNECTOR, CONVAIR 92-40334-006 -V71468-	1		1
	CA3106E18-8S	. . CONNECTOR, CONVAIR 92-40334-018 -V71468-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3 -634	22-62633	. HARNESS ASSEMBLY, LH AFT ACCESS DOOR SWITCH TO RH AFT ACCESS DOOR SWITCH	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
-636	22-62632	. HARNESS ASSEMBLY, FWD AIR CONDITIONING COMPARTMENT LIGHT TO PERMANENT SPLICE RH	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-637	22-62593	. HARNESS ASSEMBLY, CABIN CONDENSER FAN TO RELAY	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		4
	10-101033-1	. . PLUG, CONVAIR 96-91200-001 -V77820-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	EX06-14S2S	. . CONNECTOR, CONVAIR 92-40332-004 -V71468-	1		1
-637.1	22-62609	. HARNESS ASSEMBLY, AFT AIR CONDITIONING COMPARTMENT LIGHT TO PERMANENT SPLICE RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1

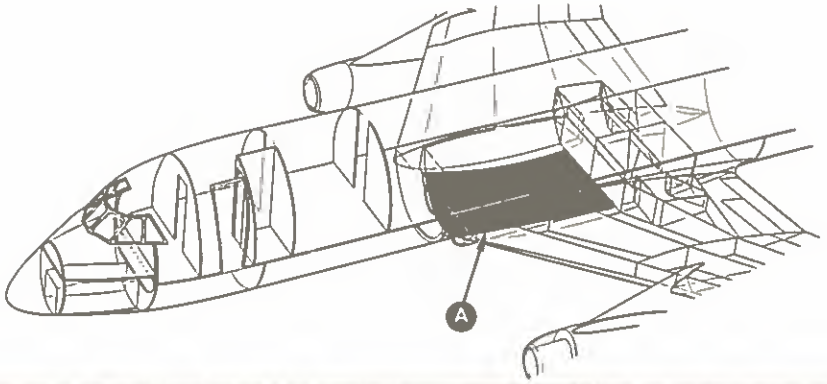

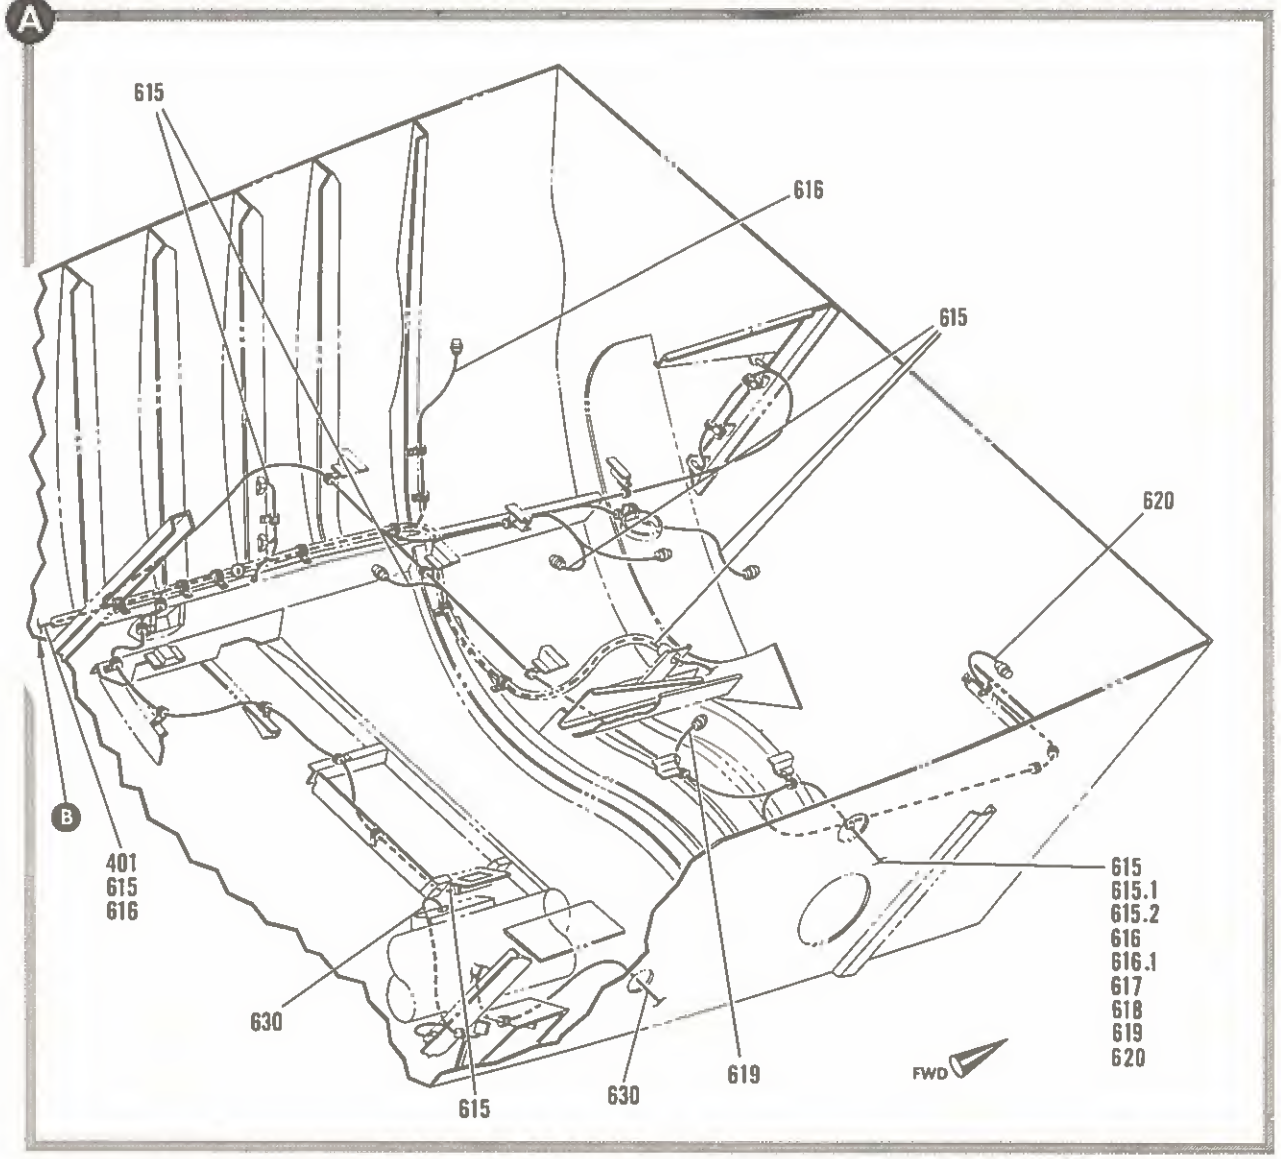

22.04.94.07.005-1A


PLENUM AREA UNDERFLOOR STA 640 TO 926
LH ELECTRICAL HARNESSES
FIGURE 4 (SHEET 1 OF 3)

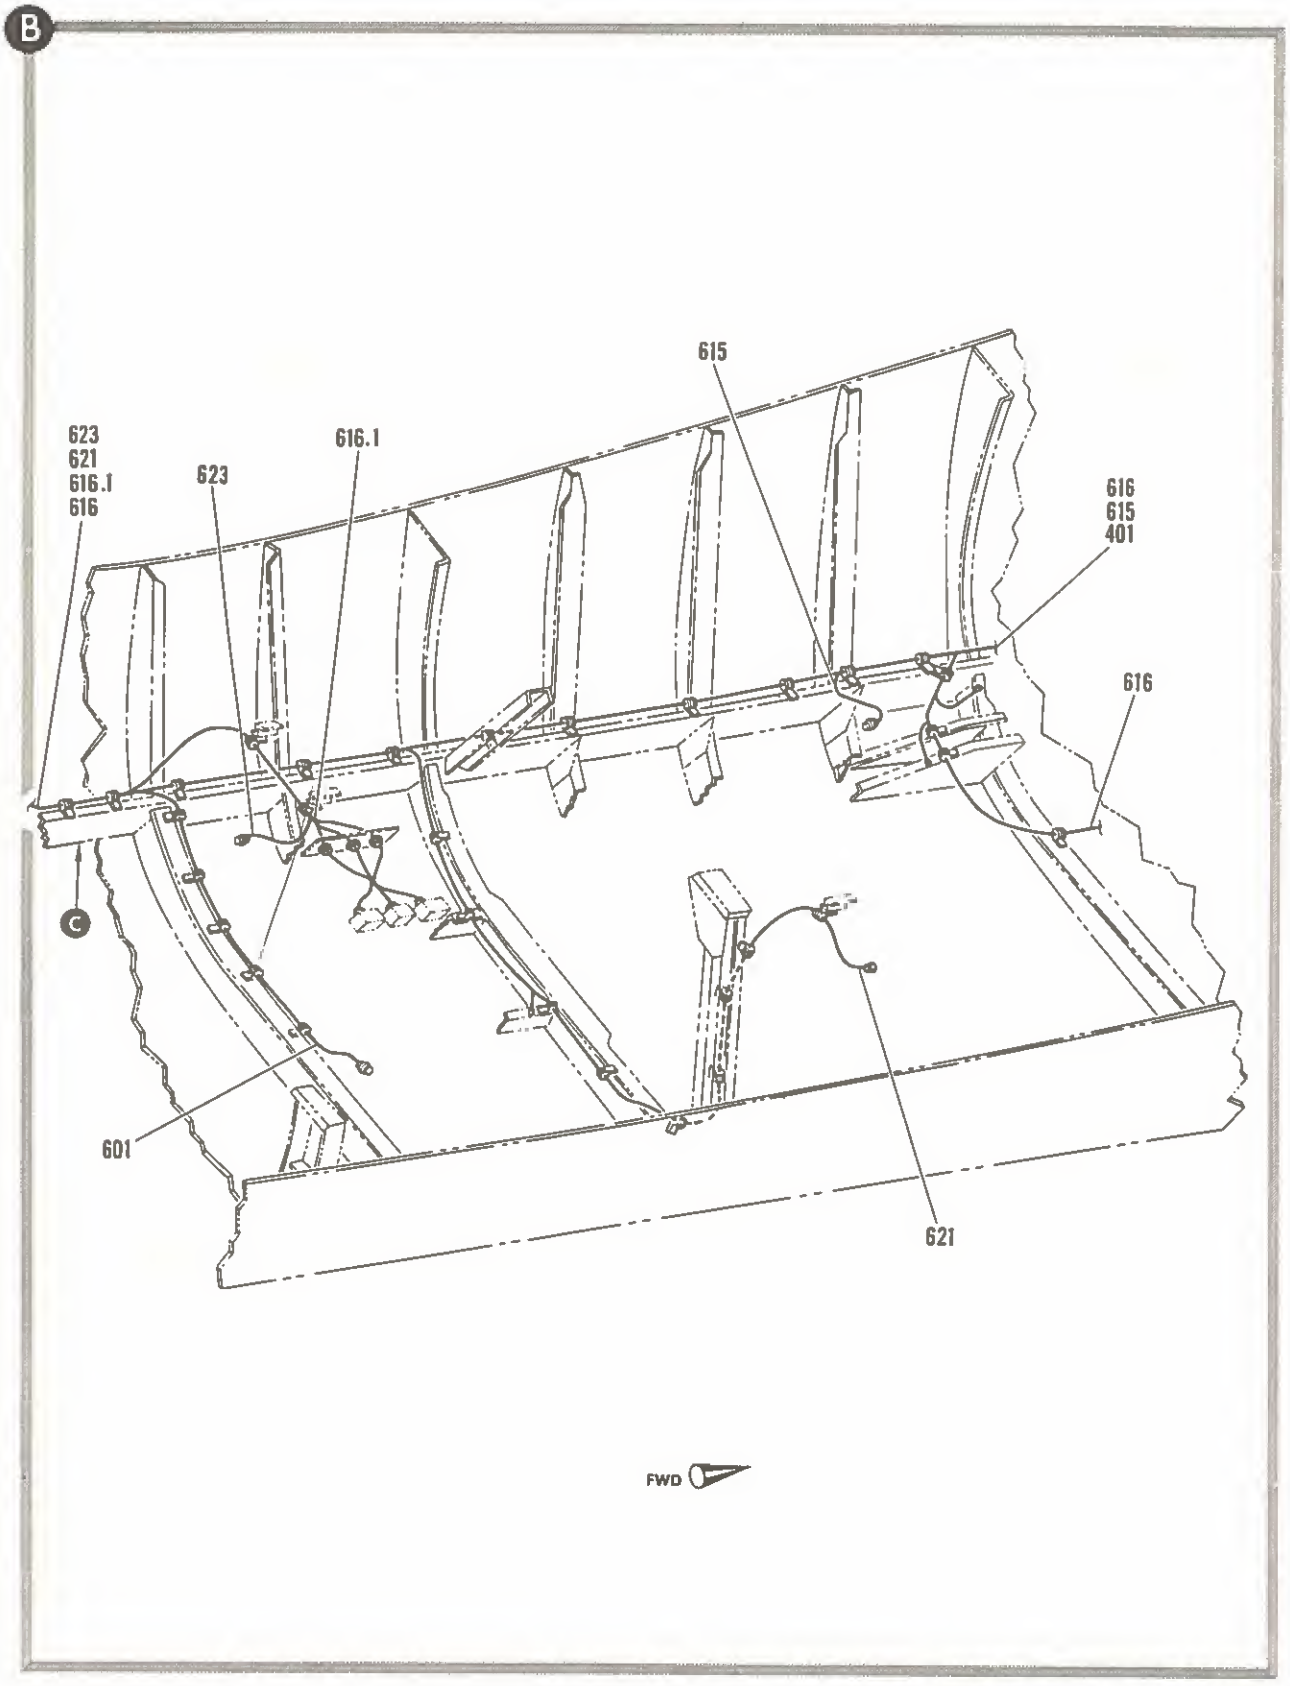

22.04 94 07.005-2A

PLENUM AREA UNDERFLOOR STA 640 TO 926
LH ELECTRICAL HARNESSES
FIGURE 4 (SHEET 2 OF 3)

C

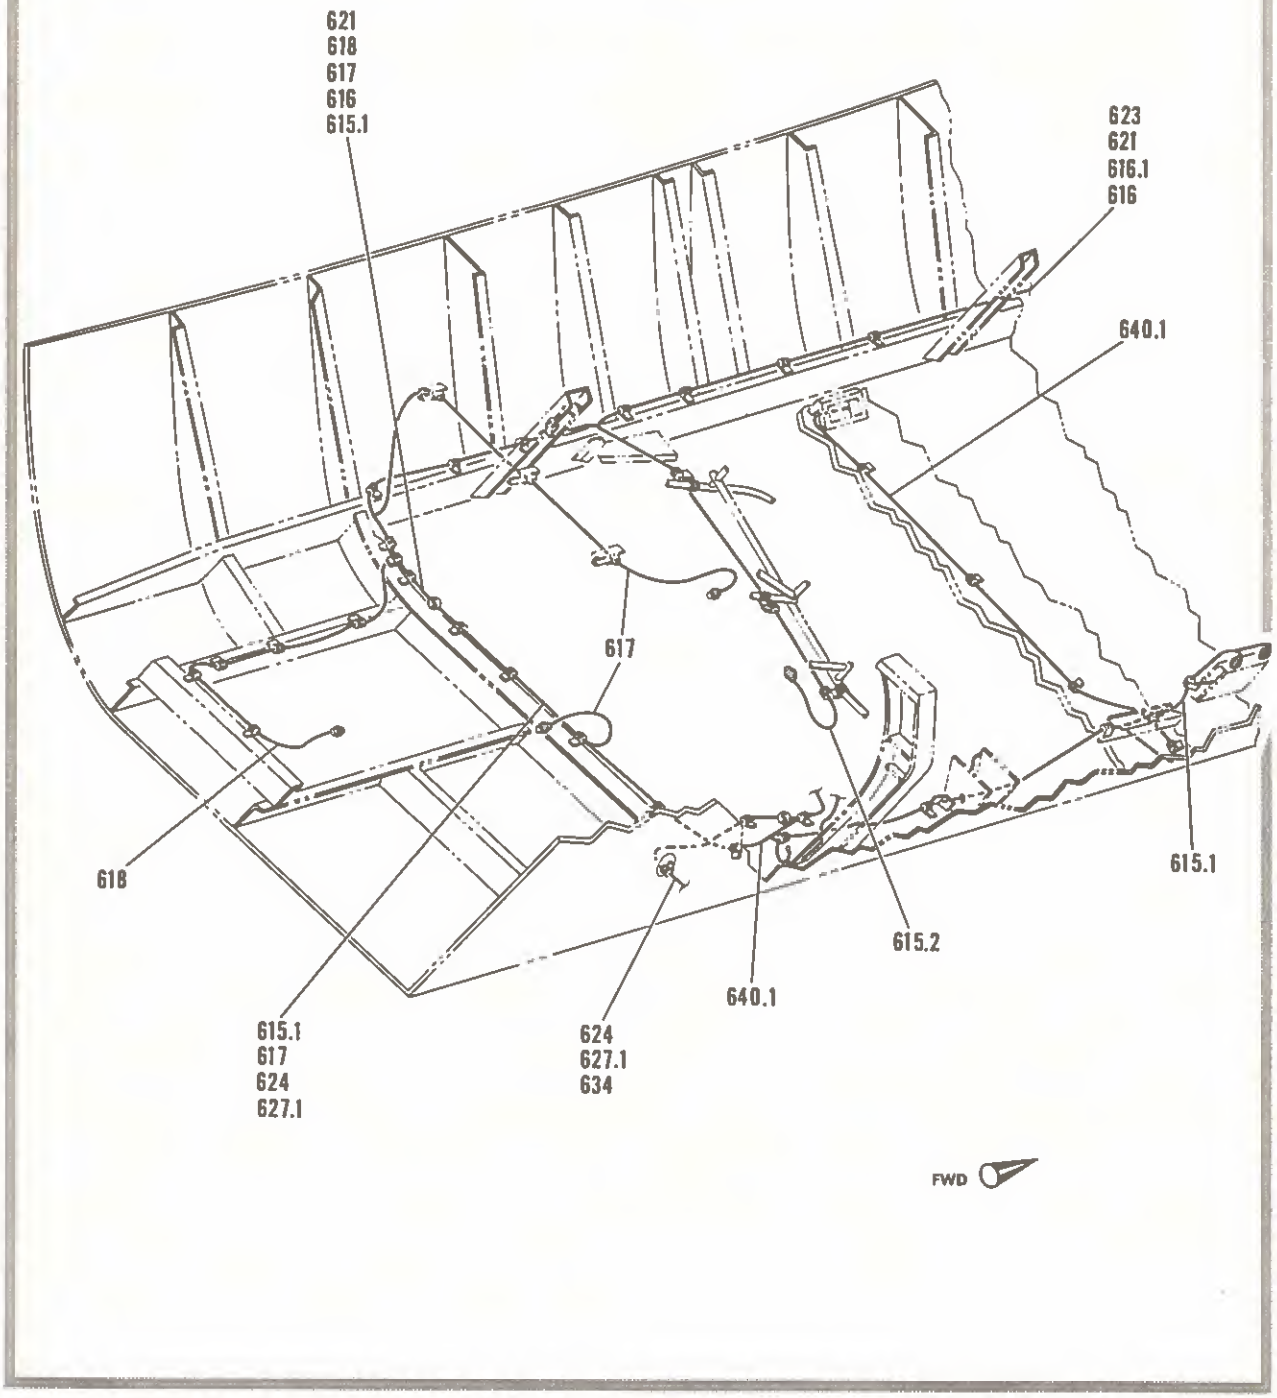



22.04.94.07.005-3A

PLENUM AREA UNDERFLOOR STA 640 TO 926
LH ELECTRICAL HARNESSES
FIGURE 4 (SHEET 3 OF 3)

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4		PLENUM AREA UNDERFLOOR STA 640 TO 926 LH ELECTRICAL HARNESSES SEE 22-62001 RH WING REFUEL AND DEFUEL VALVES			
-640.1	22-62610	. HARNESS ASSEMBLY, AFT AIR CONDITIONING COMPARTMENT LIGHT TO PERMANENT SPLICE LH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6		UNDERFLOOR OVER MWW ELECTRICAL HARNESSES SEE 22-62001			
-646	22-63615	. HARNESS ASSEMBLY, CLOSET RECEPTACLE STA 889 TO PERMANENT SPLICE	1		1
-647	22-63616	. HARNESS ASSEMBLY, CLOSET RECEPTACLE STA 965 TO PERMANENT SPLICE	1		1
	PT00E8-4S	. . CONNECTOR, CONVAIR 92-50288-010 -V77820-	1		1
	10-101960-83	. . COVER, CONVAIR 92-74211-004 -V06840-	1		1
-648	22-62542	. HARNESS ASSEMBLY, INSTRUMENT PANEL PERMANENT SPLICE TO FEED THRU PANEL X RH	1		1

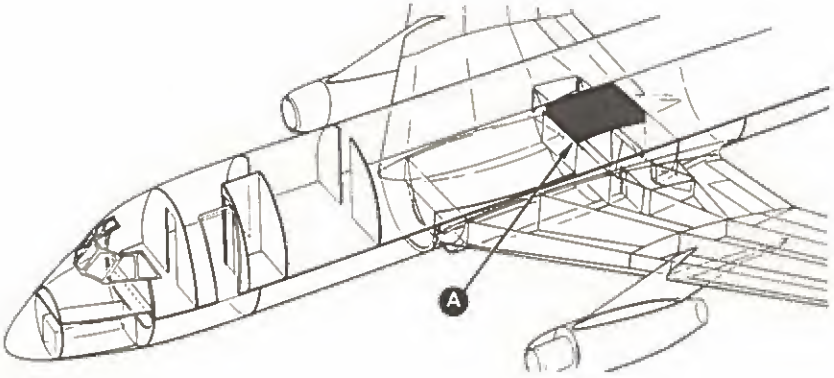

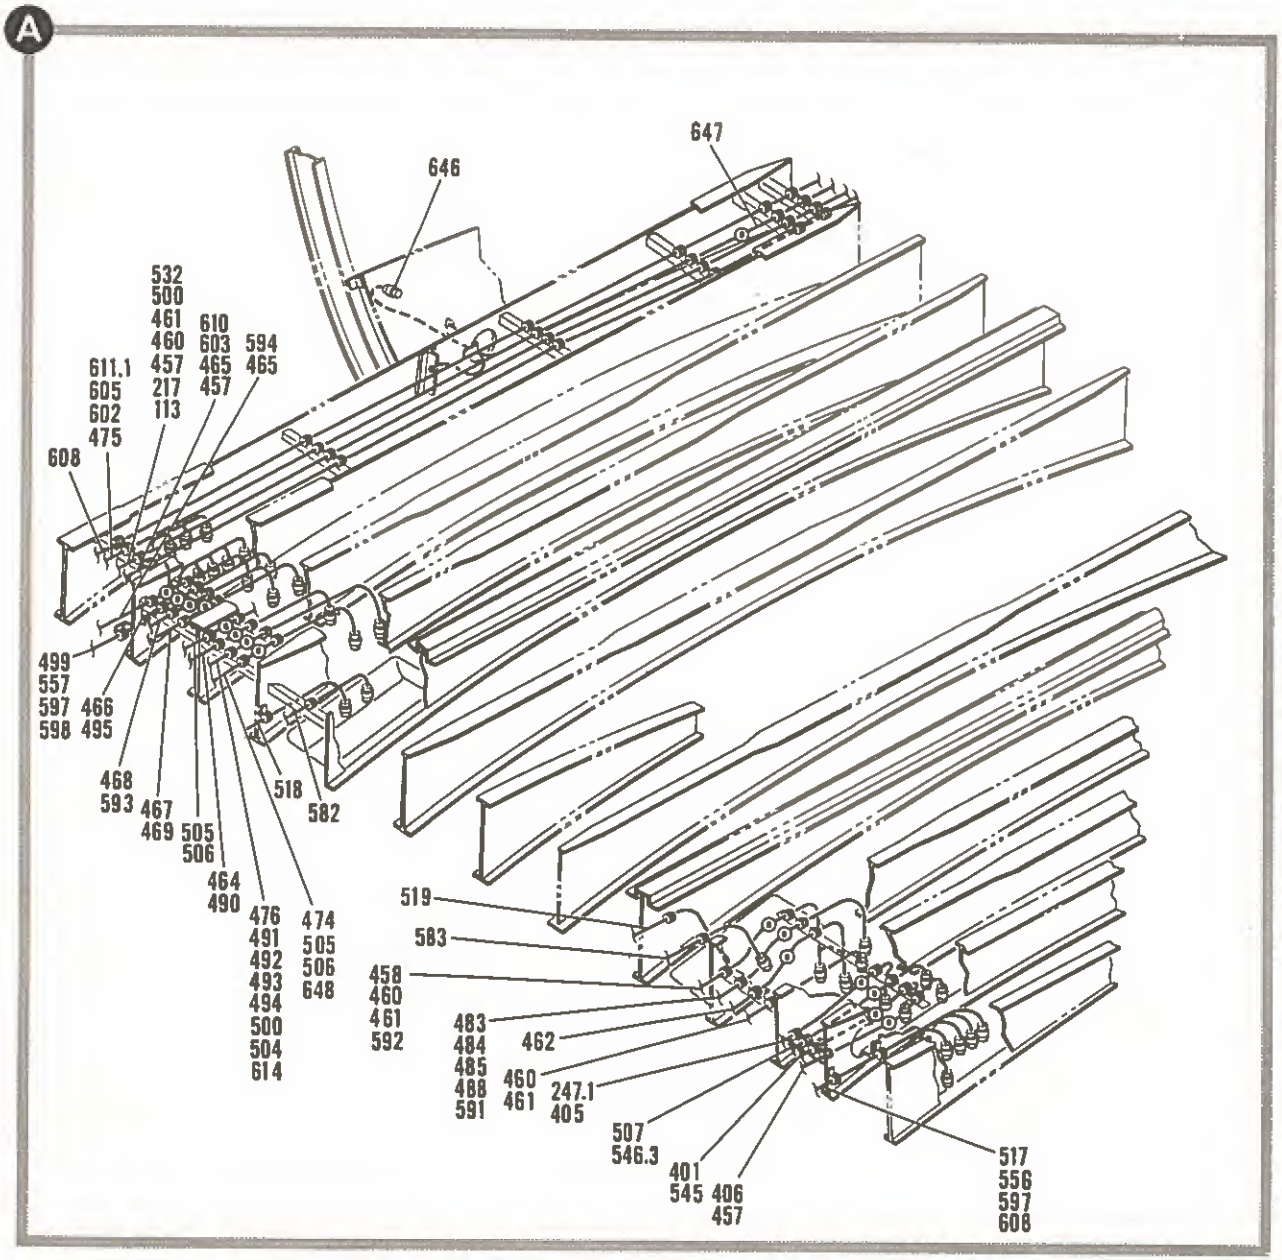


22.04.94.07.010


UNDERFLOOR OVER MWW ELECTRICAL HARNESSES
FIGURE 6

SECTION V


Chapter 94
ELECTRICAL HARNESSES

FUSELAGE AFT COMPARTMENT UNDERFLOOR ELECTRICAL HARNESSES

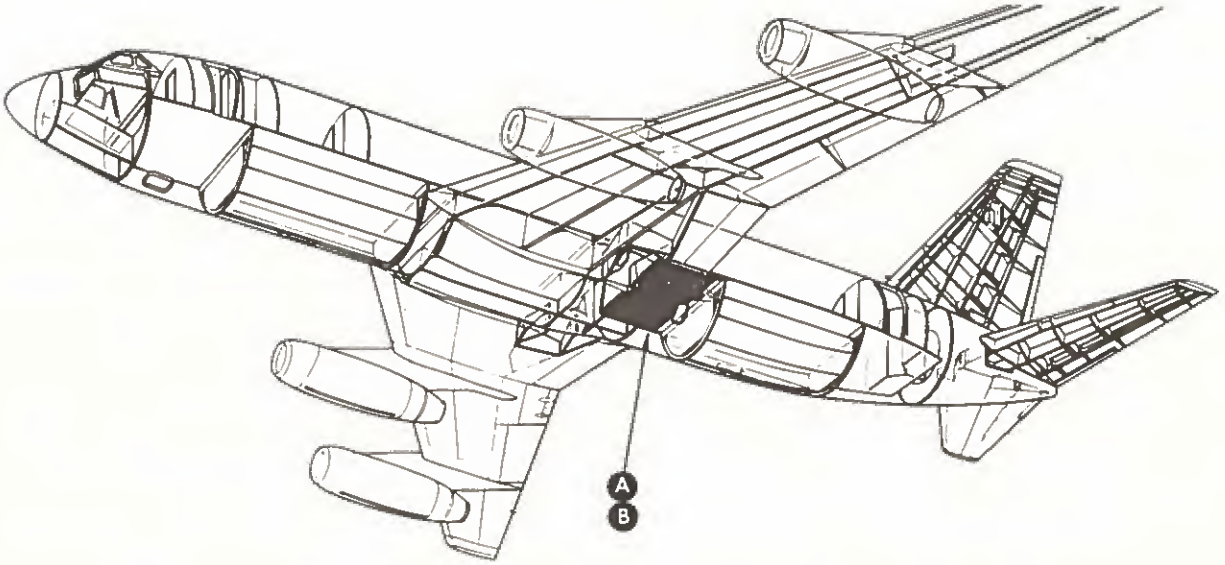

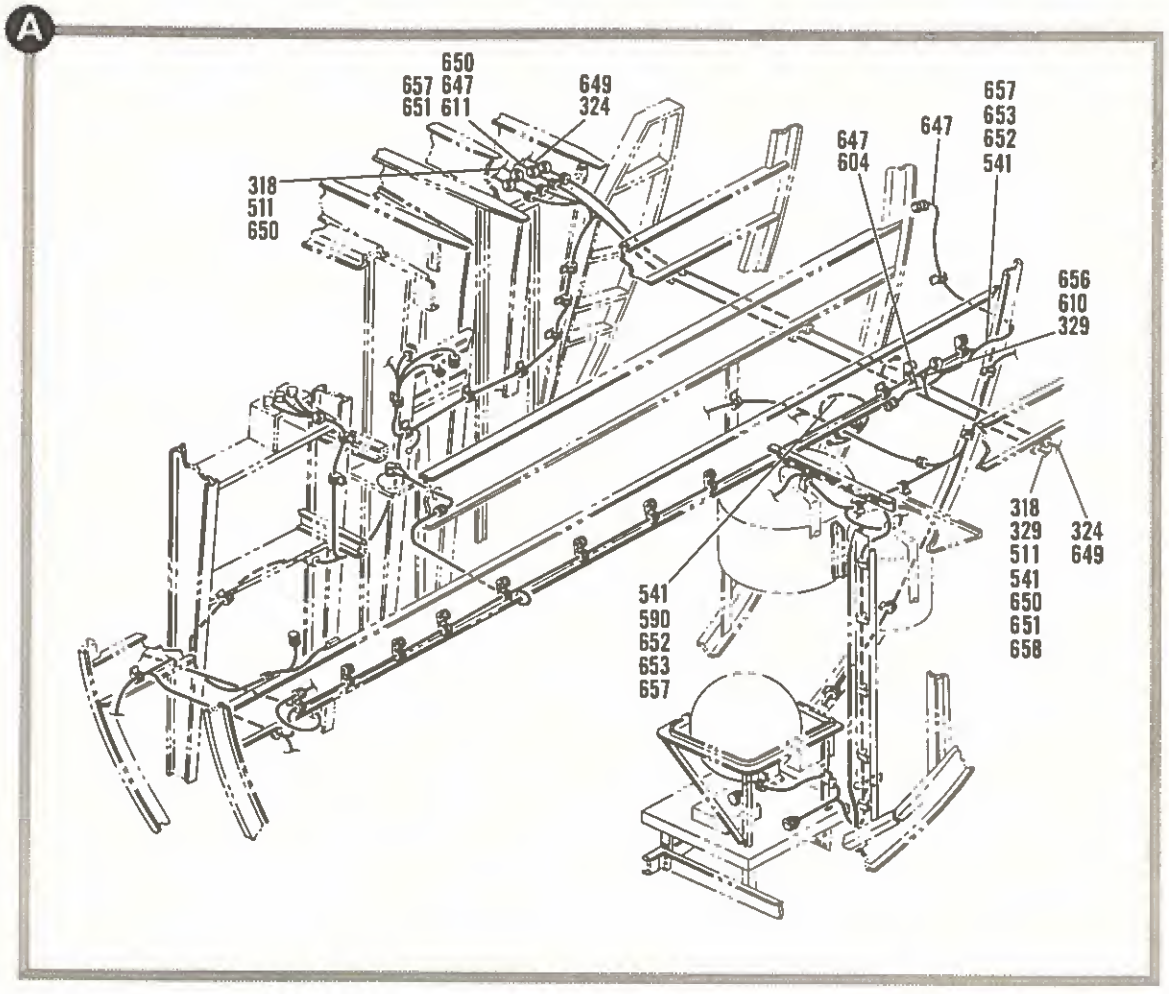

22.04.94.08.002 1

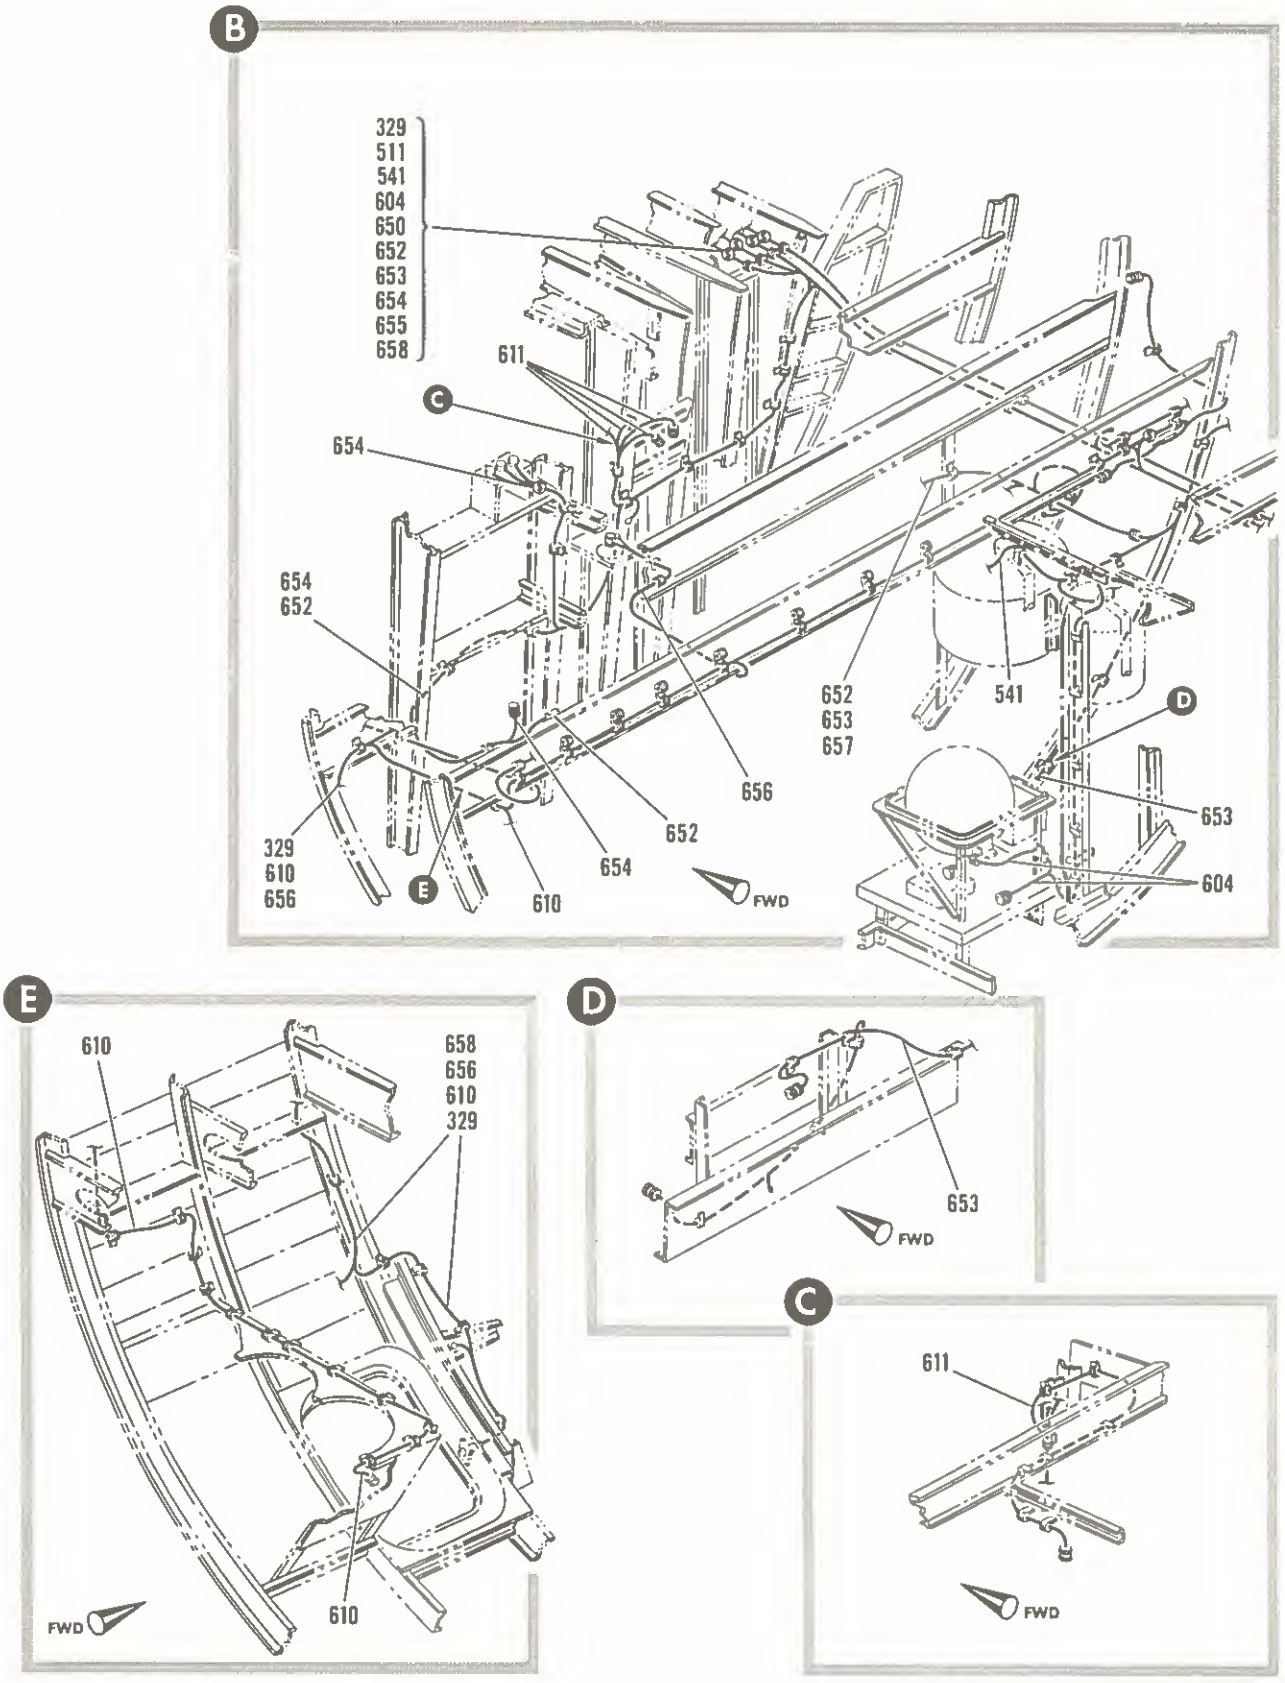


22 04 94 08 002-2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		UNDERFLOOR HYDRAULIC COMPARTMENT RH ELECTRICAL HARNESSES SEE 22-62002			
-649	22-62509	. HARNESS ASSEMBLY, FEED THRU PANEL FRONT SPAR TO AFT PRESSURE BULKHEAD	1		1
	CT00E22-2S	. . CONNECTOR, CONVAIR 92-50293-002 -V71468-	1		1
-650	22-62561	. HARNESS ASSEMBLY, PERMANENT SPLICE TO AFT BULKHEAD PRESSURE PANEL T	1		1
-652	22-62547	. HARNESS ASSEMBLY, REAR SPAR SPLICE AREA TO HYDRAULIC COMPARTMENT	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		7
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
-653	22-62552	. HARNESS ASSEMBLY, REAR SPAR PERMANENT SPLICE TO HYDRAULIC PUMP MOTOR	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		2
	CT06E24-22S	. . CONNECTOR, CONVAIR 92-40334-009 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
-654	22-62567-1	. HARNESS ASSEMBLY, WING FLAP POSITION SWITCHES TO REAR SPAR PERMANENT SPLICE	1		1
-655	22-62591	. HARNESS ASSEMBLY, FEED THRU PANEL T TO REAR SPAR PERMANENT SPLICE	1		1
-656	22-62611	. HARNESS ASSEMBLY, HYDRAULIC COMPARTMENT LIGHT TO DOOR SWITCH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E12-10S	. . PLUG, WING FLAP CONVAIR 92-40325-002 -V06840-	1		1
-657	22-62531	. HARNESS ASSEMBLY, REAR SPAR PERMANENT SPLICE TO HYDRAULIC TEMPERATURE BULB	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		2
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		4
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-658	22-62630	. HARNESS ASSEMBLY, ELECTRIC TAIL CONE FEED THRU PANEL Z TO PERMANENT SPLICE	1		1


SECTION V

Chapter 94
ELECTRICAL HARNESSES


TAIL CONE AND STABILIZER ELECTRICAL HARNESSES

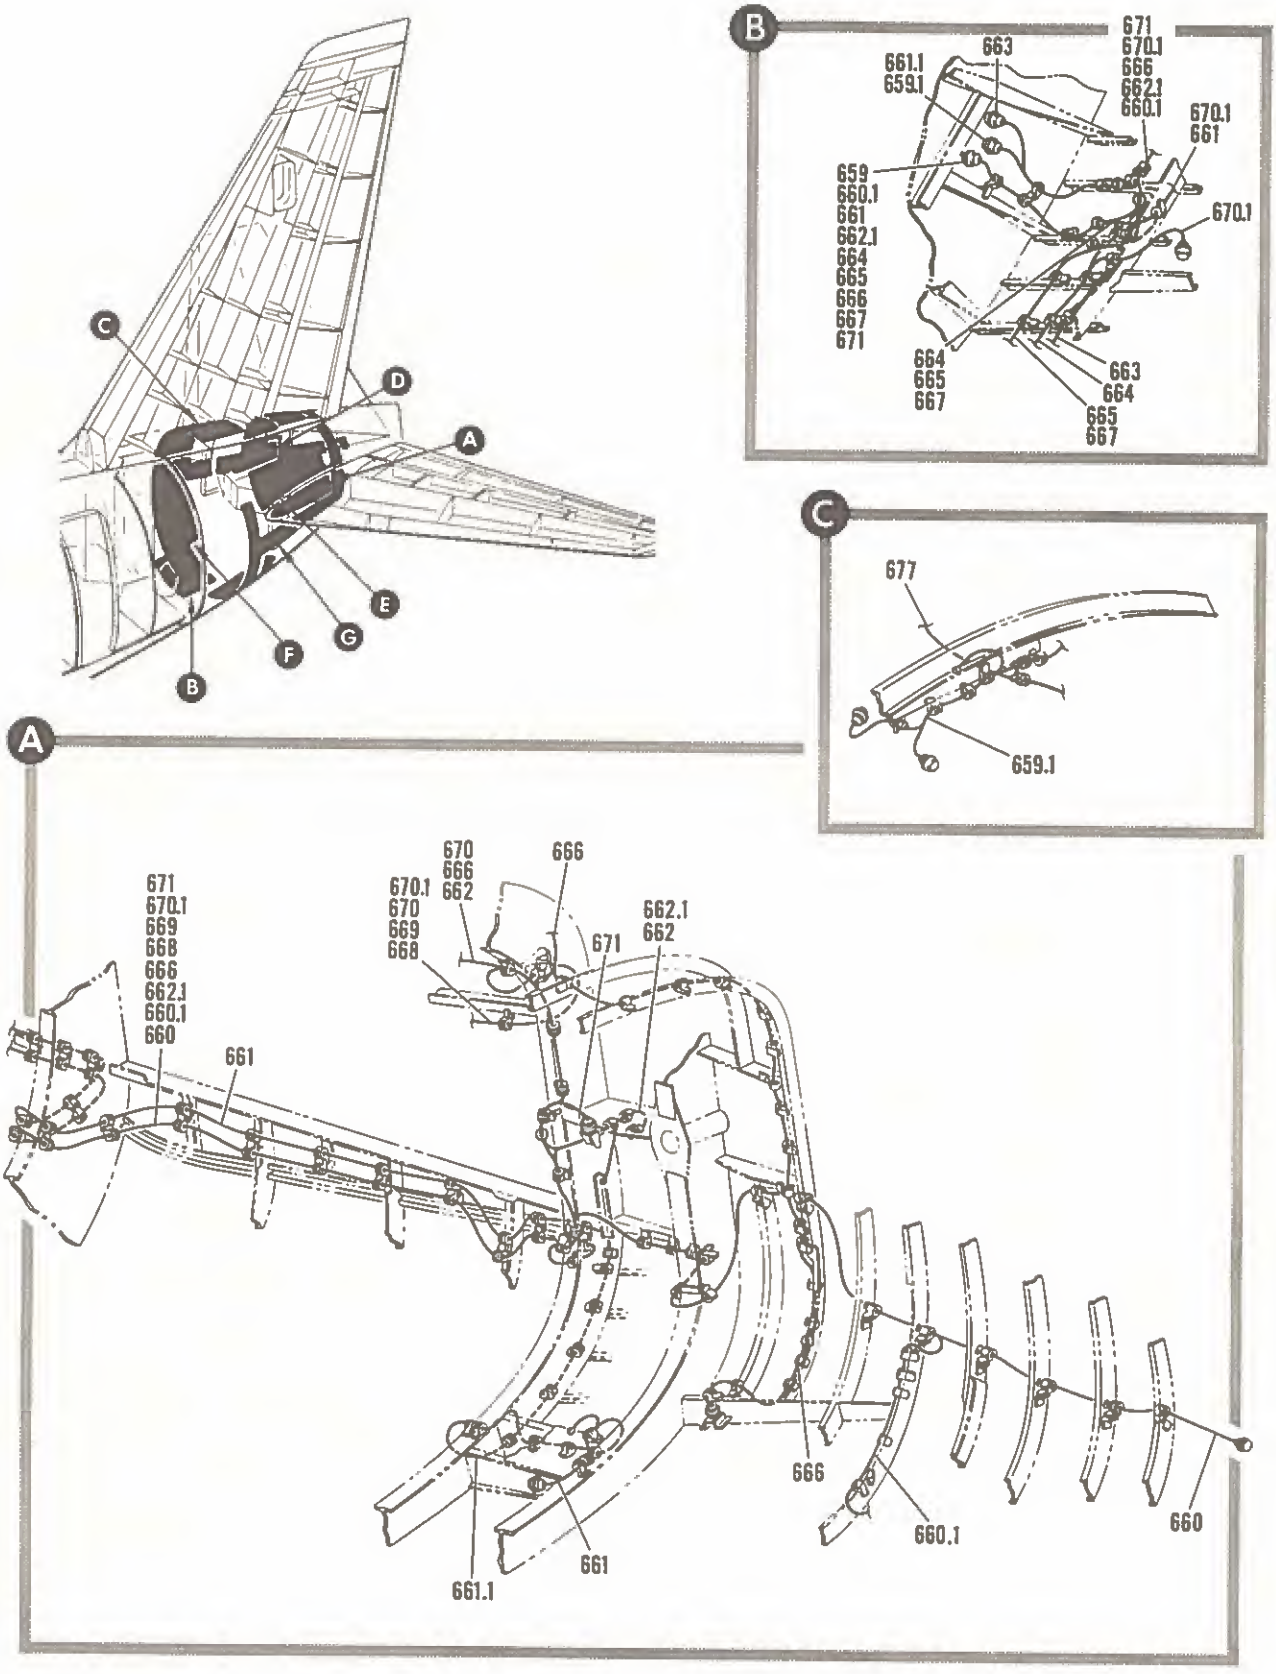

22.04.94.09.002-1

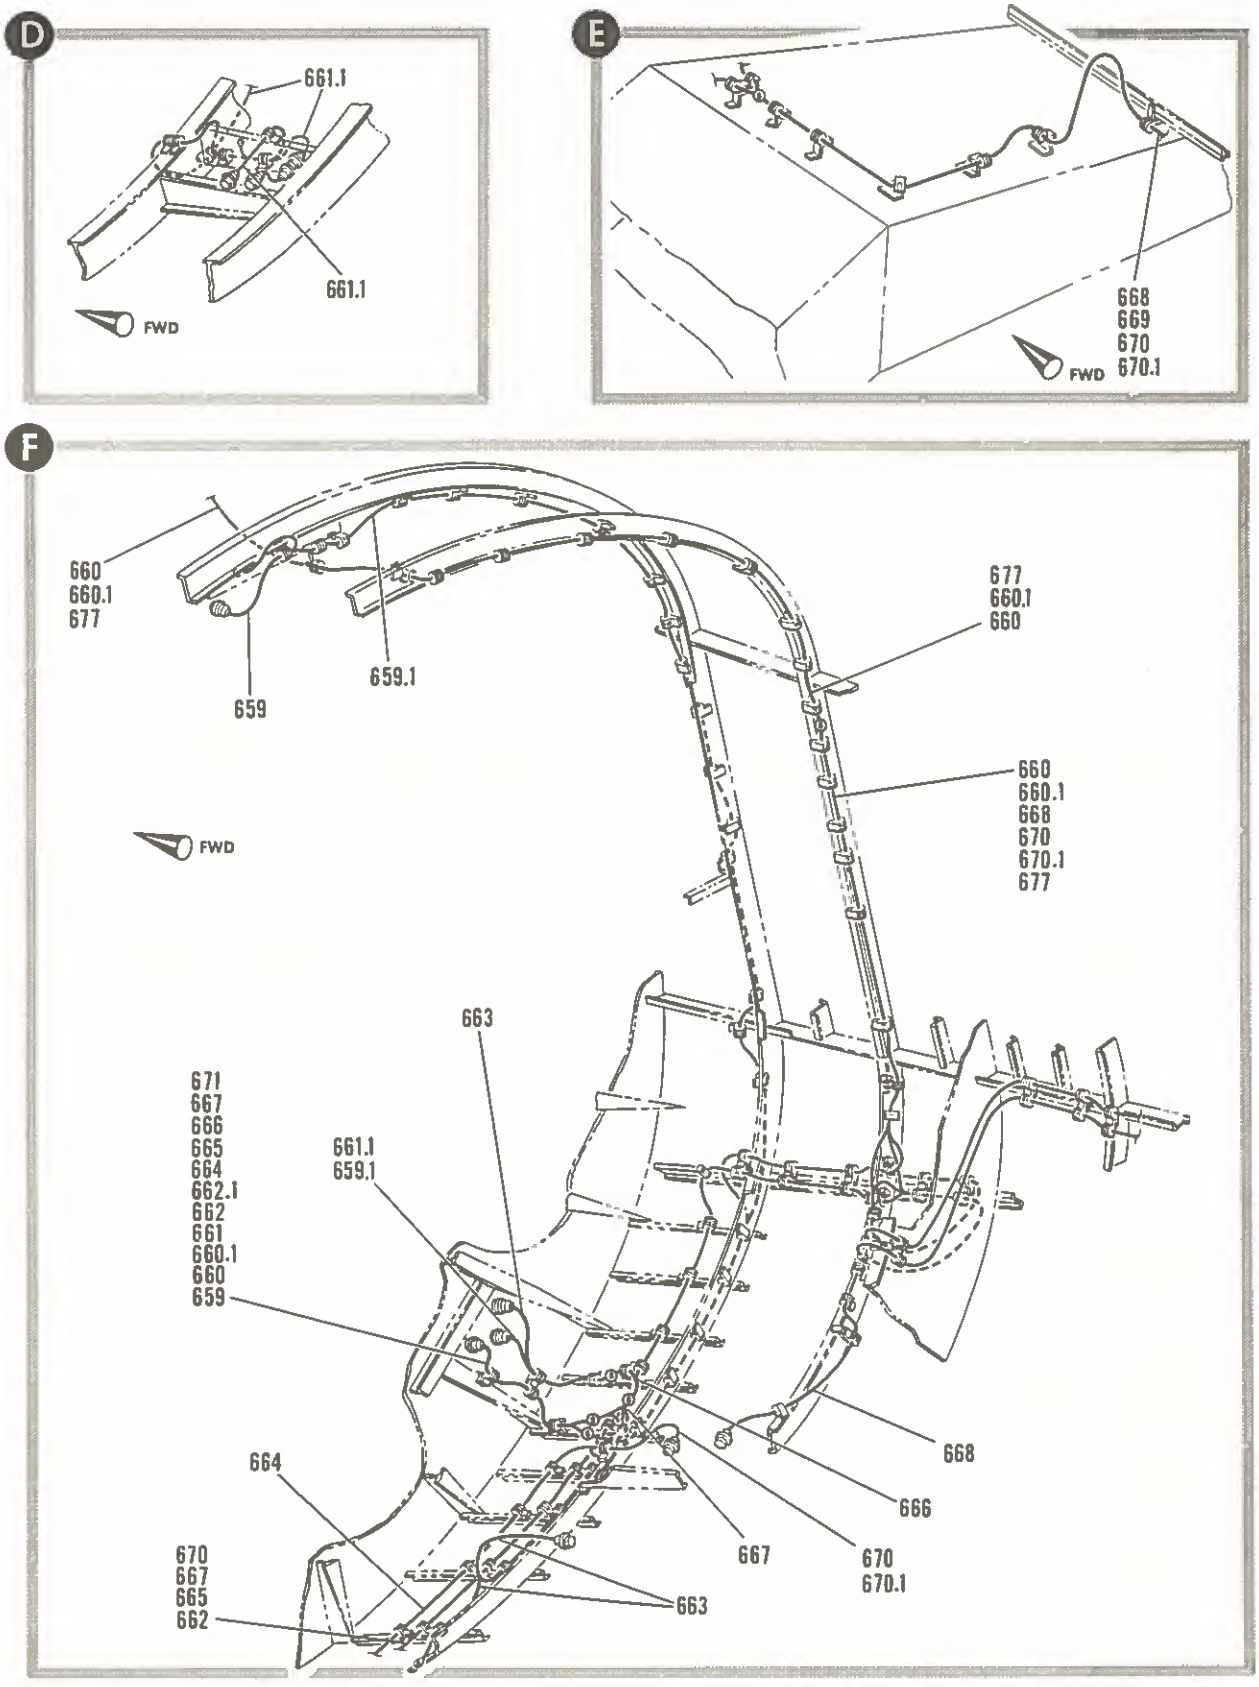


22.04.94.09.002 2

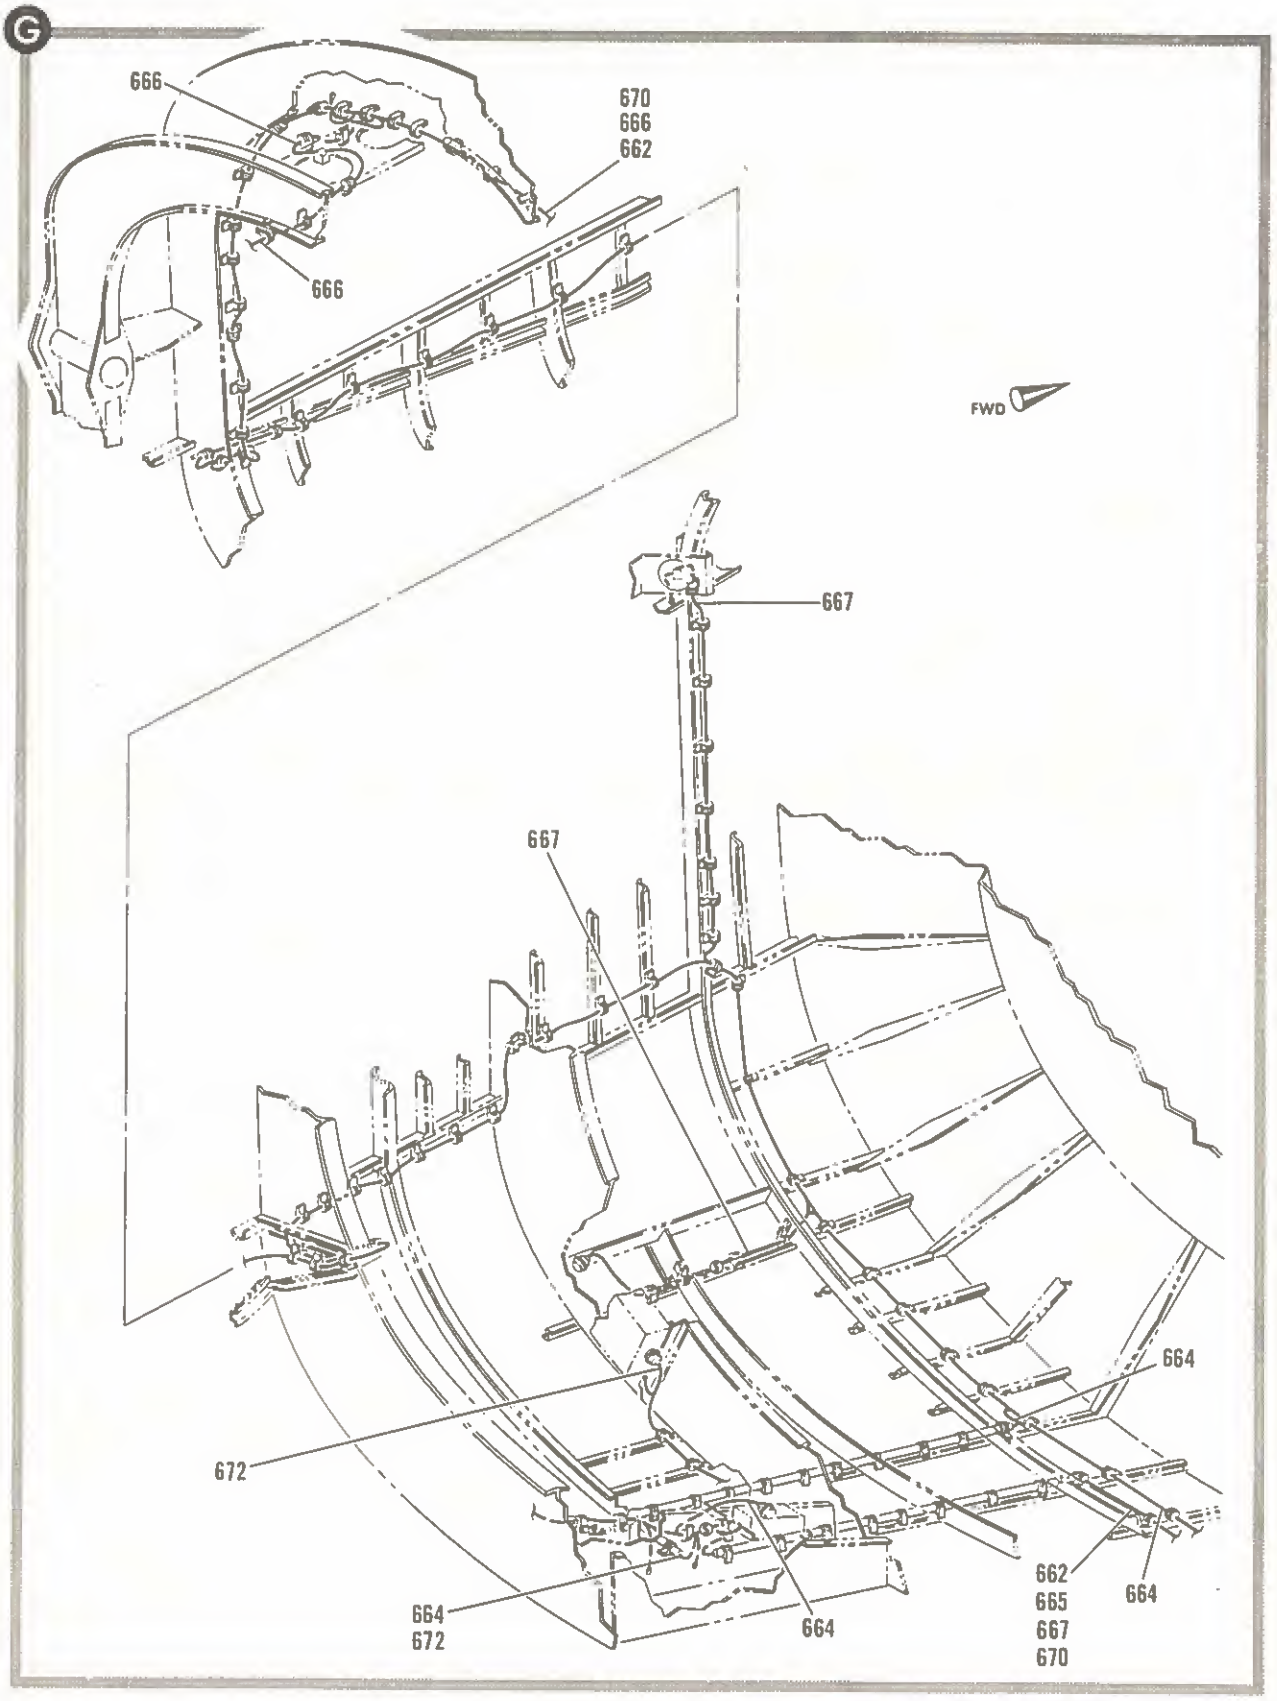

22.04.94 09.002 3

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		TAIL CONE ELECTRICAL HARNESSES SEE 22-66000			
-659.1	22-66515	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL Z TO RUDDER SERVO	1		1
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40320-001 -V71468-	1		1
	CT00E24-28S	. . CONNECTOR, CONVAIR 92-50293-015 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 92-91200-007 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
-660	22-66501	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL T TO FLARE RELEASE	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		4
-661.1	22-66514	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL Z TO ELEVATOR SERVO	1		1
	EX06-10S3S	. . CONNECTOR, CONVAIR 92-40320-001 -V71468-	1		1
	CT00E24-28S	. . CONNECTOR, CONVAIR 92-50293-015 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 92-91200-007 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		3
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		1
-662	22-66506	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL T TO STABILIZER POSITION TRANSMITTER	1	2	1
-662.1	22-66506	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL T TO STABILIZER POSITION TRANSMITTER	3		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-663	22-66507	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL T TO TAIL DE-ICE CONTROL BOX	1		1
	MS3106E36-14S	. . CONNECTOR	1		1
	CT06E22-2P	. . CONNECTOR, CONVAIR 92-40334-007 -V71468-	1		1
-664	22-66511	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL T TO SERVO POWER AMPLIFIER	1		1
	PT06E14-19S	. . CONNECTOR, CONVAIR 92-40325-011 -V77820-	1		1
-665	22-66512	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL T TO PERMANENT SPLICE	1		1
-666	22-66502	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL T TO AFT DOOR LIGHT AND SWITCH	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-667	22-66503	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL T TO FWD SIDE DOOR LIGHT SWITCH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		3
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		2
-668	22-66508	. HARNESS ASSEMBLY, TAIL DE-ICE CONTROL BOX TO FWD AND AFT PERMANENT SPLICE	1		1
	CT06E32-8P	. . CONNECTOR, CONVAIR 92-40334-014 -V71468-	1		1
	AN3420	. . BUSHING	1		1
-669	22-66509	. HARNESS ASSEMBLY, FWD PERMANENT SPLICE TO AFT PERMANENT SPLICE TAIL CONE	1		1
-670	22-66510	. HARNESS ASSEMBLY, TAIL DE-ICE CONTROL BOX TO FWD AND AFT PERMANENT SPLICE	1	2	1
-670.1	22-66510	. HARNESS ASSEMBLY, TAIL DE-ICE CONTROL BOX TO FWD AND AFT PERMANENT SPLICE	3		1
	CT06E16S8P	. . CONNECTOR, CONVAIR 92-40334-013 -V71468-	1		1
-671	22-66516	. HARNESS ASSEMBLY, PRESSURIZED FEED THRU PANEL T TO STABILIZER TRIM POSITION SWITCH	1		1
-672	22-66518-801	. HARNESS ASSEMBLY, SPEED STABILITY MONITOR TO PERMANENT SPLICE	1		1
	EX06-14S6S	. . CONNECTOR, CONVAIR 92-40332-020 -V71468-	1		1

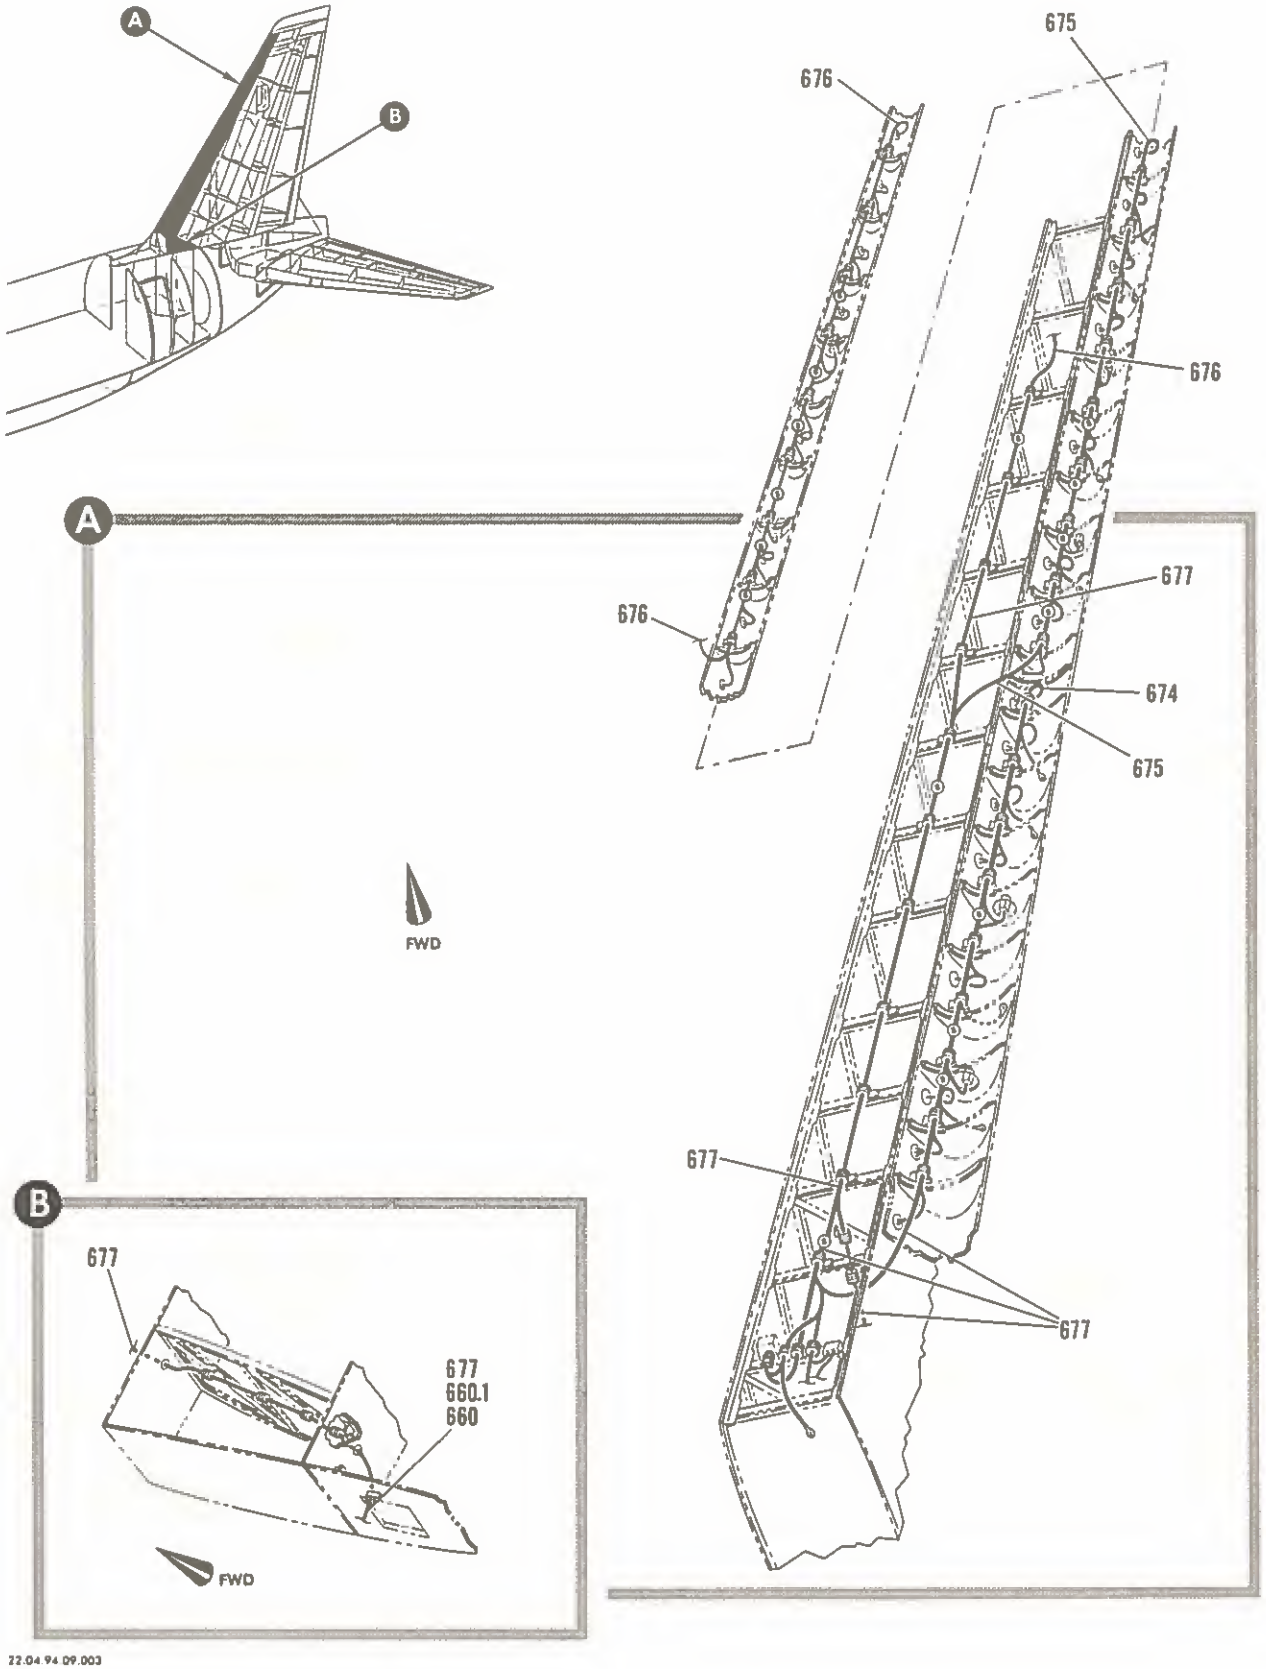

VERTICAL STABILIZER ELECTRICAL HARNESSES
FIGURE 2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		VERTICAL STABILIZER ELECTRICAL HARNESSES SEE 22-66001			
-674	22-66600	. HARNESS ASSEMBLY, LWR LEADING EDGE SECTION VERTICAL FIN	1		1
-675	22-66601	. HARNESS ASSEMBLY, INTERMEDIATE LEADING EDGE SECTION VERTICAL FIN	1		1
-676	22-66602	. HARNESS ASSEMBLY, UPPER LEADING EDGE SECTION VERTICAL FIN	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		2
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		4
	YAEV8C-L	. . TERMINAL, CONVAIR 98-90806-001 -V09922-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		2
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		5
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		9
-677	22-66609	. HARNESS ASSEMBLY, NOSE SPAR VERTICAL FIN	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		10
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		3
	320570	. . CONDUCTOR, CONVAIR 98-90805-002 -V00779-	1		7




A
678
A
678
679
680
680
679
680
679.1
680
679.1
FWD
22.04.94.09.004


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		HORIZONTAL STABILIZER ELECTRICAL HARNESSES SEE 22-66002			
-678	22-66605	. HARNESS ASSEMBLY, OUTBD LEADING EDGE SECTION HORIZONTAL STABILIZER LH	1		1
	22-66608	. HARNESS ASSEMBLY, OUTBD LEADING EDGE SECTION HORIZONTAL STABILIZER RH	1		1
-679	22-66604	. HARNESS ASSEMBLY, INTERMEDIATE LEADING EDGE SECTION HORIZONTAL STABILIZER LH	1		1
	22-66607	. HARNESS ASSEMBLY, INTERMEDIATE LEADING EDGE SECTION HORIZONTAL STABILIZER RH	1		1
-679.1	22-66603	. HARNESS ASSEMBLY, INBD LEADING EDGE SECTION HORIZONTAL STABILIZER LH	1		1
	22-66606	. HARNESS ASSEMBLY, INBD LEADING EDGE SECTION HORIZONTAL STABILIZER RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36161	. . TERMINAL, CONVAIR 98-90805-016 -V00779-	1		3
	YAEV8C-L	. . TERMINAL, CONVAIR 98-90806-001 -V09922-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		2
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		5
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		9
-680	22-66610	. HARNESS ASSEMBLY, FRONT SPAR HORIZONTAL STABILIZER LH	1		1
	22-66611	. HARNESS ASSEMBLY, FRONT SPAR HORIZONTAL STABILIZER RH	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		9
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		3
	320559	. . CONDUCTOR, LH CONVAIR 98-34001-003 -V00779-	1		10
	320559	. . CONDUCTOR, RH CONVAIR 98-34001-003 -V00779-	1		9

SECTION V


Chapter 94
ELECTRICAL HARNESSES

MWW ELECTRICAL HARNESSES

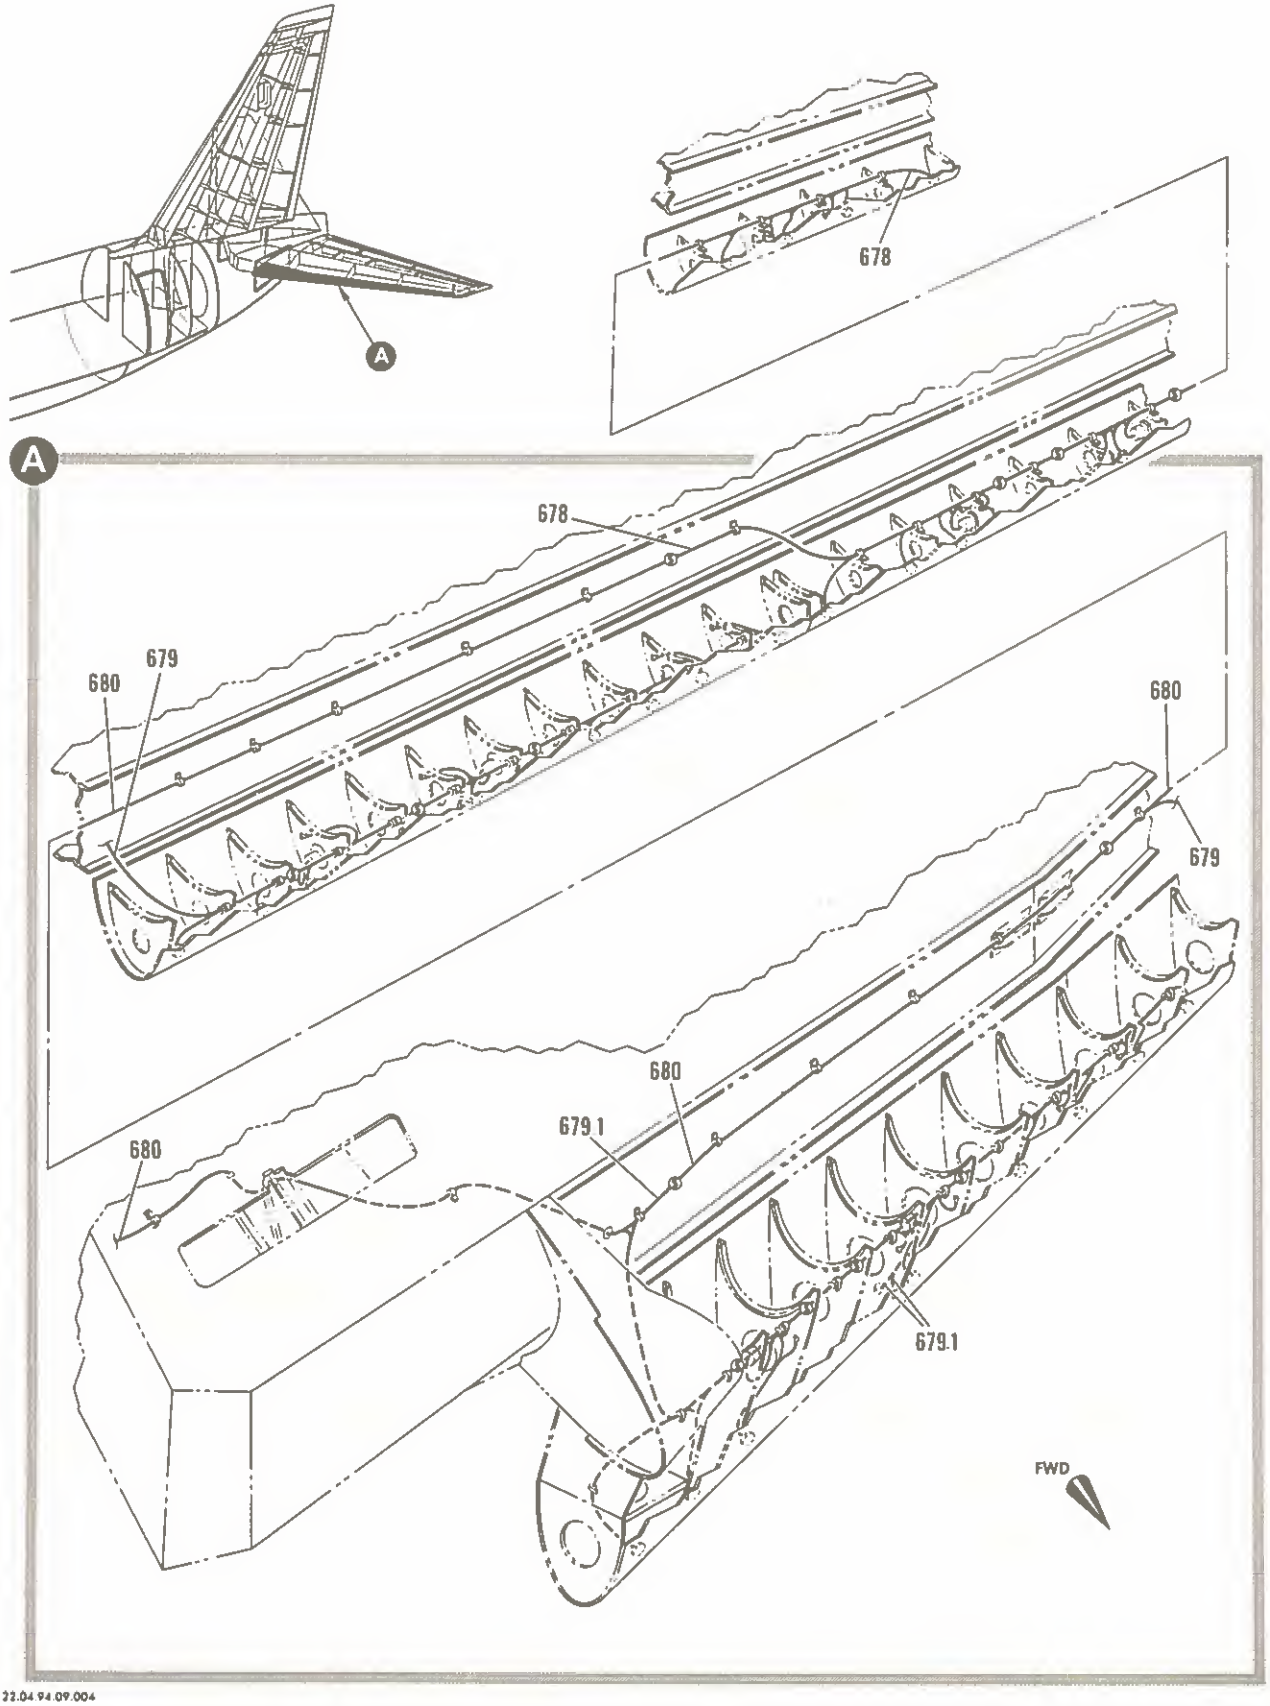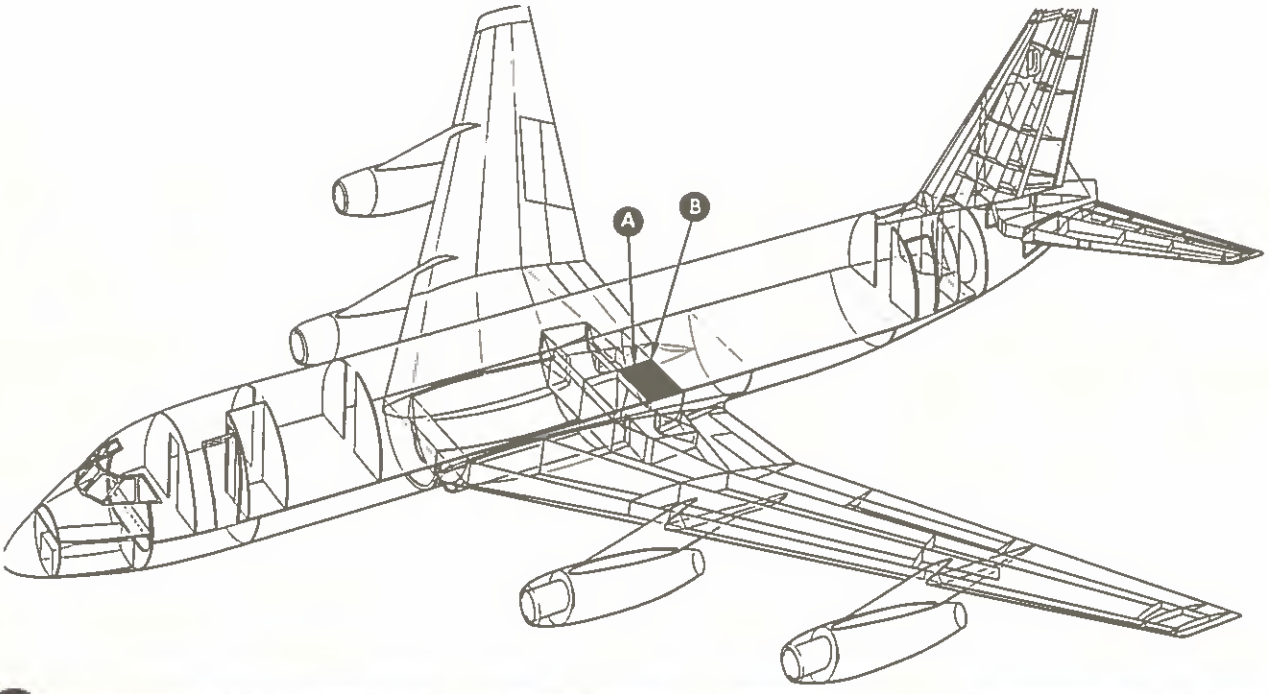

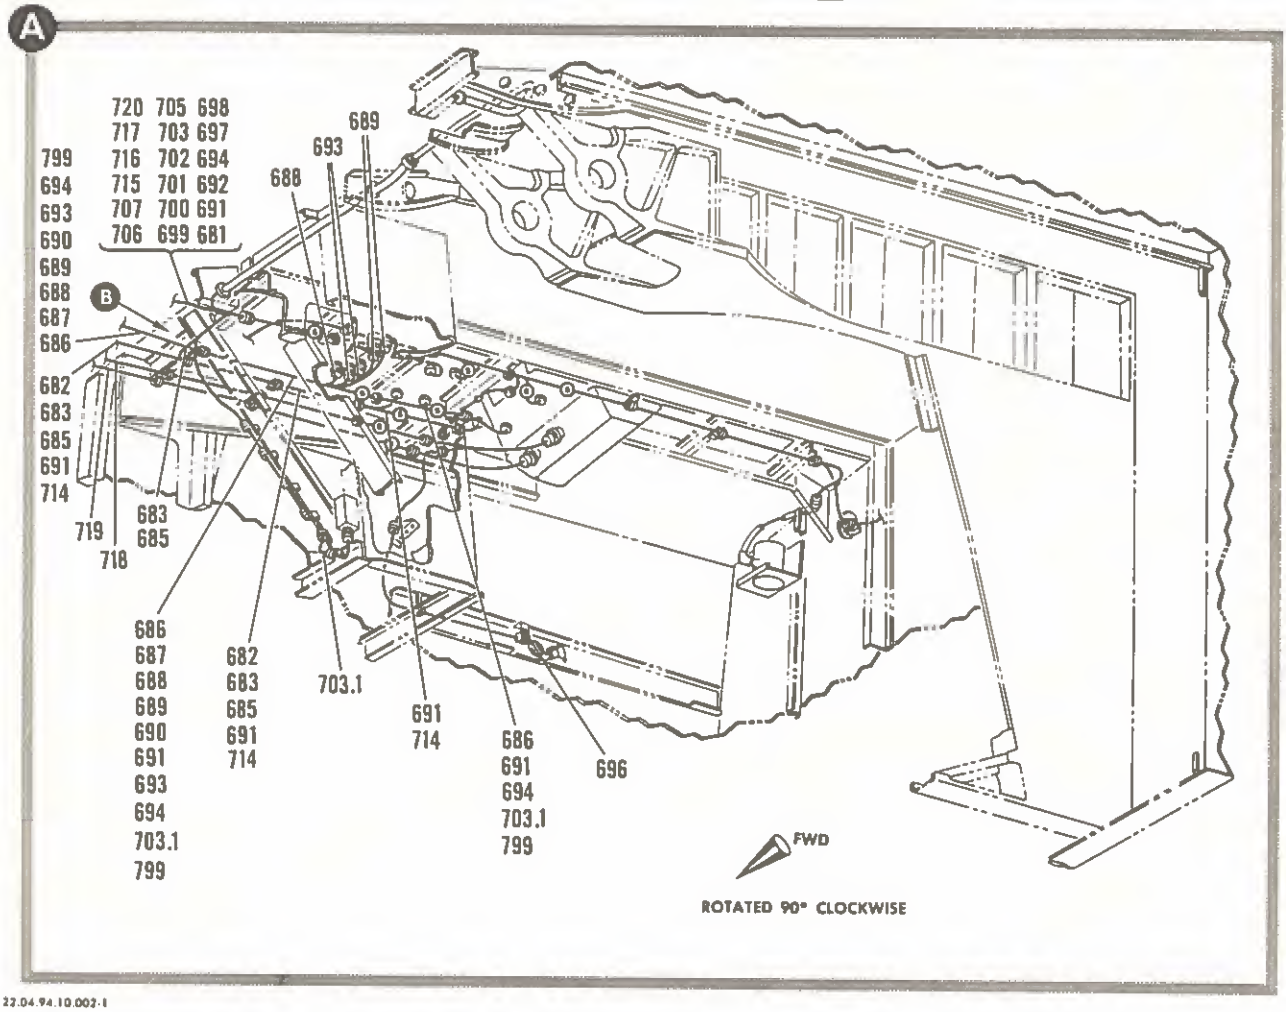

22.04.94.10.002-1

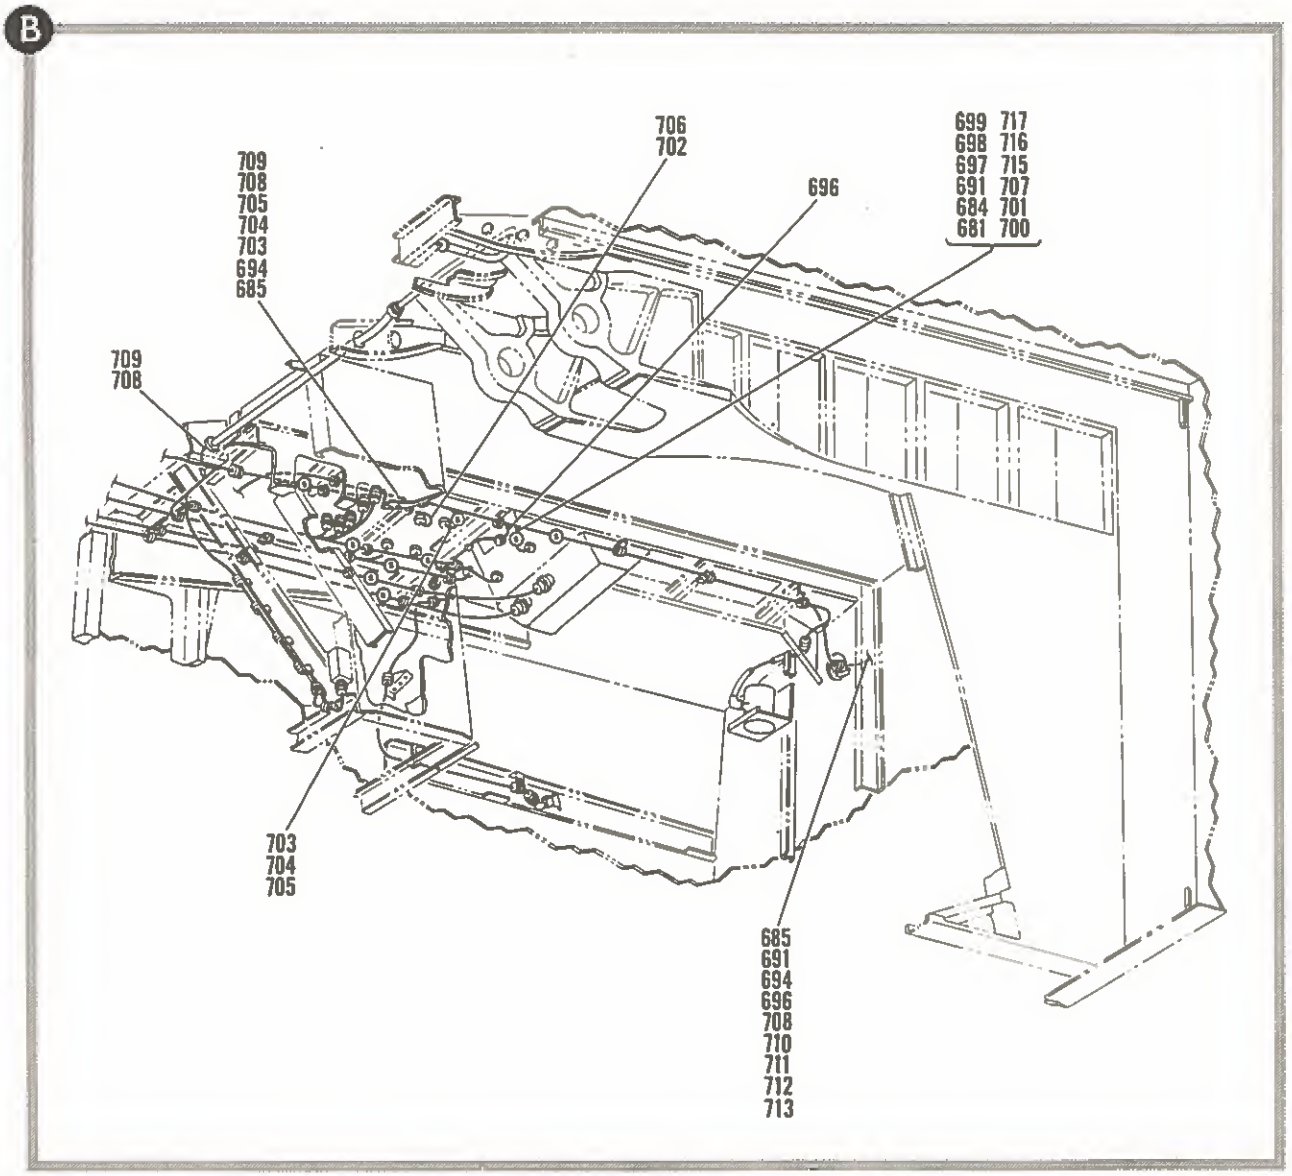


22.04.94 10.002-2


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		MWW FWD LH ELECTRICAL HARNESSES SEE 22-64001			
-681	22-64531-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL E TO FUEL TANK PANEL C	1		1
-682	22-64532	. HARNESS ASSEMBLY, FEED THRU PANEL K TO ENGINE 2 REAR SPAR PERMANENT SPLICE	1		1
-683	22-64581	. HARNESS ASSEMBLY, FEED THRU PANEL K TO ENGINE 2 REAR SPAR PERMANENT SPLICE	1		1
-684	22-64635	. HARNESS ASSEMBLY, FEED THRU PANEL E TO OUTBD BOOST PRESSURE SWITCH 2	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		4
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-685	22-64578	. HARNESS ASSEMBLY, FEED THRU PANEL R TO ENGINE 3 REAR SPAR PERMANENT SPLICE	1		1
-686	22-64541	. HARNESS ASSEMBLY, FEED THRU PANEL W TO LH LANDING LIGHT PERMANENT SPLICE	1		1
-687	22-64549	. HARNESS ASSEMBLY, FEED THRU PANEL J TO ENGINE 1 REAR SPAR PERMANENT SPLICE	1		1
-688	22-64575	. HARNESS ASSEMBLY, ENGINE 2 THERMOCOUPLE WING FUSELAGE DISCONNECT TO PYLON SPLICE	1		1
	AN3057-6B	. . ADAPTER, CONVAIR 90-04200-015	1		1
	CS3106C14S57P	. . CONNECTOR, CONVAIR 92-40333-002 -V06840-	1		1
	AN5548-1	. . TERMINAL, CONVAIR 98-90819-001	1		2
	AN5548-2	. . TERMINAL, CONVAIR 98-90819-002	1		2
-689	22-64577	. HARNESS ASSEMBLY, ENGINE 1 OIL QUANTITY WING FUSELAGE DISCONNECT TO PYLON SPLICE	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		4
	1-873-1	. . ADAPTER, CONVAIR 90-04322-003 -V95712-	1		1
-690	22-64579	. HARNESS ASSEMBLY, FEED THRU PANEL J TO ENGINE 1 REAR SPAR PERMANENT SPLICE	1		1
-691	22-64601	. HARNESS ASSEMBLY, LANDING GEAR DISCONNECT A TO FEED THRU PANELS LH	1		1
	71-179866-32S	. . CONNECTOR, CONVAIR 92-50288-029 -V06840-	1		1
	23-1000	. . ELBOW, CONVAIR 93-39501-006 -V08484-	1		1
	590001-147-0242	. . CONDUIT, CONVAIR 92-30000-028 -V00624-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	AN3066-16	. . NUT	1		1
-692	22-64629	. HARNESS ASSEMBLY, FEED THRU PANEL E TO OUTBD BOOST PRESSURE SWITCH 1	1		1
	EX06-16S1S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -694	22-64621	. HARNESS ASSEMBLY, SPOILER POSITION TRANSMITTER PERMANENT SPLICE TO PANEL X	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-695	22-64621-3	. HARNESS ASSEMBLY, PERMANENT SPLICE TO AILERON AND SPOILER DISCONNECT INBD	1		1
	PT00E10-6S	. . CONNECTOR, CONVAIR 92-50288-011 -V06840-	1		1
-696	22-64615	. HARNESS ASSEMBLY, LANDING GEAR DOOR FWD UP AND LOCK SWITCH TO PERMANENT SPLICE LH	1		1
	590001-29-0310	. . CONDUIT, CONVAIR 92-30000-013 -V00624-	1		1
	1EN74-6	. . SWITCH, LIMIT MLG DOOR MFR TO SPEC CONT 22-06479-3 -V74059-	1		1
	AN3066-6	. . NUT	1		1
	3416-15-1	. . ELBOW, CONVAIR 93-39501-003 -V08484-	1		1
-697	22-64527-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL E TO FUEL TANK PANEL B	1		1
-698	22-64528-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL E TO FUEL TANK PANEL D	1		1
-699	22-64526-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL E TO FUEL TANK PANEL L	1		1
-700	22-64529-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL E TO FUEL TANK PANEL M	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
-701	22-64530-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL E TO FUEL TANK PANEL A	1		1
-702	22-64533	. HARNESS ASSEMBLY, FEED THRU PANEL H TO ENGINE 2 REAR SPAR PERMANENT SPLICE	1		1
-703	22-64550	. HARNESS ASSEMBLY, FEED THRU PANEL G TO ENGINE 1 REAR SPAR PERMANENT SPLICE	1		1
-703.1	22-64583-1	. HARNESS ASSEMBLY, FEED THRU PANEL W TO WHEEL WELL INTERCOM LH	1		1


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -705	22-64551-1	. HARNESS ASSEMBLY, FEED THRU PANEL G TO ENGINE 2 OUTBD PYLON	1		1
-706	22-64534-1	. HARNESS ASSEMBLY, FEED THRU PANEL H TO ENGINE 2 INBD PYLON PERMANENT SPLICE	1		1
-707	22-64573-1	. HARNESS ASSEMBLY, FEED THRU PANEL E TO LH WING REFUEL AND DEFUEL VALVES	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		2
-708	22-64597-1	. HARNESS ASSEMBLY, LH LANDING GEAR PERMANENT SPLICE BOX TO FEED THRU PANELS	1		1
-709	22-64599-1	. HARNESS ASSEMBLY, LH LANDING GEAR PERMANENT SPLICE BOX TO FEED THRU PANELS	A		1
	22-64599	. HARNESS ASSEMBLY, LH LANDING GEAR PERMANENT SPLICE BOX TO FEED THRU PANELS	2	8	1
-710	22-64603	. HARNESS ASSEMBLY, LH WHEEL WELL PERMANENT SPLICE TO RH WHEEL WELL PERMANENT SPLICE	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		5
-711	22-64622-1	. HARNESS ASSEMBLY, PANEL M TO AILERON AND SPOILER DISCONNECT INBD	1		1
	PT00E10-6S	. . CONNECTOR, OUTBD CONVAIR 92-50288-011 -V77820-	1		1
	EX06-16S1S	. . CONNECTOR, INBD CONVAIR 92-40332-007 -V71468-	1		1
	225-0017-000	. . PLUG, INBD CONVAIR 96-91200-007 -V71468-	1		3
	024049-0000	. . CONTACT, INBD CONVAIR 92-63901-011 -V71468-	1		3
	024048-0000	. . CONTACT, INBD CONVAIR 96-63901-012 -V71468-	1		4
-712	22-64622-3	. HARNESS ASSEMBLY, GROUND TO AILERON AND SPOILER DISCONNECT OUTBD	1		1
	PT00E10-6S	. . CONNECTOR, CONVAIR 92-50288-011 -V77820-	1		1
-713	22-64544	. HARNESS ASSEMBLY, FEED THRU PANEL X TO LH REAR SPAR PERMANENT SPLICE	1		1
-714	22-64569	. HARNESS ASSEMBLY, FEED THRU PANEL F TO LH FLAP ASSYMMETRY CONTROL UNIT	1		1
	EX06-16S1S	. . CONNECTOR, CONVAIR 92-40332-007 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	024049-0000	. . CONTACT, CONVAIR 96-63901-011 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 96-63901-012 -V71468-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-715	22-64547	. HARNESS ASSEMBLY, FEED THRU PANEL E TO 1 INBD BOOST PRESSURE SWITCH	1		1
-716	22-64631	. HARNESS ASSEMBLY, FEED THRU PANEL E TO 2 INBD BOOST PRESSURE SWITCH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 92-91200-007 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 96-63901-011 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 96-63901-012 -V71468-	1		2
-717	22-64571	. HARNESS ASSEMBLY, FEED THRU PANEL E TO 2 JETTISON HYDRAULIC PUMP SHUT OFF VALVE	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V77820-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-718	22-64511	. HARNESS ASSEMBLY, GENERATOR 1 FEED THRU TO STATIC EXCITER	1		1
-719	22-64513	. HARNESS ASSEMBLY, GENERATOR 2 FEED THRU TO STATIC EXCITER	1		1
	YAEV6CL4	. . TERMINAL, CONVAIR 98-90806-007 -V09922-	1		3


A AIRPLANES 1, 9 AND ON

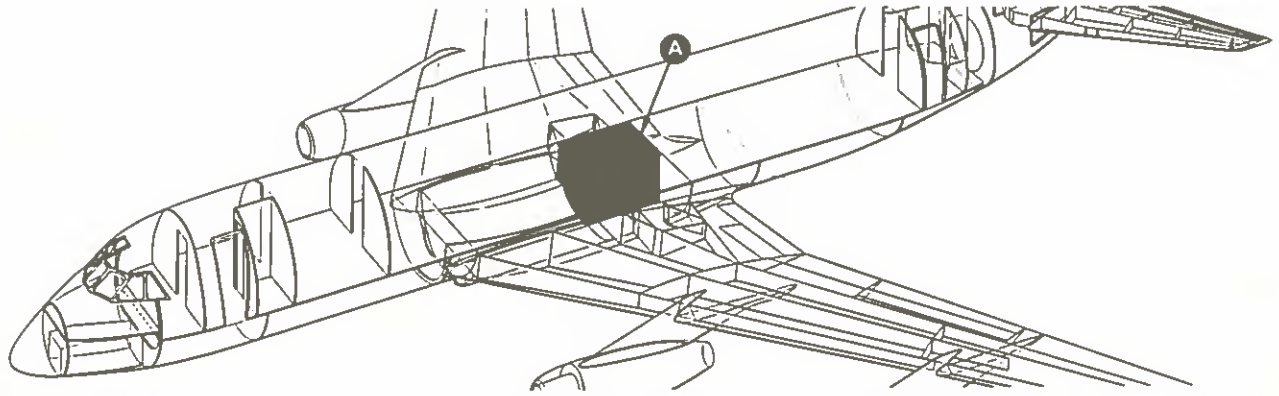

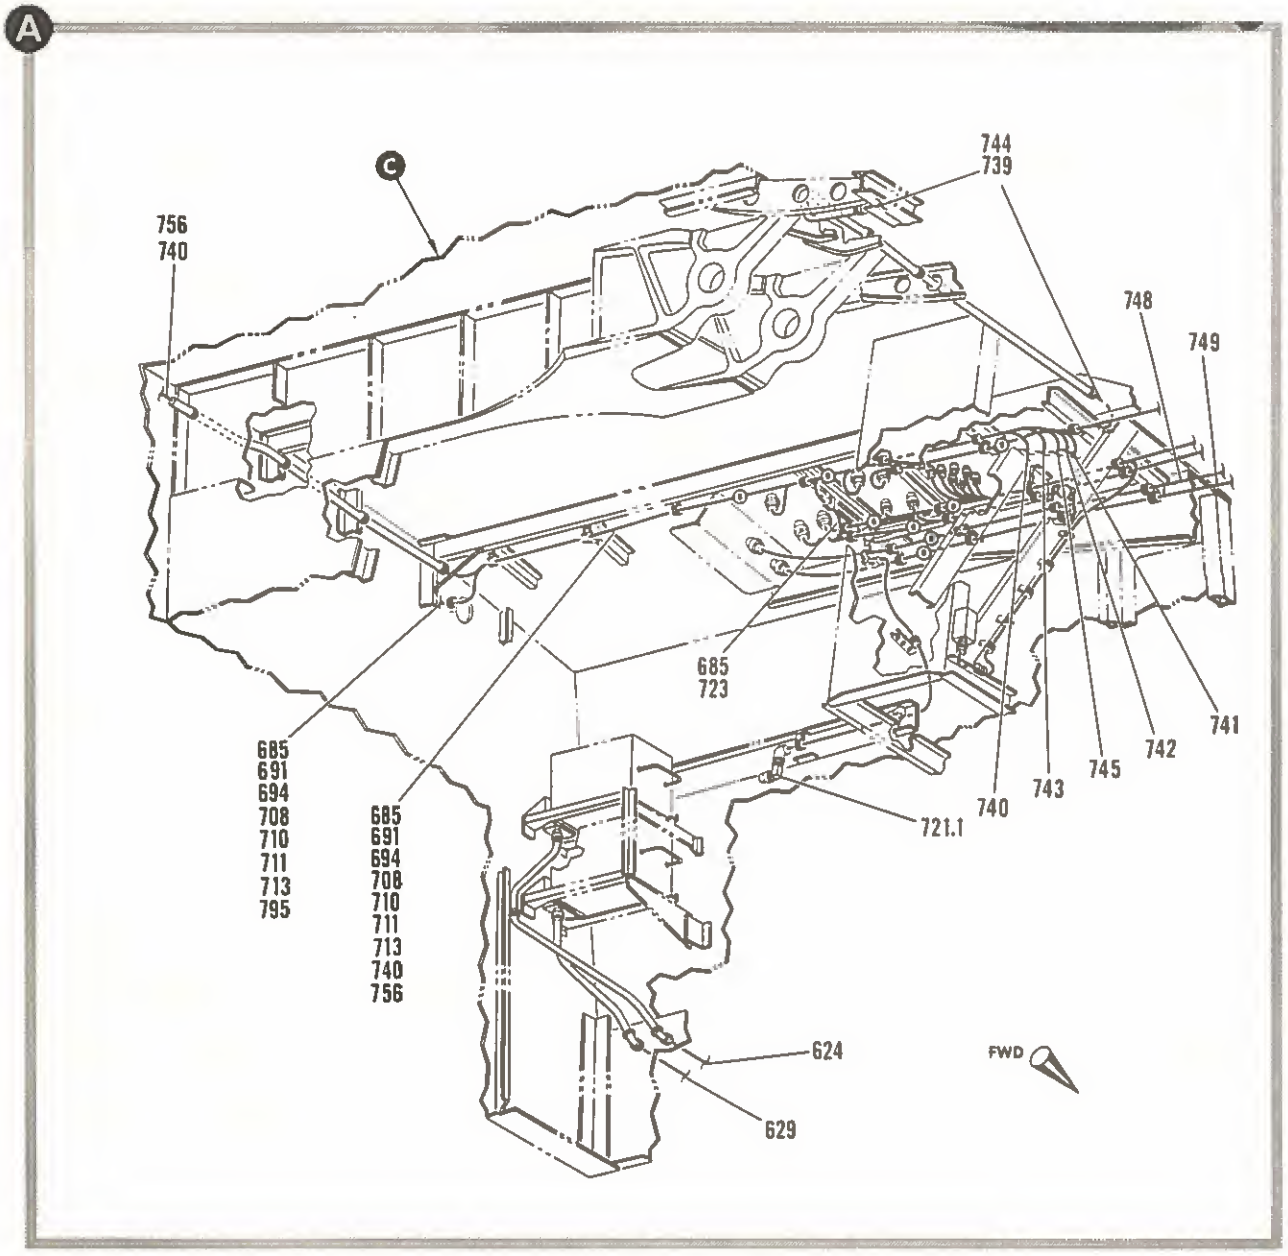

22.04.94.10.003-1

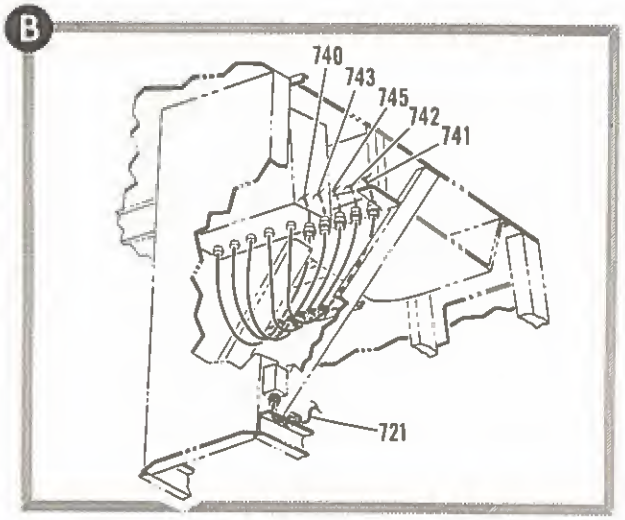

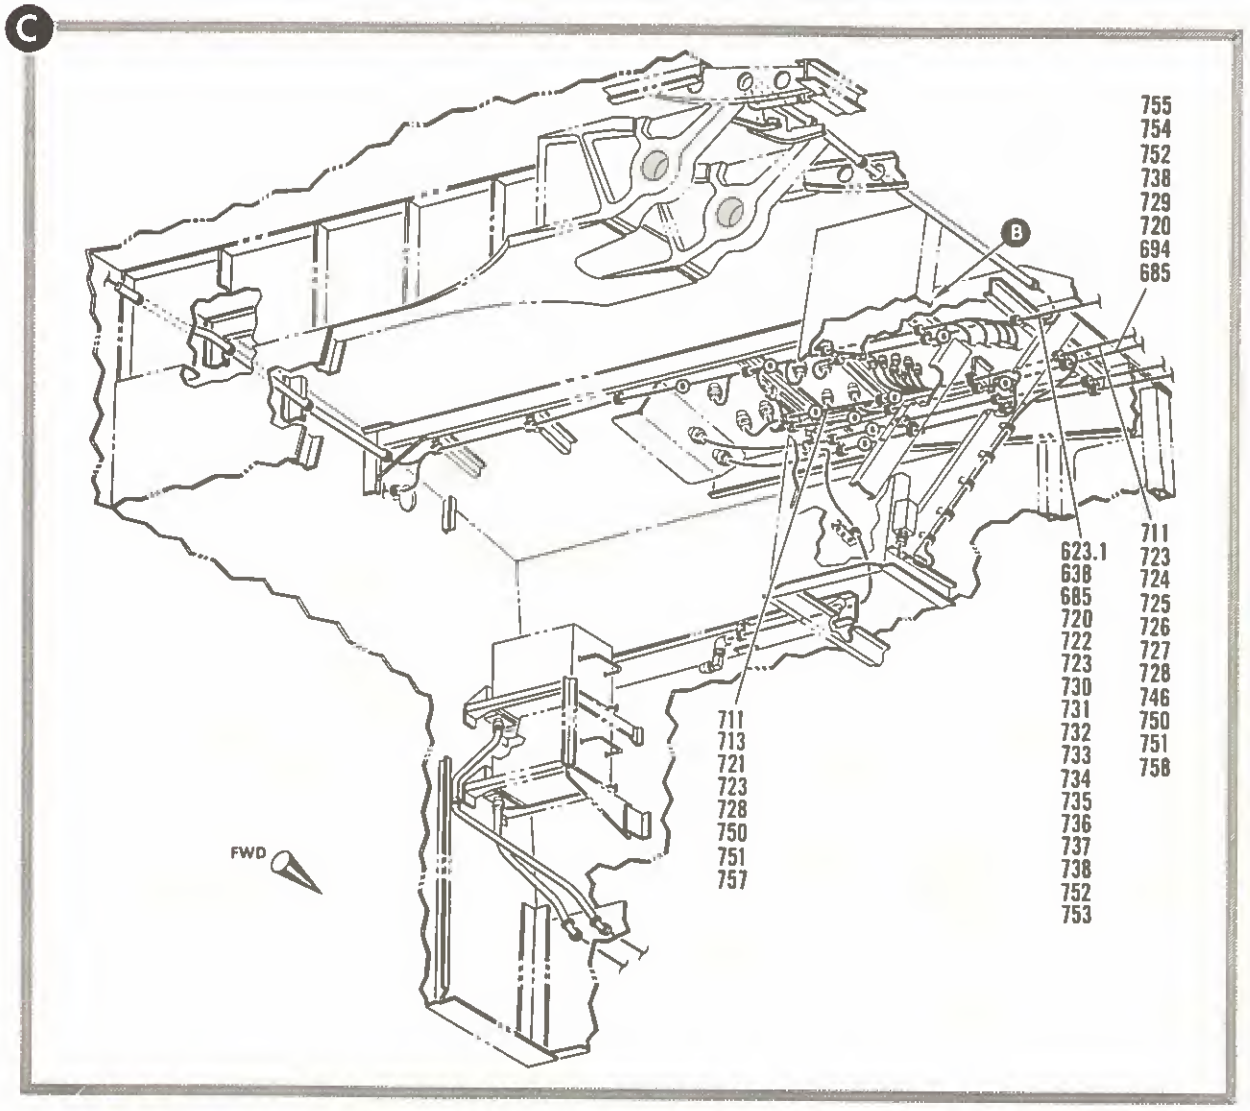

22.04 94.10.003-2


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		MWW FWD RH ELECTRICAL HARNESSES SEE 22-64001			
-720	22-64535	. HARNESS ASSEMBLY, FEED THRU PANEL R TO ENGINE 3 REAR SPAR PERMANENT SPLICE	1		1
-721	22-64582-1	. HARNESS ASSEMBLY, FEED THRU PANEL X TO WHEEL WELL INTERCOM RH	1		1
	WK6-21C1-2	. . CONNECTOR, CONVAIR 92-40117-001 -V71468-	1		1
-721.1	22-64615	. HARNESS ASSEMBLY, LANDING GEAR DOOR FWD UP AND LOCK SWITCH TO PERMANENT SPLICE RH	1		1
	AN3066-6	. . NUT	1		1
	3416-15-1	. . ELBOW, CONVAIR 93-39501-003 -V08484-	1		1
	1EN74-6	. . SWITCH, LIMIT NLG DOOR MFR TO SPEC CONT 22-06479-3 -V74059-	1		1
	590001-29-0310	. . CONDUIT, CONVAIR 92-30000-013 -V00624-	1		1
-722	22-64521-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL L TO FUEL TANK PANEL G	1		1
-723	22-64600	. HARNESS ASSEMBLY, RH LANDING GEAR DISCONNECT A TO FEED THRU PANELS	1		1
	71-179866-32S	. . CONNECTOR, CONVAIR 92-50288-029 -V77820-	1		1
	590001-147-0242	. . CONDUIT, CONVAIR 92-30000-028 -V00624-	1		1
	23-1000	. . ELBOW, CONVAIR 93-39501-006 -V08484-	1		1
	AN3066-16	. . NUT	1		1
-724	22-64503	. HARNESS ASSEMBLY, COPILOT FLUX GATE DISCONNECT TO BOX SECTION PERMANENT SPLICE	1		1
	EX06-14S6S	. . CONNECTOR, CONVAIR 92-40332-020 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		6
-725	22-64574	. HARNESS ASSEMBLY, ENGINE 3 AND 4 THERMOCOUPLE WING FUSELAGE DISCONNECT TO PYLON SPLICE	1		1
	AN3057-6B	. . ADAPTER, CONVAIR 90-04200-015	1		1
	CS3106C14S7P	. . CONNECTOR, CONVAIR 92-40333-002 -V77820-	1		1
	AN5548-1	. . TERMINAL, CONVAIR 98-90819-001	1		2
	AN5548-2	. . TERMINAL, CONVAIR 98-90819-002	1		2
-726	22-64576	. HARNESS ASSEMBLY, ENGINE 3 AND 4 OIL QUANTITY WING FUSELAGE DISCONNECT TO PYLON SPLICE	1		1
	1-873-1	. . ADAPTER, CONVAIR 90-04322-003 -V95712-	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		4


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -728	22-64542	. HARNESS ASSEMBLY, FEED THRU PANEL X TO RH LANDING LIGHT PERMANENT SPLICE	1		1
-729	22-64580	. HARNESS ASSEMBLY, FEED THRU PANEL Q TO ENGINE 4 REAR SPAR PERMANENT SPLICE	1		1
-730	22-64520-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL L TO FUEL TANK PANEL F	1		1
-731	22-64522-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL L TO FUEL TANK PANEL H	1		1
-732	22-64523-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL L TO FUEL TANK PANEL S	1		1
-733	22-64524-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL L TO FUEL TANK PANEL T	1		1
	EX06-14S7S	. . CONNECTOR, USED ON 22-64523-1 AND 22-64524-1 CONVAIR 92-40332-006 -V71468	1		1
	024048-0000	. . CONTACT, USED ON 22-64523-1 AND 22-64524-1 CONVAIR 92-63901-012 -V71468	1		2
	024049-0000	. . CONTACT, USED ON 22-64523-1 AND 22-64524-1 CONVAIR 92-63901-011 -V71468	1		1
	225-0017-000	. . PLUG, USED ON 22-64523-1 AND 22-64524-1 CONVAIR 96-91200-007 -V71468	1		1
	36153	. . TERMINAL, USED ON 22-64523-1 CONVAIR 98-90805-003 -V00779-	1		1
-734	22-64525-1	. HARNESS ASSEMBLY, REAR SPAR FEED THRU PANEL L TO FUEL TANK PANEL J	1		1
-735	22-64537-1	. HARNESS ASSEMBLY, FEED THRU PANEL P TO ENGINE 3 INBD PYLON	1		1
-736	22-64539	. HARNESS ASSEMBLY, FEED THRU PANEL N TO ENGINE 4 REAR SPAR PERMANENT SPLICE	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-737	22-64540-1	. HARNESS ASSEMBLY, FEED THRU PANEL N TO ENGINE 4 OUTBD PYLON	1		1
-738	22-64548	. HARNESS ASSEMBLY, FEED THRU PANEL M TO INBD BOOST PRESSURE SWITCH 4	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-739	22-64596-1	. HARNESS ASSEMBLY, RH LANDING GEAR PERMANENT SPLICE BOX TO FEED THRU PANELS	1		1
-740	22-64555	. HARNESS ASSEMBLY, LH ANTISKID CONTROL BOX TO PERMANENT SPLICE	1		1
	71-184779-14-5P	. . CONNECTOR, CONVAIR 92-40325-069 -V06840-	1		1
	590001-33-0234	. . CONDUIT, CONVAIR 92-30000-017 -V00624-	1		1
-741	22-64564	. HARNESS ASSEMBLY, RH ANTISKID CONTROL BOX TO PERMANENT SPLICE	1		1
	71-184779-14-	. . CONNECTOR, 5PY CONVAIR 92-40325-070 -V06840-	1		1
	590001-33-0233	. . CONDUIT, CONVAIR 92-30000-016 -V00624-	1		1
-742	22-64592	. HARNESS ASSEMBLY, RH ANTISKID CONTROL BOX TO PERMANENT SPLICE	1		1
	71-184779-14-	. . CONNECTOR, 15P CONVAIR 92-40325-071 -V06840-	1		1
	590001-133-0234	. . CONDUIT, CONVAIR 92-30000-021 -V00624-	1		1
-743	22-64593	. HARNESS ASSEMBLY, LH ANTISKID CONTROL BOX TO PERMANENT SPLICE	1		1
	590001-133-0230	. . CONDUIT, CONVAIR 92-30000-020 -V00624-	1		1
	71-184779-14-	. . CONNECTOR, 15PX CONVAIR 92-40325-072 -V06840-	1		1
-744	22-64598	. HARNESS ASSEMBLY, RH LANDING GEAR PERMANENT SPLICE BOX TO FEED THRU PANELS	1		1
-745	22-64612	. HARNESS ASSEMBLY, MLG ANTISKID CONTROL BOX TO FEED THRU PANEL M	1		1
	590001-33-0240	. . CONDUIT, CONVAIR 92-30000-018 -V00624-	1		1
	71-184779-14-5S	. . CONNECTOR, CONVAIR 92-40325-068 -V06840-	1		1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -746	22-64502	. HARNESS ASSEMBLY, PILOT FLUX GATE REAR SPAR DISCONNECT TO BOX SECTION PERMANENT SPLICE	1		1
	EX06-14S6S	. . CONNECTOR, CONVAIR 92-40332-020 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		6
-748	22-64512	. HARNESS ASSEMBLY, GENERATOR 4 FEED THRU TO STATIC EXCITER	1		1
-749	22-64514	. HARNESS ASSEMBLY, GENERATOR 3 FEED THRU TO STATIC EXCITER	1		1
	YAEV6CL4	. . TERMINAL, CONVAIR 98-90806-007 -V09922-	1		3
-750	22-64543	. HARNESS ASSEMBLY, FEED THRU PANEL X TO REAR SPAR PERMANENT SPLICE RH	1		1
-751	22-64552	. HARNESS ASSEMBLY, FEED THRU PANEL X TO LINE CROSS FEED VALVES RH	1		1
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-007 -V71468-	1		4
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		20
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		8
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		8
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
-752	22-64554	. HARNESS ASSEMBLY, FEED THRU PANEL M TO EMERGENCY CROSS FEED VALVE RH	1		1
	EX06-16S1S	. . CONNECTOR, CONVAIR 92-40332-007 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		5
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-753	22-64570	. HARNESS ASSEMBLY, FEED THRU PANEL L TO JETTISON 3 HYDRAULIC SHUT OFF VALVE	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -754	22-64630	. HARNESS ASSEMBLY, FEED THRU PANEL L TO 4 OUTBD BOOST PRESSURE SWITCH	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		2
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
-755	22-64636	. HARNESS ASSEMBLY, FEED THRU PANEL L TO 3 OUTBD BOOST PRESSURE SWITCH	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		2
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		4
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		2
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-756	22-64606-1	. HARNESS ASSEMBLY, RH WHEEL WELL SHROUD PERMANENT SPLICE TO JUNCTION BOX	A		1
	22-64606	. HARNESS ASSEMBLY, RH WHEEL WELL SHROUD PERMANENT SPLICE TO JUNCTION BOX	8	8	1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		10
-757	22-64602	. HARNESS ASSEMBLY, LANDING GEAR DOOR SWITCH PERMANENT SPLICE TO FEED THRU FWD RH	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		2
-758	22-64538-1	. HARNESS ASSEMBLY, FEED THRU PANEL Q TO ENGINE 4 REAR SPAR PERMANENT SPLICE	1		1


A AIRPLANES 1, 9 AND ON

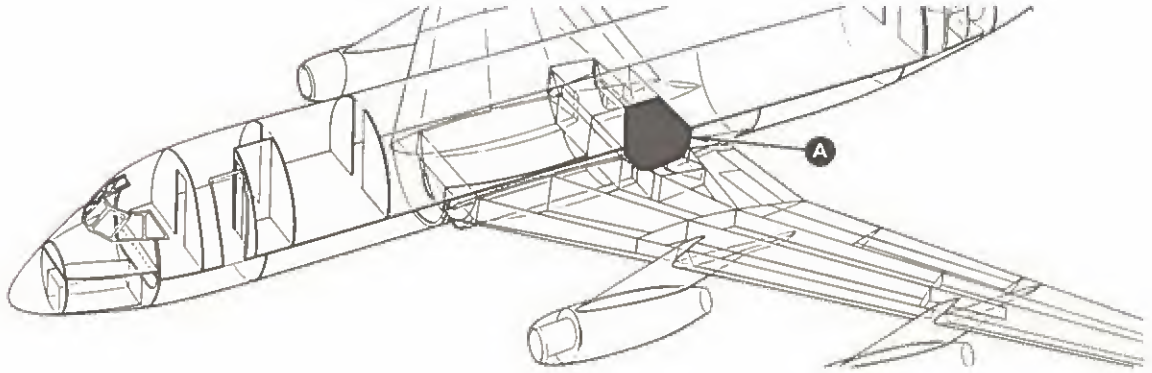


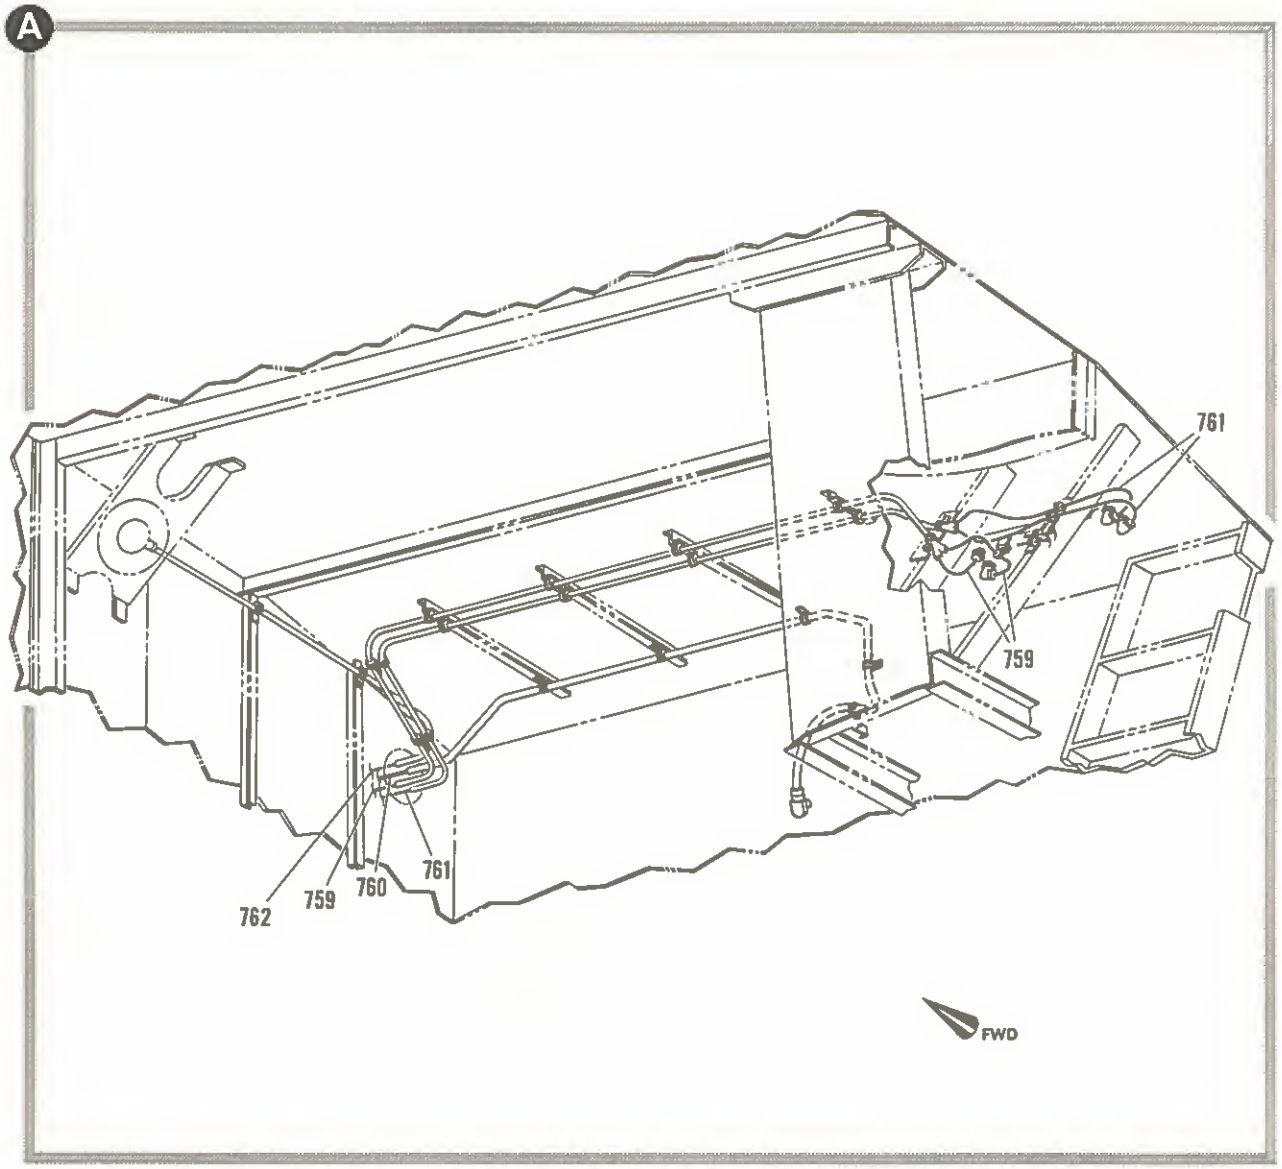

22.04.94.10.004


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		MWW AFT LH ELECTRICAL HARNESSES SEE 22-64001			
-759	22-64595	. HARNESS ASSEMBLY, AFT CONTROL VALVES TO MWW JUNCTION BOX PERMANENT SPLICE INBD LH	1		1
	71-184776-8-4S	. . CONNECTOR, CONVAIR 92-40325-065 -V06840-	1		1
	71-184776-8-4SW	. . CONNECTOR, CONVAIR 92-40325-066 -V06840-	1		1
	590001-11-0100	. . CONDUIT, CONVAIR 92-30000-005 -V00624-	1		1
	590001-11-0090	. . CONDUIT, CONVAIR 92-30000-004 -V00624-	1		1
	3416-14-1	. . ELBOW, CONVAIR 93-39501-002 -V08484-	1		1
	AN3066-4	. . NUT	1		1
	148-15-1	. . CONDUIT, CONVAIR 99-75000-003 -V08484-	1		1
-760	22-64616	. HARNESS ASSEMBLY, LH LANDING GEAR DOOR AFT UP AND LOCK SWITCH TO WHEEL WELL JUNCTION BOX PERMANENT SPLICE	1		1
	1EN74-6	. . SWITCH, MFR TO SPEC CONT 22-06479-3 -V74059-	1		1
	590001-31-0120	. . CONDUIT, CONVAIR 92-30000-034 -V00624-	1		1
-761	22-64611	. HARNESS ASSEMBLY, AFT ANTISKID CONTROL VALVES TO MWW JUNCTION BOX PERMANENT SPLICE OUTBD LH	1		1
	71-184776-8-4S	. . CONNECTOR, CONVAIR 92-40325-065 -V06840-	1		1
	71-184776-8-4SW	. . CONNECTOR, CONVAIR 92-40325-066 -V06840-	1		1
	3416-14-1	. . ELBOW, CONVAIR 93-39501-002 -V08484-	1		2
	590001-11-0176	. . CONDUIT, CONVAIR 92-30000-011 -V00624-	1		1
	590001-11-0154	. . CONDUIT, CONVAIR 92-30000-009 -V00624-	1		1
	148-15-1	. . CONDUIT, CONVAIR 99-75000-003 -V08484-	1		1
-762	22-64613	. HARNESS ASSEMBLY, LH WHEEL WELL LIGHT TO WHEEL WELL JUNCTION BOX SPLICE	1		1
	590001-7-0274	. . CONDUIT, CONVAIR 92-30000-030 -V00624-	1		1

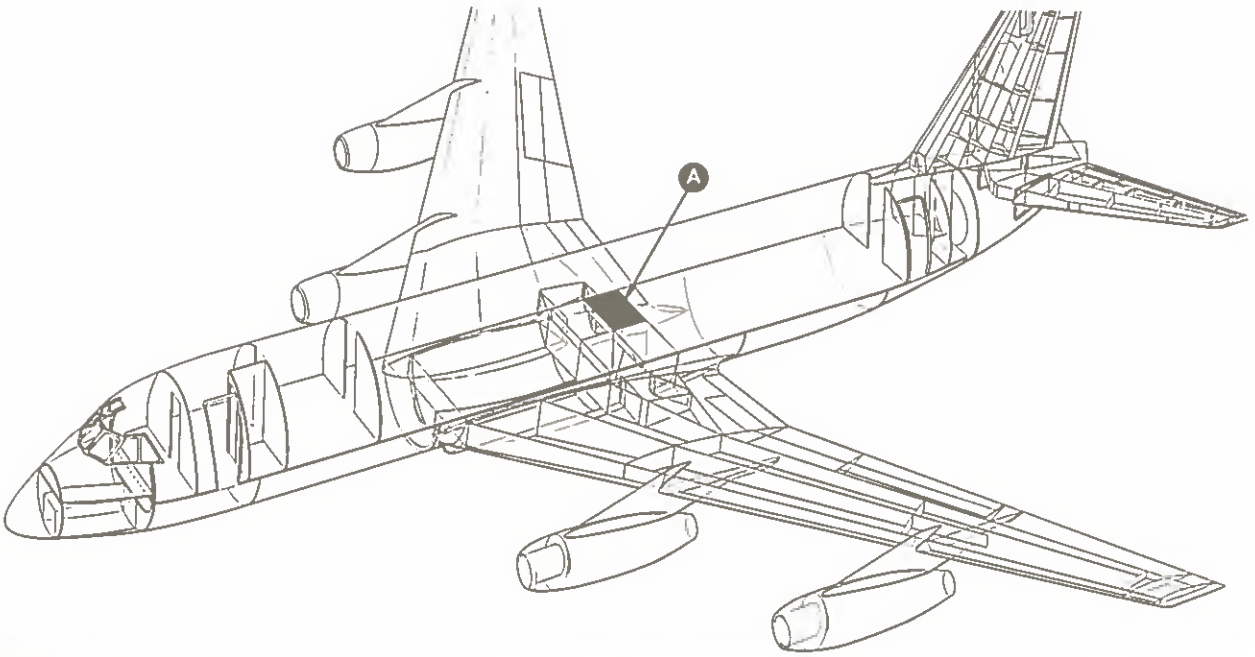

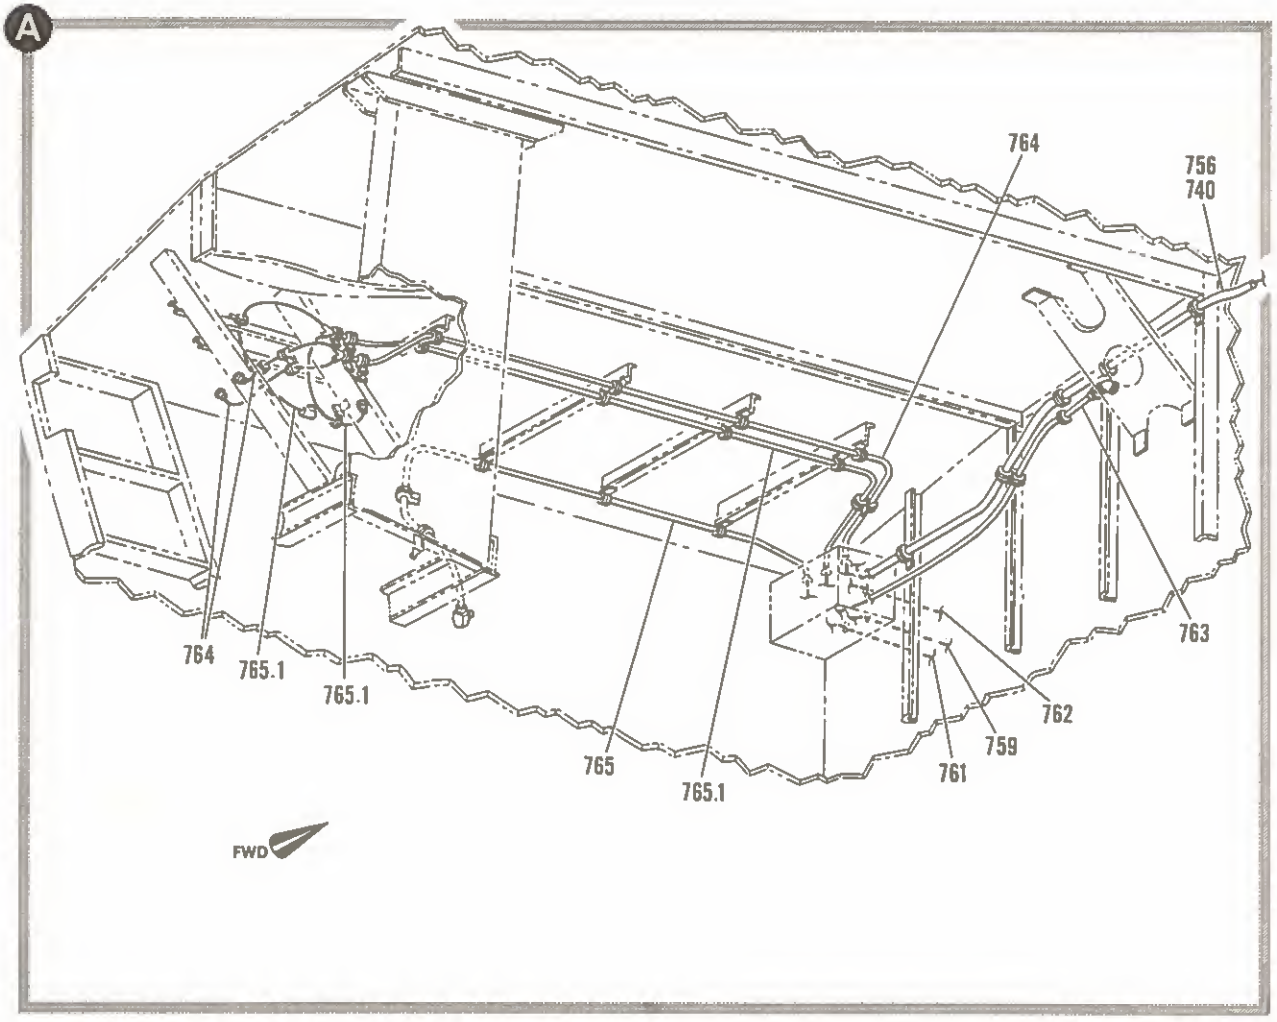

22.04.94.10.005

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4		MWW AFT RH ELECTRICAL HARNESSES SEE 22-64001			
-763	22-64614	. HARNESS ASSEMBLY, RH WHEEL WELL LIGHT TO WHEEL WELL JUNCTION BOX SPLICE	1		1
	590001-7-0234	. . CONDUIT, CONVAIR 92-30000-001 -V00624-	1		1
-764	22-64594	. HARNESS ASSEMBLY, AFT CONTROL VALVES TO MWW JUNCTION BOX PERMANENT SPLICE OUTBD RH	1		1
	71-184776-8-4S	. . CONNECTOR, CONVAIR 92-40325-065 -V06840-	1		1
	71-184776-8-4SW	. . CONNECTOR, CONVAIR 92-40325-066 -V06840-	1		1
	590001-11-0117	. . CONDUIT, CONVAIR 92-30000-007 -V00624-	1		1
	590001-11-0114	. . CONDUIT, CONVAIR 92-30000-006 -V00624-	1		1
	148-15-1	. . CONDUIT, CONVAIR 99-75000-003 -V08484-	1		1
-765	22-64616	. HARNESS ASSEMBLY, RH LANDING GEAR DOOR AFT UP AND LOCK SWITCH TO WHEEL WELL JUNCTION BOX PERMANENT SPLICE	1		1
	1EN74-6	. . SWITCH, MFR TO SPEC CONT 22-06479-3 -V74059-	1		1
	590001-31-0120	. . CONDUIT, CONVAIR 92-30000-034 -V00624-	1		1
-765.1	22-64508	. HARNESS ASSEMBLY, AFT ANTISKID CONTROL VALVES TO MWW JUNCTION BOX PERMANENT SPLICE INBD RH	1		1
	590001-11-0162	. . CONDUIT, CONVAIR 92-30000-010 -V00624-	1		1
	590001-11-0151	. . CONDUIT, CONVAIR 92-30000-008 -V00624-	1		1
	AN3060-4	. . ELBOW, CONVAIR 93-39500-002	1		1
	71-184776-4S	. . CONNECTOR, CONVAIR 92-40335-065 -V77820-	1		1
	71-184776-4SW	. . CONNECTOR, CONVAIR 92-40335-066 -V77820-	1		1
	148-15-1	. . CONDUIT, CONVAIR 99-75000-003 -V08484-	1		1

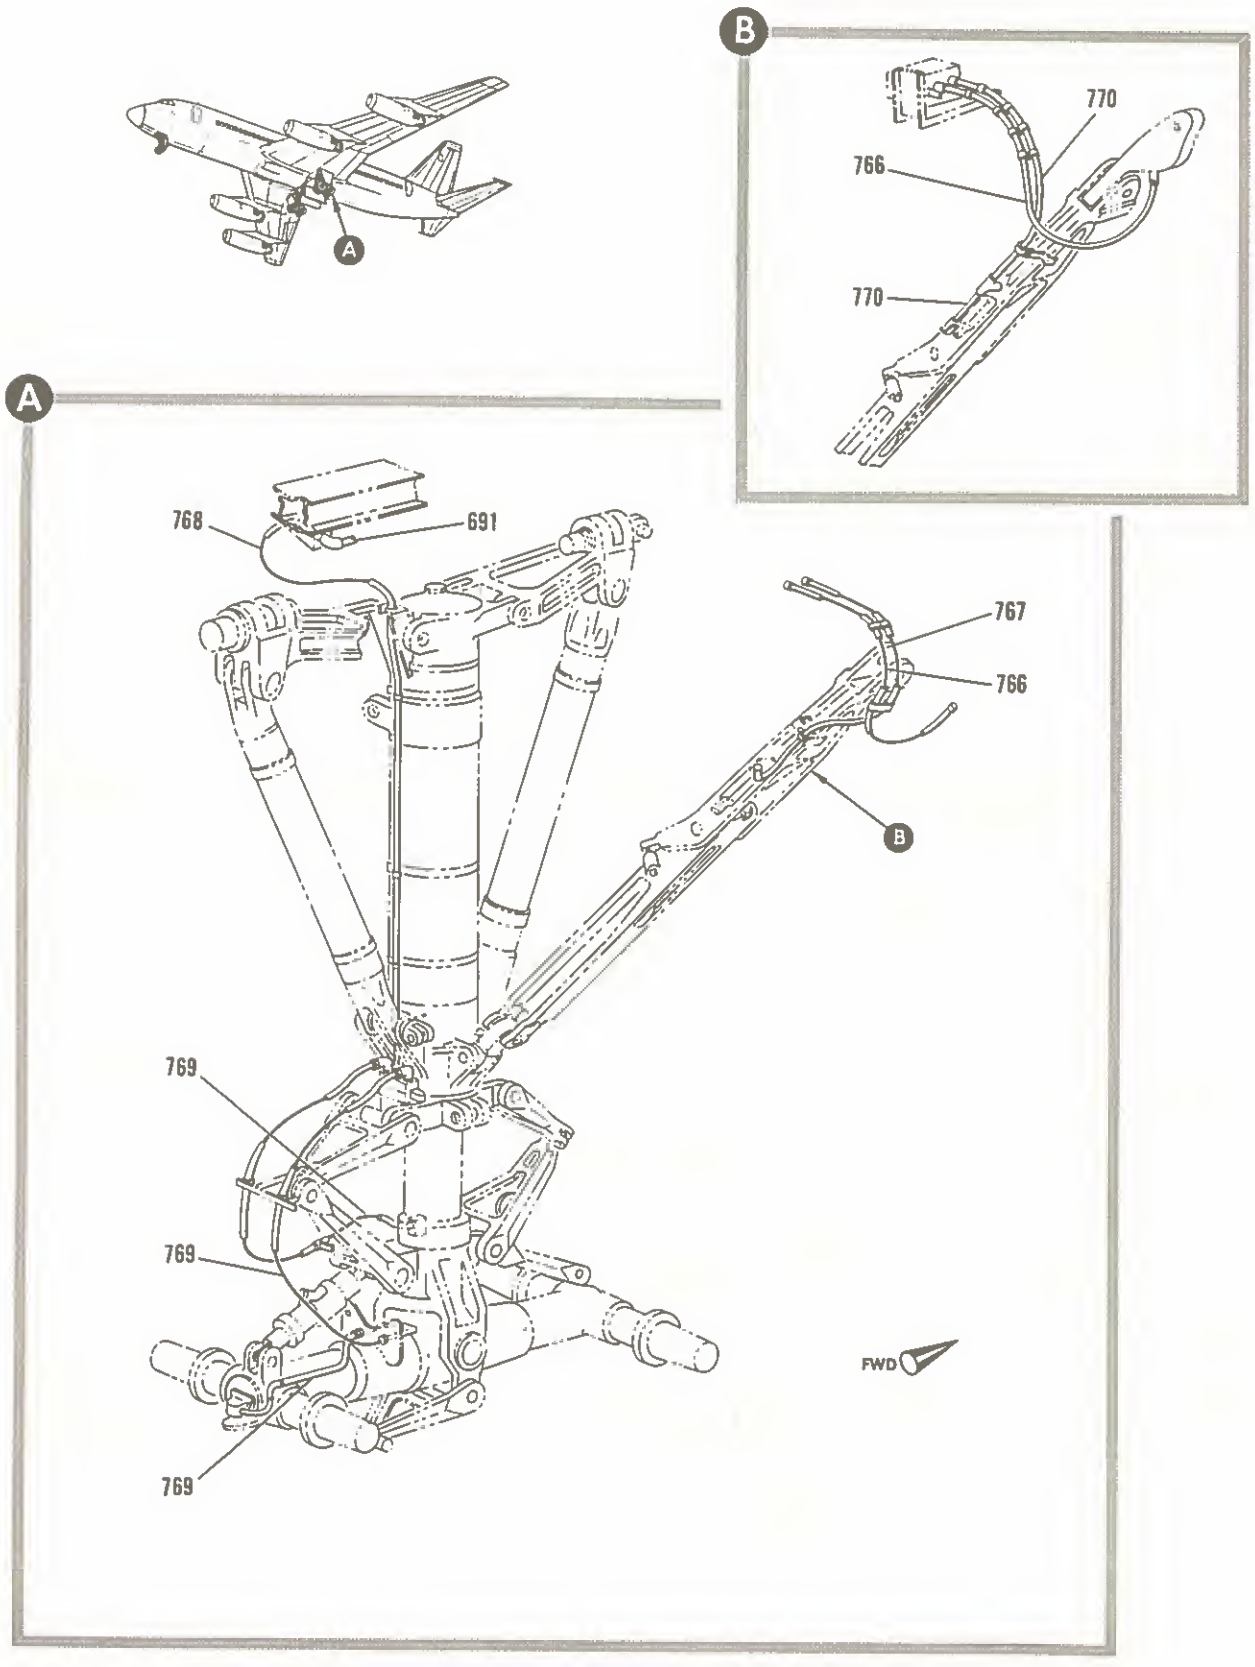

22.04.94 10.007


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5		MLG ELECTRICAL HARNESSES SEE 22-64001			
-766	22-64504	. HARNESS ASSEMBLY, MLG PERMANENT SPLICE BOX TO UP-LOCK SWITCH	1		1
	1EN65-6	. . SWITCH, MFR TO SPEC CONT 22-06480-1 -V74059-	1		1
	590001-117-0287	. . CONDUIT, CONVAIR 92-30000-025 -V00624-	1		1
-768	22-64506	. HARNESS ASSEMBLY, DISCONNECT PLUG A TO MLG	1		1
	93702-0360	. . CONDUIT, CONVAIR 92-30000-042 -V95955-	1		1
	71-184781-32P	. . CONNECTOR, CONVAIR 92-40325-074 -V06840-	1		1
-769	22-64507-811	. HARNESS ASSEMBLY, PERMANENT SPLICE BOX TO MLG ANTI-SKID DETECTORS	A		1
	22-64507	. HARNESS ASSEMBLY, PERMANENT SPLICE BOX TO MLG TRUCK POSITION SWITCH	2	7	1
	H10-35	. . SWITCH, TRUCK POSITION MFR TO SPEC CONT 22-06483-1 -V97198-	1		1
	TEMP22068433	. . SWITCH, MFR TO SPEC CONT 22-06843-3 -V97198-	1		1
	25EN13-6	. . SWITCH, LIMIT MFR TO SPEC CONT 22-06477-3 -V74059-	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		4
	590001-135-0364	. . CONDUIT, CONVAIR 92-30000-046 -V00624-	1		1
	590001-31-0403	. . CONDUIT, CONVAIR 92-30000-024 -V00624-	1		1
	218-2-1	. . ELBOW, CONVAIR 93-39503-002 -V08484-			1
	218-1-1	. . ELBOW, CONVAIR 93-39503-001 -V08484-	1		1
	AN3066-10	. . NUT	1		1
	AN3066-8	. . NUT	1		1
-770	22-64641	. HARNESS ASSEMBLY, PERMANENT SPLICE BOX TO MLG SWITCHES	1		1
	5EN13-6B	. . SWITCH, MFR TO SPEC CONT 22-06478-1 -V74059-	1		1
	21EN65-6	. . SWITCH, MFR TO SPEC CONT 22-06480-3 -V74059-	1		1
	590001-49-0272	. . CONDUIT, CONVAIR 92-30000-038 -V00624-	1		1
	590001-117-0056	. . CONDUIT, CONVAIR 92-30000-039 -V00624-	1		1

A AIRPLANES 1, 8 AND ON

SECTION V

Chapter 94
ELECTRICAL HARNESSES


WING ELECTRICAL HARNESSES

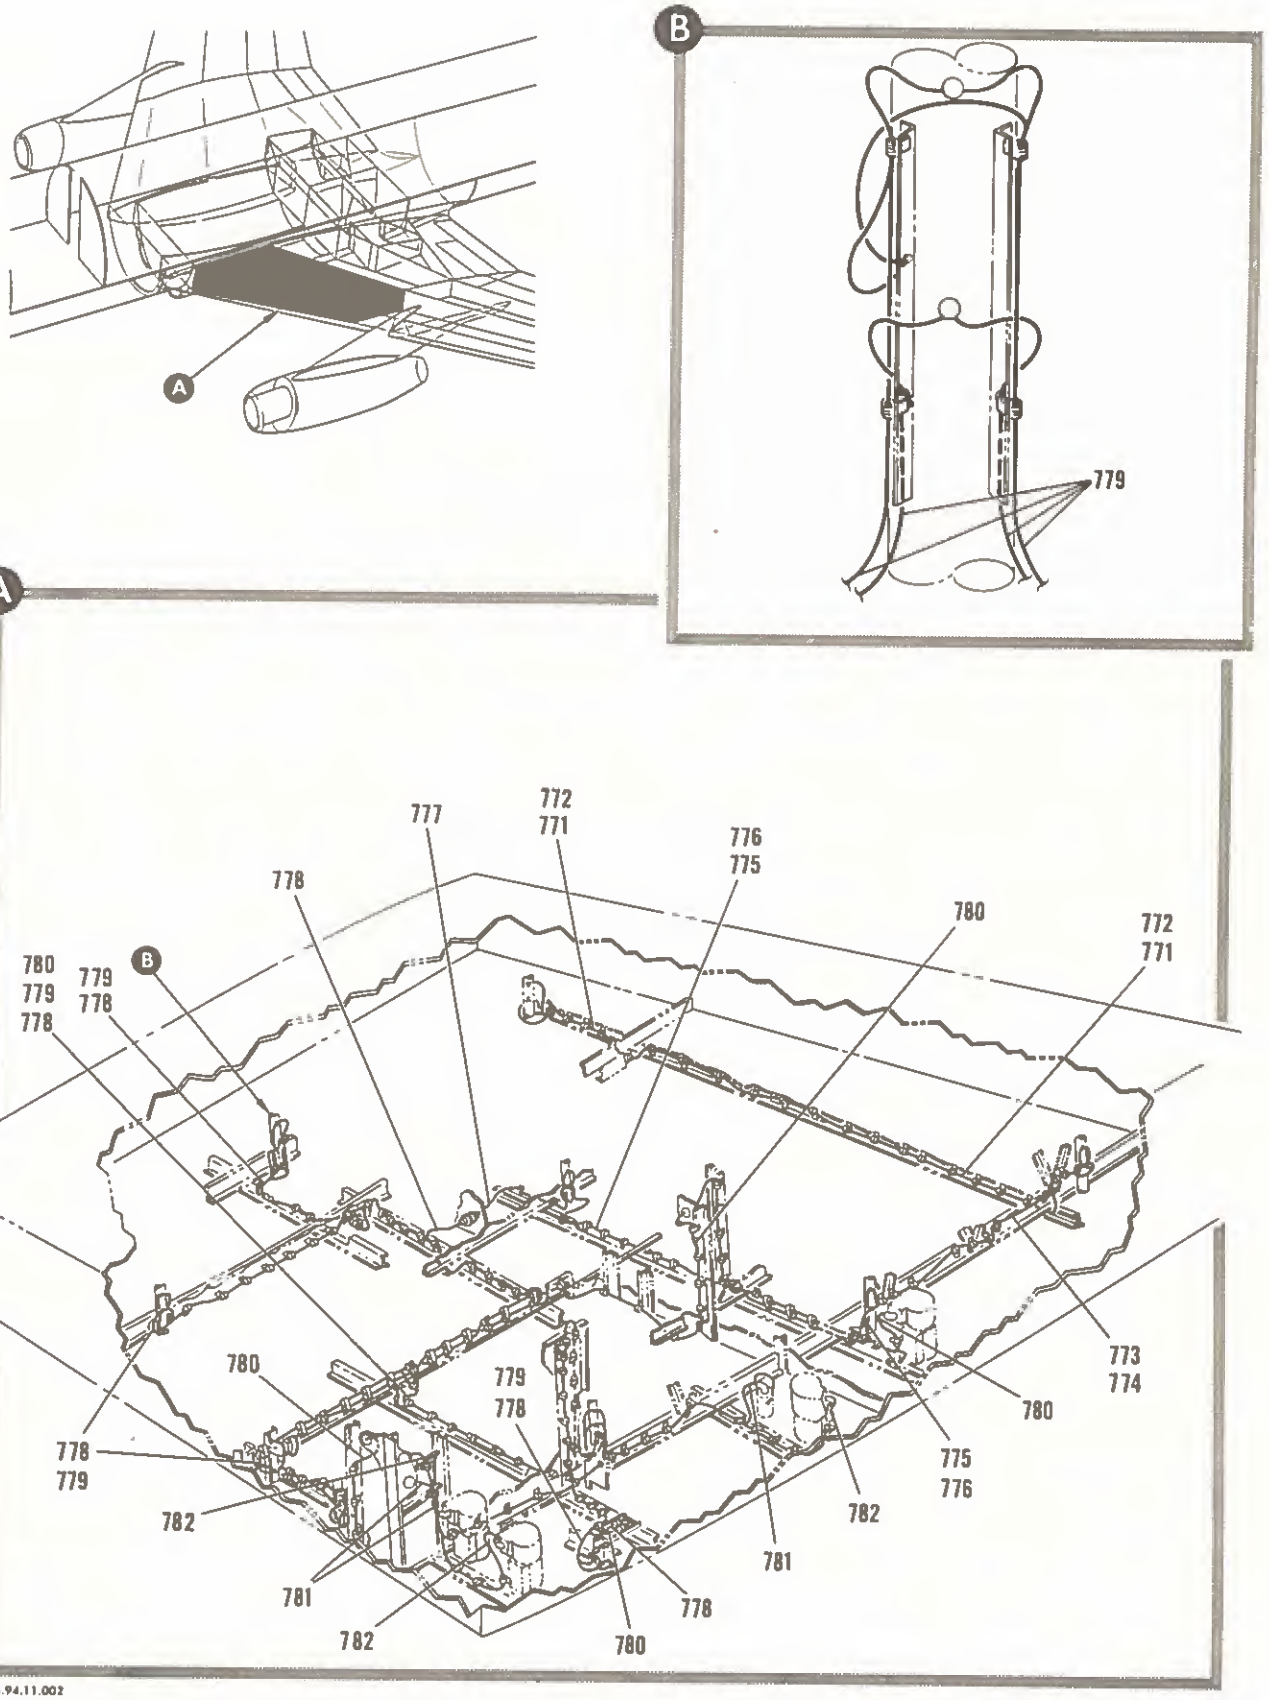


MAIN FUEL TANK 2 AND 3 WING ELECTRICAL HARNESSES
FIGURE 1

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		MAIN FUEL TANKS 2 AND 3 WING ELECTRICAL HARNESSES SEE 22-64002			
-771	22-64625-805	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2 PROBES TO DISCONNECT TR 26 TO FUEL TANK FEED THRU LH	1		1
	22-64626-805	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3 PROBES TO DISCONNECT TR 26 TO FUEL TANK FEED THRU RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		2
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		2
-772	22-64625-5	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2 PROBES TO DISCONNECT TR 16 TO TR 27 LH	1		1
	22-64626-5	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3 PROBES TO DISCONNECT TR 16 TO TR 27 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-773	22-64625-803	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2 PROBES TO DISCONNECT TR 15 TO TR 16 LH	1		1
	22-64626-803	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3 PROBES TO DISCONNECT TR 15 TO TR 16 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		2
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		2
-774	22-64625-3	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2 PROBES TO DISCONNECT TR 15 TO TR 16 LH	1		1
	22-64626-3	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3 PROBES TO DISCONNECT TR 15 TO TR 16 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-775	22-64625-1	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2 PROBES TO DISCONNECT TR 26 TO TR 15 LH	1		1
	22-64626-1	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3 PROBES TO DISCONNECT TR 26 TO TR 15 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-776	22-64625-801	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2 PROBES TO DISCONNECT TR 26 TO TR 15 LH	1		1
	22-64626-801	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3 PROBES TO DISCONNECT TR 26 TO TR 15 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		2
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		2
-777	22-64625	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 2 TR 26 TO TANK FEED THRU LH	1		1
	22-64626	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 3 TR 26 TO TANK FEED THRU RH	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		1
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		1
-778	22-64627-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 2 PROBES TO WING DISCONNECT FEED THRU TO TR 29 LH	1		1
	22-64628-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 3 PROBES TO WING DISCONNECT FEED THRU TO TR 30 RH	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		3
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		11
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		11
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		21
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		1
-779	22-64627	. HARNESS ASSEMBLY, MAIN FUEL TANK 2 PROBES TO WING DISCONNECT TR 30 TO TR 29 LH	1		1
	22-64628	. HARNESS ASSEMBLY, MAIN FUEL TANK 3 PROBES TO WING DISCONNECT TR 32 TO TR 30 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -780	22-64302-23	. HARNESS ASSEMBLY, FUEL TANK TRANSFER BOOSTER PUMP LH	1	4	1
	22-64302-43	. HARNESS ASSEMBLY, FUEL TANK TRANSFER BOOSTER PUMP LH	5		1
	22-64302-25	. HARNESS ASSEMBLY, FUEL TANK TRANSFER BOOSTER PUMP RH	1	4	1
	22-64302-45	. HARNESS ASSEMBLY, FUEL TANK TRANSFER BOOSTER PUMP RH	5		1
	14043	. . CONNECTOR, CONVAIR 92-50305-001 -V17419-	1		1
	MWP718-1P1	. . TERMINAL BOARD, CONVAIR 98-91724-002 -V09922-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	AN3058-12	. . CONDUIT	1		1
	AN3066-12	. . NUT	1		1
	AN960-2016L	. . WASHER	1		1
-781	22-64302-1	. HARNESS ASSEMBLY, SWITCH FLOAT FUEL PUMP LH	1	4	1
	22-64302-27	. HARNESS ASSEMBLY, SWITCH FLOAT FUEL PUMP LH	5		1
	22-64302-15	. HARNESS ASSEMBLY, SWITCH FLOAT FUEL PUMP RH	1	4	1
	22-64302-37	. HARNESS ASSEMBLY, SWITCH FLOAT FUEL PUMP RH	5		1
	14043	. . CONNECTOR, CONVAIR 92-50305-001 -V17419-	1		1
	CA3100ER10SL3P	. . CONNECTOR, CONVAIR 92-50272-002 -V71468-	1		1
	MWP718-1P1	. . TERMINAL BOARD, CONVAIR 98-91724-002 -V009922-	1		1
	36153	. . TERMINAL, LH CONVAIR 98-90805-003 -V00779	1		1
-782	22-64302-5	. HARNESS ASSEMBLY, FUEL BOOSTER PUMP LH	1	4	1
	22-64302-31	. HARNESS ASSEMBLY, FUEL BOOSTER PUMP LH	5		1
	22-64302-17	. HARNESS ASSEMBLY, FUEL BOOSTER PUMP RH	1	4	1
	22-64302-39	. HARNESS ASSEMBLY, FUEL BOOSTER PUMP RH	5		1
	14043	. . CONNECTOR, CONVAIR 92-50305-001 -V17419-	1		2
	MWP718-1P1	. . TERMINAL BOARD, CONVAIR 98-91724-002 -V09922-	1		1

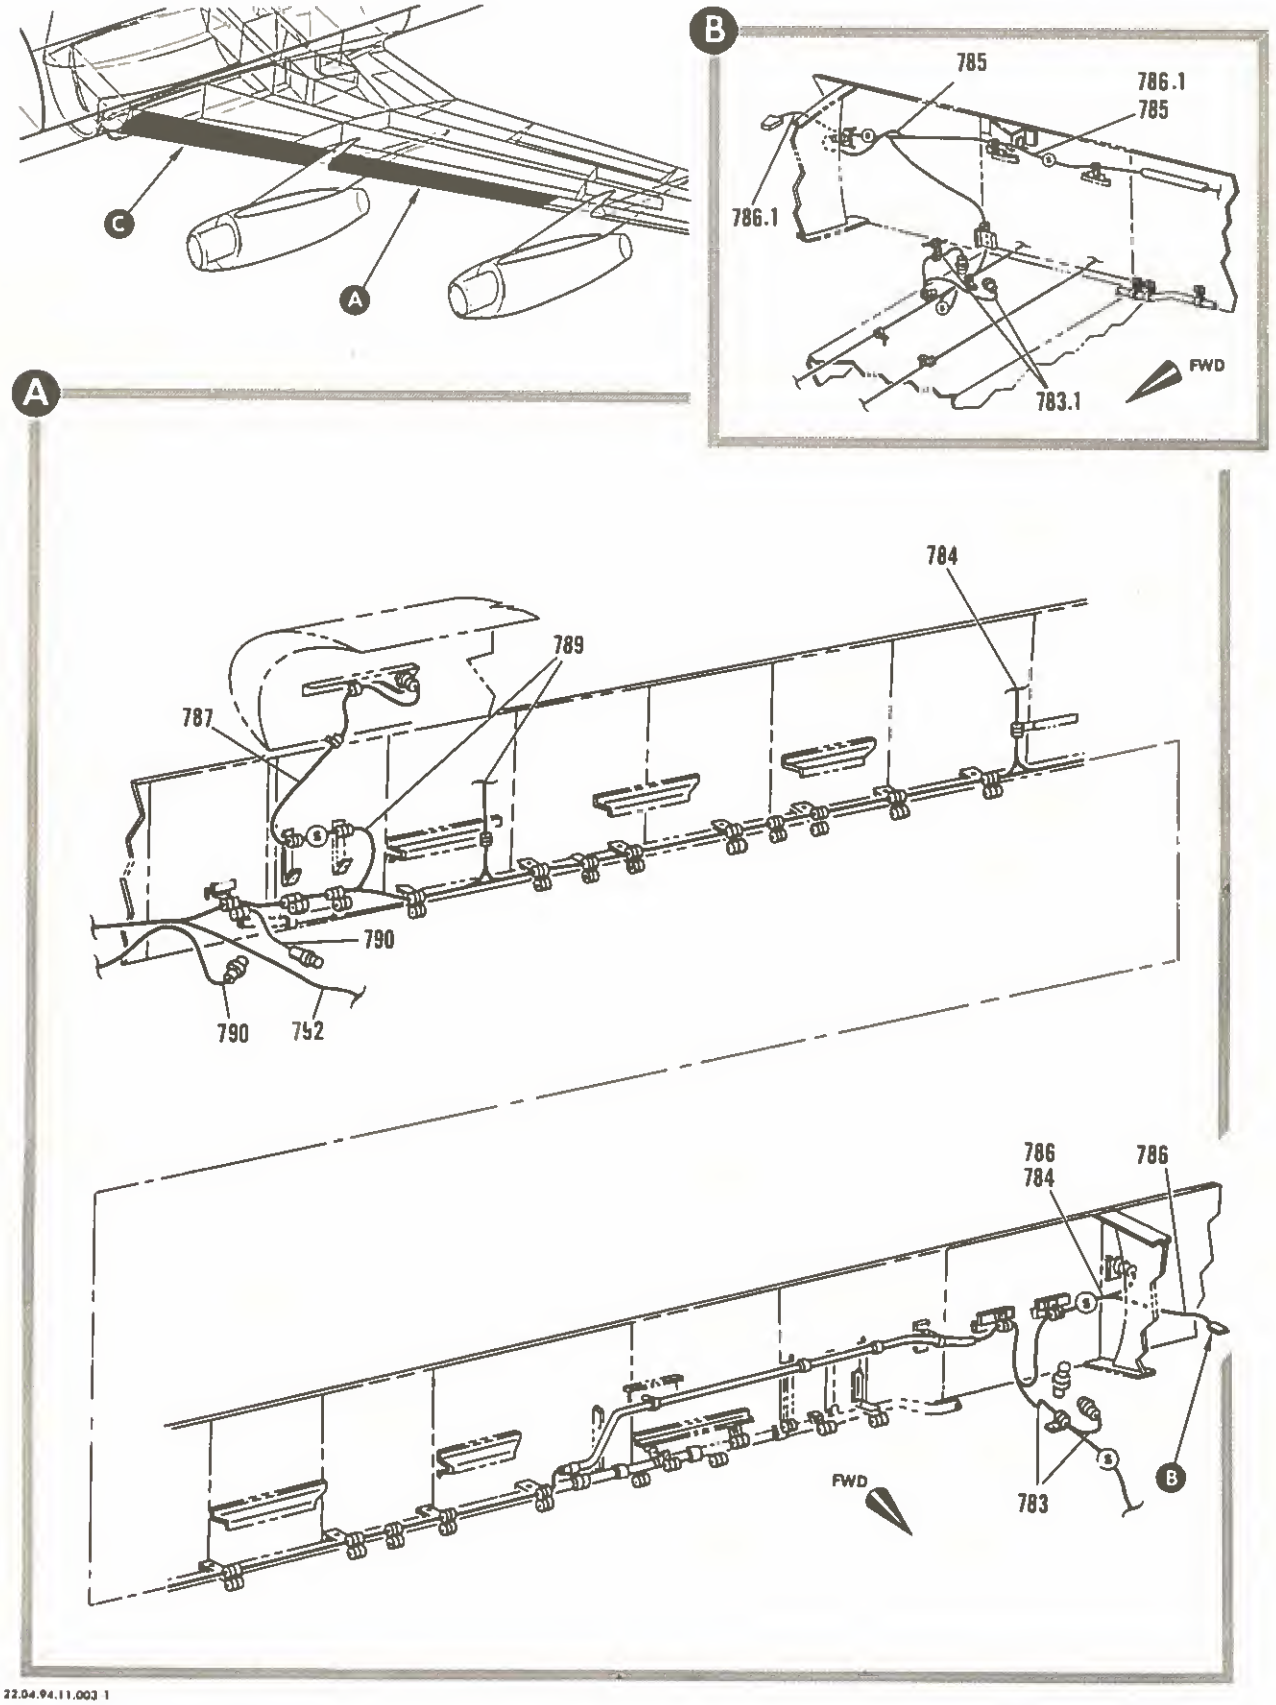



WING LEADING EDGE ELECTRICAL HARNESSES
FIGURE 2 (SHEET 1 OF 2)

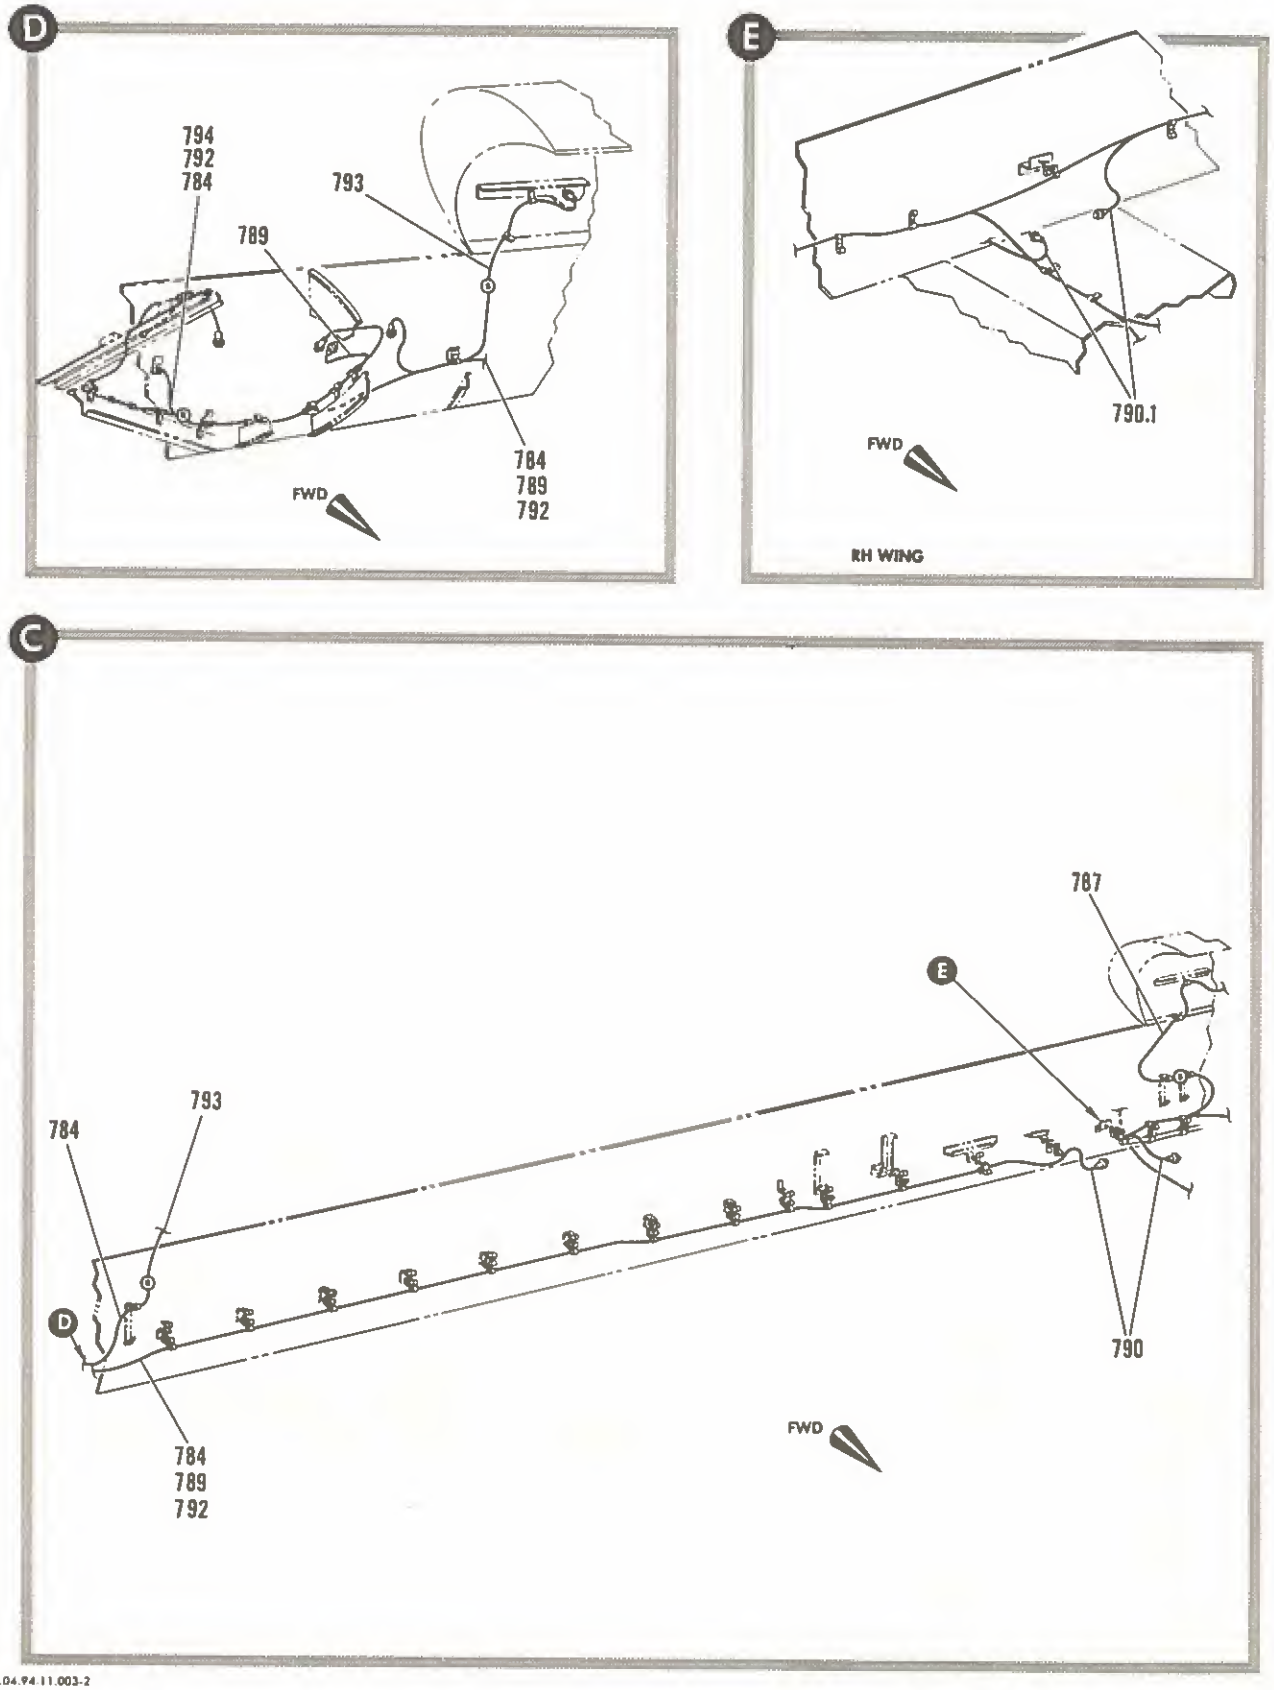


22.04.94.11.003-2


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		WING LEADING EDGE ELECTRICAL HARNESSES SEE 22-64002			
-783	22-64509	. HARNESS ASSEMBLY, OUTBD LH BLEED AIR VALVE TO PERMANENT SPLICE	1		1
-783.1	22-64608	. HARNESS ASSEMBLY, OUTBD RH BLEED AIR VALVE TO PERMANENT SPLICE	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		3
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		1
	320570	. . CONDUCTOR, CONVAIR 98-34001-002 -V00779-	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		1
-784	22-64619	. HARNESS ASSEMBLY, FEED THRU PANEL A TO LH WING TEMPERATURE SENSOR	1		1
-785	22-64620	. HARNESS ASSEMBLY, FEED THRU PANEL A TO RH WING TEMPERATURE SENSOR	1		1
	36151	. . TERMINAL, CONVAIR 98-90805-001 -V00779-	1		17
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		3
	320570	. . CONDUCTOR CONVAIR 98-34001-002 -V00779-	1		1
	320562	. . CONDUCTOR, CONVAIR 98-34001-001 -V00779-	1		3
-786	22-64988	. HARNESS ASSEMBLY, TEMPERATURE SENSOR WING LEADING EDGE OUTBD LH	1		1
-786.1	22-64991	. HARNESS ASSEMBLY, TEMPERATURE SENSOR WING LEADING EDGE OUTBD RH	1		1
-787	22-64989	. HARNESS ASSEMBLY, TEMPERATURE SENSOR WING LEADING EDGE CENTER LH	1		1
	22-64992	. HARNESS ASSEMBLY, TEMPERATURE SENSOR WING LEADING EDGE CENTER RH	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		4
	JF2P2S	. . CONNECTOR, CONVAIR 92-50224-007 -V81312-	1		1
-789	22-64519	. HARNESS ASSEMBLY, BLEED AIR VALVE TO PERMANENT SPLICE INBD LH	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		1
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		3
-790	22-64545	. HARNESS ASSEMBLY, BLEED AIR VALVE TO CENTER PERMANENT SPLICE LH	1		1
-790.1	22-64546	. HARNESS ASSEMBLY, BLEED AIR VALVE TO CENTER PERMANENT SPLICE RH	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
	031-0667-000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		1
	031-0614-000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		3
-792	22-64585-1	. HARNESS ASSEMBLY, FEED THRU PANEL A TO VENT SCOOP LH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-793	22-64990	. HARNESS ASSEMBLY, TEMPERATURE SENSOR WING LEADING EDGE INBD LH	1		1
	22-64993	. HARNESS ASSEMBLY, TEMPERATURE SENSOR WING LEADING EDGE INBD RH	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		4
	JF2P2S	. . CONNECTOR, CONVAIR 92-50224-007 -V81312-	1		1
-794	22-64589	. HARNESS ASSEMBLY, FEED THRU PANEL A TO LANDING LIGHT TRANSFORMER INBD LH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1

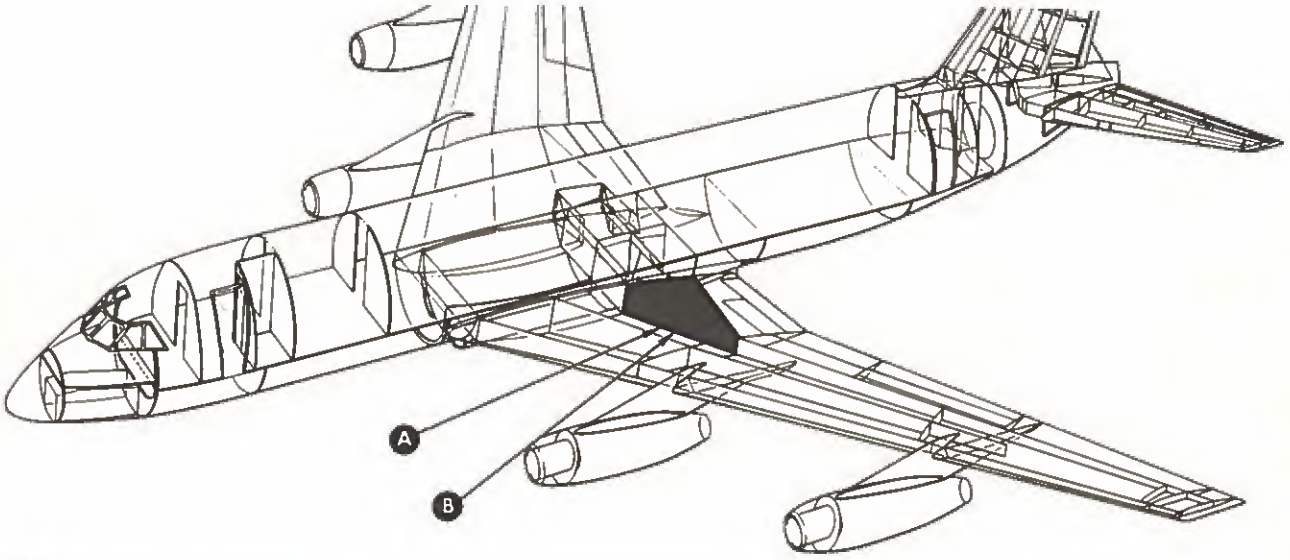

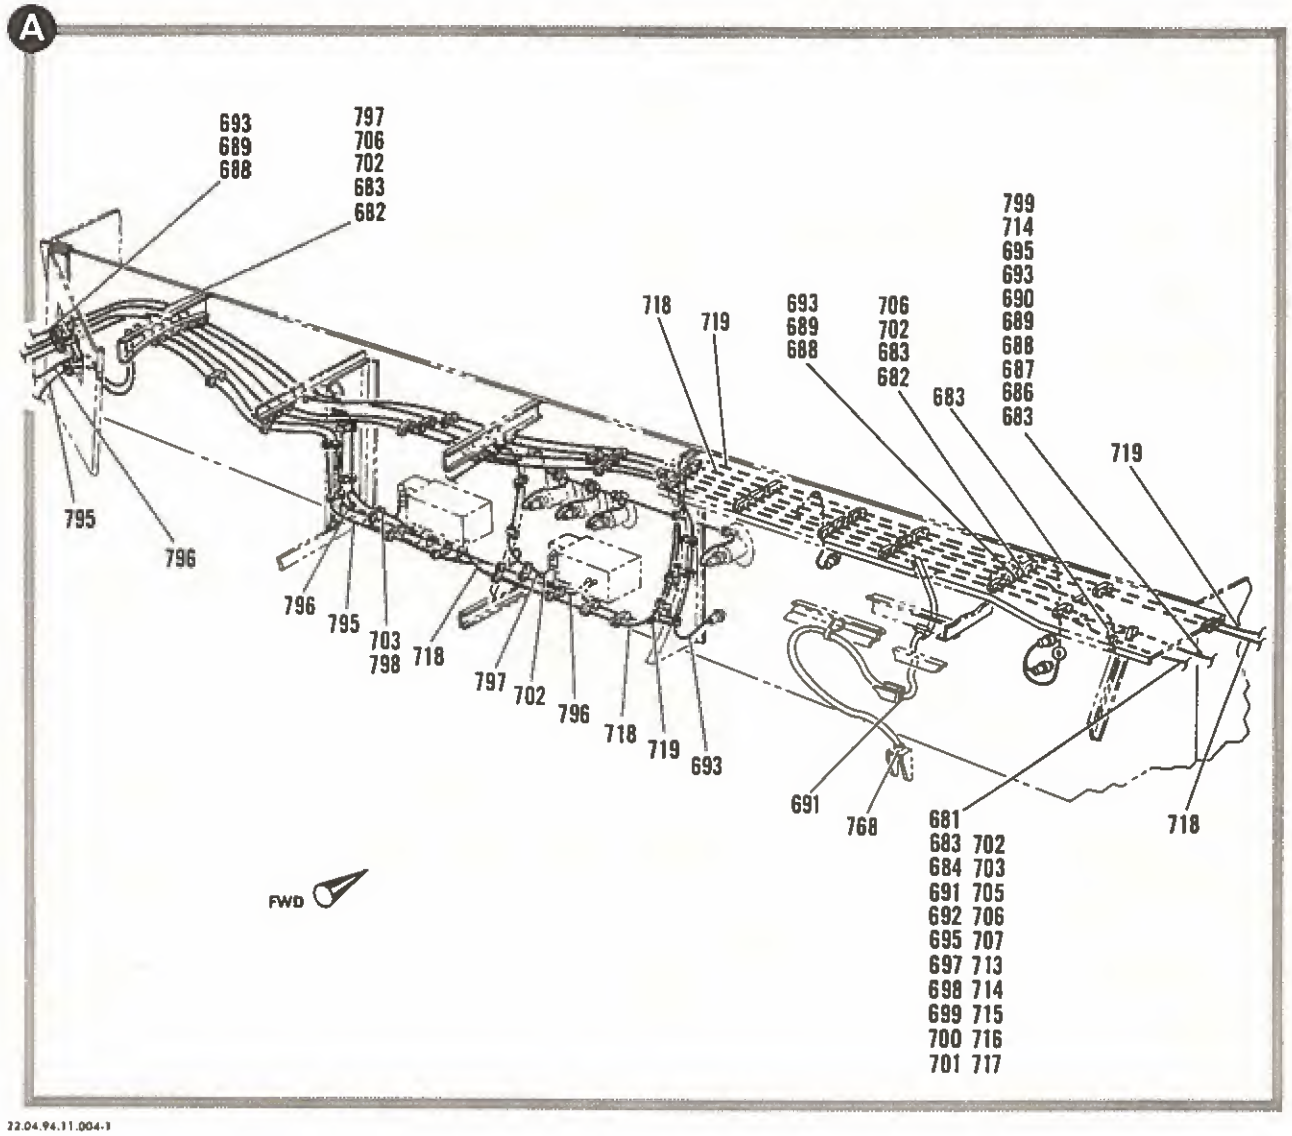


WING TRAILING EDGE ELECTRICAL HARNESSES
FIGURE 3 (SHEET 1 OF 2)

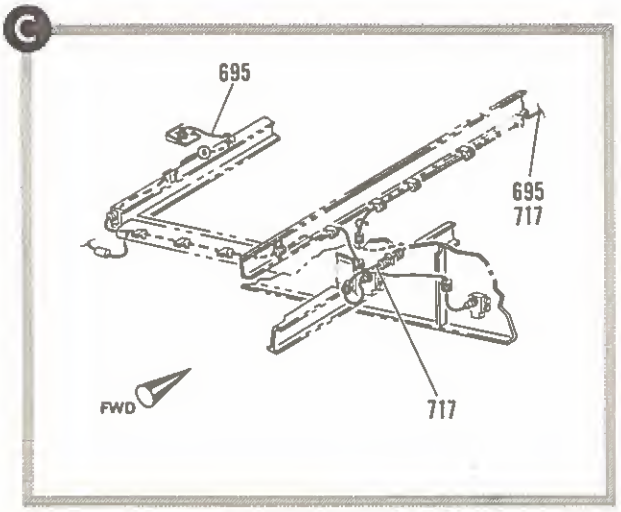


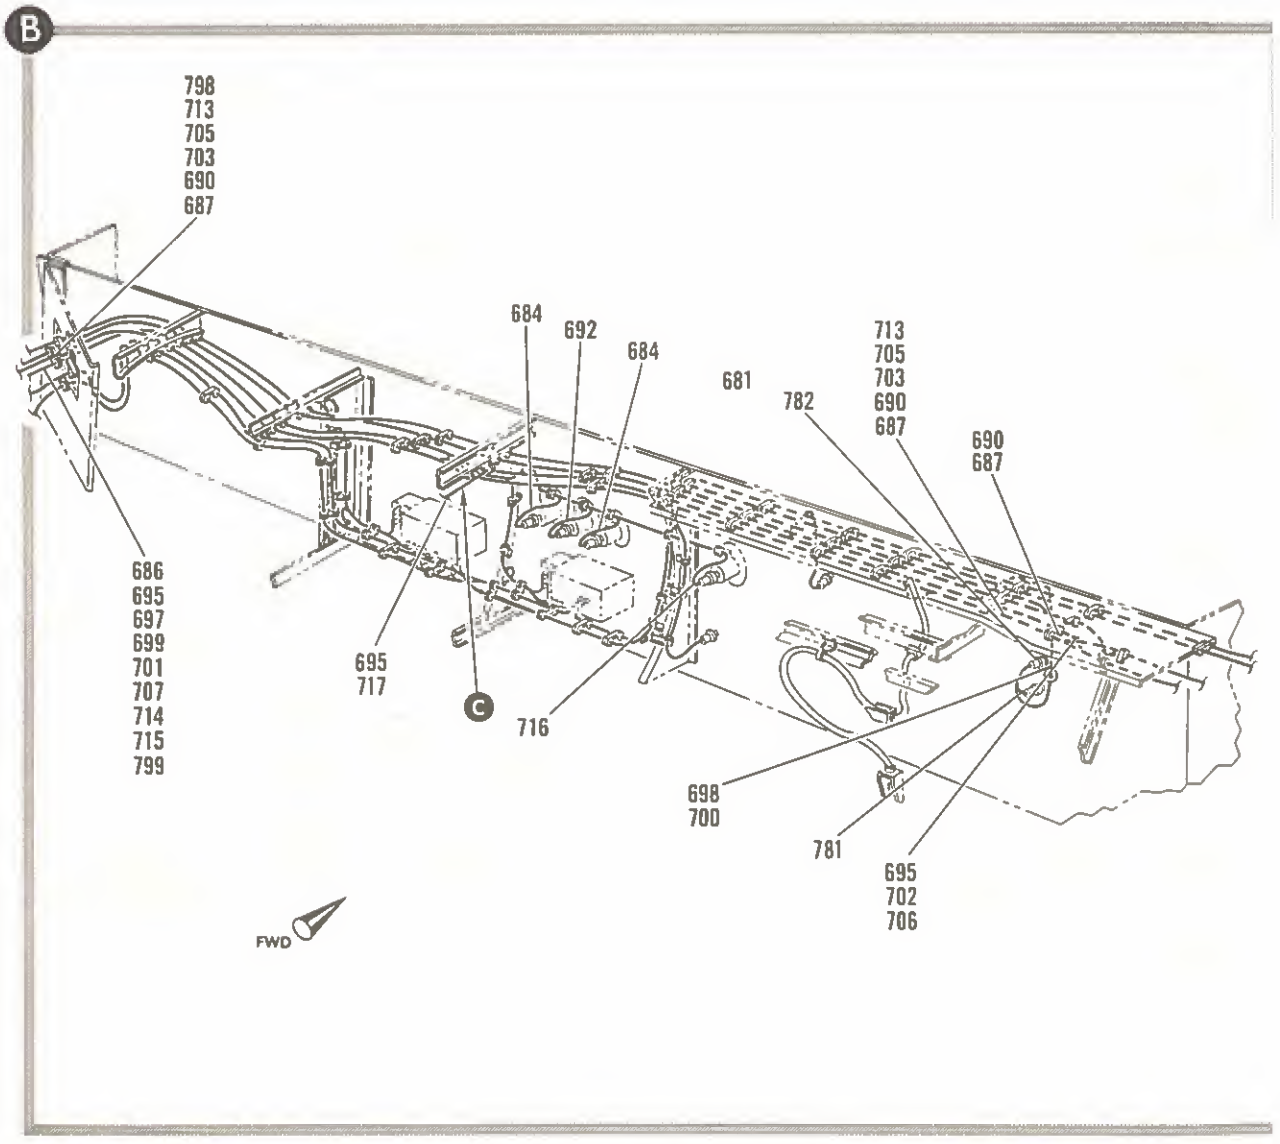

22.04.94.11.004 2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3		WING TRAILING EDGE ELECTRICAL HARNESSES SEE 22-64002			
-795	22-64515	. HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 1 REAR SPAR PERMANENT SPLICE LH	1		1
	22-64516	. HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 4 REAR SPAR PERMANENT SPLICE RH	1		1
-796	22-64517	. HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 2 REAR SPAR PERMANENT SPLICE L H	1		1
	22-64518	. HARNESS ASSEMBLY, STATIC EXCITER TO ENGINE 3 REAR SPAR PERMANENT SPLICE RH	1		1
	YAEV6C-L4	. . TERMINAL, CONVAIR 98-90806-007 -V02198-	1		3
-797	22-64638-1	. HARNESS ASSEMBLY, STATIC EXCITER 2 TO PERMANENT SPLICE LH	1		1
	22-64639-1	. HARNESS ASSEMBLY, STATIC EXCITER 3 TO PERMANENT SPLICE RH	1		1
	320563	. . TERMINAL, CONVAIR 98-90805-012 -V00779-	1		2
-798	22-64637-1	. HARNESS ASSEMBLY, STATIC EXCITER 1 TO PERMANENT SPLICE LH	1		1
	22-64640-1	. HARNESS ASSEMBLY, STATIC EXCITER 4 TO PERMANENT SPLICE RH	1		1
	36153	. . TERMINAL, LH CONVAIR 98-90805-003 -V00779	1		3
	36153	. . TERMINAL, RH CONVAIR 98-90805-003 -V00779	1		2
-799	22-64553	. HARNESS ASSEMBLY, FEED THRU PANEL W TO LINE AND CROSS FEED VALVES LH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	024048-0000	. . CONTACT, CONVAIR 92-63901-012 -V71468-	1		22
	024049-0000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		8
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		8
	EX06-16S1S	. . CONNECTOR, CONVAIR 92-40332-007 -V71468-	1		4

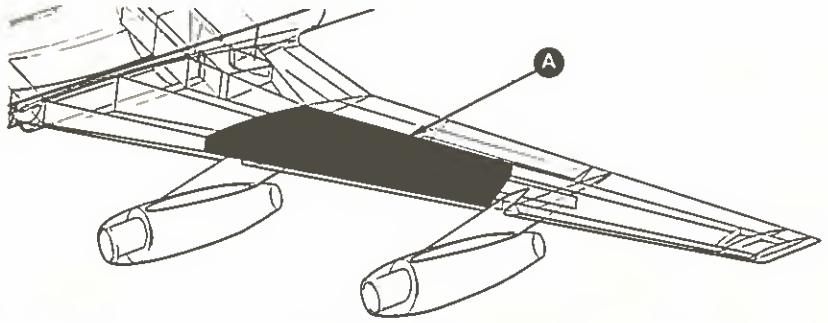


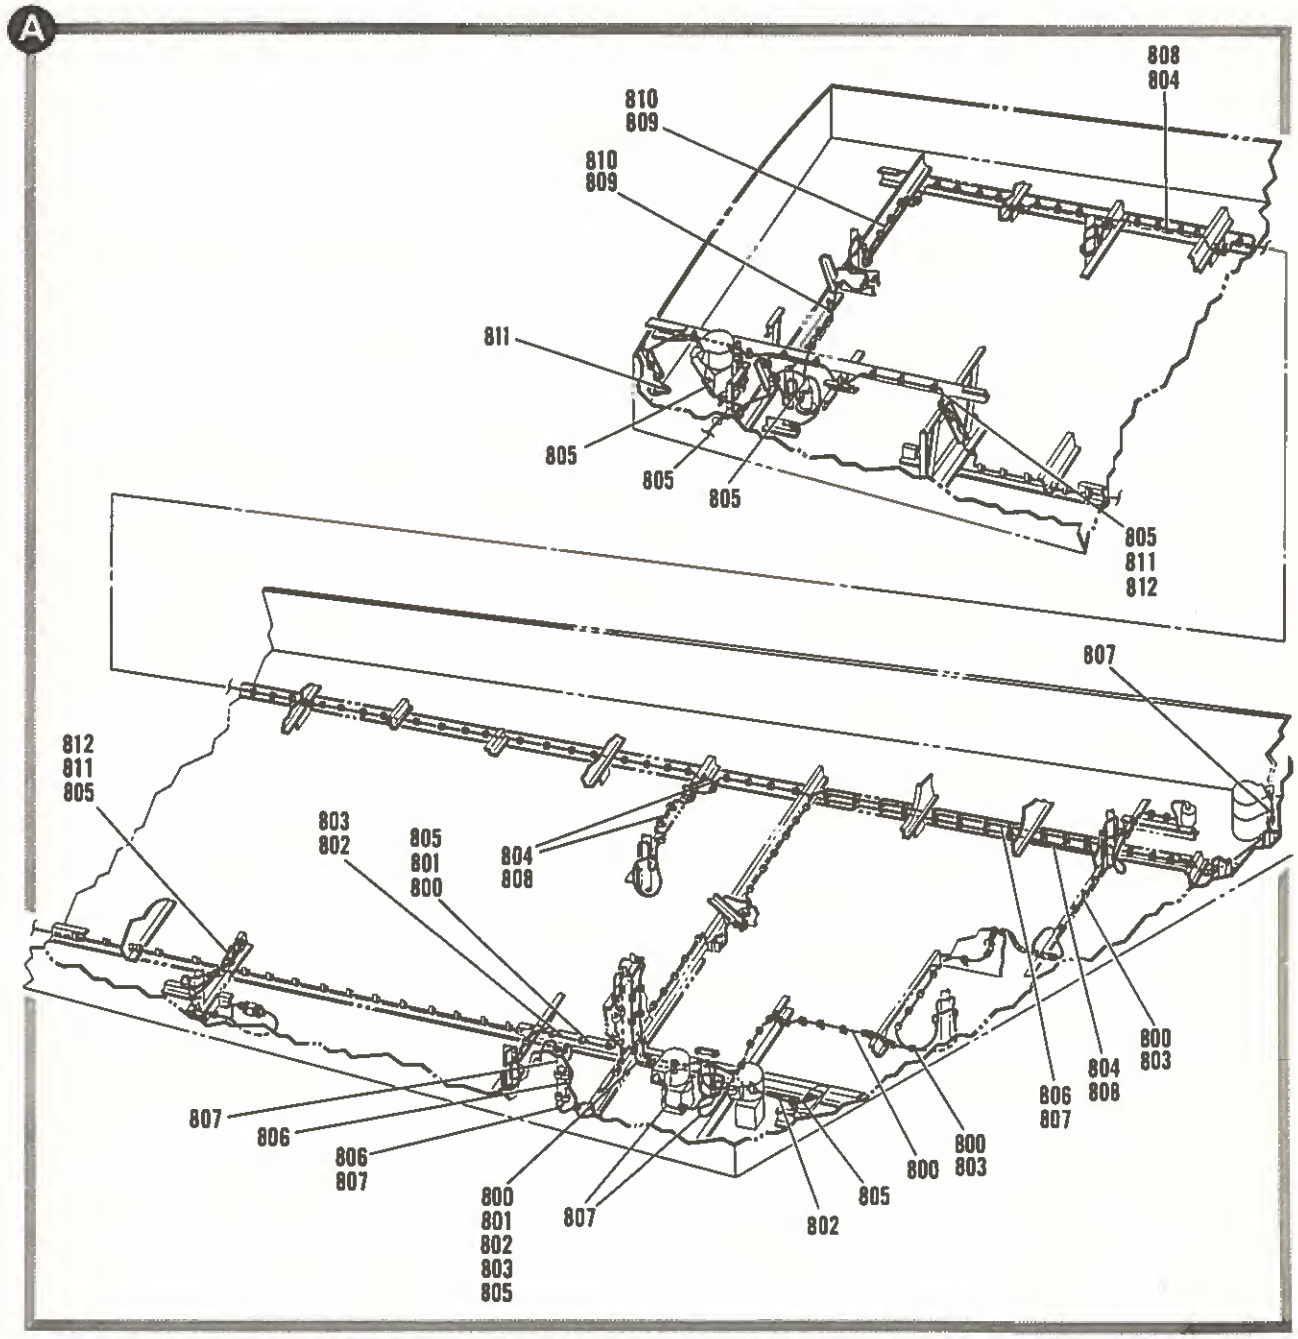

MAIN FUEL TANK 1 AND 4 WING ELECTRICAL HARNESSES
FIGURE 4


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4		MAIN FUEL TANK 1 AND 4 WING ELECTRICAL HARNESSES SEE 22-64003			
-800	22-64623-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES TO TR 9 THRU TR 11 WING DISCONNECT	1		1
	22-64624-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 9 THRU TR 11 WING DISCONNECT	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-801	22-64650	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES	1		1
	22-64649	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
-802	22-64650-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES	1		1
	22-64649-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES	1		1
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		4
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		4
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		7
	320553	. . TERMINAL, CONVAIR 98-90805-020 -V00779-	1		1
-803	22-64623-801	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES TO TR 9 THRU TR 11 WING DISCONNECT	1		1
	22-64624-801	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 9 THRU TR 11 WING DISCONNECT	1		1
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		4
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		4
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
-804	22-64651	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES	1		1
	22-64648	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-805	22-64302-3	. HARNESS ASSEMBLY, FUEL COMPENSATOR	1	4	2
	22-64302-29	. HARNESS ASSEMBLY, FUEL COMPENSATOR	5		2
-806	22-64302-7	. HARNESS ASSEMBLY, BOOSTER AND FUEL PUMP	1	4	2
	22-64302-33	. HARNESS ASSEMBLY, BOOSTER AND FUEL PUMP	5		2
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	MWP718-1P1	. . TERMINAL, CONVAIR 98-91724-002 -V09922-	1		1
	CA3100ER10SL3P	. . CONNECTOR, CONVAIR 92-50272-002 -V71468-	1		1
	14043	. . CONNECTOR, CONVAIR 92-50305-001 -V17419-	1		1
-807	22-64302-9	. HARNESS ASSEMBLY, TRANSFER PUMP INBD LH	1	4	1
	22-64302-35	. HARNESS ASSEMBLY, TRANSFER PUMP INBD LH	5		1
	22-64302-19	. HARNESS ASSEMBLY, TRANSFER PUMP INBD RH	1	4	1
	22-64302-41	. HARNESS ASSEMBLY, TRANSFER PUMP INBD RH	5		1
	MWP718-1P1	. . TERMINAL, CONVAIR 98-91724-002 -V09922-	1		1
	14043	. . CONNECTOR, CONVAIR 92-50305-001 -V17419-	1		2
-808	22-64651-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES	1		1
	22-64648-1	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES	1		1
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		4
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		4
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
-809	22-64623-3	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES TO TR 23 THRU TR 20 WING DISCONNECT	1		1
	22-64624-3	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 23 THRU TR 20 WING DISCONNECT	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 -810	22-64623-803	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES TO TR 23 THRU TR 20 WING DISCONNECT	1		1
	22-64624-803	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 23 THRU TR 20 WING DISCONNECT	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		4
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		4
-811	22-64623-5	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES TO TR 21 THRU TR 23 WING DISCONNECT	1		1
	22-64624-5	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 21 THRU TR 23 WING DISCONNECT	1		1
	1-817-1	. . CONNECTOR, CONVAIR 92-47000-020 -V95712-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		6
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		3
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		3
-812	22-64623-805	. HARNESS ASSEMBLY, MAIN FUEL TANK 1 PROBES TO TR 21 THRU TR 23 WING DISCONNECT	1		1
	22-64624-805	. HARNESS ASSEMBLY, MAIN FUEL TANK 4 PROBES TO TR 21 THRU TR 23 WING DISCONNECT	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2

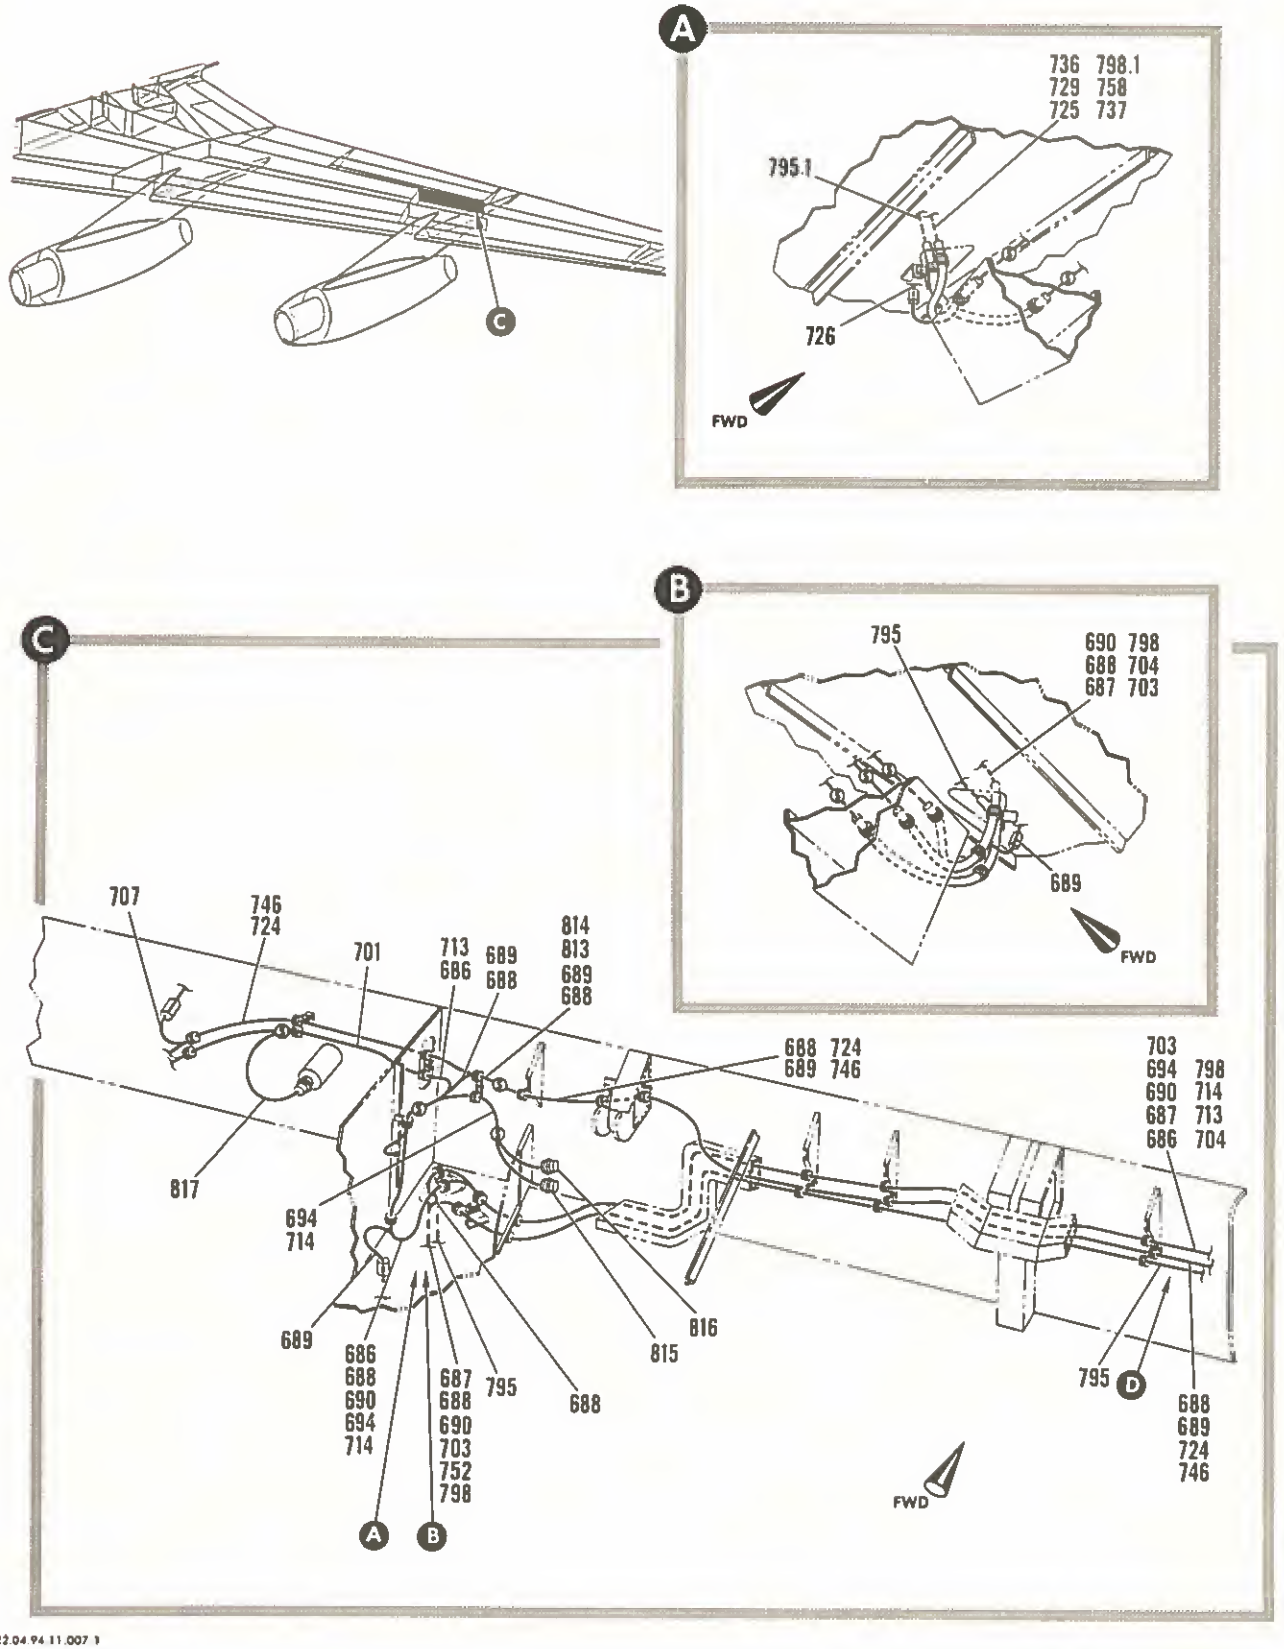


22.04.94.11.007 3

WING REAR SPAR ELECTRICAL HARNESSES
FIGURE 5 (SHEET 1 OF 3)

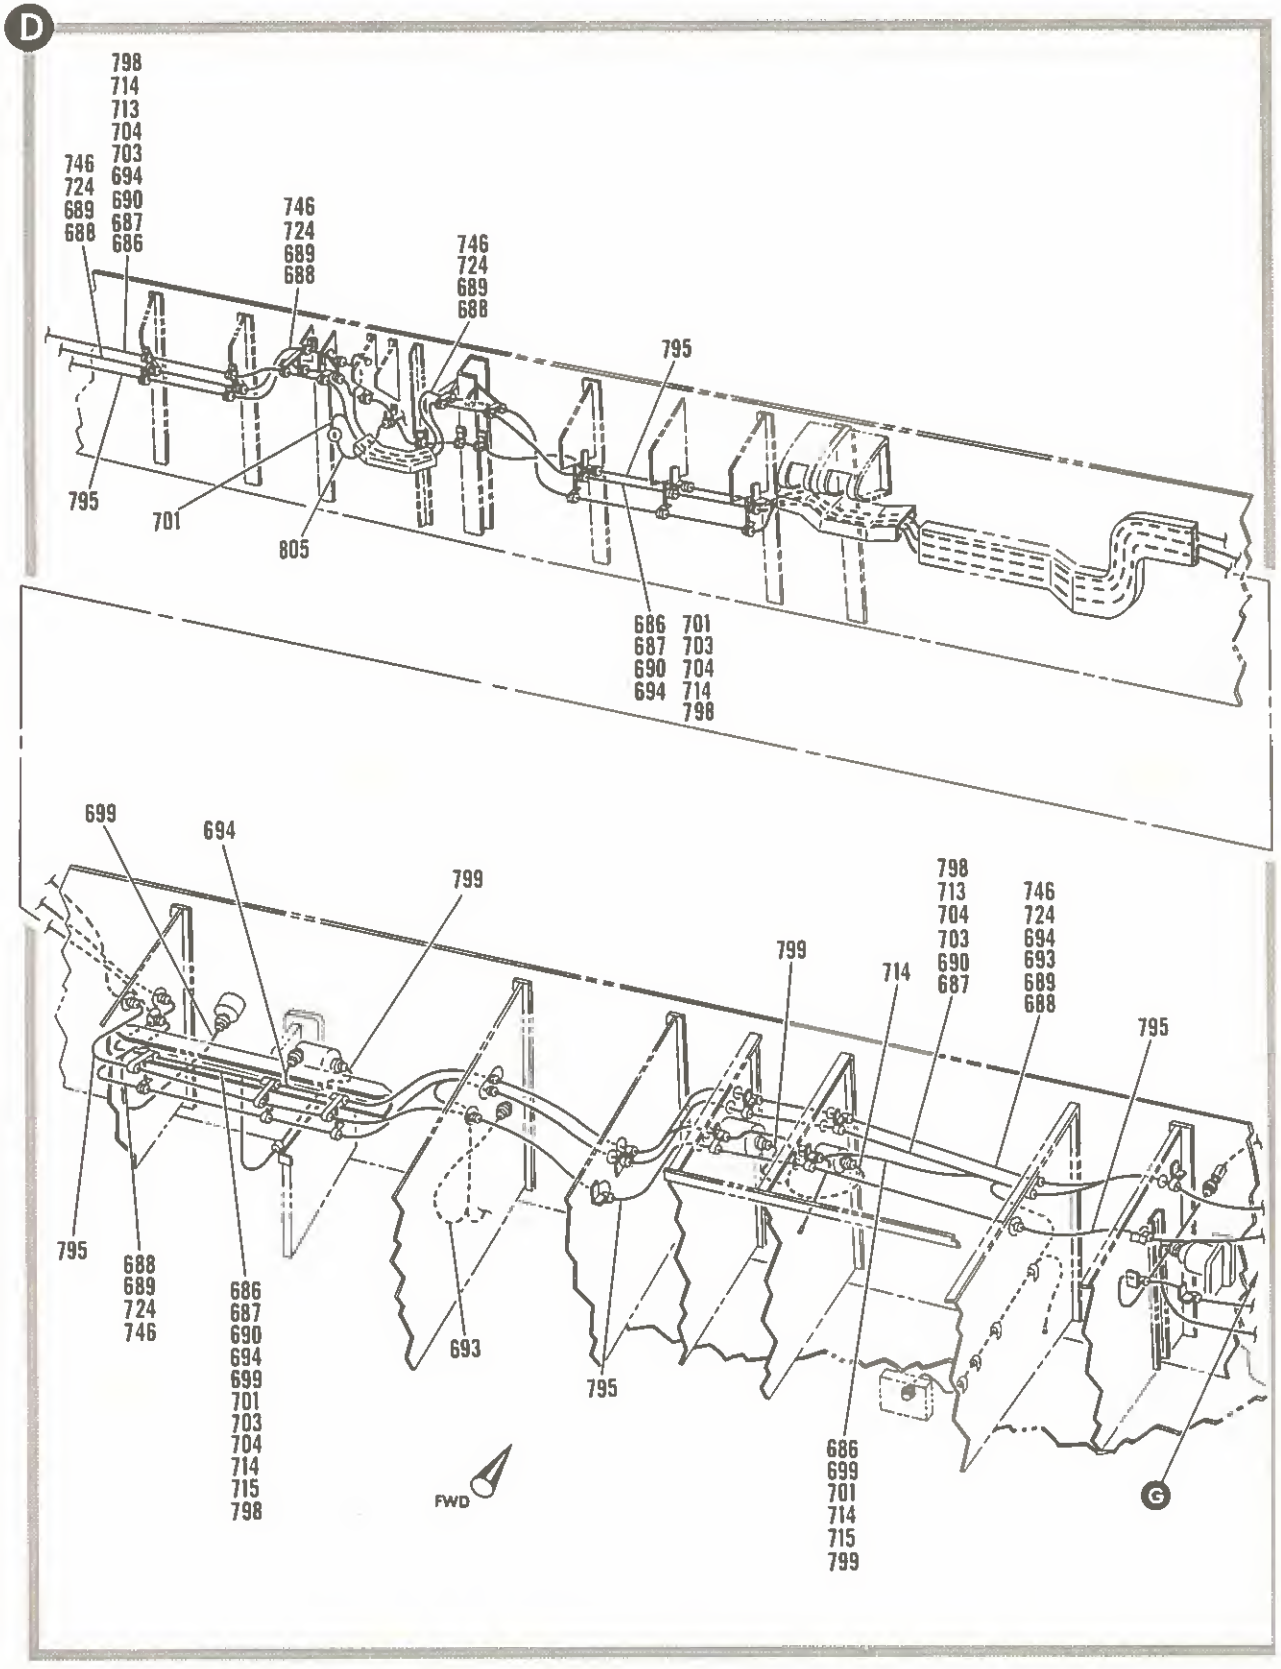


22.04.94 11.007-2

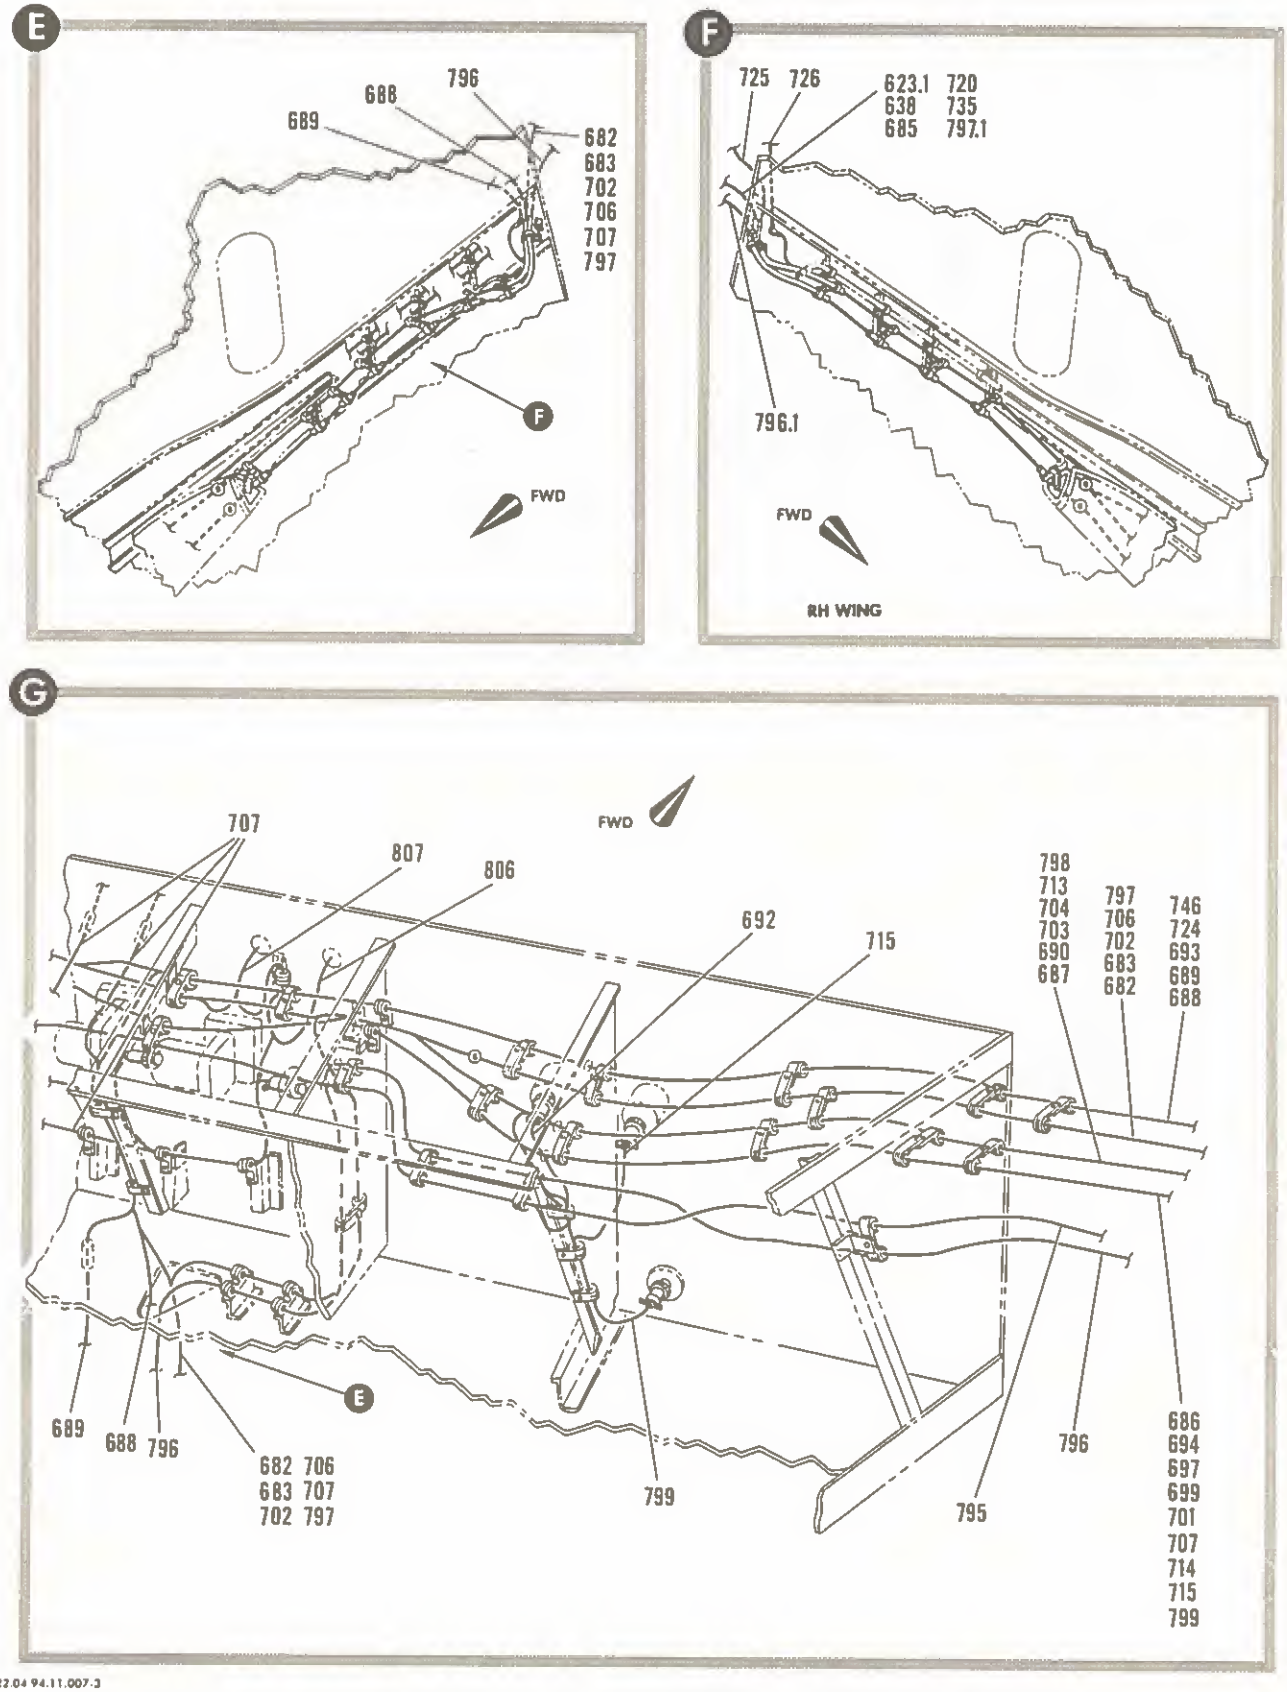

22.04 94.11.007-3


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
5		WING REAR SPAR ELECTRICAL HARNESSES SEE 22-64003			
-813	22-64982	. HARNESS ASSEMBLY, COPILOT FLUX GATE WING TIP TO BOX SECTION TERMINAL STRIP	1		1
-814	22-64984	. HARNESS ASSEMBLY, PILOT FLUX GATE WING TIP TO BOX SECTION TERMINAL STRIP	1		1
-815	22-64645	. HARNESS ASSEMBLY, FLAP ASSYMETRY SWITCH TO PERMANENT SPLICE LH	1		1
	22-64644	. HARNESS ASSEMBLY, FLAP ASSYMMETRY SWITCH TO PERMANENT SPLICERH	1		1
	PT06E8-4S	. . CONNECTOR, CONVAIR 92-40325-006 -V06840-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		4
-816	22-64643	. HARNESS ASSEMBLY, FLAP TRANSMITTER TO PERMANENT SPLICE LH	1		1
	22-64642	. HARNESS ASSEMBLY, FLAP TRANSMITTER TO PERMANENT SPLICE RH	1		1
	320562	. . TERMINAL, CONVAIR 98-34001-001 -V00779-	1		5
	DM9700-7S	. . CONNECTOR, CONVAIR 92-40317-001 -V17419-	1		1
-817	22-64647	. HARNESS ASSEMBLY, MAIN TRANSMITTER PRESSURE SWITCH 1 TO PERMANENT SPLICE OUTBD	1		1
	22-64646	. HARNESS ASSEMBLY, MAIN TRANSMITTER PRESSURE SWITCH 4 TO PERMANENT SPLICE OUTBD	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	320559	. . CONDUCTOR, CONVAIR 98-34001-003 -V00779-	1		2

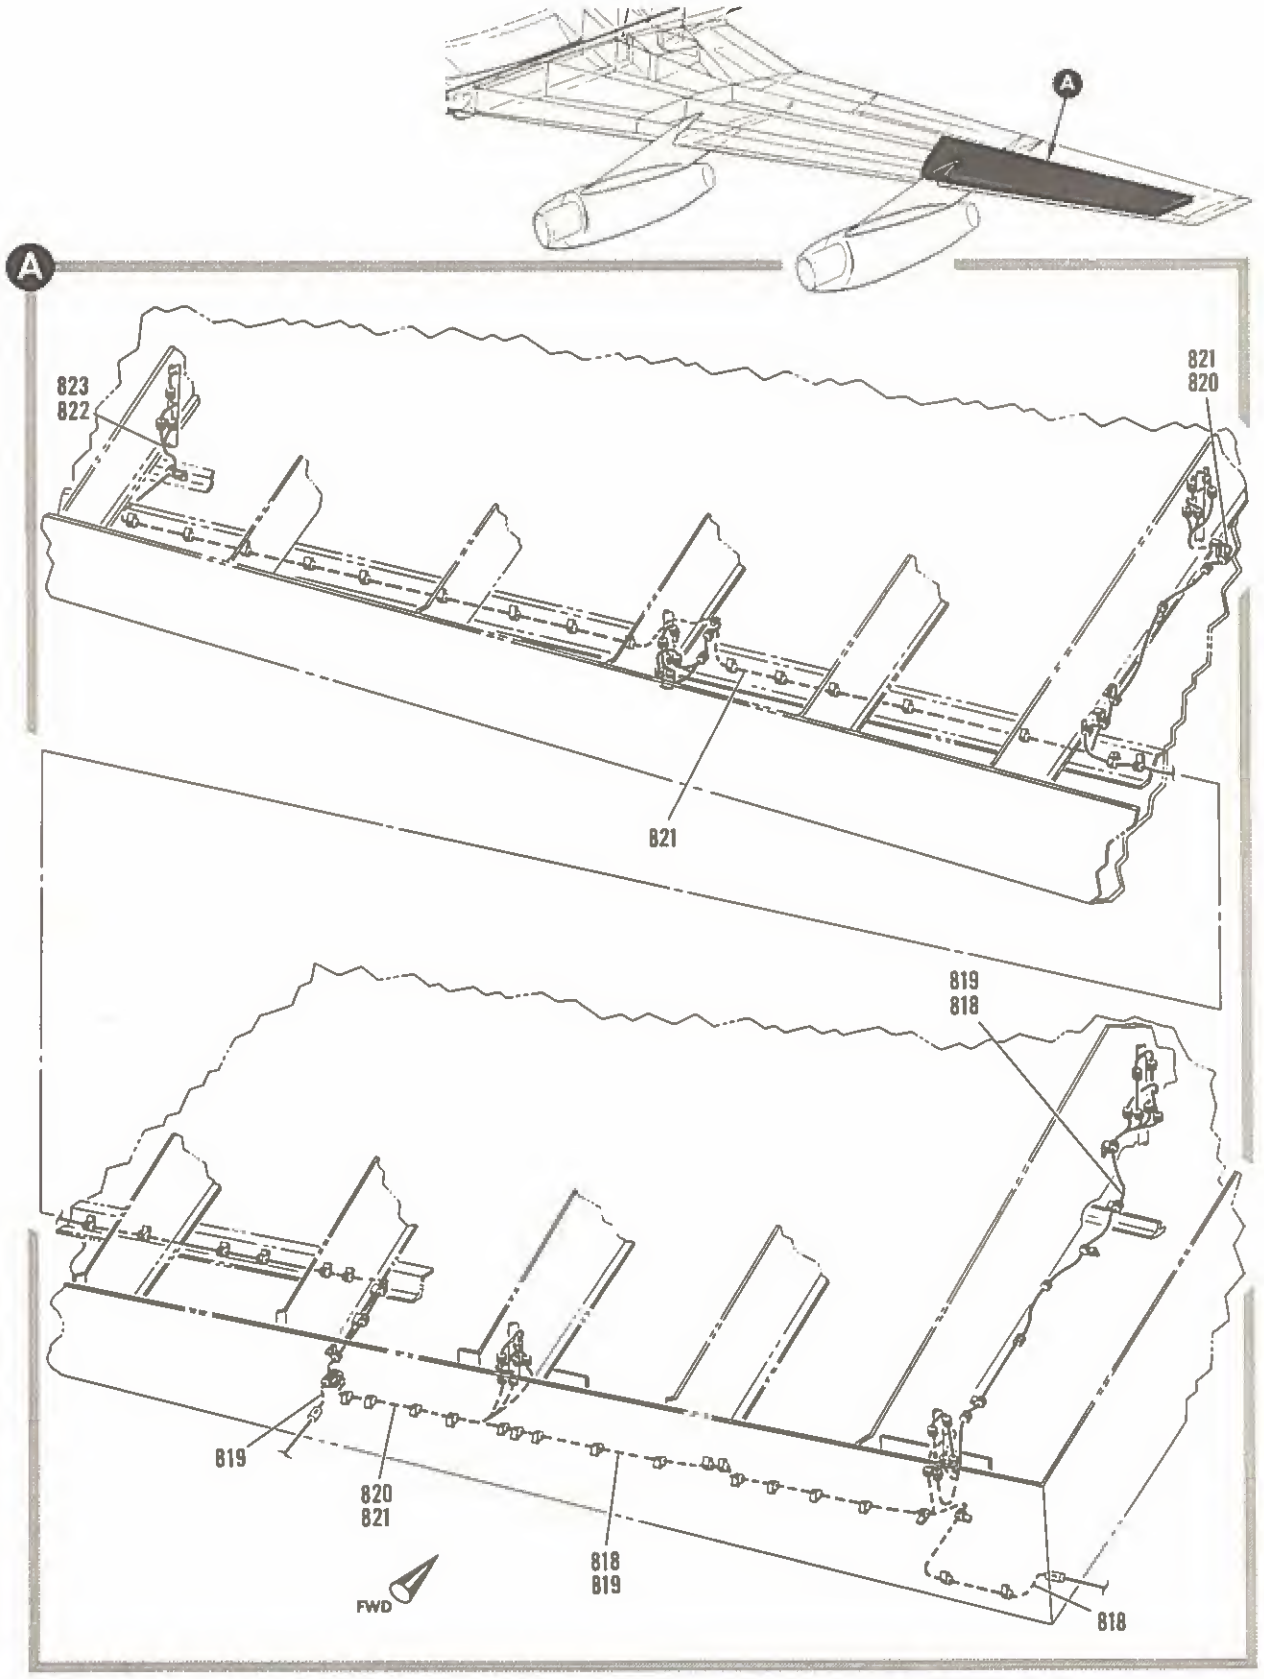

22.04.94.11.008

REPLENISHING FUEL TANK 1 AND 4 WING
ELECTRICAL HARNESSES
FIGURE 6

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
6		REPLENISHING FUEL TANKS 1 AND 4 WING ELECTRICAL HARNESSES SEE 22-64004			
-818	22-64617-5	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 1 PROBES TO TR 12 THRU TR 14 LH	1		1
	22-64618	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 4 PROBES TO TR 12 THRU TR 14 RH	1		1
	1-817-1	. . CONNECTOR, TANK 1 CONVAIR 92-47000-020 -V95712-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		10
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		5
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		5
-819	22-64617	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 1 PROBES TO TR 12 THRU TR 14 LH	1		1
	22-64618-803	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 4 PROBES TO TR 12 THRU TR 14 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		5
	1-916-1	. . CONNECTOR, CONVAIR 92-47000-024 -V95712-	1		1
-820	22-64617-1	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 1 PROBES TO TR 14 THRU TR 18 LH	1		1
	22-64618-5	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 4 PROBES TO TR 14 THRU TR 19 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
-821	22-64617-801	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 1 PROBES TO TR 14 THRU TR 19 LH	1		1
	22-64618-1	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 4 PROBES TO TR 14 THRU TR 19 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		8
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		4
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		4
-822	22-64617-803	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 1 PROBES TO TR 18 THRU TR 19 LH	1		1
	22-64618-3	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 4 PROBES TO TR 18 THRU TR 19 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		4
	GSC175	. . FERRULE, CONVAIR 93-71300-004 -V59730-	1		2
	GSB109	. . FERRULE, CONVAIR 93-71301-002 -V59730-	1		2
-823	22-64617-3	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 1 PROBES TO TR 18 THRU TR 19 LH	1		1
	22-64618-801	. HARNESS ASSEMBLY, REPLENISHING FUEL TANK 4 PROBES TO TR 18 THRU TR 19 RH	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2

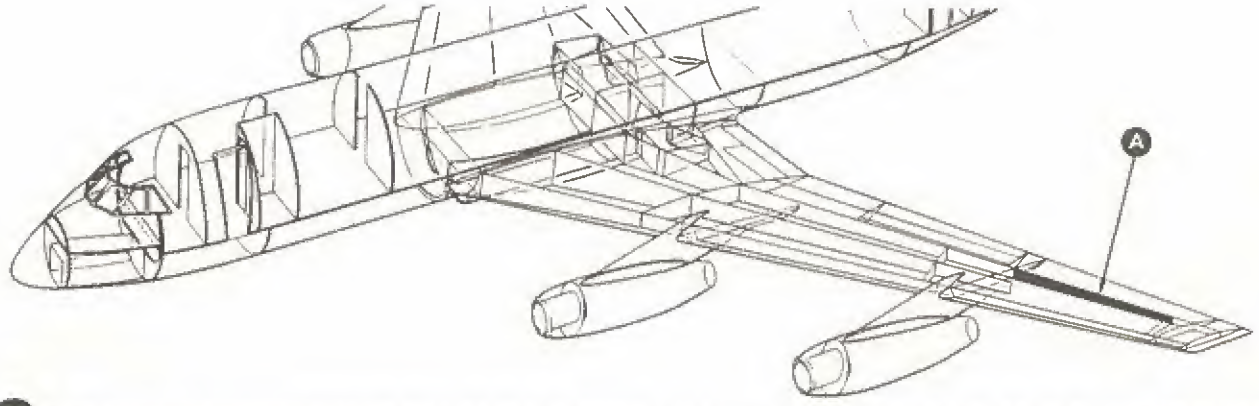
A




A
826
825
824
686
824
825
707
827
828
813
814
FWD
686
824
825
826
701
686
701
707
824
825
826
22.04.94.11.009


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
7		WING TRAILING EDGE OUTBD ELECTRICAL HARNESSES SEE 22-64004			
-824	22-64975	. HARNESS ASSEMBLY, WING TIP LIGHT TO WING TIP TERMINAL STRIP LH	1		1
-825	22-64979	. HARNESS ASSEMBLY, REFUEL VALVES TO BOX SECTION PERMANENT SPLICE LH	1		1
-826	22-64985-1	. HARNESS ASSEMBLY, PERMANENT SPLICE TO LANDING LIGHT LH	A		1
	22-64985	. HARNESS ASSEMBLY, PERMANENT SPLICE TO LANDING LIGHT LH	2	8	1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		AR
	PT06E14-5S	. . CONNECTOR, CONVAIR 92-40325-016 -V06840-	1		1
-827	22-64977-1	. HARNESS ASSEMBLY, COPILOT FLUX GATE RECEPTACLE TO TERMINAL STRIP	1		1
-828	22-64978-1	. HARNESS ASSEMBLY, PILOT FLUX GATE RECEPTACLE TO TERMINAL STRIP	1		1
		A AIRPLANES 1, 9 AND ON			

SECTION V


Chapter 94
ELECTRICAL HARNESSES

POD AND PYLON ELECTRICAL HARNESSES

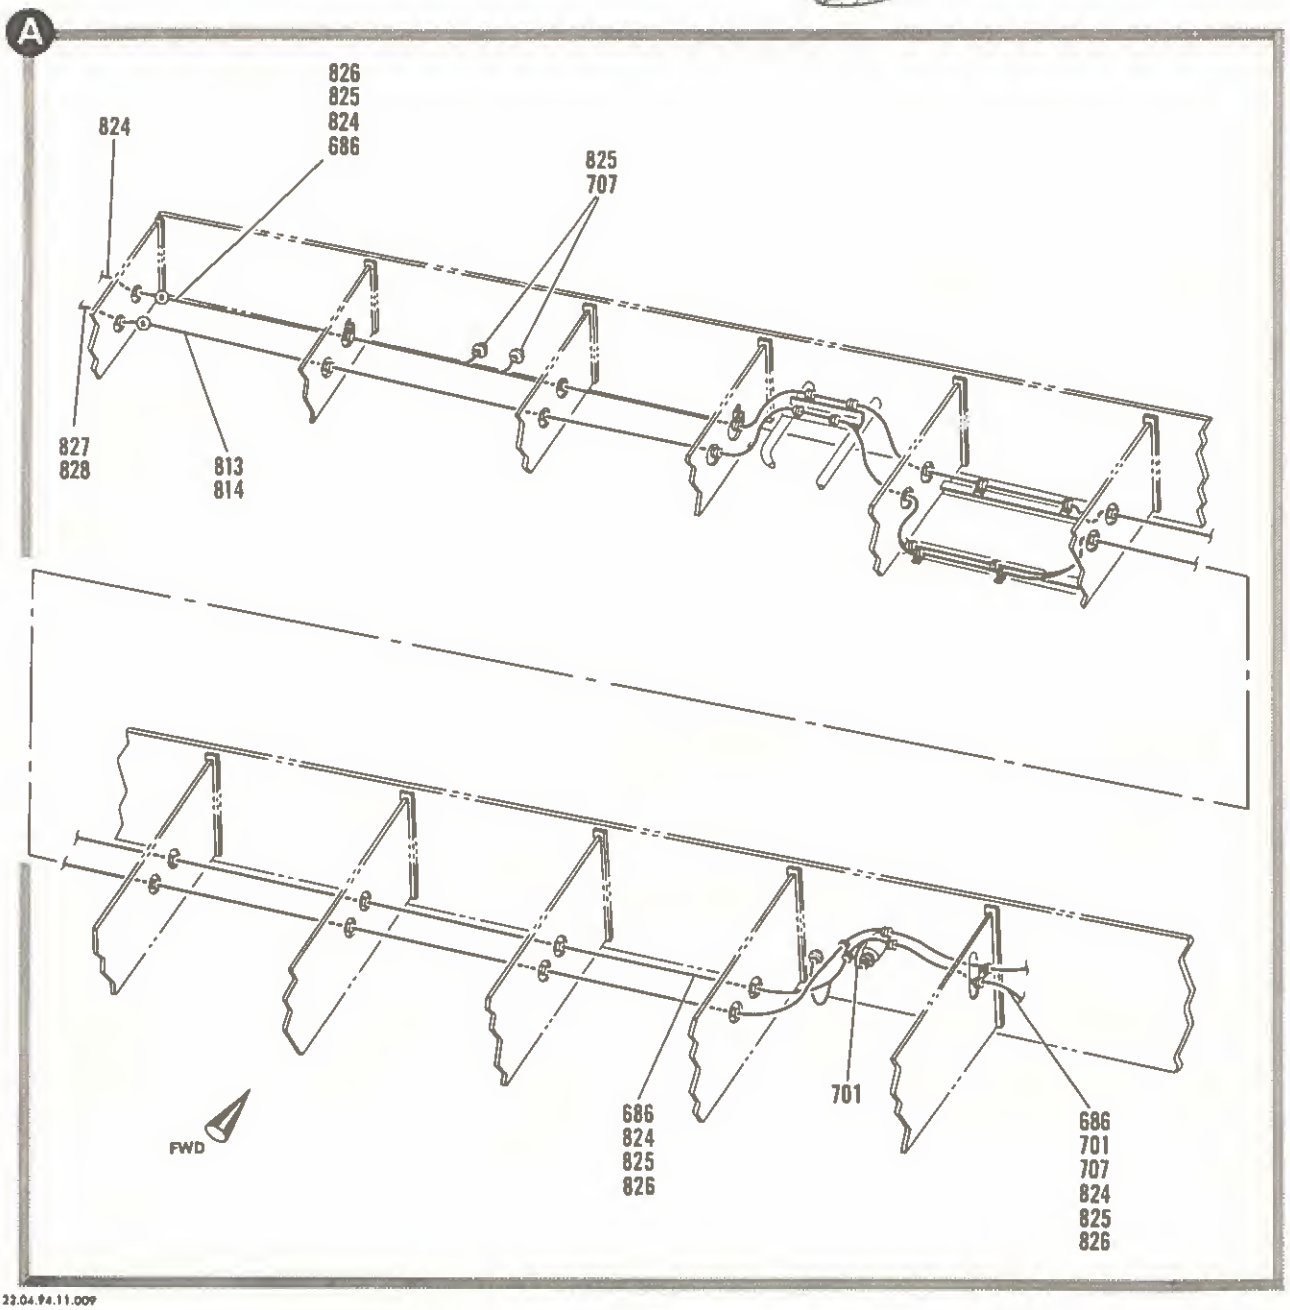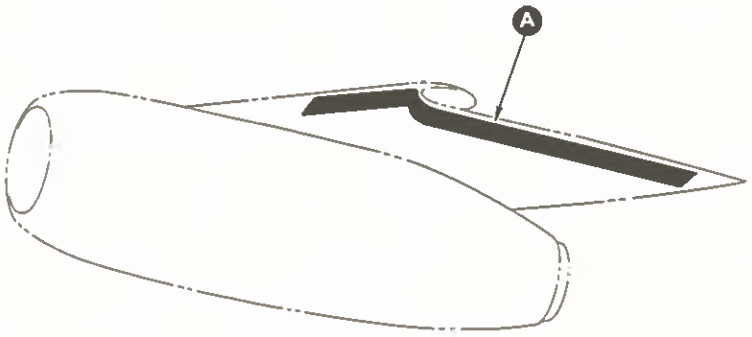

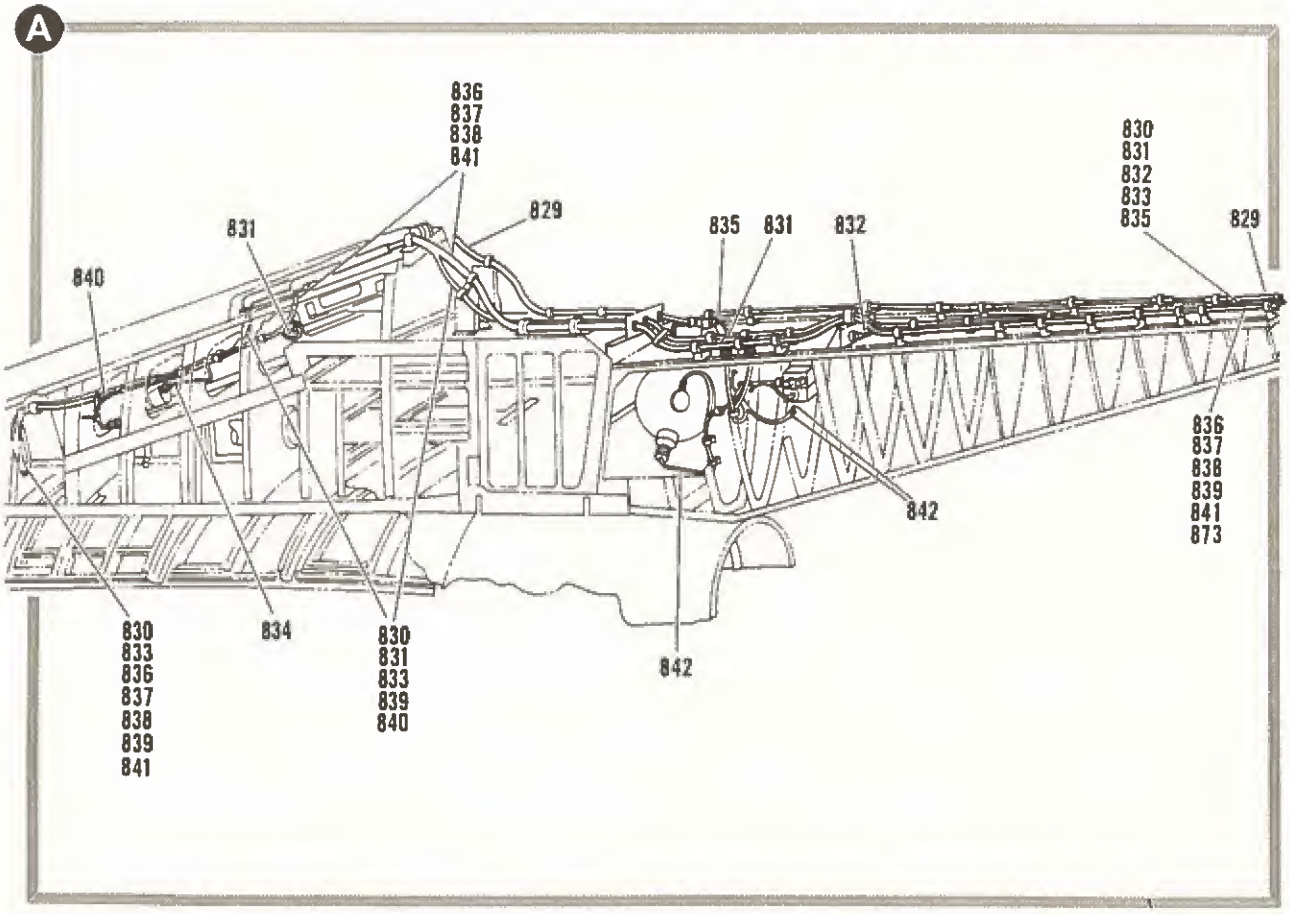

22.04.94 12.001

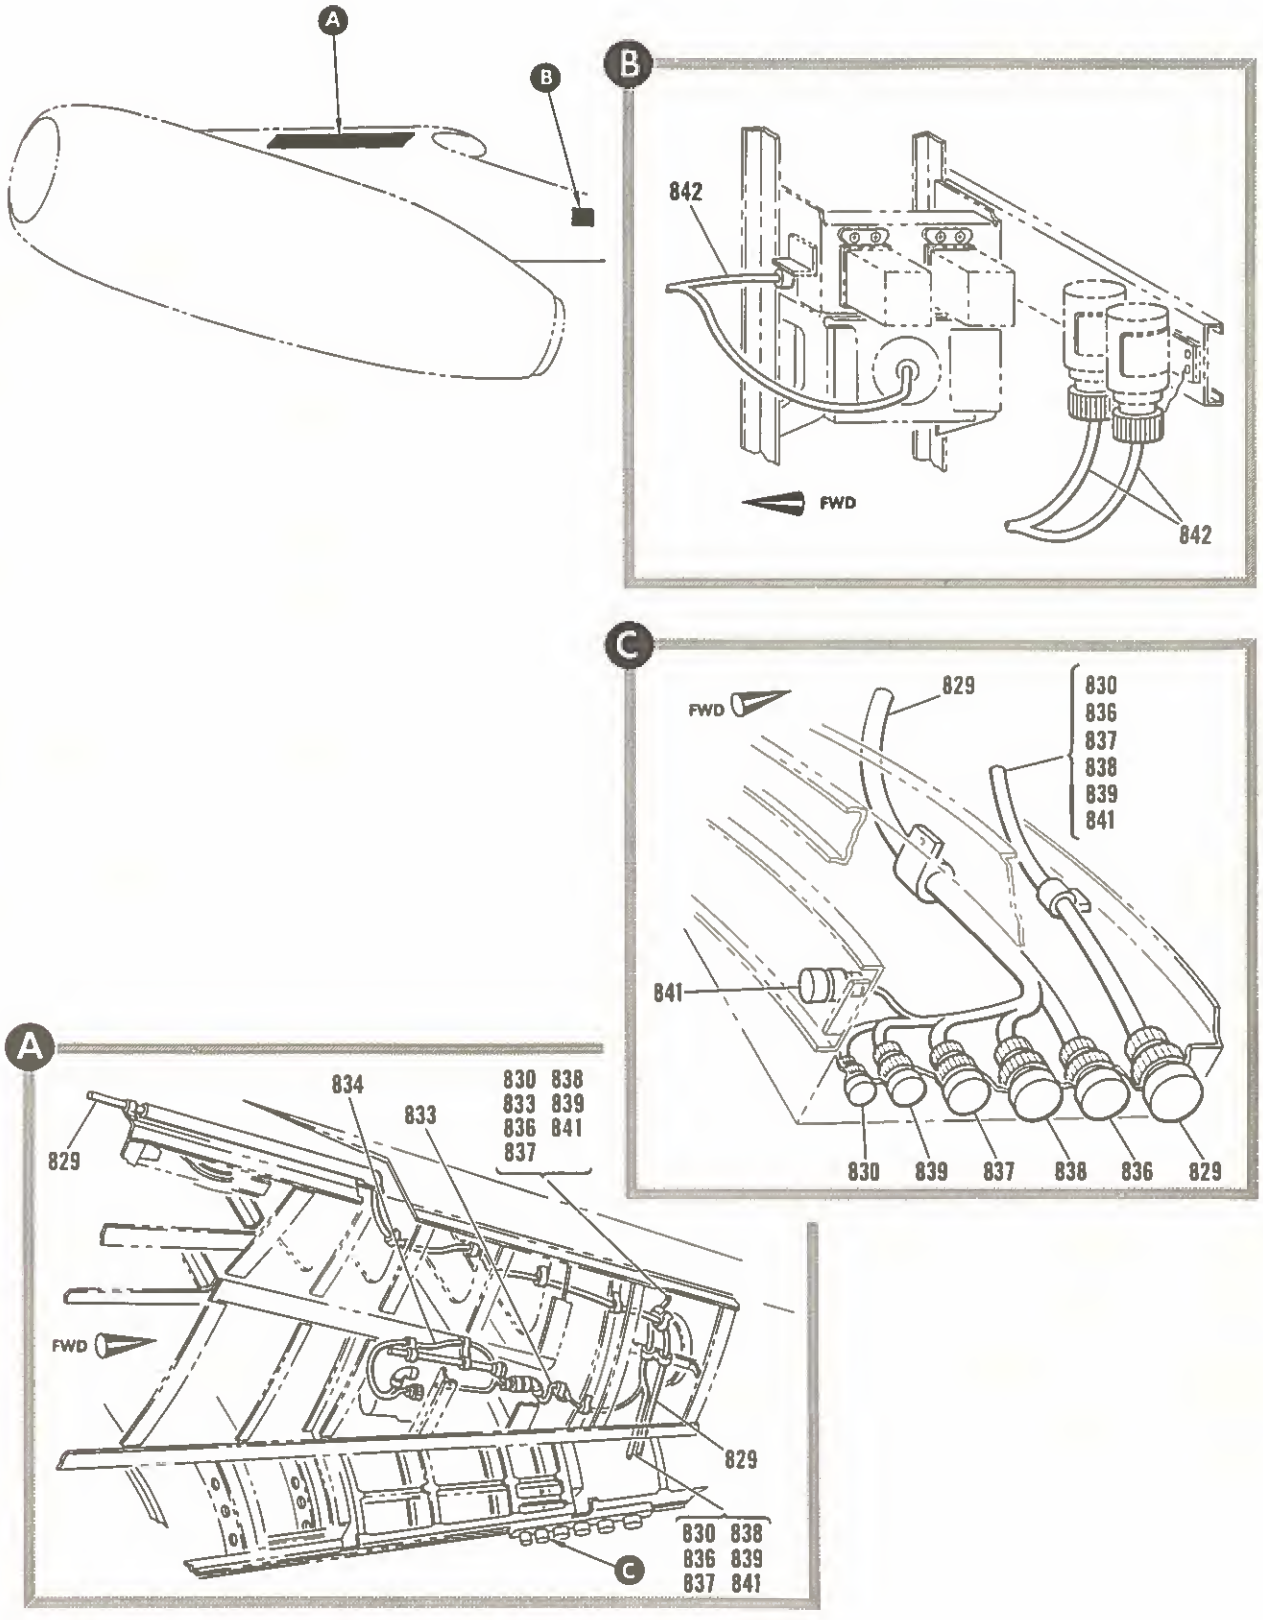


22.04.94.12.001-2


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1		POD AND PYLON 1 ELECTRICAL HARNESSES	1		REF
-829	22-64900	. HARNESS ASSEMBLY, PYLON 1 A C GENERATOR FIREWALL DISCONNECT TO REAR SPAR	1		1
	AN3057-20A	. . ADAPTER	1		1
	YAEV6C-L	. . TERMINAL, CONVAIR 98-90806-006 -V09922-	1		1
	FW00-32-17P	. . CONNECTOR, CONVAIR 92-50292-004 -V71468-	1		1
-830	22-64916	. HARNESS ASSEMBLY, PYLON 1 OIL QUANTITY FIREWALL DISCONNECT TO REAR SPAR	1		1
	1-817-1	. . PLUG, CONVAIR 92-47000-020 -V95712-	1		1
	CA00KE12S3S	. . CONNECTOR, CONVAIR 92-50291-008 -V71468-	1		1
-831	22-64930	. HARNESS ASSEMBLY, PYLON 1 FIRE EXTINGUISHER AND DETECTOR DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	CA00KE22-19S	. . CONNECTOR, CONVAIR 92-50291-005 -V71468-	1		1
-832	22-64934-1	. HARNESS ASSEMBLY, PYLON 1 HYDRAULIC VALVE TO REAR SPAR	A		1
	22-64934	. HARNESS ASSEMBLY, PYLON 1 HYDRAULIC VALVE TO REAR SPAR	2	6	1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E10-6S	. . CONNECTOR, CONVAIR 92-40325-008 -V06840-	1		1
-833	22-64939	. HARNESS ASSEMBLY, PYLON 1 BLEED AIR VALVE FIREWALL DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA06KE14S2S	. . CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		1
-834	22-64938-1	. HARNESS ASSEMBLY, PYLON 1 BLEED AIR VALVE TO FIREWALL DISCONNECT	1		1
	AN3057-4A	. . ADAPTER	1		1
	CA3108KE10SL4S	. . PLUG, CONVAIR 92-40341-007 -V71468-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
-835	22-64947	. HARNESS ASSEMBLY, PYLON 1 FUEL SHUTOFF VALVE TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	CA06KE14S5S	. . CONNECTOR, CONVAIR 92-40337-001 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1

A AIRPLANES 1, 7 AND ON

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -836	22-64904-803	. HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	B		1
	22-64904	. HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	2	6	1
	22-64904-1	. HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	11		1
	AN3057-16A	. . ADAPTER	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
	FW00-28-21P	. . CONNECTOR, CONVAIR 92-50292-002 -V71468-	1		1
-837	22-64952	. HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 2 FIREWALL DISCONNECT TO REAR SPAR	1		1
	AN3057-16A	. . ADAPTER	1		1
	FW00-24-21P	. . CONNECTOR, CONVAIR 92-50292-001 -V71468-	1		1
-838	22-64912	. HARNESS ASSEMBLY, PYLON 1 MISCELLANEOUS 3 FIREWALL DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		8
	CA00KE28-12P	. . CONNECTOR, CONVAIR 92-50291-004 -V71468-	1		1
-839	22-64920	. HARNESS ASSEMBLY, PYLON 1 EXHAUST GAS TEMPERATURE DISCONNECT TO REAR SPAR	1		1
	CA00KE12S3P	. . CONNECTOR, CONVAIR 92-50291-007 -V71468-	1		1
	AN5548-8	. . TERMINAL, CONVAIR 98-90819-008	1		1
	AN5548-7	. . TERMINAL, CONVAIR 98-90819-007	1		1
-840	22-64943	. HARNESS ASSEMBLY, PYLON 1 HYDRAULIC PRESSURE SWITCH TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
	361S3	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	031-0550-000	. . CONTACT, CONVAIR 92-63901-009 -V71468-	1		3
-841	22-64961-1	. HARNESS ASSEMBLY, PYLON 1 FIRE DETECTOR FIREWALL TO SPLICE	1		1
	35303-2	. . FITTING, END MFR TO SPEC CONT 22-02427-16 -V73168-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA00KE14S5S	. . CONNECTOR, CONVAIR 92-50291-006 -V71468-	1		1
		B AIRPLANES 1 AND 7 THRU 10			

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
1 -842	22-64929	. HARNESS ASSEMBLY, PYLON 1 FIRE EXTINGUISHER AND DETECTOR CONTROL UNIT TO PYLON DISCONNECT	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	S0-1015-4309	. . SOCKET, CONVAIR 98-24506-006 -V00614-	1		2
	CA06KE14S2S	. . CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		2
	CA06KE22-19P	. . CONNECTOR, CONVAIR 92-40327-010 -V71468-	1		1
	CA06KE10S2S	. . CONNECTOR, CONVAIR 92-40327-016 -V71468-	1		2
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
	320551	. . TERMINAL, CONVAIR 98-90805-028 -V00779-	1		2
	320552	. . TERMINAL, CONVAIR 98-90805-026 -V71468-	1		9
	031-0550-000	. . CONTACT, CONVAIR 92-63901-009 -V71468-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	22-61342-279	. . NAMEPLATE, OVERHEAT TEST REC	1		1
	22-61342-281	. . NAMEPLATE, FIRE TEST REC	1		1
-843	22-65507-3	. HARNESS ASSEMBLY, POD 1 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	C		1
	22-65507	. HARNESS ASSEMBLY, POD 1 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	2	7	1
	22-65507-801	. HARNESS ASSEMBLY, POD 1 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	11		1
	CT00E24-21P	. . CONNECTOR, CONVAIR 92-50293-016 -V71468-	1		1
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
	031-0614-000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		9
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1

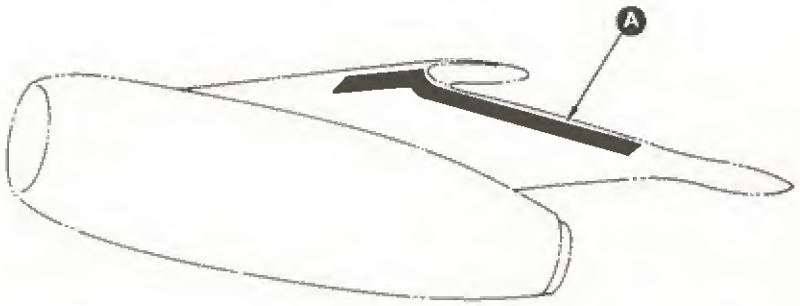

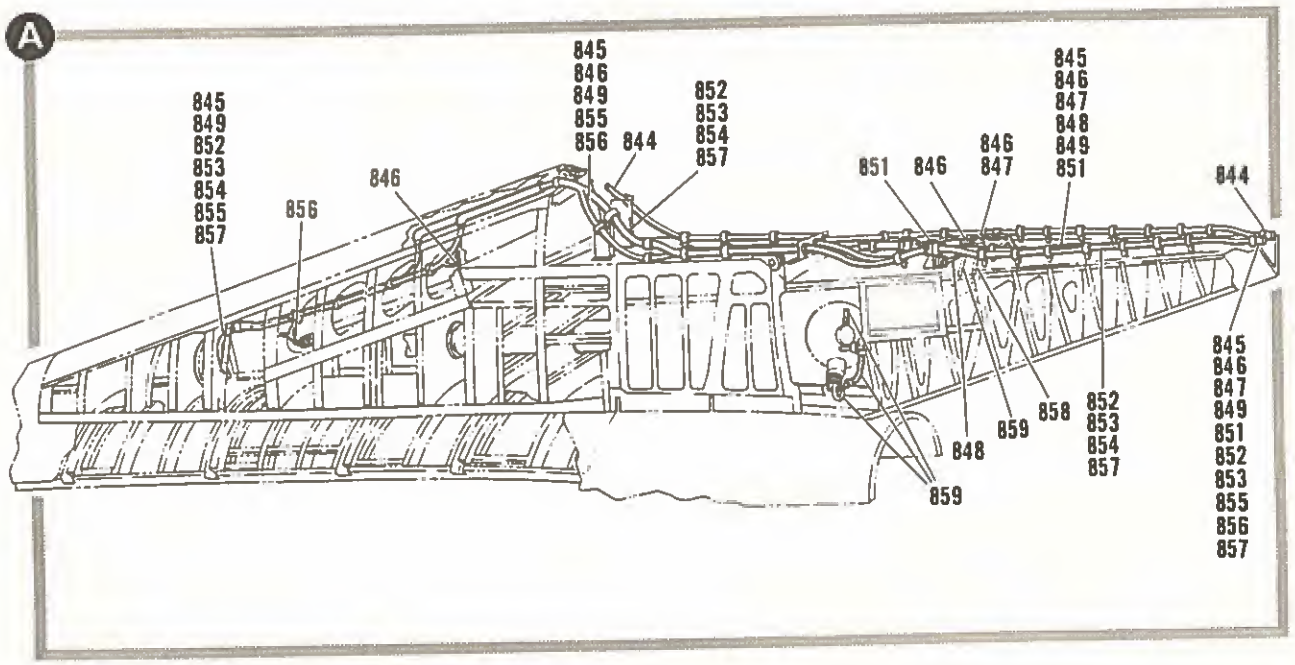


22.04.94.12.002-1


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -852	22-64905-803	. HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	B		1
	22-64905	. HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	2	6	1
	22-64905-1	. HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	11		1
	AN3057-16A	. . ADAPTER	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V71468-	1		1
	FW00-28-21P	. . CONNECTOR, CONVAIR 92-50292-002 -V71468-	1		1
-853	22-64953	. HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 2 FIREWALL DISCONNECT TO REAR SPAR	1		1
	AN3057-16A	. . ADAPTER	1		1
	FW00-24-21P	. . CONNECTOR, CONVAIR 92-50292-001 -V71468-	1		1
-854	22-64913	. HARNESS ASSEMBLY, PYLON 2 MISCELLANEOUS 3 FIREWALL DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		8
	CA00KE28-12P	. . CONNECTOR, CONVAIR 92-50291-004 -V71468-	1		1
-855	22-64921	. HARNESS ASSEMBLY, PYLON 2 EXHAUST GAS TEMPERATURE FIREWALL DISCONNECT TO REAR SPAR	1		1
	CA00KE12S3P	. . CONNECTOR, CONVAIR 92-50291-007 -V71468-	1		1
	AN5548-8	. . TERMINAL, CONVAIR 98-90819-008	1		1
	AN5548-7	. . TERMINAL, CONVAIR 98-90819-007	1		1
-856	22-64944	. HARNESS ASSEMBLY, PYLON 2 HYDRAULIC PRESSURE SWITCH TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	031-0550-000	. . CONTACT, CONVAIR 92-63901-009 -V71468-	1		3
-857	22-64962-1	. HARNESS ASSEMBLY, PYLON 2 FIRE DETECTOR FIREWALL TO SPLICE	1		1
	35303-2	. . FITTING, END MFR TO SPEC CONT 22-02427-16 -V73168-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA00KE14S5S	. . CONNECTOR, CONVAIR 92-50291-006 -V71468-	1		1


B AIRPLANES 1 AND 7 THRU 10


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2 -858	22-64951-1	. HARNESS ASSEMBLY, PYLON 2 REFUEL DEFUEL DISCONNECT TO PANEL	C		1
	22-64951	. HARNESS ASSEMBLY, PYLON 2 REFUEL DEFUEL DISCONNECT TO PANEL	2	7	1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		3
	36149	. . TERMINAL, CONVAIR 98-90805-027 -V00779-	1		14
	36153	. . TERMINAL, CONVAIR 98-90805-027 -V00779-	1		2
	165-10-1000	. . CONNECTOR, CONVAIR 92-40058-015 -V02660-	1		2
	CT06E28-2S	. . CONNECTOR, CONVAIR 92-40334-010 -V71468-	1		1
-859	22-64929-1	. HARNESS ASSEMBLY, PYLON 2 FIRE EXTINGUISHER AND DETECTOR CONTROL UNIT TO PYLON DISCONNECT	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	SO-1014-4309	. . SOCKET, CONVAIR 98-24506-006 -V00614-	1		2
	CA06KE14S2S	. . CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		2
	CA06KE22-19P	. . CONNECTOR, CONVAIR 92-40327-010 -V71468-	1		1
	CA06KE10S2S	. . CONNECTOR, CONVAIR 92-40327-016 -V71468-	1		2
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
	320551	. . TERMINAL, CONVAIR 98-90805-028 -V00779-	1		2
	320552	. . TERMINAL, CONVAIR 98-90805-026 -V00779-	1		9
	031-0550-000	. . CONTACT, CONVAIR 92-63901-009 -V71468-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	22-61342-279	. . NAMEPLATE, OVERHEAT TEST REC	1		1
	22-61342-281	. . NAMEPLATE, FIRE TEST REC	1		1
-860	22-65507-3	. HARNESS ASSEMBLY, POD 2 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	D		1
	22-65507	. HARNESS ASSEMBLY, POD 2 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	2	7	1
	22-65507-801	. HARNESS ASSEMBLY, POD 2 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	11		1
	CT00E24-21P	. . CONNECTOR, CONVAIR 92-50293-016 -V71468-	1		1
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
	031-0614-000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		9
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1

C AIRPLANES 1, 8 AND ON
D AIRPLANES 1 AND 8 THRU 10

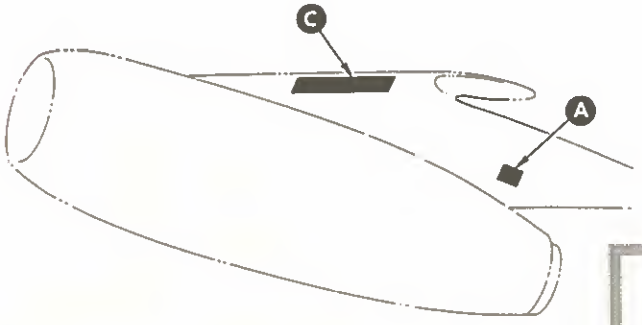

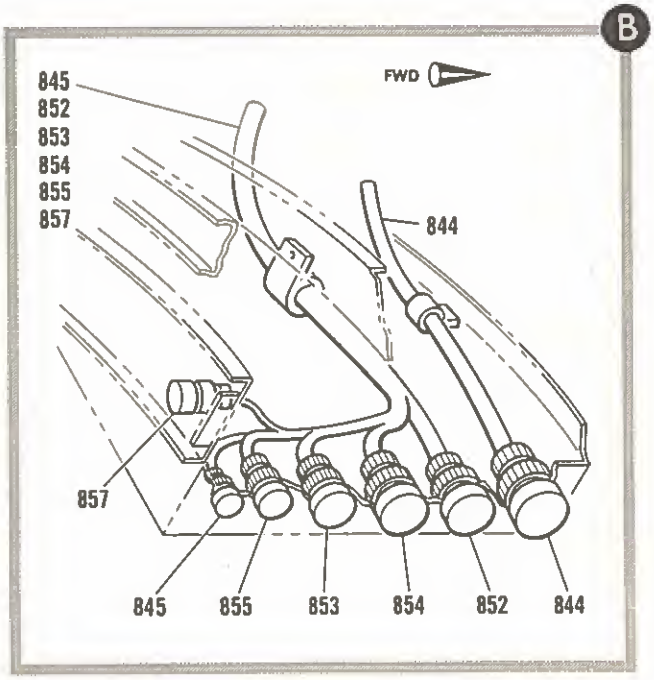

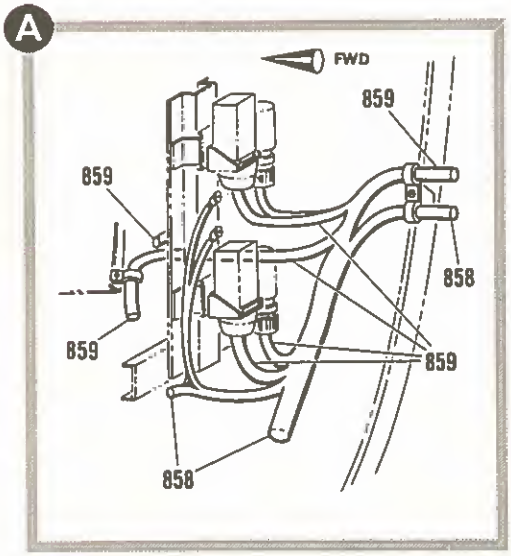

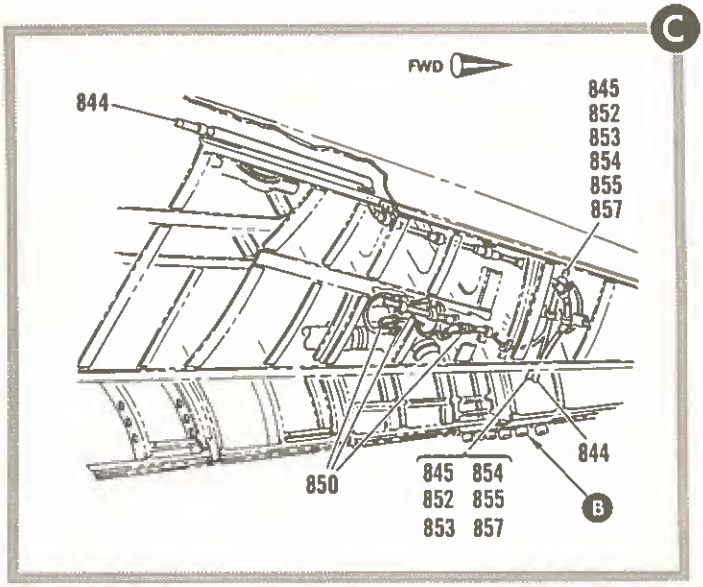

22.04 94.12.002 2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
2		POD AND PYLON 2 ELECTRICAL HARNESSES	1		REF
-844	22-64901	. HARNESS ASSEMBLY, PYLON 2 A C GENERATOR FIREWALL DISCONNECT TO REAR SPAR	1		1
	AN3057-20A	. . ADAPTER	1		1
	YAEV6C-6	. . TERMINAL, CONVAIR 98-90806-006 -V09922-	1		1
	FW00-32-17A	. . CONNECTOR, CONVAIR 92-50292-004 -V71468-	1		1
-845	22-64917	. HARNESS ASSEMBLY, PYLON 2 OIL QUANTITY FIREWALL DISCONNECT TO REAR SPAR	1		1
	1-817-1	. . PLUG, CONVAIR 92-47000-020 -V95712-	1		1
	CA00KE12S3S	. . CONNECTOR, CONVAIR 92-50291-008 -V71468-	1		1
-846	22-64931	. HARNESS ASSEMBLY, PYLON 2 FIRE EXTINGUISHER AND DETECTOR DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	CA00KE22-19S	. . CONNECTOR, CONVAIR 92-50291-005 -V71468-	1		1
-847	22-64925	. HARNESS ASSEMBLY, PYLON 2 REFUEL DEFUEL PANEL DISCONNECT TO REAR SPAR	1		1
	CT00E-28-2P	. . CONNECTOR, CONVAIR 92-50293-004 -V71468-	1		1
-848	22-64935-1	. HARNESS ASSEMBLY, PYLON 2 HYDRAULIC VALVE TO REAR SPAR	A		1
	22-64935	. HARNESS ASSEMBLY, PYLON 2 HYDRAULIC VALVE TO REAR SPAR	2	6	1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	PT06E10-6S	. . CONNECTOR, CONVAIR 92-40325-008 -V06340-	1		1
-849	22-64940	. HARNESS ASSEMBLY, PYLON 2 BLEED AIR VALVE FIREWALL DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA06KE14S2S	. . CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		1
-850	22-64938-1	. HARNESS ASSEMBLY, PYLON 2 BLEED AIR VALVE TO FIREWALL DISCONNECT	1		1
	AN3057-4A	. . ADAPTER	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA3108KE10SL4S	. . PLUG, CONVAIR 92-40341-007 -V71468-	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	CA00KE14S2P	. . CONNECTOR, CONVAIR 92-50291-001 -V71468-	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
-851	22-64948	. HARNESS ASSEMBLY, PYLON 2 FUEL SHUTOFF VALVE TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	CA06KE14S5S	. . CONNECTOR, CONVAIR 92-40327-001 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1


A AIRPLANES 1, 7 AND ON


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3 -869	22-64906-1	. HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	B		1
	22-64906	. HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	2	6	1
	22-64906-3	. HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	11		1
	AN3057-16A	. . ADAPTER	1		1
	320567	. . SPLICE, CONVAIR 98-34001-001 -V71468-	1		1
	FW00-28-21P	. . CONNECTOR, CONVAIR 92-50292-002 -V71468-	1		1
-870	22-64954	. HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 2 FIREWALL DISCONNECT TO REAR SPAR	1		1
	AN3057-16A	. . ADAPTER	1		1
	FW00-24-21P	. . CONNECTOR, CONVAIR 92-50292-001 -V71468-	1		1
-871	22-64914	. HARNESS ASSEMBLY, PYLON 3 MISCELLANEOUS 3 FIREWALL DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		8
	CA00KE28-12P	. . CONNECTOR, CONVAIR 92-50291-004 -V71468-	1		1
-872	22-64922	. HARNESS ASSEMBLY, PYLON 3 EXHAUST GAS TEMPERATURE FIREWALL DISCONNECT TO REAR SPAR	1		1
	CA00KE12S3P	. . CONNECTOR, CONVAIR 92-50291-007 -V71468-	1		1
	AN5548-8	. . TERMINAL, CONVAIR 98-90819-008	1		1
	AN5548-7	. . TERMINAL, CONVAIR 98-90819-007	1		1
-873	22-64945	. HARNESS ASSEMBLY, PYLON 3 HYDRAULIC PRESSURE SWITCH TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	031-0550-000	. . CONTACT, CONVAIR 92-63901-009 -V00779-	1		3
-874	22-64963-1	. HARNESS ASSEMBLY, PYLON 3 FIRE DETECTOR FIREWALL TO SPLICE	1		1
	35303-2	. . FITTING, END MFR TO SPEC CONT 22-02427-16 -V73168-	1		1
	225-0017-000	. . PLUG, CONVAIR 92-50291-006 -V71468-	1		2
	CA00KE14S5S	. . CONNECTOR, CONVAIR 92-50291-006 -V71468-	1		1

B AIRPLANES 1 AND 7 THRU 10


FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
3 -875	22-64951-1	. HARNESS ASSEMBLY, PYLON 3 REFUEL DEFUEL DISCONNECT TO PANEL	C		1
	22-64951	. HARNESS ASSEMBLY, PYLON 3 REFUEL DEFUEL DISCONNECT TO PANEL	2	7	1
	36157	. . TERMINAL, CONVAIR 98-90805-008 -V00779-	1		3
	36149	. . TERMINAL, CONVAIR 98-90805-027 -V00779-	1		14
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		2
	165-10-1000	. . CONNECTOR, 92-40058-015 -V02660-	1		2
	CT06F28-2S	. . CONNECTOR, CONVAIR 92-40334-010 -V71468-	1		1
-876	22-64929-811	. HARNESS ASSEMBLY, PYLON 3 FIRE EXTINGUISHER AND DETECTOR CONTROL UNIT TO PYLON DISCONNECT	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	SO-1014-4309	. . SOCKET, CONVAIR 98-24506-006 -V00614-	1		2
	CA06KE14S2S	. . CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		2
	CA06KE22-19P	. . CONNECTOR, CONVAIR 92-40327-010 -V71468-	1		1
	CA06KE10S2S	. . CONNECTOR, CONVAIR 92-40327-016 -V71468-	1		2
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		1
	320551	. . TERMINAL, CONVAIR 98-90805-028 -V00779-	1		2
	320552	. . TERMINAL, CONVAIR 98-90805-028 -V00779-	1		9
	031-0550-000	. . CONTACT, CONVAIR 92-63901-009 -V71468-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	22-61342-279	. . NAMEPLATE, OVERHEAT TEST REC	1		1
	22-61342-281	. . NAMEPLATE, FIRE TEST REC	1		1
-877	22-64966	. HARNESS ASSEMBLY, PYLON 3 FIRE EXTINGUISHER GAGE TO DISCONNECT	1		1
	031-0614-000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		4
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
-878	22-65507-3	. HARNESS ASSEMBLY, POD 3 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	D		1
	22-65507	. HARNESS ASSEMBLY, POD 3 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	2	7	1
	22-65507-801	. HARNESS ASSEMBLY, POD 3 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	11		1
	CT00E24-21P	. . CONNECTOR, CONVAIR 92-50293-016 -V71468-	1		1
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
	EX06-12SL3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
	031-0614-000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		9
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1

C AIRPLANES 1, 8 AND ON
D AIRPLANES 1 AND 8 THRU 10

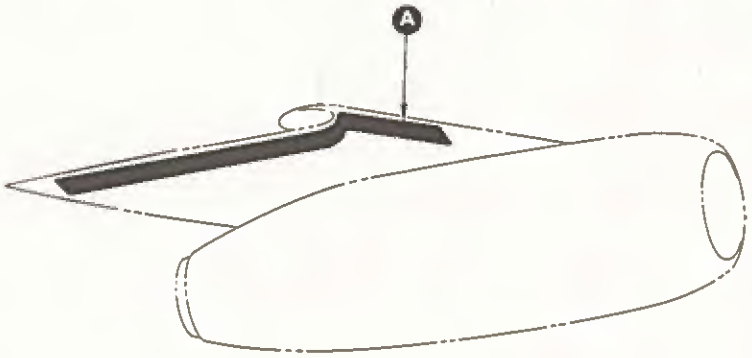

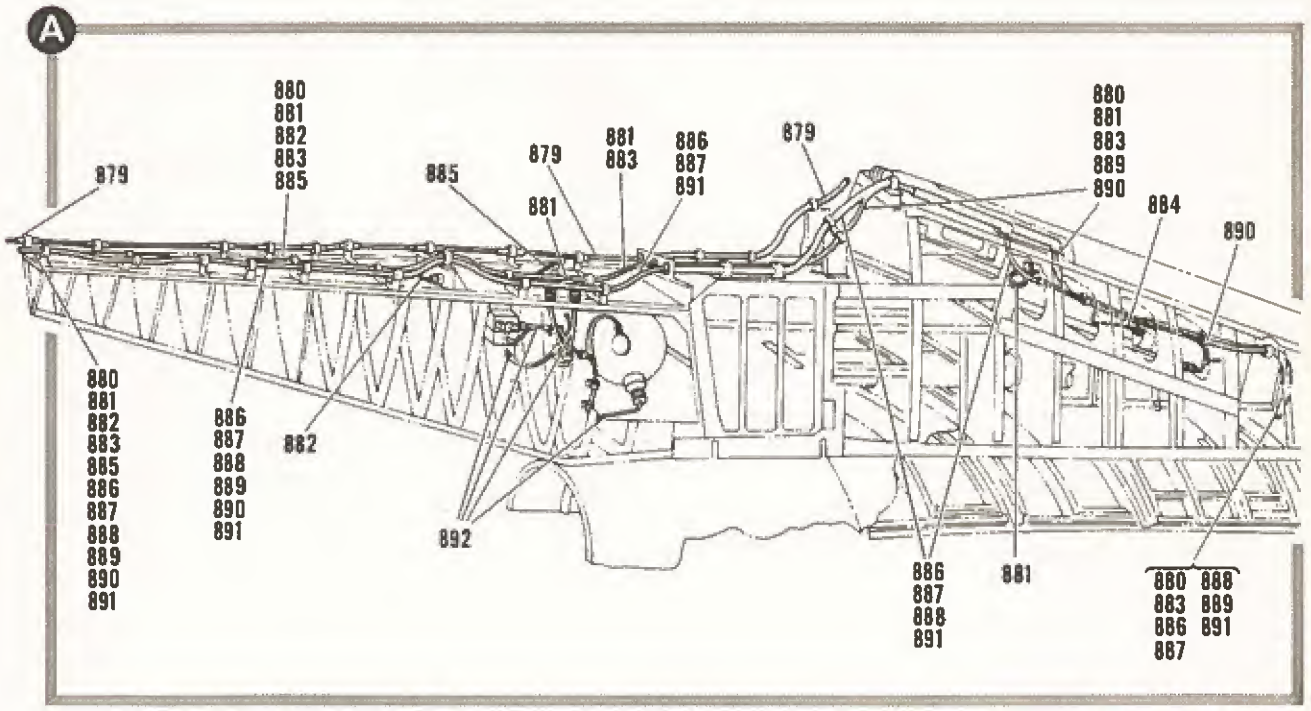

22.04.94.12.004-1

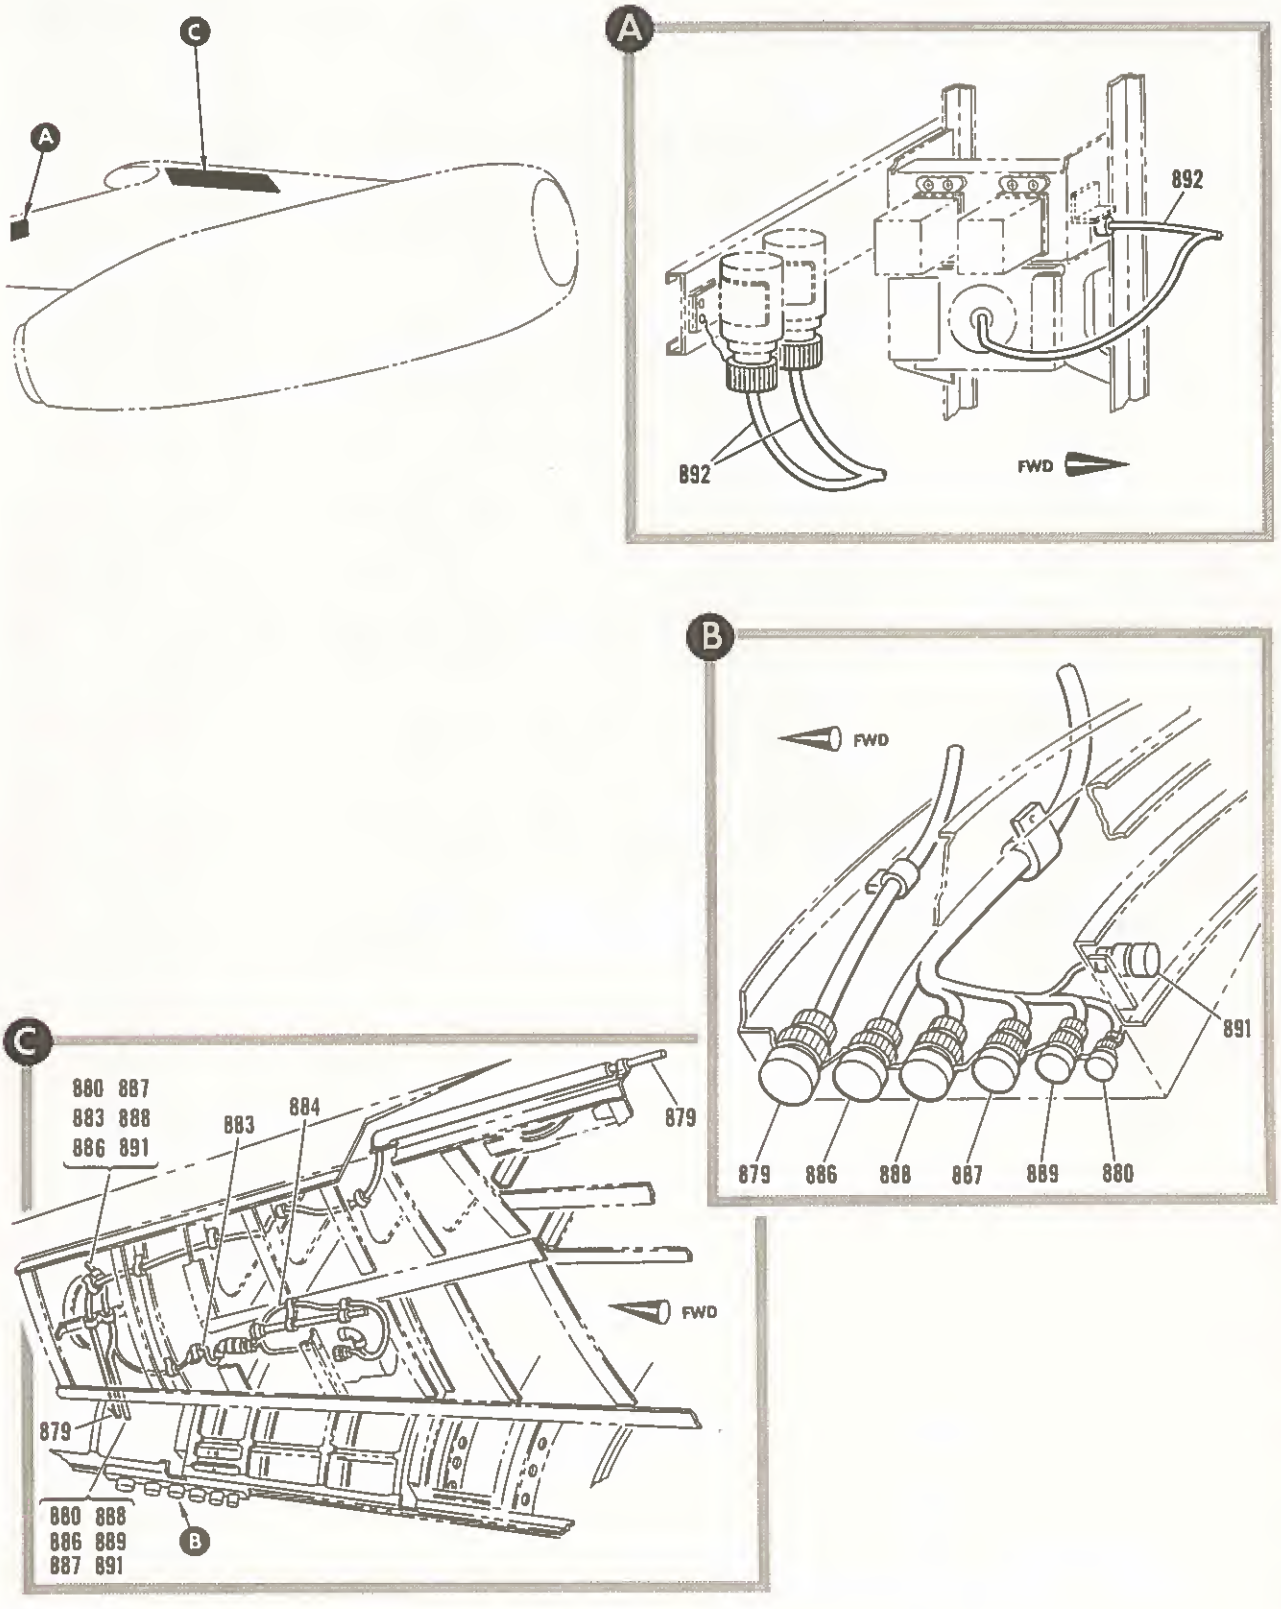

22.04 94.12.004-2

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4		POD AND PYLON 4 ELECTRICAL HARNESSES	1		REF
-879	22-64903	. HARNESS ASSEMBLY, PYLON 4 AC GENERATOR FIREWALL DISCONNECT TO REAR SPAR	1		1
	AN3057-20A	. . ADAPTER	1		1
	YAEV6CL	. . TERMINAL, CONVAIR 98-90806-006 -V09722-	1		1
	FW00-32-17P	. . CONNECTOR, CONVAIR 92-50292-004 -V71648-	1		1
-880	22-64919	. HARNESS ASSEMBLY, PYLON 4 OIL QUANTITY FIREWALL DISCONNECT TO REAR SPAR	1		1
	1-817-1	. . PLUG, CONVAIR 92-47000-020 -V95712-	1		1
	CA00KE12S3S	. . CONNECTOR, CONVAIR 92-50291-008 -V71648-	1		1
-881	22-64933	. HARNESS ASSEMBLY, PYLON 4 FIRE EXTINGUISHER AND DETECTOR PYLON DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA00KE22-19S	. . CONNECTOR, CONVAIR 92-50291-005 -V71468-	1		1
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
-882	22-64937-1	. HARNESS ASSEMBLY, PYLON 4 HYDRAULIC VALVE TO REAR SPAR	A		1
	22-64937	. HARNESS ASSEMBLY, PYLON 4 HYDRAULIC VALVE TO REAR SPAR	2	6	1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	PT06E10-6S	. . CONNECTOR, CONVAIR 92-40325-008 -V06810-	1		1
	36153	. . TERMINALS, CONVAIR 98-90805-003 -V00779-	1		1
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
-883	22-64942	. HARNESS ASSEMBLY, PYLON 4 BLEED AIR VALVE FIREWALL DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA0KE14S2S	. . CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		1
-884	22-64938-1	. HARNESS ASSEMBLY, PYLON 4 BLEED AIR VALVE TO FIREWALL DISCONNECT	1		1
	MS3057-4A	. . ADAPTER	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA3108KE10SL4S	. . PLUG, CONVAIR 92-40341-007 -V71468-	1		1
	320574	. . TERMINAL, CONVAIR 98-90805-010 -V00779-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00779-	1		1
	CA00KE14S2P	. . CONNECTOR, CONVAIR 92-50291-001 -V71468-	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003	1		1
-885	22-64950	. HARNESS ASSEMBLY, PYLON 4 FUEL SHUTOFF VALVE TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	CA06KE14S5S	. . CONNECTOR, CONVAIR 92-40327-001 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V71468-	1		1

A AIRPLANES 1, 7 AND ON

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 -886	22-64907-1	. HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	B		1
	22-64907	. HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	2	6	1
	22-64907-3	HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 1 FIREWALL DISCONNECT TO REAR SPAR	11		1
	AN3057-16A	. . ADAPTER	1		1
	FW00-28-21P	. . CONNECTOR, CONVAIR 92-50292-002 -V71468-	1		1
	320570	. . SPLICE, CONVAIR 98-34001-002 -V00779-	1		1
-887	22-64955	. HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 2 FIREWALL DISCONNECT TO REAR SPAR	1		1
	AN3057-16A	. . ADAPTER	1		1
	FW00-24-21P	. . CONNECTOR, CONVAIR 98-50292-001 -V71468-	1		1
-888	22-64915	. HARNESS ASSEMBLY, PYLON 4 MISCELLANEOUS 3 FIREWALL DISCONNECT TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		8
	CA00KE28-12P	. . CONNECTOR, CONVAIR 92-50291-004 -V71468-	1		1
-889	22-64923	. HARNESS ASSEMBLY, PYLON 4 EXHAUST GAS TEMPERATURE FIREWALL DISCONNECT TO REAR SPAR	1		1
	CA00KE12S3P	. . CONNECTOR, CONVAIR 92-50291-007 -V71468-	1		1
	AN5548-8	. . TERMINAL, CONVAIR 98-90819-008	1		1
	AN5548-7	. . TERMINAL, CONVAIR 98-90819-007	1		1
-890	22-64946	. HARNESS ASSEMBLY, PYLON 4 HYDRAULIC PRESSURE SWITCH TO REAR SPAR	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		1
	EX06-14S7S	. . CONNECTOR, CONVAIR 92-40332-006 -V71468-	1		1
	36153	. . TERMINAL, CONVAIR 98-90805-003 -V00729-	1		1
	031-0550-000	. . CONTACT, CONVAIR 92-63901-009 -V71468-	1		3
-891	22-64964-1	. HARNESS ASSEMBLY, PYLON 4 FIRE DETECTOR FIREWALL TO SPLICE	1		1
	35303-2	. . FITTING, END MFR TO SPEC CONT 22-02427-16 -V73168-	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	CA00KE14S5S	. . CONNECTOR, CONVAIR 92-50291-006 -V71468-	1		1

B AIRPLANES 1 AND 7 THRU 10

FIGURE AND INDEX NO.	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6	USAGE CODE FROM	USAGE CODE TO	UNITS PER ASSEMBLY
4 -892	22-64929-809	. HARNESS ASSEMBLY, PYLON 4 FIRE EXTINGUISHER AND DETECTOR CONTROL UNIT TO PYLON DISCONNECT	1		1
	MS3100R10SL4P	. . RECEPTACLE	1		1
	225-0017-000	. . PLUG, CONVAIR 96-91200-007 -V71468-	1		2
	S0-1015-4309	. . SOCKET, CONVAIR 98-24506-006 -V00614-	1		2
	CA06KE14S2S	. . CONNECTOR, CONVAIR 92-40327-004 -V71468-	1		2
	CA06KE22-19P	. . CONNECTOR, CONVAIR 92-40327-010 -V71468-	1		1
	CA06KE10S2S	. . CONNECTOR, CONVAIR 92-40327-016 -V71468-	1		2
	320551	. . TERMINAL, CONVAIR 98-90805-002 -V00779-	1		2
	320552	. . TERMINAL, CONVAIR 98-90805-026 -V00779-	1		9
	031-0550-000	. . CONTACT, CONVAIR 92-63901-009 -V71468-	1		2
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		3
	320559	. . SPLICE, CONVAIR 98-34001-003 -V00779-	1		4
	22-61342-279	. . NAMEPLATE, OVERHEAT TEST REC	1		1
	22-61342-181	. . NAMEPLATE, FIRE TES REC	1		1
-893	22-64966	. HARNESS ASSEMBLY, PYLON 4 FIRE EXTINGUISHER GAGE TO DISCONNECT	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
	031-0550-000	. . CONTACT, CONVAIR 92-63901-011 -V71468-	1		4
-894	22-65507-3	. HARNESS ASSEMBLY, POD 4 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	C		1
	22-65507	. HARNESS ASSEMBLY, POD 4 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	2	7	1
	22-65507-801	. HARNESS ASSEMBLY, POD 4 NOSE COWL EQUIPMENT TO ENGINE DISCONNECT	11		1
	CT00E24-21P	. . CONNECTOR, CONVAIR 92-50293-016 -V71468-	1		1
	EX06-10SL3S	. . CONNECTOR, CONVAIR 92-40332-001 -V71468-	1		1
	EX06-12S3S	. . CONNECTOR, CONVAIR 92-40332-003 -V71468-	1		1
	EX06-10SL4S	. . CONNECTOR, CONVAIR 92-40332-002 -V71468-	1		2
	031-0614-000	. . CONNECTOR, CONVAIR 92-63901-011 -V71468-	1		9
	320562	. . SPLICE, CONVAIR 98-34001-001 -V00779-	1		1
		C AIRPLANES 1 AND 8 THRU 10			